

IM: X-1909 (EN)
SIZE: 65 (W) X 65 (H) MM (EACH PAGE)
MATERIAL: 120G WOODFREE PAPER
PRINTING COLOR: BLACK + PANTONE 187C

FRONT



SDIGITAL
Spritz
 THE CONNECTED SPORTS WATER BOTTLE
X-1909
QUICK START

APP DOWNLOADS Spritz has 2 available Apps, which you can download for Apple (iOS) and Android devices:

1. **SPRITZ HYDRATION ASSISTANT APP**
 Reminds you to drink regularly with your choice of AUDIO notifications

2. **SDIGITAL MUSIC PLAYER APP**
 Real-Time Studio Enhancement of your music while streaming over Bluetooth

BOTH APPS ARE AVAILABLE AT:
 Download on the **App Store** | **Google Play**

EN-2

VOL+ / NEXT SONG
 Press quickly for next song, press and hold to increase volume.

POWER ON / OFF
 Press and hold for 3-5 second to Power-Up the speaker, press and hold 3-5second again to switch off speaker. Press quickly for mode switching.

VOL- / PERVIOUS SONG
 Press quickly for last song, press and hold to decrease volume.

PLAY / PAUSE
 When music playing, press the button to pause and play.

EN-3

Insert Micro SD Card
 To play MP3 Song files, insert your Micro-SD Card.

LED indicator / System Reset Hole *
 Power on: Blue LED light flashes quickly.
 Bluetooth® Paired: Blue LED light flashes slowly.
 Charge Status: Green LED light on.

USB charge Socket
 Use a computer USB port / power adapter to recharge speaker.

*** SEE SYSTEM RESET SECTION**

EN-4

AC
 Use a computer USB port / power adapter to recharge the speaker. It will take 3 hours to fully charge the speaker.

CHARGING GREEN LED

EN-5

Bluetooth

ON!
 (Hold 3 sec.)

BT "ON" !

BLUETOOTH LED INDICATOR

(SLOW)	SEARCHING
(FAST)	PAIRING "SDIG SPRITZ" (CODE: 0000)
(ON)	CONNECTED

In order to avoid interferences, please de-activate Wi-Fi on your device (smartphone, tablet, etc.) when playing music using Bluetooth®

EN-6

BACK

Micro SD-MP3

Micro SD Card Music
 Insert Micro SD card with MP3 music files into the Micro SD slot, press and hold the "Power" button to turn on speaker, when speaker voices out "Micro SD Detected", speaker will be in the "Micro SD card music playback mode".

Exit Micro SD Card Music Playing Mode
 Short press Power button for mode shifting or pull out the Micro SD card, to exit Micro SD card playing mode, and shift to Bluetooth® mode.

Short Press **Power** for Mode Switch

EN-7

Changing Colors

EN-8

System Reset*

SPRITZ has an internal protection system which automatically activates if anything abnormal occurs (eg. Static electricity!) In such a case, SPRITZ may appear to be "LOCKED" and not operating. To resolve this, simply "RESET" SPRITZ by inserting a paper clip wire gently into the system reset hole (same as LED indicator hole) on the left side of the USB charge socket. Keep the "RESET" button (INSIDE) pressed for 2 seconds & then Power-On as usual.

EN-9

CAUTION: READ THIS BEFORE OPERATING YOUR UNIT. TO ASSURE THE FINEST PERFORMANCE, PLEASE READ THIS MANUAL CAREFULLY. KEEP IT IN A SAFE PLACE FOR FUTURE REFERENCE.

PLEASE NOTE: YOU WILL FIND THE RATING LABEL FOR THIS PRODUCT LOCATED ON THE BOTTOM OF THE UNIT.

CAUTION : DANGER OF EXPLOSION IF BATTERY IS INCORRECTLY REPLACED. REPLACE ONLY WITH THE SAME OR EQUIVALENT TYPE. BATTERY REPLACEMENT MUST ONLY BE DONE BY A QUALIFIED PROFESSIONAL TECHNICIAN.

KEEP MINIMUM DISTANCES (5cm) AROUND THE APPARATUS FOR SUFFICIENT VENTILATION.

THE VENTILATION SHOULD NOT BE IMPEDED BY COVERING THE VENTILATION OPENINGS WITH ITEMS SUCH AS NEWSPAPER, TABLE-CLOTHS, CURTAINS ETC.

NO NAKED FLAME SOURCE SUCH AS LIGHTED CANDLES SHOULD BE PLACED ON THE APPARATUS.

ATTENTION SHOULD BE DRAWN TO THE ENVIRONMENTAL ASPECTS OF BATTERY DISPOSAL.

BATTERY SHALL NOT BE EXPOSED TO EXCESSIVE HEAT SUCH AS SUNSHINE, FIRE OR THE LIKE.

CAUTION REGARDING THE WATERPROOFING

ALTHOUGH THIS UNIT'S SPLASH-PROOF DESIGN ALLOWS IT TO BE USED EVEN WHERE IT MAY BE EXPOSED TO A CERTAIN AMOUNT OF RAIN, SNOW, OR WATER SPRAY, YOU SHOULD NOTE AND OBSERVE THE FOLLOWING POINTS.

- Do not allow large amounts of water to contact this unit.
- Do not immerse or place this unit in water.
- It may malfunction if it falls into water.
- If water droplets adhere to this unit, use a dry cloth to wipe them off as soon as possible. If this unit is exposed to a large amount of water, do not turn on the power immediately. Instead, let this unit dry out for at least one day in a dry location before you turn on the power.
- When using this unit in a wet or high-humidity location, please make sure the Rubber Terminal Cover is properly closed.

WATER PROOF RATING
 IPX4

DO NOT IMMERSE

EN-10

THE DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRABLE OPERATION. CHANGES OR MODIFICATIONS NOT EXPRESSLY APPROVED BY THE PARTY RESPONSIBLE FOR COMPLIANCE COULD VOID THE USER'S AUTHORITY TO OPERATE THE PRODUCT.

NOTE: THIS PRODUCT HAS BEEN TESTED AND FOUND TO COMPLY WITH THE LIMITS FOR A CLASS B DIGITAL DEVICE, PURSUANT TO PART 15 OF THE FCC RULES. THESE LIMITS ARE DESIGNED TO PROVIDE REASONABLE PROTECTION AGAINST HARMFUL INTERFERENCE IN A RESIDENTIAL INSTALLATION. THIS PRODUCT GENERATES, USES AND CAN RADIATE RADIO FREQUENCY ENERGY AND, IF NOT INSTALLED AND USED IN ACCORDANCE WITH THE INSTRUCTIONS, MAY CAUSE HARMFUL INTERFERENCE TO RADIO COMMUNICATIONS. HOWEVER, THERE IS NO GUARANTEE THAT INTERFERENCE WILL NOT OCCUR IN A PARTICULAR INSTALLATION. IF THE PRODUCT DOES CAUSE HARMFUL INTERFERENCE TO RADIO OR TELEVISION RECEPTION, WHICH CAN BE DETERMINED BY TURNING THE EQUIPMENT OFF AND ON, THE USER IS ENCOURAGED TO TRY TO CORRECT THE INTERFERENCE BY ONE OR MORE OF THE FOLLOWING MEASURES: -REORIENT OR RELOCATE THE RECEIVING ANTENNA. -INCREASE THE SEPARATION BETWEEN THE PRODUCT AND RECEIVER. -CONNECT THE PRODUCT INTO AN OUTLET ON A CIRCUIT DIFFERENT FROM THAT TO WHICH THE RECEIVER IS CONNECTED. -CONSULT THE DEALER OR AN EXPERIENCED RADIO/TV TECHNICIAN FOR HELP.

Technical specifications and design may change without notice.

CE

EN-11 IM-SPRITZ-WORKOUT-X1909-4-S01-001 IM-SPRITZ-MARATHON-X1909-64-S01-001

S.E.M. INDUSTRIES

BRAND: **SDIGITAL**

E: sales@sem.com.hk
 T: (852) 3761 8000

W: www.sem.com.hk

MODEL: X-1909
 DATE: 06 JAN., 2016
 FILE: MANUAL FOR REFERENCE