 


USER MANUAL

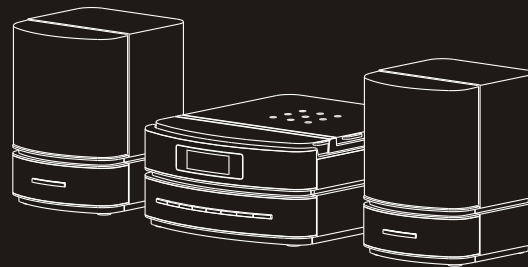

MODEL: Z-255-BTPFU5W
Micro Digital CD Radio HI-FI System



The lightning flash and arrowhead within the triangle is a warning sign alerting you of "dangerous voltage" inside the product.

CAUTION

RISK OF ELECTRIC SHOCK
DO NOT OPEN

WARNING:

To reduce the risk of electric shock, do not remove cover (or back). No user-serviceable parts inside. Refer servicing to qualified service personnel.



CAUTION:

The exclamation point within the triangle is a warning sign alerting you of important instructions accompanying the product.

WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO DRIPPING OR SPLASHING LIQUIDS.

THE MAINS PLUG IS USED AS THE DISCONNECT DEVICE AND IT SHALL REMAIN READILY OPERABLE. TO COMPLETELY DISCONNECT THE POWER INPUT, THE MAINS PLUG OF THE APPARATUS MUST BE DISCONNECTED FROM THE MAINS COMPLETELY. THE MAINS PLUG SHOULD NOT BE OBSTRUCTED OR SHOULD BE EASILY ACCESSED DURING INTENDED USE.

PLEASE NOTE: YOU WILL FIND THE RATING LABEL FOR THIS PRODUCT LOCATED ON THE BOTTOM OF THE UNIT.



CAUTION

DO NOT EXPOSE TO DRIPPING OR SPLASHING LIQUIDS!

THE MARKING AND RATING LABEL IS LOCATED AT THE BOTTOM OF UNIT ENCLOSURE OF THE APPARATUS.

CAUTION: GROUNDING OR POLARIZATION. THE PRECAUTIONS SHOULD BE TAKEN SO THAT THE WIDER BLADE OF THE AC PLUG MUST MATCH THE SLOT IN RECEPTACLE "WALL SOCKET".

THE APPARATUS SHOULD NOT BE EXPOSED TO DRIPPING OR SPLASHING AND NO OBJECTS FILLED WITH LIQUIDS SHOULD BE PLACED ON THE APPARATUS.

UNDER THE INFLUENCE OF ELECTROSTATIC PHENOMENON, THE PRODUCT MAY MALFUNCTION AND USER TO POWER RESET.

- KEEP MINIMUM DISTANCES (5cm) AROUND THE APPARATUS FOR SUFFICIENT VENTILATION.
- THE VENTILATION SHOULD NOT BE IMPEDED BY COVERING THE VENTILATION OPENINGS WITH ITEMS SUCH AS NEWSPAPER, TABLE-CLOTHS, CURTAINS ETC.
- NO NAKED FLAME SOURCE SUCH AS LIGHTED CANDLES SHOULD BE PLACED ON THE APPARATUS.
- ATTENTION SHOULD BE DRAWN TO THE ENVIRONMENTAL ASPECTS OF BATTERY DISPOSAL.
- BATTERY SHALL NOT BE EXPOSED TO EXCESSIVE HEAT SUCH AS SUNSHINE, FIRE OR THE LIKE.

ELECTROSTATIC DISCHARGE (ESD) PRECAUTION

WHEN ELECTROSTATIC DISCHARGE (ESD) OCCURS AT THE FRONT SURFACE (WHETHER METAL OR PLASTIC) OR NEAR ANY PART OR ANY BUTTON OF THIS UNIT, OR AT THE USB PORT AND/ OR SD-CARD SLOTS (IF THEY EXIST ON THIS PRODUCT), THERE MAY BE A POSSIBILITY THAT THE PRODUCT MAY STOP OPERATION AND/ OR SHUT DOWN IMMEDIATELY. THIS IS A NORMAL CONDITION AND INTENDED TO PROTECT THE UNIT AND INTERNAL COMPONENTS AGAINST DAMAGE. IN SUCH A CASE, PLEASE RESET THE UNIT (BY DISCONNECTING AND RECONNECTING AC-POWER SOURCE) TO REVERT THE UNIT TO NORMAL OPERATION.

CAUTION: INVISIBLE LASER RADIATION WHEN OPEN AND INTERLOCKS DEFEATED. AVOID EXPOSURE TO BEAM.

VORSICHT: UNSICHTBARE LASERSTRAHLUNG TRITTT AUS, WENN DECKEL GEÖFFNET UND WENN SICHERHEITSVERRIEGELUNG ÜBERBRÜCKT IST. NICHT DEM STRAHLEN AUSSETZEN!

WARNING: OSYNLIG LASERSTRÅLNING NÅR DENNA DEL ÄR ÖPPNAD OCH SPÄRR ÄR URKOPPLAND. STRÅLEN ÄR FÄRLIG.

ADVARSEL: USYNLIG LASERSTRÅLING VED ÅBNING. NÅR SIKKERHEDSAFBRYDERE ER UDE AF FUNKTION. UNDGÅ UDSÆTTELSE FOR STRÅLING.

ATTNENZIONE: RADIONS LASER INVISIBILE. NON GUARDARE DIRETTAMENTE NELLA SORGENTE DEL LASER.


ACHTUNG: LASERLINSE NICHT BERÜHREN UNSICHTBARER LASERSTRAHL.

AVISO: A LENTE NUNCA DEVE SER TOCADA.



 
CLASS 1 LASER PRODUCT
KLASSE 1 LASER PRODUKT
LASER DE CLASSE
LASER DI PRIMA CLASSE
KLASSE 1 LASER
LASER PRIMERA CLASE
LASER CLASSE 1
KLASSE 1 LASER PRODUKT

IMPORTANT SAFETY INSTRUCTIONS

1. **READ INSTRUCTIONS** - All the safety and operating instruction should be read before the product is operated.
2. **RETAIN INSTRUCTIONS** - The safety and operating instruction should be retained for future reference.
3. **HEED WARNINGS** - All warning on the product and in the operating instructions should be adhered to.
4. **FOLLOW INSTRUCTIONS** - All operating and use instructions should be followed.
5. **CLEANING** - Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a dry cloth for cleaning.
6. **ATTACHMENTS** - Do not use attachments not recommended by the product manufacturer as they may cause hazards.
7. **WATER AND MOISTURE** - Do not use this product near water- for example, near a bath tub, wash bowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool, and the like.
8. **ACCESSORIES** - Do not place this product on an unstable cart, stand, tripod, bracket, or table. The product may fall, causing serious injury to a child or adult, and serious damage to the product. Use only with a cart, stand, tripod, bracket, or table recommended by the manufacturer, or sold with the product. Any mounting of the product should follow the manufacturer's instructions, and should use a mounting accessory recommended by the manufacturer.
9. A product and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the appliance and cart combination to overturn. 
10. **VENTILATION** - Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from overheating, and these openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instruction have been adhered to.
11. **POWER SOURCES** - This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company. For products intended to operate from battery power, or other sources, refer to the operating instruction.
12. **GROUNDING OR POLARIZATION** - This product may be equipped with a polarized alternating-current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarizes plug.
ALTERNATE WARNINGS - This product is equipped with a three-wire grounding-type plug, a plug having a third (grounding) pin. This plug will only fit into a grounding-type power outlet. This is a safety feature. If you are unable to insert the plug into the outlet, contact you electrician to replace your obsolete outlet. Do not defeat the safety purpose of the grounding-type plug.
13. **POWER-CORD PROTECTION** - Power supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and point where they exit from the product.
14. **PROTECTIVE ATTACHMENT PLUG** - The product is equipped with an attachment plug having overload protection. This is a safety feature. See Instruction Manual for replacement or resetting of protective device. If replacement of the plug is required, be sure the service technician has used a replacement plug specified by the manufacturer that has the same overload protection as the original plug.
15. **OUTDOOR ANTENNA GROUNDING** - If an outside antenna is connected to the receiver, be sure the antenna system is grounded so as to provide some protection against voltage surges and built-up static charges. Article 810 of the National Electrical Code, ANSI/NFPA 70, provides information with regard to proper grounding of the mast and supporting structure, grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna-discharge unit, size of grounding conductors, location of antenna-discharge unit, connection to grounding electrodes, and requirements for the grounding electrode.


E-3

SEE FIGURE:

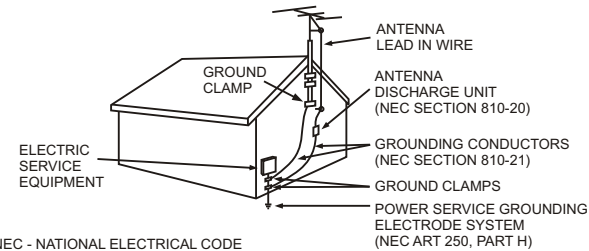

16. **LIGHTNING** - For added protection for this product during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the product due to lightning and power-line surges.
17. **POWER LINES** - An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.
18. **OVERLOADING** - Do not overload wall outlets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.
19. **OBJECT AND LIQUID ENTRY** - Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.
20. **SERVICING** - Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.
21. **DAMAGE REQUIRING SERVICE** - Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:
 - a) When the power-supply cord or plug is damaged,
 - b) If liquid has been spilled, or objects have fallen into the product,
 - c) If the product has been exposed to rain or water,
 - d) If the product does not operate normally be following the operating instructions. Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to damage and will often require extensive work by a qualified technician to restore the product to its normal operation.
 - e) If the product has been dropped or damaged in any way, and
 - f) When the product exhibits a distinct change in performance - this indicates a need for service.
22. **REPLACEMENT PARTS** - When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock, or other hazards,
23. **SAFETY CHECK** - Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in proper operating condition.
24. **WALL OR CEILING MOUNTING** - The product should be mounted to a wall or ceiling only as recommended by the manufacturer.
25. **HEAT** - The product should be situated away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat.

 E-4

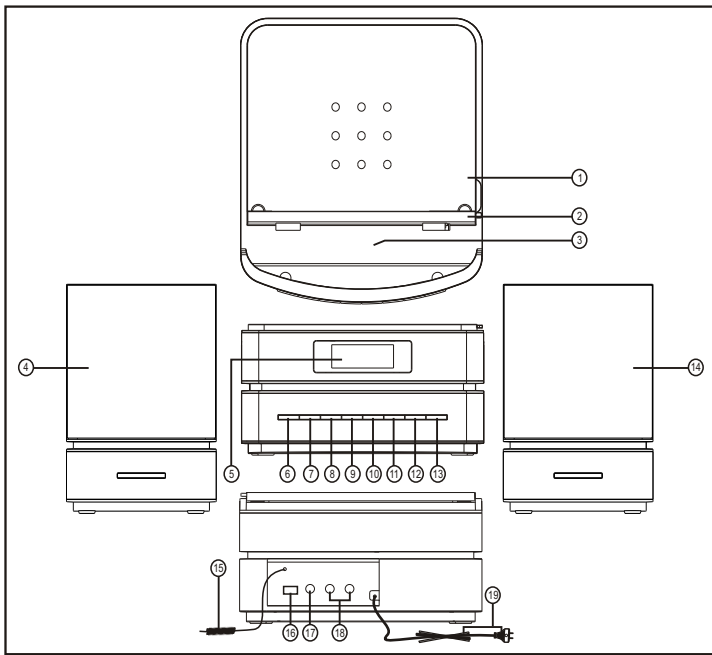

LOCATION OF CONTROLS

- | | |
|---|---|
| 1. CD DOOR | 11. PROGRAM/ PLAY MODE KEY |
| 2. COMPARTMENT DOOR | 12. VOLUME DOWN (-)/ ALARM SET KEY |
| 3. SLOT FOR PLACING YOUR SMARTPHONE/ TABLET | 13. VOLUME UP (+)/ CLOCK SET KEY |
| 4. SPEAKER (LEFT) | 14. SPEAKER (RIGHT) |
| 5. LCD DISPLAY | 15. FM ANTENNA |
| 6. ON/ STANDBY KEY | 16. USB CHARGER PORT |
| 7. BACK/ TUNE DOWN KEY | 17. AUX IN SOCKET |
| 8. NEXT/ TUNE UP KEY | 18. SPEAKER OUTPUT SOCKETS (LEFT & RIGHT) |
| 9. STOP/ FM MEM./ SLEEP/ SNOOZE KEY | 19. AC CORD & PLUG |
| 10. PLAY/ PAUSE/ PAIR/ FM MODE KEY | |

POWER SUPPLY

- THIS SET WORKS ON NORMAL HOUSEHOLD AC-POWER.
- INSERT THE PLUG OF THE AC-CORD INTO A WALL OUTLET WITH AC-POWER.
- PRESS THE "ON/ STANDBY" KEY TO SWITCH "ON" THE UNIT.
- PRESS AND HOLD THE "ON/ STANDBY" KEY 3 SECONDS TO SWITCH THE UNIT TO STANDBY MODE.
- THIS UNIT IS DESIGNED TO OPERATE WITHOUT BEING TOTALLY POWERED "OFF". IT WILL EITHER BE "ON" OR IN "STANDBY" MODE.
- IN STANDBY MODE, THE BLUE BACK-LIGHT OF THE DIGITAL DISPLAY WILL BE DIMMED BUT THE DISPLAY WILL SHOW THE CURRENT TIME (CLOCK FUNCTION).
- ANYTIME DURING STANDBY MODE, YOU CAN SWITCH "ON" THE UNIT BY PRESSING THE "ON/ STANDBY" KEY.
- SAVE ENERGY BY SWITCHING THE SYSTEM TO "STANDBY" MODE WHEN NOT IN USE.

IMPORTANT : HOW TO TELL IF POWER IS "ON" ?

WHEN THE POWER IS "ON" THE ENTIRE DIGITAL DISPLAY WILL LIGHT UP WITH A "BLUE" BACK-LIGHT. THIS INDICATES THE HI-FI IS SWITCHED "ON".

 
CONNECTION OF SPEAKER BOXES

- UNWRAP THE SPEAKER-CORDS OF BOTH SPEAKER-BOXES AND INSERT THE LEFT/RIGHT PLUGS INTO SOCKETS IN THE REAR OF MAIN UNIT.
- PLACE THE SPEAKER BOXES AS FAR APART AS POSSIBLE FOR BEST SOUND EFFECT.

DIGITAL CLOCK FUNCTION

- THE SET HAS A BUILT-IN DIGITAL CLOCK, WHICH IS DISPLAYED WHEN THE SET IS IN "STANDBY MODE". (THE DISPLAY WILL CONTINUOUSLY SHOW THE CURRENT TIME). IN THIS SITUATION THE BLUE BACKLIGHT IS NORMALLY DIMMED (TO SAVE ELECTRICITY).

HOW TO SET CORRECT TIME:

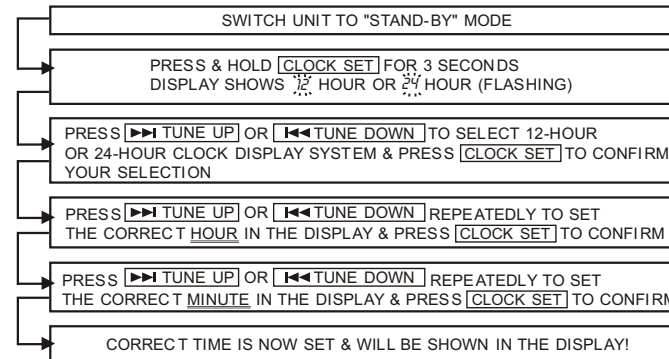



*NOTE:
THAT WHEN THE DIGITAL CLOCK IS NOT SET, THE DIGITAL CLOCK DISPLAY SHALL CONTINUOUSLY FLASH TO INDICATE THAT THE CORRECT TIME HAS NOT YET BEEN SET.

ALARM FUNCTION

- THIS SET HAS A ALARM FUNCTION TO ENABLE YOU TO PROGRAM THE UNIT AS A WAKE-UP ALARM CLOCK :

HOW TO SET TIMER

1. IN STANDBY MODE, PRESS [ALARM SET] KEY ONCE.
2. PRESS [▶▶TUNE UP] OR [◀◀TUNE DOWN] TO ADJUST THE HOUR OF THE DESIRED "ON" TIME AND THEN PRESS [ALARM SET] KEY TO CONFIRM.
3. PRESS [▶▶TUNE UP] OR [◀◀TUNE DOWN] TO ADJUST THE MINUTES OF THE DESIRED "ON" TIME AND THEN PRESS [ALARM SET] TO CONFIRM.
4. NOW THE WORDING IN THE DISPLAY CHANGES TO SHOW "bJ" (BUZZER ALARM).
5. PRESS [ALARM SET] KEY TO CONFIRM.
6. FINALLY THE UNIT WILL RETURN TO THE NORMAL DISPLAY, EXCEPT THAT THE  SYMBOL WILL BE SHOWN, TO INDICATE THAT YOU HAVE PROGRAMMED A ON/OFF ALARM SETTING.
7. IN CASE YOU WISH TO DISABLE THE TIMER, LONG PRESS THE [ALARM SET] KEY FOR 3 SECONDS, & THE  SYMBOL WILL DISAPPEARS.

NOTE:

1. THE WAKE UP VOLUME LEVEL WILL GRADUALLY AND AUTOMATICALLY INCREASE FROM ZERO (0) TO LEVEL 17 WHEN THE WAKE UP ALARM IS ACTIVATED. THIS CAN NOT BE CHANGED.
2. WHEN THE ALARM COMES ON, CAN PRESS ANY KEY (EXCEPT "SNOOZE" KEY) TO TURN IT OFF.

SNOOZE FUNCTION

- WHENEVER THE ALARM COMES ON, IT CAN BE TEMPORARILY SUSPENDED FOR A SHORT PERIOD OF APPROXIMATELY 9 MINUTES, BY PRESSING THE "SNOOZE" KEY ONCE, "SNOOZE" WILL LIT ON DISPLAY.
- THE ALARM WILL THEN AUTOMATICALLY COME ON AGAIN AFTER APPROXIMATELY 9 MINUTES "SNOOZE" PERIOD HAS ENDED.
- THE PROCEDURE CAN BE REPEATED FOR APPROXIMATELY AN HOUR.

AUTOMATIC POWER OFF SLEEP FUNCTION

- THIS SET HAS A SPECIAL SLEEP TIMER FUNCTION WHICH CAN AUTOMATICALLY SWITCH OFF THE UNIT. THIS IS USEFUL FOR SLEEPING TO MUSIC.
- AT ANY TIME WHILE THE UNIT IS OPERATING, PRESS AND HOLD THE [SLEEP] KEY FOR 3 SECONDS REPEATEDLY TO CHOOSE THE AUTOMATIC POWER OFF TIME.



(*OFF MEANS SLEEP TIMER IS DEACTIVATED)

ELECTRONIC VOLUME CONTROL

- THIS UNIT USES AN ELECTRONIC VOLUME CONTROL (PUSH BUTTON TYPE) .
- TO INCREASE OR DECREASE THE LOUDNESS OF UNIT, PRESS THE VOLUME UP (+) OR VOLUME DOWN (-) KEYS RESPECTIVELY.
- RELEASE THE KEY WHEN VOLUME LEVEL IS AT THE DESIRED LOUDNESS.
- SOMETIMES, ESPECIALLY DURING LISTENING TO THE RADIO, YOU MAY NOTICE A "CLICK-CLICK-CLICK" (REPEATING) SOUND WHEN YOU ARE INCREASING OR DECREASING THE VOLUME. THIS IS A NORMAL CONDITION & THE SOUND WILL DISAPPEAR WHEN YOU RELEASE THE VOLUME KEY (WHEN YOU REACH THE DESIRED VOLUME LEVEL).

OPERATION OF RADIO

- PRESS THE "ON/STANDBY" KEY ONCE TO SWITCH ON THE UNIT.
- PRESS THE [FUNCTION] KEY REPEATEDLY UNTIL THE DISPLAY SHOWS THE RADIO FREQUENCY.
- TO IMPROVE FM-RADIO RECEPTION, FULLY EXTEND THE FM-ANTENNA WIRE AND ADJUST IT'S POSITION.
- USE THE [FM MODE] KEY TO SELECT THE DESIRED MODE (FM MONO/STEREO). IN SOME CASES, WHERE RECEPTION IS POOR, IT MAY BE ADVISABLE TO SELECT "MONO" MODE, TO IMPROVE CLARITY OF THE RADIO SIGNAL.

MANUAL FREQUENCY ADJUSTMENT (SCAN MODE)

- PRESS (AND IMMEDIATELY RELEASE) THE [▶▶TUNE UP] OR [◀◀TUNE DOWN] KEYS TO "SCAN" (MANUALLY ADJUST) THE RADIO FREQUENCY "UP" OR "DOWN" BY 1-STEP AT A TIME.
- THE RADIO DIGITAL DISPLAY WILL INDICATE THE EXACT FREQUENCY AT EACH STEP'S POSITION.
- WHEN A DESIRED FREQUENCY OR STATION IS REACHED. IT CAN BE SAVED INTO ONE OF THE "MEMORY" POSITIONS. (SEE "RADIO MEMORY" SECTION).

AUTOMATIC FREQUENCY ADJUSTMENT (SEEK MODE)

- PRESS AND HOLD (FOR 2 SECONDS) THE [▶▶TUNE UP] OR [◀◀TUNE DOWN] KEYS TO "SEEK" (AUTOMATICALLY ADJUST) THE RADIO FREQUENCY "UP" OR "DOWN" TO THE NEXT AVAILABLE RADIO STATION.
- THE RADIO DIGITAL DISPLAY WILL INDICATE THE EXACT FREQUENCY OF THE NEXT STATION THAT IS FOUND.
- WHEN A DESIRED STATION IS REACHED. IT CAN BE SAVED INTO ONE OF THE "MEMORY" POSITIONS. (SEE "RADIO MEMORY" SECTION).

RADIO MEMORY (STATION PRESET MEMORY STORAGE)

- AT ANY TIME, THE CURRENTLY DISPLAYED STATION OR FREQUENCY CAN BE STORED INTO ONE OF THE MEMORY POSITION.
- PRESS [PROGRAM] KEY ONCE, THE MEMORY POSITION WILL SHOWS ON DISPLAY.
- PRESS THE [▶▶TUNE UP] OR [◀◀TUNE DOWN] KEY TO SELECT THE DESIRED MEMORY POSITION TO SAVE THE RADIO STATION. (THERE ARE 30 MEMORY POSITIONS "P01 TO P30").
- PRESS [PROGRAM] KEY ONCE TO SAVE THE SELECTED STATION INTO THE SELECTED MEMORY POSITION.
- REPEAT THE ABOVE STEPS FOR PROGRAMING THE MEMORY STATIONS AS DESIRED.
- TO RECALL A STATION IN MEMORY, PRESS THE [FM MEM.] KEY REPEATEDLY TO REACH THE MEMORY POSITION AS DESIRED.
- TO CLEAR THE MEMORY OF ANY POSITION, SIMPLY SAVE A NEW STATION TO THE SAME MEMORY POSITION.

INSERTION & REMOVAL OF DISCS

- WHEN OPENING THE CD-DOOR, ALWAYS ENSURE THE DISC IS NOT IN MOTION (NOT SPINNING) WHEN YOU OPEN THE CD-DOOR. ALWAYS PRESS [STOP ■] KEY TO STOP THE DISC SPINNING FIRST.
- PLACE A CD INTO THE COMPARTMENT WITH THE LABEL-SIDE (PRINTED SIDE OF DISC) FACING UPWARDS. PRESS DOWN IN THE CENTER PART OF DISC UNTIL THE DISC "LOCKS" ONTO THE CENTER SPINDLE.
- WHEN THE CD HAS BEEN PLACED ONTO THE CENTER SPINDLE, GENTLY LOWER THE CD-DOOR DOWNWARDS UNTIL IT LOCKS SHUT.
- THE CD IS NOW READY TO BE PLAYED.
- TO REMOVE A DISC, FOLLOW THE SAME PROCEDURE AS DESCRIBED ABOVE, EXCEPT TO REMOVE THE CD INSTEAD OF INSERTING IT INTO THE COMPARTMENT, BY PLACING ONE FINGER AT THE MIDDLE OF DISC (CENTER SPINDLE) & THE OTHER AT THE EDGE OF THE DISC & GENTLY PULLING UPWARDS.
- IMPORTANT : ALWAYS HOLD A CD BY ITS EDGES. AVOID GETTING ANY FINGER PRINTS, SMUDGES OR DIRT ONTO THE SURFACE OF A DISC. IN CASE THIS HAPPENS, USE A SPECIAL CD-CLEANING CLOTH OR CLEANING KIT TO REMOVE THE DIRT OR SMUDGES.




NORMAL CD OPERATION

- TURN THE UNIT ON BY PRESS THE [ON/STANDBY] KEY.
- INSERT A CD AS DESCRIBED.
- PRESS THE [FUNCTION] KEY UNTIL DISPLAY SHOW "CD".
- THE CD WILL SPIN MOMENTARILY AND THE DISPLAY SHOW THE TOTAL NUMBER OF TRACKS (SONG) OF THE DISC.
- PRESS THE [▶||PLAY/PAUSE] KEY, THE FIRST TRACK (SONG) WILL START PLAYING. THE DISPLAY WILL INDICATE THE CURRENT TRACK NO. ("01" IF IT IS THE FIRST TRACK), AND CURRENTLY PLAYING TIME FREQUENCY.
- AT ANYTIME DURING PLAYBACK, PRESS THE [▶||PLAY/PAUSE] KEY TO PAUSE OPERATION OF THE UNIT. PRESS THE [▶||PLAY/PAUSE] KEY AGAIN TO RESUME OPERATION AT THE SAME TRACK & POSITION.
- AT ANYTIME DURING PLAYBACK, PRESS THE [STOP ■] KEY TO STOP OPERATION OF THE SET. THIS WILL RESET THE CD PLAYER TO THE FIRST TRACK (IF YOU PRESS PLAY AFTER STOP, THE FIRST TRACK WILL ALWAYS START PLAYING).
- AT ANYTIME DURING PLAYBACK, "PRESS AND RELEASE" THE [◀◀TUNE DOWN] OR [▶▶TUNE UP] KEYS TO SKIP BACKWARDS OR FORWARDS BY ONE TRACK, AS DESIRED.
- AT ANYTIME DURING PLAYBACK, "PRESS AND HOLD" THE [◀◀TUNE DOWN] OR [▶▶TUNE UP] KEYS TO FAST-REVERSE (REVIEW) OR FAST-FORWARD (CUE) THE SPECIFIC TRACK, WHICH IS CURRENTLY PLAYING.

PROGRAM FUNCTION

- THE CD PLAYER CAN BE PROGRAMMED TO PLAY ANY SEQUENCE OF UP TO 20 TRACKS FOR AUDIO-CD AS DESIRED.
- ALWAYS PRESS THE [STOP ■] KEY BEFORE STARTING THE PROGRAMMING.
- PRESS THE [PROGRAM] KEY, THE DISPLAY WILL SHOW "01" AND THE DISPLAY WILL SHOW A "MEMORY" SYMBOL, TO INDICATE THAT THE SET IS NOW IN "MEMORY PROGRAMMING MODE", AT THE FIRST MEMORY POSITION.
- PRESS THE [▶▶TUNE UP] OR [◀◀TUNE DOWN] KEYS TO SELECT THE TRACK (SONG) NUMBER YOU WISH TO BE STORED IN THE FIRST MEMORY (PROGRAM) POSITION, AND PRESS THE [PROGRAM] KEY TO CONFIRM YOUR SELECTION.
- WHEN YOU PRESS THE [PROGRAM] KEY THE DISPLAY WILL ADVANCE TO THE NEXT MEMORY POSITION (eg. "02").
- REPEAT THE PREVIOUS 2 STEPS, EACH TIME SELECTING ANY TRACK NUMBER OF YOUR CHOICE TO BE STORED IN THE SUCCESSIVE MEMORY (PROGRAM) POSITIONS.
- AFTER EACH TRACK NUMBER, REMEMBER TO PRESS THE [PROGRAM] KEY.
- AFTER A MAXIMUM OF SONGS (OR LESS) HAVE BEEN SELECTED AS DESCRIBED ABOVE. IF ALL 20 TRACKS HAD PROGRAMMED, THE DISPLAY WILL SHOWS "FULL".
- ALSO, THE "MEMORY" SYMBOL WILL REMAIN "ON" TO INDICATE THAT YOU HAVE SAVED A PROGRAM-MEMORY (SEQUENCE).
- PRESSING [▶||PLAY/PAUSE] WILL NOW PLAY BACK THE "SAVED SEQUENCE" IN THE PROGRAM MEMORY.
- TO CLEAR (CANCEL) THE ENTIRE PROGRAM WHICH IS STORED IN THE MEMORY, SIMPLY PRESS [STOP ■] TWICE, OR SWITCH "OFF" THE SET.

PLAY MODE FUNCTION

- AT ANYTIME DURING PLAYBACK:
- PRESS [PLAY MODE] KEY REPEATEDLY TO SELECT THE FOLLOWING OPTIONS:
 1.  = REPEAT: TO REPEAT THE CURRENT TRACK
 2.  ALL = REPEAT ALL: TO REPEAT ALL TRACK
 3.  = RANDOM: TO SHUFFLE ALL SONGS IN RANDOM ORDER

USING THE AUDIO LINE IN CONNECTION (AUX-INPUT)

- YOU CAN CONNECT THE AUDIO OUTPUT OF AN EXTERNAL DEVICE SUCH AS A MP3 PLAYER OR A TV TO THIS UNIT, THROUGH THE HIGH QUALITY AMPLIFIER OF THIS MUSIC SYSTEM.
- TO CONNECT THE EXTERNAL DEVICE PLEASE USE A STANDARD STEREO HEADPHONE (3.5MM TO 3.5MM PLUGS) CABLE TO CONNECT THE "HEADPHONE-OUT OR AUDIO LINE-OUT" OF THE DEVICE TO THE AUX-INPUT SOCKET OF THIS UNIT.
- TURN THE UNIT ON BY PRESSING THE [ON/STANDBY] KEY.
- PRESS THE [FUNCTION] KEY TO SELECT "AUX" MODE.
- SWITCH ON THE EXTERNAL DEVICE (eg. MP3-PLAYER OR TV).
- START PLAYBACK OF THE EXTERNAL DEVICE AND ADJUST THE VOLUME CONTROL OF THE MAIN UNIT TO THE DESIRED LEVEL.
- REMEMBER TO SWITCH OFF THE UNIT WHEN YOU ARE FINISHED USING THE EXTERNAL DEVICE.

BLUETOOTH® WIRELESS PLAYBACK

THE UNIT CAN WIRELESSLY STREAM AUDIO FROM ANY *BLUETOOTH®* DEVICE WITHIN 30 FEET. SIMPLY PAIR THE DEVICE AND ENJOY WIRELESS PLAYBACK AND CONTROL FROM YOUR *BLUETOOTH®* DEVICE.

PREPARE THE UNIT:

- TURN THE UNIT ON BY PRESS THE **[ON/STANDBY]** KEY
- PRESS THE FUNCTION KEY TO SELECT "BT" MODE.
- THE BT SYMBOL WILL BE FLASHING TO INDICATE PAIRING IS PENDING.
- THE BT SYMBOL WILL REMAIN LIT CONTINUOUSLY WHEN PAIRED.

***NOTE ONLY ONE DEVICE CAN BE PAIRED AND HAVE PLAYBACK FROM AT ANY GIVEN TIME.**

PREPARE YOUR PHONE OR OTHER *BLUETOOTH®* DEVICE:

- TURN ON THE *BLUETOOTH®* FUNCTION, THIS IS USUALLY FOUND UNDER GENERAL SETTINGS OR OPTIONS.

***PLEASE REFER TO YOUR *BLUETOOTH®* DEVICE'S MANUAL FOR FURTHER DETAILS.**

MAKE THE CONNECTION:

- GO TO YOUR DEVICE'S *BLUETOOTH®* SETTINGS
- ADD OR SEARCH FOR DEVICES
- IF ASKED FOR A PASS CODE, ENTER "0000"

***THIS IS A ONE-TIME EVENT PER DEVICE. TO PAIR YOUR UNIT TO ANOTHER DEVICE, REPEAT THE ABOVE PREPARATION AND CONNECTION STEPS.**

DISABLING THE CONNECTION:

TO UNPAIR A *BLUETOOTH®* DEVICE THAT IS ALREADY PAIRED, PRESS AND HOLD THE PAIR / PLAY/ PAUSE KEY FOR A FEW SECONDS.

VOLUME CONTROL:

INCREASE AND DECREASE VOLUME USING THE VOLUME UP (+) OR VOLUME DOWN (-) KEYS ON THE UNIT AND THE VOLUME CONTROLS ON YOUR *BLUETOOTH®*.

***NOTE THAT IF THERE IS NO PLAYBACK, ENSURE THAT NEITHER THE UNIT NOR YOUR *BLUETOOTH®* DEVICE ARE SET TO ZERO VOLUME AND THE RIGHT DEVICE FOR PLAYBACK IS PAIRED.**

USB CHARGING PORT

THIS UNIT IS EQUIPPED WITH A DC 5V USB CHARGING PORT ON THE REAR OF UNIT. TO UTILIZE THIS FEATURE, SIMPLY CONNECT THE DEVICE YOU WOULD LIKE TO CHARGE (eg. SMARTPHONE OR TABLET) TO A SUITABLE USB CABLE AND PLUG IT INTO THE USB CHARGING PORT. (THIS FUNCTION IS ONLY ACTIVE WHEN THE UNIT IS PLUGGED INTO AN HOUSEHOLD AC-POWER). THE EXTERNAL DEVICE WILL BE CHARGED AUTOMATICALLY WHEN IT IS SUCCESSFULLY CONNECTED, EVEN DURING PLAYBACK.

SPECIFICATIONS

POWER SUPPLY : AC 100V-240V ~ 50/60HZ
USB Output Power : 5V --- 2A (Standby Mode)
RADIO FREQUENCY : FM 87.5 - 108 MHZ
SPEAKERS : 3"X2
Wireless Range (BT) : 10M (30 Ft.)
FM Station Memory : 30 Stations

The device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the product.

NOTE: This product has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This product generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If the product does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: -Reorient or relocate the receiving antenna.

-Increase the separation between the product and receiver.

-Connect the product into an outlet on a circuit different from that to which the receiver is connected.

-Consult the dealer or an experienced radio/TV technician for help.