1. "LOW, MED, HI" buttons:

These three buttons are used to set the fan speed as follows:

LOW= Low speed MED= Medium speed HI= High speed


2. "OFF" button:

This button turns the fan off.

3. The "LIGHT" button turns the light ON or

OFF . Press and release the button to turn

the light ON or OFF

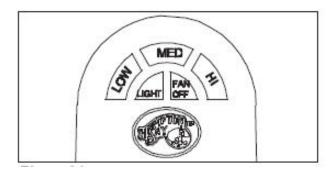

Notice : The changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

IMPORTANT NOTE: To comply with the FCC RF exposure compliance requirements, no change to the antenna or the device is permitted. Any change to the antenna or the device could result in the device exceeding the RF exposure requirements and void user's authority to operate the device.