

# SHARP®

ENGLISH

MODEL

## XL-HF203B

### HI FI COMPONENT SYSTEM

### OPERATION MANUAL

Thank you for purchasing this SHARP product. To obtain the best performance from this product, please read this manual carefully. It will guide you in operating your SHARP product.



## MP3







## X-BASS

- This audio system supports devices with Android 4.1, Jelly Bean and higher.
- For device with a lower Android version, refer the operation manual of the device for recommended app (application).

### Accessories

The following accessories are included.

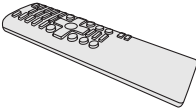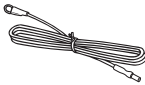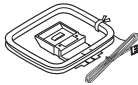 <p>Remote control x 1 (RRMCGA384AWSA)</p>	 <p>FM antenna x 1 (92LFANT1535A)</p>	 <p>AM loop antenna x 1 (QANTLA011AWZZ)</p>	 <p>Speaker wires x 2 (QCNWHA061AWPZ)</p>
--	--	--	---



TINSE4506AWZZ

SHARP CORPORATION

16E R MW 1

## Special notes

For users in U.S.



**CAUTION**  
RISK OF ELECTRIC SHOCK  
DO NOT OPEN



**CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.**

### Explanation of Graphical Symbols:



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

**WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.**

**This product is classified as a CLASS 1 LASER PRODUCT**

**Caution - Use of any controls, adjustments or procedures other than those specified herein may result in hazardous radiation exposure.**

### NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**Warning:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

### FCC Radiation Exposure Statement

This device complies with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. It must not be co-located or operating in conjunction with any other antenna or transmitter.

Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

This equipment should be installed and operated with a minimum distance of 20 cm between the radiator and person's body.

### Note to CATV system installer:

This reminder is provided to call the CATV system installer's attention to Article 820 of the National Electrical Code that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.

### FOR YOUR RECORDS

For your assistance in reporting this unit in case of loss or theft, please record below the model number and serial number which are located on the rear of the unit. Please retain this information.

**Model number** .....

**Serial number** .....

**Date of purchase** .....

**Place of purchase** .....

Supply of this product does not convey a license nor imply any right to distribute content created with this product in revenue-generating broadcast systems (terrestrial, satellite, cable and/or other distribution channels), revenue-generating streaming applications (via Internet, intranets and/or other networks), other revenue-generating content distribution systems (pay-audio or audio-on-demand applications and the like) or on revenue-generating physical media (compact discs, digital versatile discs, semiconductor chips, hard drives, memory cards and the like). An independent license for such use is required. For details, please visit <http://mp3licensing.com>.  
MPEG Layer-3 audio coding technology licensed from Fraunhofer IIS and Thomson.

## Important Safety Instructions

Electricity is used to perform many useful functions, but it can also cause personal injuries and property damage if improperly handled. This product has been engineered and manufactured with the highest priority on safety. However, improper use can result in electric shock and/or fire. In order to prevent potential danger, please observe the following instructions when installing, operating and cleaning the product. To ensure your safety and prolong the service life of this product, please read the following precautions carefully before use.

- 1) Read these instructions.
- 2) Keep these instructions.
- 3) Heed all warnings.
- 4) Follow all instructions.
- 5) Do not use this apparatus near water.
- 6) Clean only with dry cloth.
- 7) Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9) Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10) Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11) Only use attachments/accessories specified by the manufacturer.
- 12) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- 13) Unplug this apparatus during lightning storms or when unused for long periods of time.
- 14) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.



### Additional Safety Information

- 15) Power Sources - This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company. For product intended to operate from battery power, or other sources, refer to the operating instructions.
- 16) Overloading - Do not overload wall outlets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.
- 17) Object and Liquid Entry - Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock.

To prevent fire or shock hazard, do not expose this appliance to dripping or splashing. No objects filled with liquids, such as vases, shall be placed on the apparatus.

- 18) Damage Requiring Service - Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:
  - a. When the AC cord or plug is damaged,
  - b. If liquid has been spilled, or objects have fallen into the product,
  - c. If the product has been exposed to rain or water,
  - d. If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation,
  - e. If the product has been dropped or damaged in any way, and
  - f. When the product exhibits a distinct change in performance - this indicates a need for service.
- 19) Replacement Parts - When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock, or other hazards.
- 20) Safety Check - Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in proper operating condition.
- 21) Wall or ceiling mounting - When mounting the product on a wall or ceiling, be sure to install the product according to the method recommended by the manufacturer.
- 22) Power Lines - An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.
- 23) Protective Attachment Plug - The product is equipped with an attachment plug having overload protection. This is a safety feature. See Instruction Manual for replacement or resetting of protective device. If replacement of the plug is required, be sure the service technician has used a replacement plug specified by the manufacturer that has the same overload protection as the original plug.
- 24) Stand - Do not place the product on an unstable cart, stand, tripod or table. Placing the product on an unstable base can cause the product to fall, resulting in serious personal injuries as well as damage to the product. Use only a cart, stand, tripod, bracket or table recommended by the manufacturer or sold with the product. When mounting the product on a wall, be sure to follow the manufacturer's instructions. Use only the mounting hardware recommended by the manufacturer.

## **CONSUMER LIMITED WARRANTY**

SHARP ELECTRONICS CORPORATION warrants to the first consumer purchaser that this Sharp brand product (the "Product"), when ship in its original container, will be free from defective workmanship and materials, and agrees that it will, at its option, either repair the defect or replace the defective Product or part thereof with a new or remanufactured equivalent at no charge to the purchaser for parts or labor for the period(s) set forth below.

This warranty does not apply to any appearance items of the Product nor to the additional excluded item(s) set forth below nor to any Product the exterior of which has been damaged or defaced, which has been subjected to improper voltage or other misuse, abnormal service or handling, or which has been altered or modified in design or construction.

In order to enforce the rights under this limited warranty, the purchaser should follow the steps set forth below and provide proof of purchase to the servicer.

The limited warranty described herein is in addition to whatever implied warranties may be granted to purchasers by law. ALL IMPLIED WARRANTIES INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR USE ARE LIMITED TO THE PERIOD(S) FROM THE DATE OF PURCHASE SET FORTH BELOW. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

Neither the sales personnel of the seller nor any other person is authorized to make any warranties other than those described herein, or to extend the duration of any warranties beyond the time period described herein on behalf of Sharp.

The warranties described herein shall be the sole and exclusive warranties granted by Sharp and shall be the sole and exclusive remedy available to the purchaser. Correction of defects, in the manner and for the period of time described herein, shall constitute complete fulfillment of all liabilities and responsibilities of Sharp to the purchaser with respect to the Product, and shall constitute full satisfaction of all claims, whether based on contract, negligence, strict liability or otherwise. In no event shall Sharp be liable, or in any way responsible, for any damages or defects in the Product which were caused by repairs or attempted repairs performed by anyone other than an authorized servicer. Nor shall Sharp be liable or in any way responsible for any incidental or consequential economic or property damage. Some states do not allow the exclusion of incidental or consequential damages, so the above exclusion may not apply to you.

THIS LIMITED WARRANTY IS VALID ONLY IN THE FIFTY (50) UNITED STATES, THE DISTRICT OF COLUMBIA AND PUERTO RICO.

### **Model Specific Section**

**Your Product Model Number & Description:**

**XL-HF203B  
HI FI COMPONENT SYSTEM**

(Be sure to have this information available when you need service for your Product.)

**Warranty Period for this Product:**

One (1) year parts and labor from the date of purchase.

**Additional Item(s) Excluded from Warranty Coverage (if any):**

Non-functional accessories, supplies, and consumable items.

**Where to Obtain Service:**

At a Sharp Authorized Servicer located in the United States. To find a location of the nearest Sharp Authorized Servicer, call Sharp toll free at 1-800-BE-SHARP.

**What to do to Obtain Service:**

Ship prepaid or carry in your Product to a Sharp Authorized Servicer. Be sure to have **Proof of Purchase** available. If you ship the Product, be sure it is insured and packaged securely.

TO OBTAIN SUPPLY, ACCESSORY OR PRODUCT INFORMATION, CALL **1-800-BE-SHARP**

### **SHARP ELECTRONICS CORPORATION**

1 Sharp Plaza, Suite 1, Mahwah, NJ 07495-1123

## **Special Notes**

The *Bluetooth*® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by SHARP is under license. Other trademarks and trade names are those of their respective owners.


The N Mark is a trademark or registered trademark of NFC Forum, Inc. in the United States and in other countries.

- XL-HF203B Hi Fi Component System consisting of XL-HF203B (main unit) and CP-HF203 (speaker system).

## Precautions

### General

- Keep your equipment at least 4" (10 cm) of free space along the sides, top and back for proper ventilation.

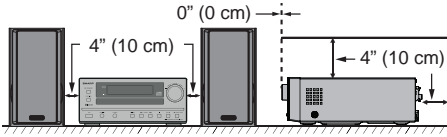

- Use the unit on a firm, level surface free from vibration.
- Place the speakers at least 12" (30 cm) away from any CRT TV to avoid color variations across the TV screen. If the variations persist, move the speakers further away from the TV. LCD TV is not prone to such variation.
- Keep the unit away from direct sunlight, strong magnetic fields, excessive dust, humidity and electronic / electrical equipment (home computers, facsimiles, etc.) which generate electrical noise.
- Do not expose the unit to moisture, to temperatures higher than 140°F (60°C) or to extremely low temperatures.
- If the unit does not work properly, unplug and plug it in again. Then turn on the unit.
- In case of an electrical storm, unplug the unit for safety.
- Hold the AC power plug by the head when removing it from the AC outlet, as pulling the cord can damage internal wires.

- Do not place anything on top of the unit.
- The AC power plug is used as a disconnect device and shall always remain readily operable.
- **Do not remove the outer cover, as this may result in electric shock. Refer internal service to your local SHARP service facility.**
- This unit should only be used within the range of 41°F - 95°F (5°C - 35°C).


### Warning:

The voltage used must be the same as that specified on this unit. Using a higher voltage is dangerous and may result in a fire or other type of accident causing damage. SHARP will not be held responsible for any damage resulting from such usage.

### Volume control

The sound level at a given volume setting depends on speaker efficiency, location and various other factors. It is advisable to avoid exposure to high volume levels, which occurs while turning the unit on with the volume control setting up high, or while continually listening at high volumes. Excessive sound pressure from earphones and headphones can cause hearing loss.


## Controls and indicators

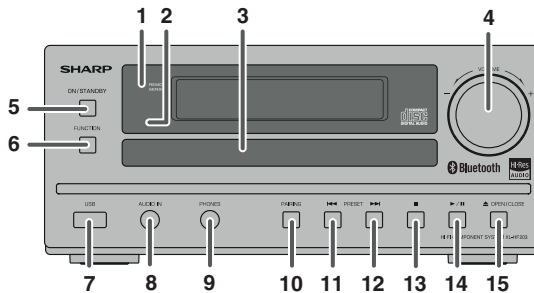

### Front panel


1. Remote sensor
2. Timer indicator
3. Disc Tray
4. Volume Control
5. ON/STANDBY Button
6. FUNCTION Button
7. USB Terminal
8. Audio In Jack
9. Headphone Jack
10. Pairing Button
11. Tuner Preset Down, CD/USB Skip Down Button
12. Tuner Preset Up, CD/USB Skip Up Button
13. Disc/USB/Bluetooth Stop Button
14. Disc/USB/Bluetooth Play or Pause Button
15. Disc Tray Open/Close Button

# Controls and indicators (continued)

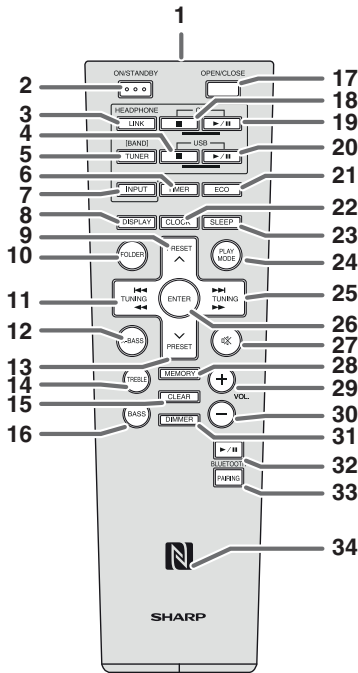

## Remote control

- Remote Control Transmitter
- On/Standby Button
- Headphone/Link Button
- USB Stop Button
- Tuner/Band Button
- Timer Button
- Input Button
- Display Button
- Tuner Preset Up Button
- Folder Button
- Tuning Down, Skip Down, Fast Reverse, Time Down Button
- X-Bass Button
- Tuner Preset Down Button
- Treble Button
- Clear Button
- Bass Button
- Open/Close Button
- CD Stop Button
- CD Play / Pause Button
- USB Play / Pause Button
- Eco Button
- Clock Button
- Sleep Button
- Play Mode Button
- Tuning Up, Skip Up, Fast Forward, Time Up Button
- Enter Button
- Mute Button
- Memory Button
- Volume Up Button
- Volume Down Button
- Dimmer Button
- Bluetooth Play / Pause Button
- Bluetooth Pairing Button
- N-Mark (NFC detection area)

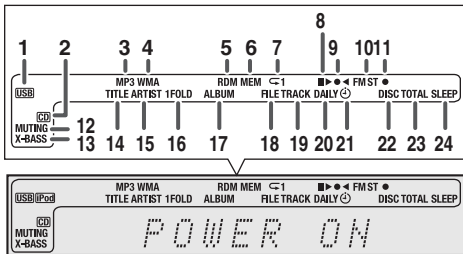


## Display

- USB Indicator
- CD Indicator
- MP3 Indicator
- WMA Indicator
- RDM (Random) Indicator
- MEM (Memory) Indicator
- Repeat Indicator
- Play/Pause Indicator
- Tuning FM/Bluetooth status Indicator
- FM Stereo Mode Indicator
- Stereo Station Indicator
- Muting Indicator
- X-bass Indicator
- Title Indicator
- Artist Indicator
- Folder Indicator
- Album Indicator
- File Indicator
- Track Indicator
- Daily Timer Indicator
- Once Timer Indicator
- Disc Indicator
- Total Indicator
- Sleep Indicator

## Speaker system

- Tweeter
- Woofer
- Bass Reflex Duct
- Speaker Terminal

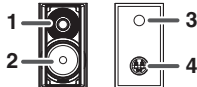

# System connections


**Make sure to unplug the AC power cord before making any connections.**

## To select Line In function:

Press FUNCTION button (main unit) or AUDIO/LINE (IN-PUT) button (remote control) repeatedly until Line in is displayed.

### CAUTION:

**TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.**

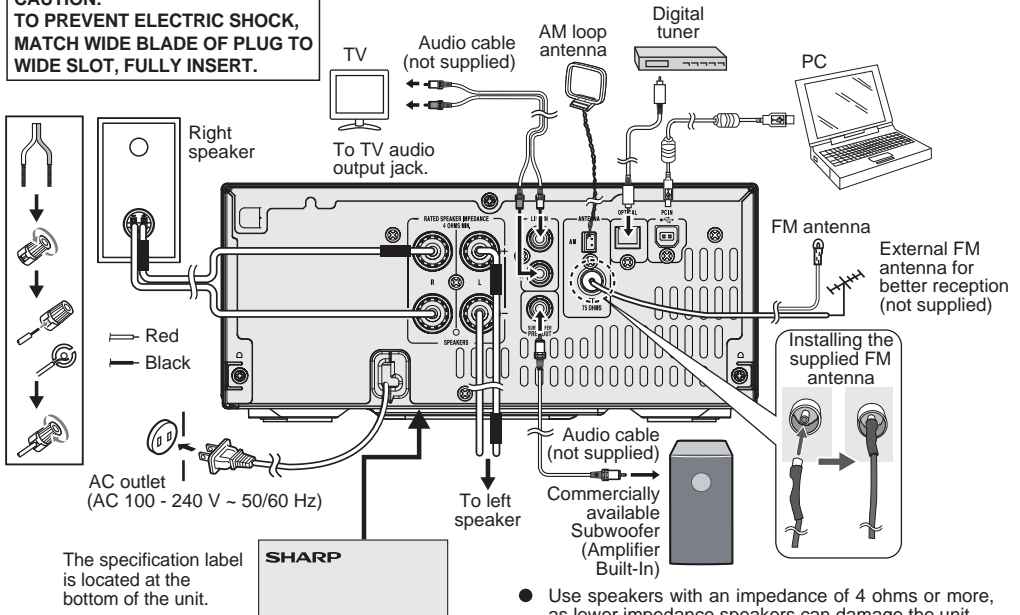

## Notes:

- No sound is heard from the subwoofer without a built-in amplifier.
- Subwoofer Pre-out (audio signal): 200mV / 10k ohms at 70 Hz.

## Antenna connection

### Supplied FM antenna:

Connect to the FM 75 ohms jack and position it where reception is best.

### External FM antenna:

Use an external FM antenna (75 ohms coaxial cable) for better reception. Disconnect the supplied FM antenna wire before use.

### Supplied AM loop antenna:

Connect to the AM terminal and position it where reception is best. Place it on a shelf, etc., or attach it to a stand or a wall with screws (not supplied).

#### Installing the AM loop antenna

< Assembling >

< Attaching to the wall >




### Note:

Keep the antenna away from the unit or AC power cord to avoid noise pickup.

## Speaker connection

+ speaker terminal	wire with red insulation tube
- speaker terminal	wire without insulation tube

- Use speakers with an impedance of 4 ohms or more, as lower impedance speakers can damage the unit.
- Do not mistake the right and the left channels. The right speaker is the one on the right side when you face the unit.
- Do not let the bare speaker wires touch each other.
- Do not allow any objects to fall into or to be placed in the bass reflex ducts.
- Do not stand or sit on the speakers. You may be injured.

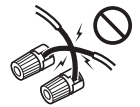

**Incorrect**

## Bluetooth standby mode

- The first time the unit is plugged in, it will enter the Bluetooth standby mode. "Bluetooth Stby" will be displayed.
- To cancel the Bluetooth standby mode, press the ECO button (remote control) during power standby mode. The unit will enter the low power consumption mode.
- To return to the Bluetooth standby mode, press the ECO button again.

## AC power connection

After all connections have been made correctly, plug the AC power cord into the AC outlet.

### Note:


Unplug the AC power cord from the AC outlet if the unit will not be in use for a prolonged period of time.

## Remote control

### Battery installation

Use 2 "AAA" size battery (UM/SUM-4, R3, HP-16 or similar). Battery is not included.

- 1 Open the battery cover.
- 2 Insert the batteries according to the terminal indicated in the battery compartment. When inserting or removing the batteries, push them toward the (-) battery terminals.
- 3 Close the cover.

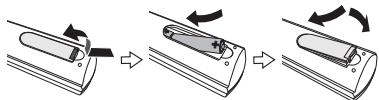

#### Caution:

- Replace all old batteries with new ones at the same time.
- Do not mix old and new batteries.
- Remove the batteries if the unit will not be used for a long period of time. This will prevent potential damage due to battery leakage.
- Do not use rechargeable batteries (nickel-cadmium battery, etc.).
- Installing the batteries incorrectly may cause the unit to malfunction.
- Batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like.

## General control

### To turn the power on

Press the ON/STANDBY button to turn the power on or off.

### Display brightness control

Press the DIMMER button (remote control).

- Dimmer 1 (Display is dim).
- Dimmer 2 (Display gets dimmer).
- Dimmer off (Display is bright).

 
### Volume auto fade-in

If you turn off and on the main unit with the volume set to 27 or higher, the volume starts at 16 and fades in to the last set level.

### Volume control





Turn the volume knob toward VOLUME +/- (main unit) or press VOL +/- (remote control) to increase or decrease the volume.

### Muting

To mute the volume, press the  button (remote control). Press again to restore the volume.

### Direct key power on function

When you press any of the following buttons, the unit turns on.


- CD  USB  BLUETOOTH  INPUT TUNER (BAND), OPEN/CLOSE (remote control) : Selected function is activated.
-  (main unit): The unit turns on and playback of the last function will start (CD, TUNER, USB, AUDIO IN, LINE IN, OPTICAL IN, PC IN, BLUETOOTH)

### Notes concerning use:

- Replace the batteries if the operating distance is reduced or if the operation becomes erratic. Purchase 2 "AAA" size batteries (UM/SUM-4, R3, HP-16 or similar).
- Periodically clean the transmitter on the remote control and the sensor on the unit with a soft cloth.
- Exposing the sensor on the unit to strong light may interfere with operation. Change the lighting or the direction of the unit.
- Keep the remote control away from moisture, heat, shock, and vibrations.

### Test of the remote control

The remote control can be used within the range shown below:

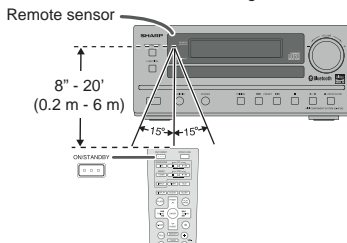

## General control

### Auto power off function

The main unit will enter the standby mode after 15 minutes of inactivity during:

- Audio/Line In/Optical In/PC In: No detection of input signal.
- CD: In the stop mode or no disc.
- USB: In the stop mode or no media.
- Bluetooth: - No connection after approximately 15 minutes.  
- In the pause or stop mode and no incoming signal from device after approximately 15 minutes.

### X-Bass control

When the power is first turned on, the unit is in the extra bass mode. "X-BASS" indicator appears. To cancel this mode, press the X-BASS button (remote control).


### Bass or Treble control

- 1 Press the BASS or TREBLE button to select "Bass" or "Treble" respectively.
- 2 Within 5 seconds, press the VOL (+ or -) button to adjust the bass or treble.



### Function

Press the FUNCTION button repeatedly to select desired function.

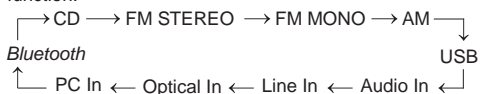

#### Note:

The backup function will protect the memorized function mode for a few hours should there be a power failure or the AC power cord becomes disconnected.



# Bluetooth one touch connection via NFC

## About NFC technology

Near Field Communication (NFC) is a set of standards for devices (smartphones/tablets) to establish radio communication with each other by touching/tapping them together or bringing them into close proximity. Using NFC in this product simplifies the pairing method of *Bluetooth* connectivity.


- This audio system supports NFC-enabled device with Android 4.1, Jelly Bean and higher.
- For device with a lower Android version, refer the operation manual of the device for recommended app (application).

Unlike other wireless technology, NFC requires no discovery or pairing.

Simply tap the source device to the N-Mark on remote control or main unit to instantly enjoy seamless connectivity between your smart device and the audio system.

## NFC detection area

NFC detection area location may vary depending on the device (smartphone / tablet). Refer operation manual of the device for detail.

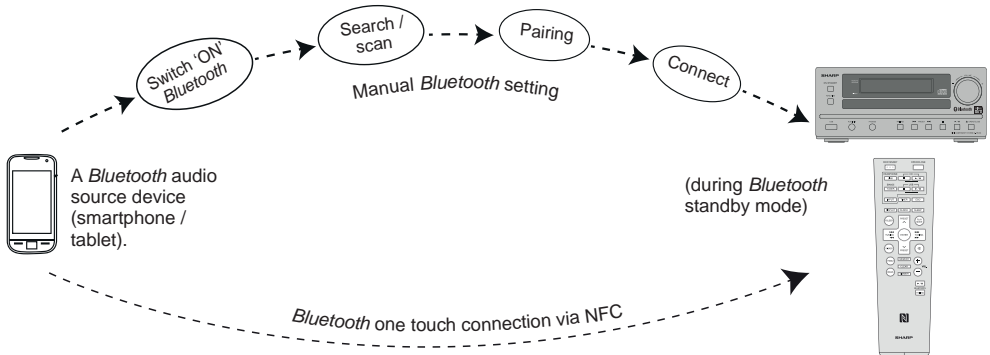


## NFC connection for audio playback

### Check that:

- Your device (smartphone / tablet) has an NFC function.
- NFC function on your device is enabled.
- Screen lock function of the device is off.
- This unit is not in Eco mode.

- 1 Touch your device to N-Mark on the remote control.

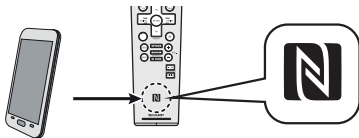

- 2 A pop-up window asking whether to proceed with the *Bluetooth* connection appears on the device. Select <YES>.
- The 'connected' message appears when the connection is complete.
- 3 Playback will start automatically. Otherwise, press play (on remote control or source device).
- Sound will be heard from the speakers of this unit via audio streaming.
- Your device must be within 32 feet from the unit.

## Bluetooth operation buttons

	Press the button to play or pause.
	Press the button to skip up. Press and hold to fast forward.
	Press the button to skip down. Press and hold to fast reverse.

### Notes:

- To disconnect the *Bluetooth* connection, simply touch your device to any of the N-Marks again.
- This product switches to *Bluetooth* function automatically when NFC tagging is done by your device.
- If your device does not support NFC, or if you wish to listen to audio via *Bluetooth* connectivity without NFC; refer "**Pairing with other *Bluetooth* source devices**" on page 9.
- Some *Bluetooth* devices will connect to this unit automatically when the device or its *Bluetooth* mode was turned on. In such case, it will also change the function selection of this product. If you do not want it to connect automatically, please disable *Bluetooth* on your device.
- It takes about a few seconds for a *Bluetooth* enabled device (eg. smartphone) to establish *Bluetooth* connection with this unit via NFC or manual connection.
- If "Empty tag" or similar message appears on your device, touch the device again to the NFC detection area on the main unit.

## Bluetooth one touch connection via NFC (continued)

### Party Link

This unit can be connected up to 4 devices via *Bluetooth*. To add devices, repeat steps 1 - 3 in “**NFC connection for audio playback**”.

If your device does not support NFC, repeat steps 3 - 7 in “**Pairing with other Bluetooth devices**”.

### Notes:

- Only one device can be played back at a time.
- To play back the second device, the first device must be in stop or pause mode and vice versa.
- When connect to fifth device, the current least active one will be replaced.
- Press PAIRING button on main unit will disconnect all devices.
- During Party Link mode, *bluetooth* headphone connection is invalid.

## Listening to Bluetooth enabled devices

### Bluetooth

*Bluetooth* wireless technology is a short-range radio technology that enables wireless communication between various types of digital devices, such as mobile phone or computer. It operates within a range of about 10 meters (30 feet) without the hassle of having to use cables to connect these devices.

#### This unit supports the following:

Communication System: *Bluetooth* Specification version 2.1 *Bluetooth* + Enhanced Data Rate (EDR).  
Support Profile : A2DP (Advanced Audio Distribution Profile) and AVRCP (Audio/Video Remote Control Profile)

#### Notes when using unit with a mobile phone

- This unit cannot be used to talk over the telephone even when there is a *Bluetooth* connection made to a mobile phone.
- Please refer to the operating manual supplied with the mobile phone for details on operation of your mobile phone while transmitting the sound using a *Bluetooth* connection.

### Pairing Bluetooth devices


*Bluetooth* devices need to be initially paired first before they can exchange data. This unit can memorize up to a maximum of 20 devices. Once paired, it is not necessary to pair them again unless:

- pairing is made with more than 20 devices. Pairing can only be made one device at a time. If subsequent device is paired, the oldest device paired will be deleted and replaced with the new one.
- this unit is reset. All pairing information is deleted when unit is reset.
- pairing information is deleted while re-pairing, etc.

Indicators:

Indicator	Condition	Bluetooth status
▶ ◀	Blinks	In waiting or pairing mode
▶ ● ◀	Lights up	Connected
No indication		Unconnected

However, the indication status is not displayed during *Bluetooth* standby mode.

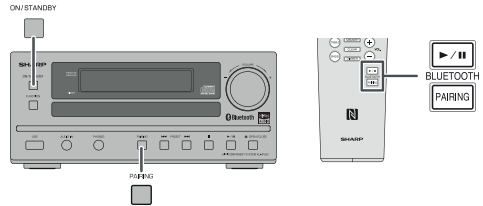

### Pairing with other Bluetooth source devices

- 1 Press the ON/STANDBY button to turn the power on.
- 2 Press the FUNCTION button (main unit) repeatedly to select *Bluetooth* function. “*Bluetooth*” appears on the display.
- 3 Press and hold the PAIRING button for 3 seconds or more. “Start Pairing” appears on the display. The unit is now in pairing mode and is ready to be paired with other *Bluetooth* source device.
- 4 Perform pairing procedure on the source device to detect this unit. “XL-HF203B SHARP” will appear in the detected devices list (if available) in the source device. (Refer the source device operating manual for details).

#### Notes:

- Place the devices to be paired within 3 feet (1 meter) of each other when pairing.
  - Some source devices are unable to display lists of detected devices. To pair this unit with the source device, refer to the source device operating manual for details.
- 5 Select “XL-HF203B SHARP” from the source list. If Passcode\* is required, enter “0000”.  
\* Passcode may be called PIN Code, Passkey, PIN number or Password.
  - 6 “Connected” appears on the display once the unit is successfully paired with the source device. (Pairing information is now memorized in the unit.) Some audio source devices may connect with the unit automatically after pairing is completed, otherwise follow the instructions in the source device operating manual to start connection.
  - 7 Press the play button on main unit, remote control or source device to start *Bluetooth* streaming playback.

## Listening to *Bluetooth* enabled devices (continued)

### Notes:

- If a device such as microwave oven, wireless LAN card, *Bluetooth* device or any other device that uses the same 2.4 GHz frequency is placed near the system some sound interruption may be heard.
- The transmission distance of the wireless signal between the device and the main unit is about 10 m (32'), but may vary depending on your operating environment. If a steel concrete or metallic wall is between the device and the main unit, the system may not operate at all, because the wireless signal cannot penetrate metal.
- If this unit or the source device is turned off before *Bluetooth* connection is completed, pairing will not be completed and the pairing information will not be memorized. Repeat step 1 onward to start pairing again.
- To pair with other devices, repeat steps 1 - 5 for each device. This unit can memorize up to a maximum of 20 devices. If subsequent device is paired, the oldest device paired, will be deleted.
- Once a device is ousted or deleted from the pairing list, the pairing information for the device is also deleted. To listen to the sound from the device again, it needs to be re-paired. Perform steps 1 - 5 to pair the device again.
- XL-HF203 supports *Bluetooth* profile AVRCP 1.4. If your device supports the same profile (refere to device manufacturer's specification), XL-HF203 is able to control the volume of the device and display the song information (title, album, artist).

### Note:

Some music applications do not support this feature, hence there will be no volume synchronization and no song information will be displayed even if your *Bluetooth* device supports such profile.

### ■ Listening to the sound

#### Check that:

- The source device *Bluetooth* functionality is ON.
  - Pairing of this unit and the source device is completed.
  - Unit is in connected mode.
- 1 Press the ON/STANDBY button to turn the power on.
  - 2 Press the FUNCTION button (main unit) repeatedly to select *Bluetooth* function.
  - 3 Start the *Bluetooth* connection from the *Bluetooth* stereo audio source device.
  - 4 Press the BLUETOOTH ►/■ button.

#### Notes:

- For various *Bluetooth* options, refer "NFC connection for audio playback" on page 8.
- If the source device has an extra bass function or equalizer function, set them to off to avoid sound distortion.

#### Note:

Make the *Bluetooth* connection again if the source device is not turned on, or its *Bluetooth* functionality is off or is in sleep mode.

### ■ To disconnect the *Bluetooth* device

Perform any of the followings.

- Disconnect the *Bluetooth* connection on the audio source device. Refer the operating manual supplied with the device.
- Turn off the *Bluetooth* stereo audio source device.
- Turn off this unit.

#### Note:

The volume of this unit may not be controlled as intended depending on the device.

### ■ Auto power on

During *Bluetooth* standby mode, the unit will automatically power on when the *Bluetooth* connection is set up between the main unit and your device.

#### Note:

This function is not applicable during *Bluetooth* standby mode off.

### ■ Headphone link

You can use wireless headphone with this unit via *Bluetooth*.

- 1 Press HEADPHONE LINK button on the remote control. This will connect to the last connected headphone. Press and hold to disconnect and search for new headphone for pairing.
- 2 Press PAIRING button at headphone to connect with this unit.

#### Notes:


- Headphone link is valid for CD/Tuner/Audio In function except for *Bluetooth*. During function selection, *Bluetooth* will be skipped.
- When connected to headphone, speaker output is muted.
- No auto connect for *bluetooth* headphone.
- During Headphone Link mode, Party Link is invalid. (Display shows "INVALID" for 3 seconds)

# Listening on Android™ devices


## ■ Introduction : Open Accessory

Open Accessory support allows external USB hardware (an Android USB accessory) to interact with an Android-powered device in a special accessory mode. When an Android-powered device is in accessory mode, the connected accessory acts as the USB host (powers the bus and enumerates devices) and the Android-powered device acts in the USB accessory role. Android USB accessories are specifically designed to attach to Android-powered devices and adhere to the Open Accessory Protocol, that allows them to detect Android-powered devices that support accessory mode.

- 1 Insert the connector to the device.

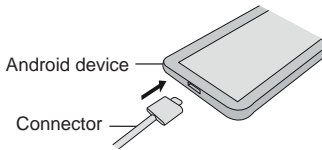


- 2 Connect the device to the main unit via USB connector.

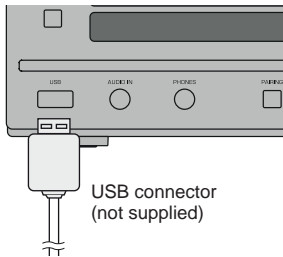

## ■ Android device playback

- 1 Press the ON/STANDBY button to turn the power on.
- 2 Press the FUNCTION button repeatedly (main unit) to select USB function.
- 3 Connect the device (Smartphone/Tablet) to the unit. "USB Media" will be displayed.

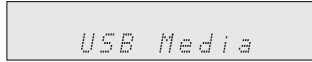

- 4 Press the play button (on main unit, remote control or device).

### Notes:

- If the source device has an extra bass or equalizer function, set them to off. If these functions are on, sound may be distorted.
- Incoming calls will pause the playback/application.
- Once the calls are answered, the conversation can only be heard through the built-in speaker of the cellular device. Turn on the device speaker or disconnect the device to start conversation.

## ■ To disconnect the Android device

- 1 Quit the application (apps).
- 2 Disconnect the device from the USB terminal.

## ■ Various functions


Function	Remote control	Operation
Track up/down		Press in the playback or stop mode. If you press the button in the stop mode, press the ►/   button to start the desired track.
Fast forward/reverse		Press and hold down in the playback mode. Release the button to resume playback.

### Notes:

- If non-compatible device is detected, "Dev No Support" will be displayed.
- Controls (play/pause/skip up/skip down) will function based on actual Applications (Apps) controls used on Android devices.

Android is a trademark of Google Inc.

# Listening to a CD or MP3/WMA disc

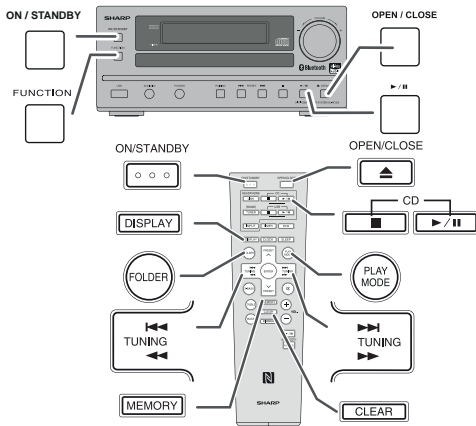

## Disc playback

- 1 Press the ON/STANDBY button to turn the power on.
- 2 Press the FUNCTION button repeatedly on the main unit to select CD function.
- 3 Press the OPEN/CLOSE button to open the disc compartment.
- 4 Place the disc on the disc compartment, label side up.
- 5 Press the OPEN/CLOSE button to close the disc tray.
- 6 Press the ►/II (CD ►/II) button to start playback.

### To stop playback completely:

- Press the ■ button twice.

### Caution:

- Do not place two discs in one-disc-tray.
- Do not play discs of special shapes (heart, octagon, etc.). It may cause malfunctions.
- Do not push the disc tray while it is moving.
- If the power fails wait until the power is restored.
- If TV or radio interference occurs during CD operation, move the unit away from the TV or radio.
- Be sure to place 8 cm (3") disc in the middle of the disc tray.
- Due to the structure of the disc information, it takes longer to read an MP3/WMA disc than a normal CD (approximately 20 to 90 seconds).

### Note for CD or MP3/WMA disc:

- Rewritable multi-session discs with unfinished writing, can still be played.

## To resume playback after stopping (resume play)

You can resume playback from the point playback is stopped.

- 1 While a disc is playing, press the ■ button once. The system stores the point you stopped.
- 2 To resume play, press the CD ►/II button. Playback resumes from the point you stopped.

### To cancel the resume playback:

Press the ■ button twice.

### Note:

Depending on the disc, playback may resume from slightly before the stopped position.

## Various disc functions

Function	Main unit	Remote control	Operation
<b>Play</b>			Press in the stop mode.
<b>Pause</b>	►/II	CD ►/II	Press in the playback mode. Press the ►/II button to resume playback from the paused point.
<b>Stop</b>	■	CD ■	Press twice in the playback mode.
<b>Track up/down</b>	PRESET	TUNING	Press in the playback or stop mode. If you press the button in the stop mode, press the ►/II button to start the desired track.
<b>Fast forward/reverse</b>	PRESET	TUNING	Press and hold down in the playback mode. Release the button to resume playback.

## Random play

### To random play all tracks:

Press PLAY MODE button on the remote control repeatedly until "Random" appears. Press the ►/II (CD ►/II) button.

### To cancel random play:

Press the PLAY MODE button again. "RDM" indicator will disappear.



### Notes:

- If you press the ►/II button during random play, you can move to the track selected next by the random operation. However, the ◀ button does not allow you to move to the previous track. The beginning of the track being played will be located.
- In random play, the unit will select and play tracks automatically. (You cannot select the order of the tracks.)

# Listening to a CD or MP3/WMA disc (continued)

## Repeat play

Repeat play can play one track, all tracks or a programmed sequence continuously.

### To repeat one track:

Select desired track using the ◀◀ or ▶▶ button. Press the PLAY MODE button repeatedly until "Repeat One" appears. Press the ▶/|| (CD ▶/||) button.

### To repeat all tracks:

Press the PLAY MODE button repeatedly until "Repeat All" appears. Press the ▶/|| (CD ▶/||) button.

### To repeat desired tracks:

Perform steps 1 - 5 in "Programmed play" section on this page and then press the PLAY MODE button repeatedly until "Repeat All" appears.

### To repeat one folder:

While in Folder mode on (MP3/WMA), press PLAY MODE button repeatedly until "Repeat Folder" appears. Press the ▶/|| (CD ▶/||) button.

### To cancel repeat play:

Press the PLAY MODE button repeatedly until "Normal" appears and "⏪" disappears.



### Caution:

After performing repeat play, be sure to press the ■ button. Otherwise, the disc will play continuously.

## Programmed play (CD)

- 1 While in the stop mode, press the MEMORY button on the remote control to enter the programming save mode.
- 2 Press the ▶▶ or ◀◀ button to select the desired track.



Selected track number

- 3 Press the MEMORY button to save the track number.
- 4 Repeat steps 2 - 3 for other tracks. Up to 32 tracks can be programmed. If you want to check the programmed tracks, during stop mode, press the MEMORY button repeatedly. To clear the programmed tracks, press the CLEAR button.
- 5 Press the ▶/|| (CD ▶/||) button to start playback.

## Programmed play (MP3/WMA)

- 1 While in the stop mode, press the MEMORY button to enter the programming save mode.
- 2 Press the PRESET (✓ or ^) button on the remote control to select the desired folder.



Then press the ◀◀ or ▶▶ button (remote control) to select the desired tracks.



- 3 Press the MEMORY button to save the folder and track number.
- 4 Repeat steps 2 - 3 for other folder/tracks. Up to 32 tracks can be programmed.
- 5 Press the ▶/|| (CD ▶/||) button to start playback.

### To cancel the programmed play mode:

During programmed stop mode, press the ■ button. The display will show "Memory Clear" and all the programmed contents will be cleared.

### Adding tracks to the program:

If a program has been previously stored, the "MEM" indicator will be displayed. During stop mode, press the MEMORY button once. Within 10 seconds, press and hold the MEMORY button again. Then follow steps 2 - 3 to add tracks.


### Notes:

- When the disc compartment is opened, the program is automatically canceled.
- If you press the ON/STANDBY button to enter the standby mode or change the function from CD to another, the programmed selections will be cleared.


## Procedure to playback MP3/WMA disc with folder mode on

To play back CD-R/RW.

- 1 In CD function, load an MP3/WMA disc. Press the FOLDER button and disc info will be displayed.

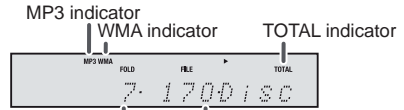


- 2 Press the PRESET (✓ or ^) button to select desired playback folder. (Folder mode on)

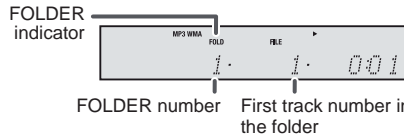

- 3 Select desired file to be played back by pressing the ◀◀ or ▶▶ button.
- 4 Press the ▶/|| (CD ▶/||) button. Playback will start and file name will be displayed.


- Title, Artist and Album name are displayed if they are recorded on the disc.
- In case of playback with the folder mode on, press the PRESET (✓ or ^) button, and the folder can be selected even though it is in playback/pause mode. It will continue playback/pause mode in the 1st track of the selected folder.
- Display content can be changed by pressing the DISPLAY button.

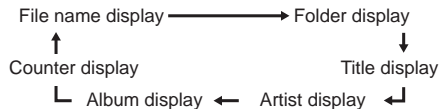


### Note:

If "Not Support" is displayed, it means "Copyright protected WMA file" or "Not supported even playback file" is selected.

# Listening to USB mass storage device/MP3 player

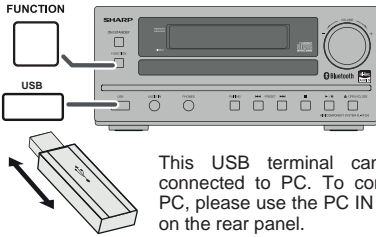

This USB terminal cannot be connected to PC. To connect to PC, please use the PC IN terminal on the rear panel.

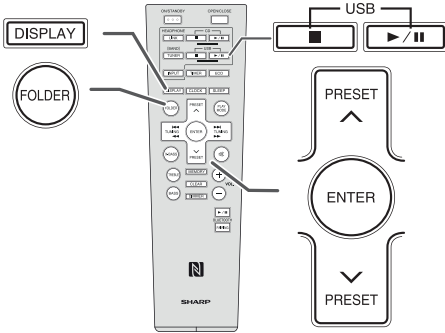

**Note:**

This product is not compatible with MTP and AAC file systems from USB mass storage device or MP3 player.

**■ To play back USB/MP3 player with folder mode on / off**

- 1 Press the FUNCTION button (main unit) repeatedly to select USB function. Connect the USB memory device that has MP3/WMA format files on the unit. When the USB memory is connected to the main unit, the device information will be displayed.  
To playback with folder mode on, follow step 2 below. To playback with folder mode off, skip to step 3 below.
- 2 Press the FOLDER button, and press the PRESET (✓ or ^) button to select desired playback folder. To start playback, go to step 4. To change the playback folder, press the PRESET (✓ or ^) button to select another folder.
- 3 Select desired file to be played back by pressing the ◀◀ or ▶▶ button.
- 4 Press the ▶/|| (USB ▶/||) button. Playback will start and the file name will be displayed.
  - Title, Artist and Album name are displayed if they are recorded in the USB memory device.
  - Display content can be changed by pressing the DISPLAY button.

**Note:**

To pause playback:  
Press the ▶/|| (USB ▶/||) button.

**■ To remove USB memory device**

- 1 Press the ■ button twice to stop playback.
- 2 Disconnect USB memory device from the USB terminal.

**Notes:**

- SHARP will not be held liable for the loss of data while the USB memory device is connected to the audio system.
- Files compressed in MP3 and/or WMA format can be played back when connected to the USB terminal.
- This USB memory's format supports FAT 16 or FAT 32.
- SHARP cannot guarantee that all USB memory devices will work on this audio system.
- USB cable is not recommended for use in this audio system to connect to USB memory device. Use of the USB cable will affect the performance of this audio system.
- This USB memory cannot be operated via USB hub.
- The USB terminal in this unit is not intended for a PC connection.
- External HDD-storage cannot be played back via USB terminal.
- If the data inside the USB memory is large, it may take longer time for the data to be read.
- This product can play WMA and MP3 files. It will automatically detect the file type being played. If unplayable file is played on this product, "Not Support" is indicated and the file will be automatically skipped. This will take a few seconds. If abnormal indications appear on the display due to the unspecified file, turn off the unit and then turn it on again.
- This product relates to USB mass storage devices and MP3 players. It may however face some irregularities due to various unforeseen reasons from some devices. Should this happen, turn off the unit and then turn it on again.
- MP3 player will not be charging in other than USB function. However, charging ability depends on type of MP3 player used.

**The following functions are the same as CD operations:**


	Page
Various disc functions .....	12
Random play .....	12
Repeat play .....	13
Programmed play (MP3/WMA) .....	13

**Notes:**

- If USB memory device is not connected, "USB No Media" will be shown on the display.
- Fast forward/reverse is invalid when playing back a variable bitrate file.

**Notes:**

- This unit only supports "MPEG-1 Audio Layer-3" format. (Sampling Frequency is 32, 44.1, 48kHz)
- Playback order for MP3 files may differ depending on the writing software used during file download.
- Bitrate which is supported by MP3 is 32-320 kbps, WMA is 64-160 kbps.
- Files without MP3/WMA format cannot be played back.
- Playlists are not supported on this unit.
- This unit can display Folder Name or File Name up to 32 characters.
- Total number of folders read is 999 including folder with non-playable file. However, the display shows only folder with MP3/WMA files.
- The display playback time may not be displayed correctly when playing back a variable bitrate file.
- WMA meta tag also supports title, artist and album name which are recorded in WMA files. Copyright protected WMA files cannot be played back.

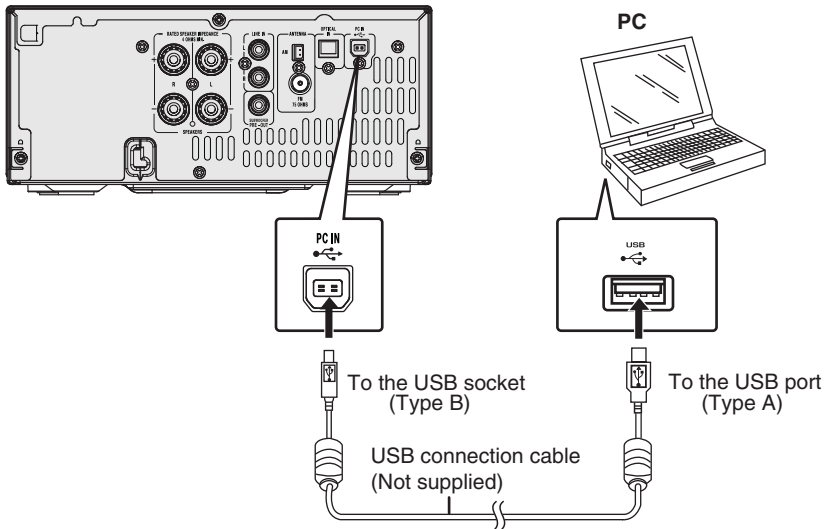

With a high-performance D/A converter on this unit, you can enjoy a pure playback sound from your PC digitally transmitted to this unit without any PC-specific noise.

For OS : This unit is tested to be working with Windows 8/7/Vista.

### ■ Connection

Code to use: USB cable (Type A - Type B)

- 1 Connect the USB cable to the PC IN terminal, then connect to the PC.
- 2 Turn on a PC to boot the OS. Wait until the OS boots.
- 3 Press the ON/STANDBY button of this unit to power on. This unit's driver will automatically be installed to the PC and recognizes it as "USB speaker".

### ■ Listening to audio data playing on a PC


- 1 Turn on a PC to boot the OS. Wait until the OS boots.
- 2 Press the ON/STANDBY button of this unit to power on.
- 3 Press the FUNCTION button (main unit) repeatedly or INPUT button (remote control) until "PC IN" is displayed.
- 4 Start playback your desired song in the PC music software.

### Notes:

- Only PLAY and PAUSE can be operated from this unit.
- Volume can be controlled from this unit. However, master volume from PC will be disabled.
- If there is no sound when playback, please check if the volume of music or video software is muted. Adjust the volume accordingly.
- If there is still no sound output or error message appears on PC, exit the application software and launch it back again. Please also check if "USB speaker" is selected in the PC setting. For details, refer to the user's manual of the PC.
- It is not possible to adjust the volume on the keyboard.
- USB connection cable length must be 3 meter or below.
- Sharp does not guarantee proper operation for all computers, internet browser, audio/video application or online audio/video streaming application.



# Listening to the radio

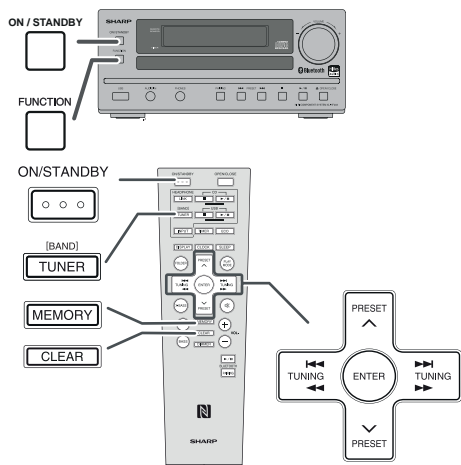

## ■ Tuning

- 1 Press the ON/STANDBY button to turn the power on.
- 2 Press the TUNER [BAND] button (remote control) or FUNCTION button (main unit) repeatedly to select FM Stereo, FM Mono or AM.

### 3 ● Manual tuning:

Press the TUNING (◀◀/◀▶ or ▶▶/▶▶) button repeatedly to tune in to the desired station.

#### ● Auto tuning:

Press and hold the TUNING (◀◀/◀▶ or ▶▶/▶▶) button. Scanning will start automatically and the tuner will stop at the first receivable broadcast station.

### Notes:

- When radio interference occurs, auto scan tuning may stop automatically at that point.
- Auto scan tuning will skip weak signal stations.
- To stop the auto tuning, press the TUNING (◀◀/◀▶ or ▶▶/▶▶) button again.

### To receive an FM stereo transmission:

- Press the TUNER [BAND] button to select stereo mode. "ST" indicator will be displayed. "◀▶" and "●" will appear when an FM broadcast is in stereo.
- If the FM reception is weak, press the TUNER [BAND] button to extinguish the "ST" indicator. The reception changes to monaural, and the sound becomes clear er.

## ■ Memorizing a station

You can store 40 FM and AM stations in memory and recall them at the push of a button. (Preset tuning)

- 1 Perform steps 2 - 3 in "Tuning".
- 2 Press the MEMORY button.



- 3 Within 30 seconds, press the PRESET (✓ or ▲) button to select the preset channel number. Store the stations in memory, in order, starting with preset channel 1.
- 4 Within 30 seconds, press the MEMORY button to store that station in memory. If the "MEM" and preset number indicators disappear before the station is memorized, repeat the operation from step 2.
- 5 Repeat steps 1 - 4 to set other stations, or to change a preset station. When a new station is stored in the memory, the station previously memorized for that preset channel number will be erased.

### Note:

The backup function protects the memorized stations for a few hours should there be a power failure or the AC power cord become disconnected.

## ■ To recall a memorized station


Press the PRESET (✓ or ▲) button to select the desired station.

## ■ To scan the preset stations


- 1 Press and hold the PRESET (✓ or ▲) button until the preset number flashes. The programmed stations will be tuned in sequentially, for 5 seconds each.
- 2 Press the PRESET (✓ or ▲) button again when the desired station is located.

## ■ To erase entire preset memory

- 1 Press the ON/STANDBY button to turn the power on.
- 2 Press the FUNCTION button (main unit) repeatedly or TUNER [BAND] button (remote control) to select Tuner function.
- 3 In Tuner function, press and hold the CLEAR button (remote control) until "Tuner Clear" appears.

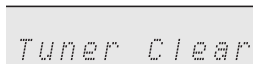

## Setting the clock (Remote control only)

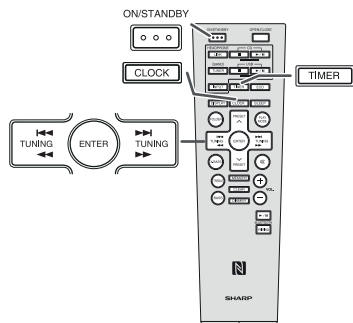

In this example, the clock is set for the 12-hour (AM 12:00) display.

- 1 Press the ON/STANDBY button to turn the power on.
- 2 Press the CLOCK button.
- 3 Within 10 seconds, press the ENTER button. To adjust the day, press the ◀◀ or ▶▶ button and then press the ENTER button.
- 4 Press the ◀◀ or ▶▶ button to select 24-hour or 12-hour display and then press the ENTER button.
  - "AM 12:00" → The 12-hour display will appear. (AM 12:00 - PM 11:59)
  - ↓
  - "AM 0:00" → The 12-hour display will appear. (AM 0:00 - PM 11:59)
  - ↓
  - "0:00" → The 24-hour display will appear. (0:00 - 23:59)
- 5 To adjust the hour, press the ◀◀ or ▶▶ button and then press the ENTER button. Press the ◀◀ or ▶▶ button once to advance the time by 1 hour. Hold it down to advance continuously.
- 6 To adjust the minutes, press the ◀◀ or ▶▶ button and then press the ENTER button. Press the ◀◀ or ▶▶ button once to advance the time by 5 minutes interval.

### To confirm the time display:

Press the CLOCK button. The time display will appear for about 5 seconds.

### Note:

When power supply is restored after unit is plugged in again or after a power failure, reset the clock.

### To readjust the clock:

Perform "Setting the clock" from step 1.

### To change the 24-hour or 12-hour display:

- 1 Clear all the programmed contents. [Refer to "Factory reset, clearing all memory" on page 21 for details.]
- 2 Perform "Setting the clock" from step 1 onward.

## Timer and sleep operation (Remote control only)

### Timer playback:

The unit turns on and plays the desired source (CD, TUNER, USB, AUDIO IN, LINE IN, OPTICAL IN) at a preset time.

This unit has 2 types of timer: ONCE TIMER and DAILY TIMER.

### Once timer ("O" indicator):

Once timer play works for one time only at a preset time.


### Daily timer ("DAILY" indicator):

Daily timer play works at the same preset time every day that we set. For example, set the timer as a wake-up call every morning.

### Using the once timer and daily timer in combination:

For example, use the once timer to listen to a radio program, and use the daily timer to wake up.

- 1 Set the daily and once timer (pages 17 - 18).

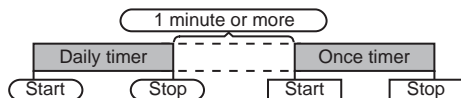


## Timer playback

### Before setting timer:

- Check that the clock is set to the correct time. If it is not set, you cannot use the timer function.
- For timer playback: Plug in USB or load discs to be played.



- 1 Press the ON/STANDBY button to turn the power on.
- 2 Press and hold the TIMER button.
- 3 Within 10 seconds, press the ◀◀ or ▶▶ button to select "Once" or "Daily", and press the ENTER button.
- 4 Within 10 seconds, press the ◀◀ or ▶▶ button to select "Timer Set", and press the ENTER button.
- 5 To select the timer playback source (CD, TUNER, USB, AUDIO IN, LINE IN), press the ◀◀ or ▶▶ button. When you select the tuner, select a station by pressing the ◀◀ or ▶▶ button, and then press the ENTER button. If a station has not been programmed, "No Preset" will be displayed and timer setting will be canceled.
- 6 To adjust the day, press the ◀◀ or ▶▶ button and then press the ENTER button.
- 7 Press the ◀◀ or ▶▶ button to adjust the hour, and then press the ENTER button.
- 8 To adjust the minutes, press the ◀◀ or ▶▶ button and then press the ENTER button.
- 9 Set the time to finish as in steps 7 and 8 above.
- 10 Adjust the volume using the VOLUME control, and then press the ENTER button.
- 11 Press the ON/STANDBY button to enter the power standby mode. "TIMER" indicator lights up.

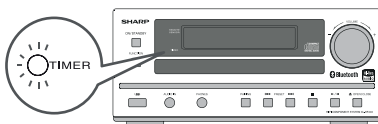

## Timer and sleep operation (Remote control only) (continued)

**12** When the preset time is reached, playback will start. The volume will increase gradually until it reaches the preset volume. The timer indicator will blink during timer playback.

**13** When the timer end time is reached, the system will enter the power standby mode automatically.

### Once timer:

The timer will be canceled.

### Daily timer:

The timer operates at the same time every selected day. Cancel the daily timer when it is not in use.

### Notes:

- When performing timer playback using another unit connected to the USB terminal or AUDIO IN jack, select "USB" or "AUDIO IN" or "LINE IN" or "OPTICAL IN" in step 5. This unit will turn on or enter the power standby mode automatically. However, the connected unit will not turn on or off.
- To stop the timer playback, follow step "Cancelling the timer setting" of this page.

### Checking the timer setting:

- 1 Turn the power on. Press and hold the TIMER button.
- 2 Within 10 seconds, press the ◀▶ button to select "Once" or "Daily", and press the ENTER button.
- 3 Within 10 seconds, press the ◀▶ button to select "Timer Call", and press the ENTER button.

### Cancelling the timer setting:

- 1 Turn the power on. Press and hold the TIMER button.
- 2 Within 10 seconds, press the ◀▶ button to select "Once" or "Daily", and press the ENTER button.
- 3 Within 10 seconds, press the ◀▶ button to select "Timer Off", and press the ENTER button. Timer will be canceled (the setting will not be canceled).

### Reusing the memorized timer setting:

The timer setting will be memorized once it is entered. To reuse the same setting, perform the following operations.

- 1 Turn the power on. Press and hold the TIMER button.
- 2 Within 10 seconds, press the ◀▶ button to select "Once" or "Daily", and press the ENTER button.
- 3 Within 10 seconds, press the ◀▶ button to select "Timer On", and press the ENTER button.
- 4 Press the ON/STANDBY button to enter the power standby mode.

### ■ Sleep operation

The radio, disc, USB, Audio In, Line In, PC In, Optical In and *Bluetooth* can all be turned off automatically.

- 1 Play back the desired sound source.
- 2 Press the SLEEP button.
- 3 Within 5 seconds, press the SLEEP button repeatedly to select the time.  
"Sleep 90" → "Sleep 80" ... → "Sleep 10" →  
→ "Sleep Off"

**4** "SLEEP" indicator will appear.

**5** The unit will enter the power standby mode automatically after the preset time has elapsed. The volume will be turned down 1 minute before the sleep operation finishes.

### To confirm the remaining sleep time:

- 1 While "SLEEP" is indicated, press the SLEEP button.

### To cancel the sleep operation:

Press the ON/STANDBY button while "SLEEP" is indicated. To cancel the sleep operation without setting the unit to the standby mode, proceed as follows.


- 1 While "SLEEP" is indicated, press the SLEEP button.
- 2 Within 5 seconds, press the SLEEP button repeatedly until "Sleep Off" appears.

### ■ To use timer and sleep operation together

#### Sleep and timer playback:


For example, you can fall asleep listening to the radio and wake up to CD the next morning.

- 1 Set the sleep time (see above, steps 1 - 5).
- 2 While the sleep timer is set, set the timer playback (steps 2 - 10, page 17).

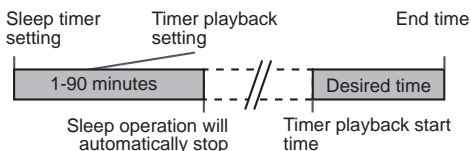

## Enhancing your system

The connection cord is not included. Purchase a commercially available cord as shown below.

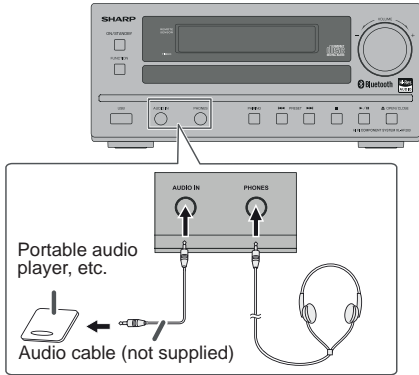

### ■ Listening to the playback sounds of portable audio player, etc.

- 1 Use a connection cord to connect the portable audio player, etc. to the AUDIO IN jack.
- 2 Press the ON/STANDBY button to turn the power on.
- 3 Press the INPUT button (remote control) or FUNCTION button repeatedly (main unit) to select AUDIO IN function.
- 4 Play the connected equipment. If volume level of the connected device is too high, sound distortion may occur. Should this happen, adjust the volume of the connected device.

#### Note:


To prevent noise interference, place the unit away from the television.

### ■ Headphones

- Do not set the volume on to maximum at switch on. Excessive sound pressure from earphones and headphones can cause hearing loss.
- Before plugging in or unplugging the headphone, reduce the volume.
- Be sure your headphone has a 1/8" (3.5 mm) diameter plug and impedance between 16 and 50 ohms. The recommended impedance is 32 ohms.
- Plugging in the headphone disconnects the speakers automatically.

### ■ Optical In

Connect to the TV using an optical digital cable.

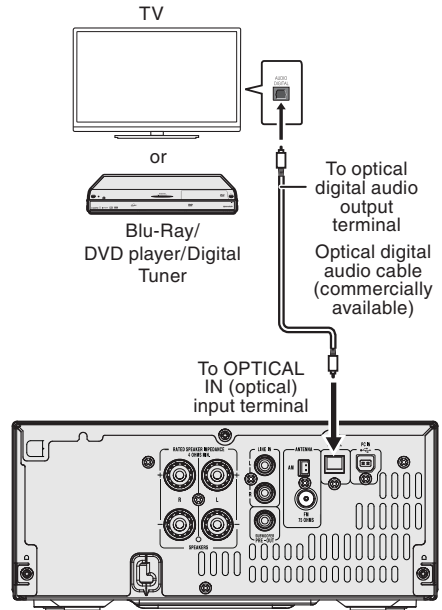

#### To select OPTICAL function:

Press the FUNCTION button repeatedly on the main unit or INPUT button on the remote control until "Optical In" appears on the display.

**Note:** TV Audio set up must be in PCM format.

## Troubleshooting chart

If something is wrong with this product, check the following before calling your authorized SHARP dealer or service center.

### ■ General

Symptom	Possible cause
● The clock is not set to the correct time.	● A power failure occurred. Reset the clock. (Refer page 17)
● When a button is pressed, the unit does not respond.	● Set the unit to the power standby mode and then turn it back on. ● If the unit still malfunctions, reset it. (Refer page 21)
● No sound is heard.	● The volume level set to "Min". ● The headphones are not connected. ● The speaker wires are not connected. ● The unit is too far from the <i>Bluetooth</i> stereo audio source device. ● The unit is not paired with the <i>Bluetooth</i> stereo audio source device.

### ■ Remote control

Symptom	Possible cause
● The remote control does not operate.	● The AC power cord of the unit is not plugged in. ● The battery polarity is wrong. ● The battery is dead. ● The distance or angle is incorrect. ● The remote control sensor receives strong light.

### ■ Bluetooth

Symptom	Possible cause
● No sound is heard.	● The unit is too far from the <i>Bluetooth</i> stereo audio source device. ● The unit is not paired with the <i>Bluetooth</i> stereo audio source device.
● <i>Bluetooth</i> sound is interrupted or distorted.	● The unit is too near to a device that generates electromagnetic radiation. ● There is an obstacle between the unit and the <i>Bluetooth</i> stereo audio source device.

### ■ NFC

Symptom	Possible cause
● NFC-enabled device cannot connect to <i>Bluetooth</i> when tapping on N-Mark.	● The unit is in Eco mode. ● NFC mode is disabled on your device. ● Your device is in sleep mode.

### ■ Open Accessory

Symptom	Possible cause
● No sound is produced.	● The device is not playing. ● The device is not properly connected to the unit. ● The AC power cord of the unit is not plugged in.
● Device will not charge.	● The device is not making full contact with the USB terminal.

### ■ CD player

Symptom	Possible cause
● Playback does not start. ● Playback stops in the middle or is not performed properly.	● The disc is loaded upside down. ● The disc does not satisfy the standards. ● The disc is distorted or scratched.
● Playback sounds are skipped, or stopped in the middle of a track.	● The unit is located near excessive vibrations. ● Very dirty disc has been used. ● Condensation has formed inside the unit.

### ■ PC In

Symptom	Possible cause
● No sound is heard.	● PC is not turned on. ● Application software is not activated.

### ■ Optical In

Symptom	Possible cause
● No sound is heard.	● No input signal. The connected equipment is not turned on. ● Signals other than Linear PCM cannot be recognized. ● Poor cable connection to the terminals.

## Troubleshooting chart (continued)

### ■ USB

Symptom	Possible cause
● Device cannot be detected.	● The device does not contain any MP3/WMA files. ● The device is not properly connected. ● It is an MTP device. ● The device contains AAC files only.
● Playback does not start.	● WMA file is copyright protected. ● Device contains a false MP3 file.
● Wrong time display. ● Wrong file name display.	● A variable bitrate file is being played back. ● The file name is written in Chinese or Japanese characters.

### ■ Tuner

Symptom	Possible cause
● The radio makes unusual noises continuously.	● The unit placed near a TV or computer. ● The FM antenna is not placed properly. Move the antenna away from the AC power cord if it is located nearby.

### ■ Condensation

Sudden temperature changes, storage or operation in an extremely humid environment may cause condensation inside the cabinet (CD pickup, etc.) or on the transmitter on the remote control. Condensation can cause the unit to malfunction. If this happens, leave the power on with no disc in the unit until normal playback is possible (about 1 hour). Wipe off any condensation on the transmitter with a soft cloth before operating the unit.

### ■ If problem occurs

When this product is subject to strong external interference (mechanical shock, excessive static electricity, abnormal supply voltage due to lightning, etc.) or if it is operated incorrectly, it may malfunction.

#### If such a problem occurs, do the following:

- 1 Set the unit to the standby mode and turn the power on again.
- 2 If the unit is not restored in the previous operation, unplug and plug in the unit again, and then turn the power on.

#### Note:

If neither operation above restores the unit, clear all the memory by resetting it.

### ■ Factory reset, clearing all memory

- 1 Press the ON/STANDBY button to turn the power on.
- 2 Press FUNCTION button (main unit) repeatedly or AUDIO/LINE (INPUT) button (remote control) to enter Audio In mode.
- 3 Press ◀◀ button (main unit) once.
- 4 Press and hold ■ button (main unit) until "RESET" appears.



#### Caution:

This operation will erase all data stored in memory including clock, timer settings and tuner preset.

### ■ Before transporting the unit

Remove all devices connected to the unit. Then, set the unit to the power standby mode. Carrying the unit with other devices left connected or discs left inside might damage the unit.

### ■ Care of discs

Discs are fairly resistant to damage. However mistracking can occur due to accumulation of dirt on the surface.

- Do not mark on the non-label side of the disc from which signals are read.
- Keep your discs away from direct sunlight, heat, and excessive moisture.
- Always hold the discs by the edges. Fingerprints, dirt, or water on the CDs can cause noise or mistracking. Clean it with a soft, dry cloth, wiping straight out from the center, along the radius.



## Maintenance

### ■ Cleaning the cabinet

Periodically wipe the cabinet with a soft cloth and a diluted soap solution, then with a dry cloth.

#### Caution:

- Do not use chemicals for cleaning (gasoline, paint thinner, etc.). It may damage the cabinet.
- Do not apply oil to the inside of the unit. It may cause malfunctions.

### ■ Cleaning the CD pickup lens

In order to ensure proper operation of the CD player, preventative maintenance (cleaning of the laser pickup lens) should be performed periodically. Lens cleaners are commercially available. Contact your local CD software dealer for options.

## Specifications

As part of our policy of continuous improvement, SHARP reserves the right to make design and specification changes for product improvement without prior notice. The performance specification figures indicated are nominal values of production units. There may be some deviations from these values in individual unit.

### ■ General

<b>Power source</b>	AC 100 - 240 V ~ 50/60 Hz
<b>Power consumption</b>	Power on: 22 W
<b>Dimensions</b>	Width: 8 - 1/2" (216 mm) Height: 3 - 4/5" (96 mm) Depth: 11 - 1/4" (293 mm)
<b>Weight</b>	4.6 lbs. (2.1 kg)
<b>Bluetooth frequency band</b>	2.402GHz - 2.480GHz
<b>Compatible Bluetooth Profile</b>	A2DP (Advanced Audio Distribution Profile), AVRCP (Audio/Video Remote Control Profile) <i>Bluetooth 2.1 +EDR</i>

### ■ Amplifier

<b>Output power</b>	RMS: Total 50 W (25 W per channel into 4 ohms at 1 kHz, 10% T.H.D.) FTC: 19 W minimum RMS per channel into 4 ohms from 20 Hz to 20 kHz, 1% T.H.D.
<b>Output terminals</b>	Speakers: 4 ohms 20Hz - 20kHz Subwoofer Pre-out (audio signal): 200 mV/10 k ohms at 70 Hz Headphones: 16 - 50 ohms (recommended: 32 ohms)
<b>Input terminals</b>	Audio In (audio signal): 500 mV/47 k ohms Line in (Analogue input): 500 mV/47 k ohms Optical digital input (OPTICAL) - PCM signal only: square type x 1 PC input x 1

### ■ CD player

<b>Type</b>	Single disc multi-play compact disc player
<b>Signal readout</b>	Non-contact, 3-beam semiconductor laser pickup
<b>D/A converter</b>	Multi bit D/A converter
<b>Frequency response</b>	20 - 20,000 Hz
<b>Dynamic range</b>	90 dB (1 kHz)

### ■ USB (MP3 / WMA)

<b>USB host interface</b>	<ul style="list-style-type: none"> <li>● Complies with USB 1.1 (Full Speed)/2.0 Mass Storage Class.</li> <li>● Support Bulk only and CBI protocol.</li> </ul>
<b>Support file</b>	<ul style="list-style-type: none"> <li>● MPEG 1 Layer 3</li> <li>● WMA (Non DRM)</li> </ul>
<b>Bitrate support</b>	<ul style="list-style-type: none"> <li>● MP3 (32 ~ 320 kbps)</li> <li>● WMA (64 ~ 160 kbps)</li> </ul>
<b>Other</b>	<ul style="list-style-type: none"> <li>● Maximum total number of MP3/WMA files is 65025.</li> <li>● Maximum total number of folders is 999 INCLUSIVE of root directory.</li> <li>● The ID3TAG information supported are TITLE, ARTIST and ALBUM only.</li> <li>● Supports ID3TAG version 1 and version 2.</li> </ul>
<b>File system support</b>	<ul style="list-style-type: none"> <li>● Support USB devices with Microsoft Windows/DOS/FAT 12/FAT 16/ FAT 32.</li> <li>● 2 kbyte block length for sector.</li> </ul>

### ■ Tuner

<b>Frequency range</b>	FM: 87.5 - 108.0 MHz AM: 530 - 1,710 kHz
<b>Preset</b>	40 (FM and AM station)

### ■ Speaker

<b>Type</b>	2-way type speaker system 1" (2.5 cm) dome tweeter 4 - 3/4" (12 cm) woofer
<b>Maximum input power</b>	50 W
<b>Rated input power</b>	25 W
<b>Impedance</b>	4 ohms
<b>Dimensions</b>	Width: 5 - 4/5" (148 mm) Height: 10 - 1/4" (262 mm) Depth: 8 - 7/12" (218 mm)
<b>Weight</b>	5.73 lbs. (2.6 kg)/each