

# BT Portable Speaker

## K1201 USER GUIDE



For correctly operating, please read this manual carefully before using. Any content revise of the manual won't declare again, and we are no responsible for consequence caused by fault or oversight of this manual

### FEATURES:

1. 1.1CH outdoor innovation Bazooka speaker
2. Bluetooth Audio Streaming for Wireless Freedom
3. With RGB light
4. Output perfect sound performance
5. With USB & Micro SD support, FM radio
6. 3.5mm Stereo Analog Input to Connect any Audio Source
7. With karaoke function, 1 microphone input
8. Build in lithium rechargeable battery 1500mAh
9. Designed for Portability with Handle

**ACCESSORIES:**

Charging cable, Audio cable, User manual.

**SPECIFICATION:**

Bluetooth range                    up to 10 meters

Speakers:                            Horn Size: 1.4 inch  
    Subwoofer Size: 4 inch  
    Horn output: 1.5W\*1, 4Ω  
    Subwoofer output: 10.8W,4Ω

Connections:                        USB and Micro SD card(reader)  
    Aux-in 3.5mm jack connection


Power supply:                        Built-in rechargeable lithium battery 1500mAh

Play time:                            2 hours with max volume

Recharge power:                    DC 5V 1A (USB-to-micro USB charging cable included)

Product size:                        376\*173\*186mm

**INSTRUNCTION FOR APPEARANCE AND KEY:**

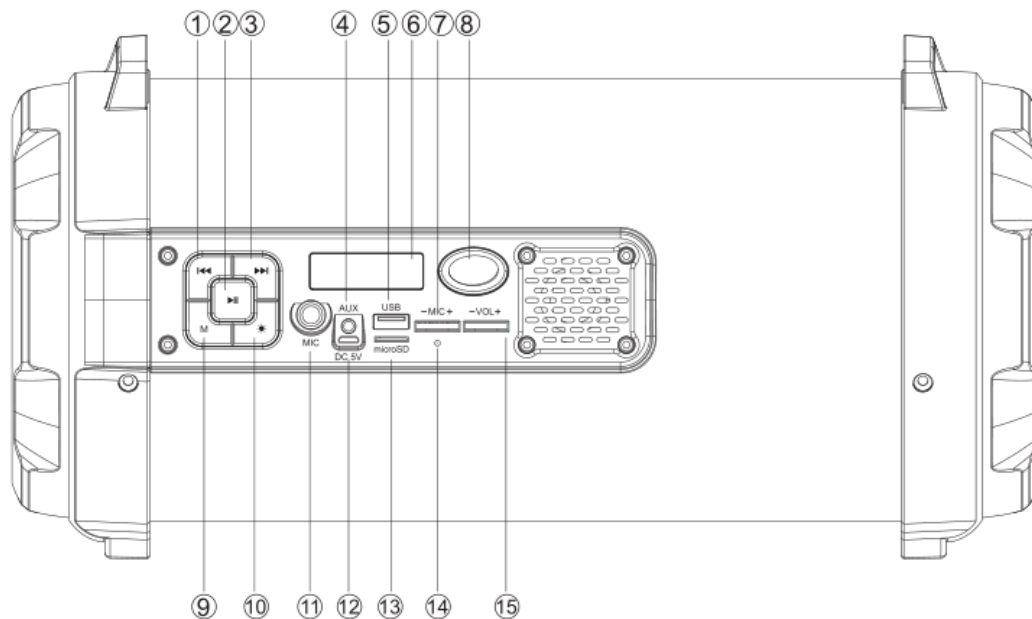

- |                  |   |                     |               |
|------------------|---|---------------------|---------------|
| 1. PREVIOUS SONG | 2. PAUSE/PLAY   | 3. NEXT SONG        | 4.AUX-in Jack |
| 5. USB port      | 6. DIGITAL DISPLAY  | 7. WIRED MIC VOLUME |               |
| 8.POWER ON/OFF   | 9.MODE (Switch Bluetooth, USB disk, Micro SD,FM and AUX-IN state) |                     |               |
| 10. RGB LIGHT    | 11.WIRED MIC INPUT  | 12.DC 5V INPUT      |               |
| 13. MICRO SD     | 14.CHARGING INDICATOR   | 15.VOLUME CONTROL   |               |

**Bluetooth:**

1. Turn the power button to "ON", The digital will show "bt" and beep twice.  
Then the RGB light on both sides automatically start;  
Short press "RGB LIGHT" button, to enjoy different light changing circle;  
Long press "RGB LIGHT" button to turn off the light in any modes;  
Short press "RGB LIGHT" button to turn on the RGB light again.
2. Activate Bluetooth of mobile phone and search for device name "K1201" then connect it. The speaker will beep third times once connected successfully.
3. Play the music from your mobile phone and enjoy.
4. Short press "PREVIOUS SONG" or "NEXT SONG" buttons on the speaker or on Mobile phones to select songs you like.
5. Press "PAUSE/PLAY" buttons on the speaker or on Mobile phones to play/stop the music
6. Sliding "VOLUME CONTROL" button to adjust volume up and down. Or adjust volume on your mobile phones'.

**Playing music from USB disk & Micro SD card:**

1. Turn the Power button to "ON".
2. Insert Micro SD card or USB flash disk into slot, the music stored will be played automatically.
3. Under playing mode, short press "PREVIOUS SONG" or "NEXT SONG" buttons to select songs you like, long press to fast forward or backward the song.
4. Press "PAUSE/PLAY" buttons to play or pause.
5. Please turn the Power button to "OFF" while without use.

Remark: Under Bluetooth playing mode, insert Micro SD or USB will disconnect the Bluetooth and switch the playing to USB or Micro SD card. Press the "MODE" button to switch back to Bluetooth mode again.

**FM Radio:**

1. Under FM radio state, the audio cable provided treat as antenna. Please insert the audio cable to get the best FM signal before using.
2. Turn the power button to "ON", press the "MODE" button to switch to FM radio state.
3. Under playing mode, short press "PAUSE/PLAY" buttons to auto search the FM Channel and store it automatically.
4. Press "PREVIOUS SONG" or "NEXT SONG" buttons to change the stored FM channel.

**AUX-IN:**

For other compatible music devices or your MP3/MP4 players, use the supplied audio line cable to connect from the device's "Line Out" to the "AUX-in Jack" of this devices. Then press the "MODE" button to switch to AUX-IN state. Enjoy...

When using an external device, all functions will be controlled by the external device.

**MICROPHONE:**

This product with 1 wired Microphone input. just plug the 6.5MM microphone into the Mic hole then you can use.

**Remarks:**

1. Press the "MODE "button to switch the different modes, the order is Bluetooth, Micro SD, USB disk, FM radio and AUX-IN.
2. Turn the power button to "OFF" to cut off the power supply while without use.

**How to charge:**

1. The charger is not included in the accessories. Please use the universal **5V/1A** charger to charge this device. Put the provided charge cable into the charging jack, connect the other end to the charger, the charging indicator beside the LED screen will keep lighting.  
(When playing music during charging, please put the volume to middle, because for some music with heavy bass, the charger may can not afford the high current temporarily under the maximum volume)
2. Charge time should be 3-5 hours. When charging full, the indicator light will switch off.

**Warning:**

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. -- Consult the dealer or an experienced radio/TV technician for help.