

### Important Information about the Sagemcom "F@ST 3686 V2.2 HP":

#### Installation and Safe Usage Instructions:

1. Place the router in a horizontal orientation on a flat surface.
2. Connect the manufacturer supplied AC to DC power adapter. Only use a manufacturer supplied and approved power adapter and Ethernet cable.
3. Connect the "F@ST 3686 V2.2 HP" to the AC Mains in accordance with the installation instructions in this booklet, and the markings on the identification label (voltage, current, and frequency of electricity network).
4. Connect the Ethernet cable (provided) to one of the RJ45 ports on the product labeled "1", "2", "3", or "4". Then connect the other end of the Ethernet Cable to the Ethernet port of a computer. Repeat as necessary for the other available Ethernet ports.

When using this device, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons including the following:

1. Do not use this product near water and avoid contact with moisture. For example, does not use near a bathtub, wash bowl, kitchen sink, laundry tub, in a wet basement, or near a swimming pool. Care should be taken so that liquids are not spilled on this equipment.
2. This equipment is for indoor use only, do not place or install in an outdoor location.
3. Place your product on a firm, solid surface, no obstacle at a minimum distance of 20cm (0.65ft). If you put it on something unsteady, it may fall and be damaged. If you place it on a soft surface, such as rug, sofa or cushion, the vents may be blocked, causing the product to overheat.
4. Never insert objects into the vents of this equipment as this can result in the risk of electrical shock or fire.
5. As the power adapter is the only way to connect to the electrical network, the product must be installed near an easily accessed power outlet.
6. This equipment should only be operated from the type of power supply (Voltage and Current) indicated on the marking label.
7. Do not overload wall outlets or extension cords. Doing so can result in the risk of fire or electrical shock.
8. Avoid blocking any vent openings or exhaust exits on this equipment. Do not place equipment in a built-in installation such as a cabinet that may impede the flow of air through the ventilation openings.
9. The equipment should be situated away from heat sources such as radiators, heat registers, stoves, or other heat producing appliances and equipment.
10. Care should be taken to ensure that the power cord is routed, so it is not likely to be walked on or pinched by items placed upon or next to it.
11. Unplug this equipment before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning only.
12. This equipment is not user serviceable and is to be serviced by qualified personnel only. Do not disassemble this equipment. If service is required, disconnect all power from the equipment and consult qualified service personnel.
13. To disconnect this equipment from AC power, unplug the power supply from the AC wall socket.
14. Connect only to in house equipment (SELV interface). It is not allowed to connect to public cable distribution or cable television network.
15. Use the product in the environment specified as below:
  - Air temperature between 0°C and +40°C.
  - Relative humidity between 20% and 90%.
  - Altitude: 5000 meters (16404 ft) maximum.
16. Do not use the telephone to report a gas leak in the vicinity of the leak.
17. Avoid using a telephone (other than a cordless type) during an electrical storm. There may be a remote risk of electric shock from lightning.

### Wall Mount Installation:

This device can be mounted on a wall using the two mounting brackets on the bottom of the device, it is recommended to use two round or pan head screws (not included)

1. Install two screws horizontally apart on a wall using the measurement shown in Figure 1. The screws should protrude from the wall in order to fit the device between the head of the screw and the wall. If the screws are installed in drywall. Use hollow wall anchors to ensure that the unit does not pull away from the wall due to prolonged strain from the cable and power connectors
2. Remove the device from the product package. Connect the "F@ST 3686 V2.2 HP" to the AC Mains in accordance with the installation instructions in this booklet, and the markings on the identification label (voltage, current, and frequency of electricity network).
3. Mount the device on the wall.

Refer to Figures 1 and 2 for more details.

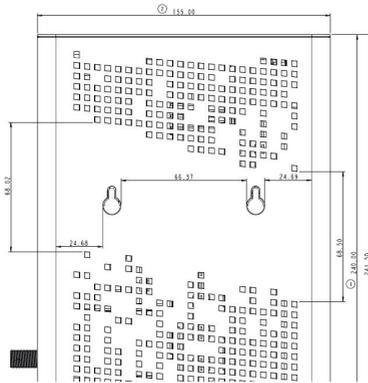


Figure 1: Distance (horizontal) Between Brackets for Screws

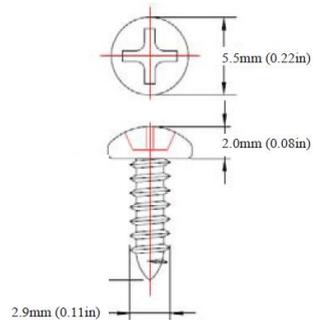


Figure 2: Recommended Screw Size

### Federal Communication Commission Interference Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

### **FCC Caution!**

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Operations in the 5.15-5.25GHz band are restricted to indoor usage only.

This device meets all the other requirements specified in Part 15E, Section 15.407 of the FCC Rules.

### **Radiation Exposure Statement:**

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 23cm between the radiator & your body.

**North American Cable Installer:** This reminder is provided to call your attention to Article 820.93 of the National Electrical Code (Section 54 of the Canadian Electrical Code, Part 1) which provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building as close to the point of cable entry as practical.

### **Save these Instructions!**

Issued by Sagemcom Broadband SAS  
Sagemcom  
250, route de l'Empereur - 92500 RUEIL MALMAISON  
FRANCE

© Sagemcom Broadband SAS 2012  
All rights reserved. Subject to availability. Rights  
of modifications reserved. [www.sagemcom.com](http://www.sagemcom.com)