



## Contents

Chapter 1: Getting to Know  
Chapter 2: Getting Started  
Chapter 3: Troubleshooting

1. power on/off  
2. Connect and Play  
3. Play Music on TF Card  
4. Hands-free Call  
5. External Audio Playing  
6. Enter Card Reader / Charging Mode  
7. Chapter 3: Troubleshooting

## Getting to Know

### Warnings

1. Please use and store this product at room temperature;
2. Do not expose this product to rain or wet conditions;
3. Do not throw and drop this product, avoid damage;
4. Do not self-disassemble, repair and transform the product;
5. Only charge with a rated voltage charger (DC5V=1A);
6. Long time high volume may cause hearing impairment, please adjust the volume appropriately when listening, especially for long time listening;
7. Unauthorized disassembly will void the warranty.
8. Note: Improper battery replacement may cause explosion; only replace with same or equivalent battery.
9. Do not expose the battery to sunlight, fire or excessive heat.

## Packing Content

1 Master unit: 1 pcs  
2 USB cable: 1pcs  
3 3.5mm audio cable: 1pcs  
4 Lanyard: 1pcs  
5 Manual: 1 pcs

### Features

- Bluetooth 4.0, faster data transfer, lower power consumption;
- Support one-key to reconnect;
- Support Aux In play;
- Support iOS power display;
- Support TF card reader data access;
- Support Bluetooth hands-free bi-directional conversation;
- Output power is 3W\*2;
- Built-in 1200mAh lithium battery, built-in intelligent power management module;
- Support TF card lossless MP3/WMA/1WAV/FLAC/APE format audio playback.

## Parameters

Appearance	
External interface	Micro USB interface TF card slot
Product specification	ALIX external audio interface
Net Weight	135g (including built-in lithium battery)
Basic parameters	
Device type	Portable Bluetooth speaker
Speaker system	3W*2 + Bass radiator
Volume control mode	Touch the button to adjust
Accessories	
Storage type	TF card (MAX 32G)
Power supply	Built-in 1200mAh lithium battery
Technical parameters	
Output power	3W*2 THD < 10%
Frequency response	110Hz~18KHz
USB specification	USB 2.0 compatible with USB 1.1
Charging time	DC5V=1A around 3 hours
Audio play time	Around 6 hours at Mid-volume, around 3.5 hours at MAX-volume
Functions	
File format	MP3, WMA, WAV, APE, FLAC
Voice call	Bi-directional conversation
TF card playback	TF card music playback
Bluetooth play	Yes
TF card reader	Support data access
External audio source	Aux In
Bluetooth connection	One key reconnect
Driver level display	Support iOS power display
Region	Support regions playback
APP	Yes

## Getting Started

### Keys and Components

**Next/PREV**: press it to switch to previous track, press and hold it to turn down the volume.  
**Play/Pause**: press it to switch to next track, press and hold it to turn up the volume.  
**Mode**: press to switch among BT, TF and AUX.  
**Power**: press as the Mode button, press and hold for 2 seconds to turn on/off.  
**TF card slot**: insert a TF card and play the audio file, or connect to PC and read the data on the card.

**LED mode indicator**

**AUX port**: 3.5MM Audio cable jack  
**Reset hole**: Reset the device with the stick when the speaker is held.  
**USB port**: data transfer/recharging

## 1 Press and hold for 2 seconds to turn on/off the speaker

## 2 Connect to other Bluetooth devices

1. Press and hold for 2 seconds to turn on/off the speaker. Press and hold for 2 seconds to turn on the speaker, the speaker makes a ding-dong sound, and the blue LED starts flashing; press and hold for 2 seconds again to turn off the speaker.  
2. Bluetooth connection. Turn on Bluetooth on the mobile phone, tablet PC or other devices, search for Bluetooth device "SBV001", and then tap Connect to confirm.

## 3 Successfully connect to Bluetooth and play

After pairing successfully, the device makes ding-dong-ding sound, the blue LED stays, and then you can select and play music files on mobile phone or tablet PC.

1. If necessary, type "0000" to the last paired device automatically (when turn on/off).  
2. The Bluetooth speaker will connect to the last paired device automatically (when turn on/off).

## 4 Disconnect Bluetooth device

When the speaker and the device are connected, press and hold the Mode button to disconnect the Bluetooth connection, accompanied by a trust sound; the speaker is available for connect now and the blue LED starts flashing.

## 5 Bluetooth reconnection

When the Bluetooth is disconnected, you can tap the Mode button to connect to last paired device, and tap the Play/Pause button to play last song.

## 6 Playing music on TF card

1. Insert a TF card with music files into the card slot, press and hold the Power button to turn on the speaker, accompanied by a ding-dong sound.  
2. Switch to TF music mode. Press the Mode switch button and the speaker will make a ding-dong sound and play the music files on TF card.

**Tip:** BT is the default mode of the Bluetooth speaker; if want to play music on TF card, switch to TF mode first; if the speaker is turned on, the files on the TF card will be played automatically when the card is inserted.

## 7 Hands-free call

1. Connecting speaker and mobile phone. We the speaker connected to your smart phone, if there is an incoming call, the music will pause and the "dudu" sound is ring, press the Mode button to answer the call and press it again to end the call; or press and hold the Mode button to reject the call.

## 8 External audio playing

1. Connecting audio cable. Press and hold the Power button to turn on the speaker, insert the audio cable after the ding-dong sound, and press the Mode switch button to switch to Aux In mode; you can also insert the audio cable in power on state to realize plug and play.

## 9 Entering card reader/charging mode

1. Copy music. Turn off the speaker, insert the TF card, connect the speaker to PC with the USB cable via Micro USB interface, press the Power button to enter card reader mode, and then you can copy music files to the TF card.  
2. Charging the speaker. You can connect the speaker to PC with the provided USB cable and charge the speaker no matter it's power on/off. It is recommended to buy a separate DC5V=1A USB charger or other 5V1A charger for mobile phone and charge the speaker through indoor outlet.  
**Tip:** Please charge the speaker first if hasn't been used for a long time.

## Troubleshooting

Fault	Solution
Pairing failed repeatedly	1. Turn off the speaker and restart it 2. If your device requires code, type 0000
Music play interrupted	1. Check if the device is out of effective range, or if there is a barrier between speaker and the device 2. Check if the file format is proper (speaker supports FAT32 format)
TF card error format error	1. Check if the file format of the TF card are WAV, WMA, MP3, APE or FLAC 2. Check if the TF card is properly inserted
No sound during playing	1. Check if the speaker volume is adjusted properly 2. Check if the speaker is or paused
Can't turn on the speaker	1. Restart the speaker, use the reset function
No reaction	1. Restart the speaker, use the reset function

This device complies with part 15 of the FCC Rules. Operation is subject to the condition that this device does not cause harmful interference (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: -- Reorient or relocate the receiving antenna. -- Increase the separation between the equipment and receiver. -- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. -- Consult the dealer or an experienced radio/TV technician for help. The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.