



- 1 Software version information
- 2 Upgrade activation
- 3 Region Setting
- 4 Reset to default

Software:





- The software tab displays the software version currently installed.
- Software upgrades should only be installed by an Ingenix authorized dealer
- The reset button resets all of the software to original factory settings.
- USERS SHOULD NOT ATTEMPT TO ALTER SOFTWARE THEMSELVES . DOING SO MAY CAUSE UNIT FAILURE.
- Region setting allows the user to select regions for DVD playback and radio station tuning. Pressing either button will bring up available options. Select the option for your region of the world for proper functionality.



AV IN

Auxiliary AV input

Using AV IN

- The AV in source will playback any Audio and or video that is connected to the AV input
- Pressing any part of the screen while using the AV IN function will display control options.
- Pressing the  button will increase volume
- Pressing the  button will decrease volume
- Volume level is displayed between the volume controls.
- Pressing the  volume display number will mute audio
-  will be displayed while muted pressing again will resume sound levels.
- Pressing the "X" in the upper right corner of the screen will close the player.

Pull down menu in the AV IN source

- While operating in the AV IN source the Navi PIP button will switch to full screen Navigation when selected. Note: the Navi PIP button will not switch back to AV IN when pressed from the Navigation source.
- All other pull down buttons have standard function as listed on page 14.




Photo

Allows user to display images and set wallpaper

Photo Viewer controls

 Selecting photos

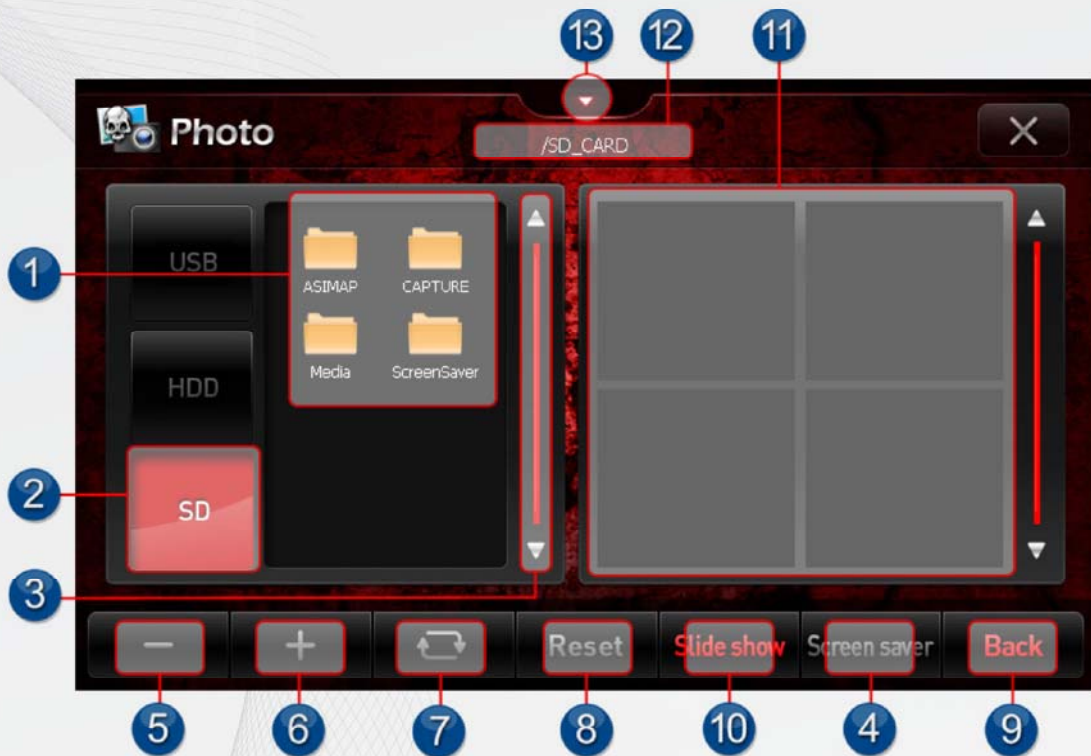

- | | | | |
|---|---|----|---------------------------------|
| 1 | File/Folder display window | 8 | Reset button |
| 2 | Media selector (SD card currently selected) | 9 | Back button |
| 3 | File/Folder display window slider | 10 | Slide show button |
| 4 | Screen saver selector button | 11 | Picture display window |
| 5 | Zoom out button | 12 | File/Folder information display |
| 6 | Zoom in button | 13 | Pull down menu button |
| 7 | Flip rotate button | | |

- When the photo viewer first started Ingenix will ask you select photos you would like to see.
- First select where the photos are located.
- Press one of three tabs on the left.
- "SD" for SD cards, "HDD" for hard drive. Or "USB" for USB memory sticks "sometimes called thumb drives"
- Select the folder the desired photos are located in Note: folders may be inside of other folders
- Once a photo is selected all photos in the same folder will be accessible through the main control panel.

Main control panel

- The left and right and right arrows will move forward and back through all images in the current selected folder.


Screen saver

- The screen saver button will save the current selected image to the Ingenix Screen saver.

Zoom feature

- The - and + buttons will allow the user to zoom in and out of the current selected image.
- While zoomed, touching the image will center the image at the location touched.
- Pressing reset will reframe the image back to the original location and size.

Image rotation

- Pressing the  rotate image button will rotate the image.
- Each time the rotate image button is pressed the image will rotate 90 degrees clockwise.

 
Back

- The Back button will return the user to the previous screen

Slideshow

- The Slideshow button will access the slideshow control panel
- See "slideshow control panel" on next page for information on controls for slideshow.

Slideshow control panel

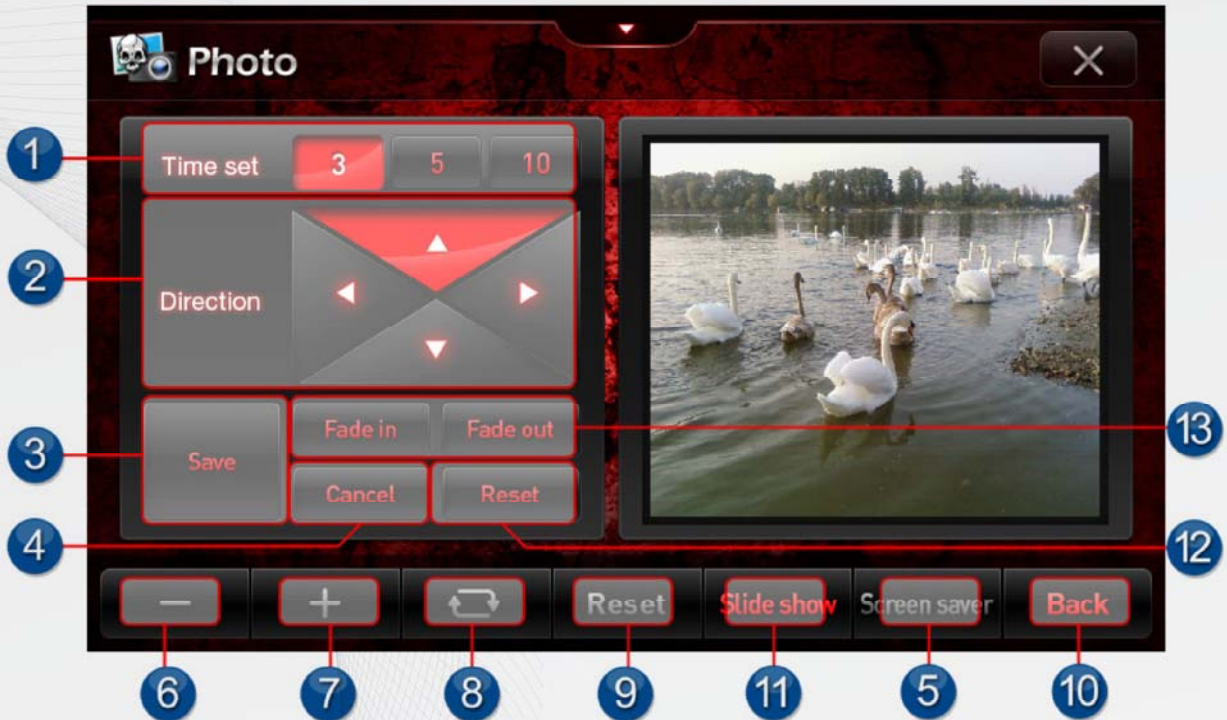

- 1 Slideshow time delay options
- 2 Slideshow direction options
- 3 Save button
- 4 Cancel button
- 5 Screen saver selector button
- 6 Zoom out button
- 7 Zoom in button
- 8 Flip rotate button
- 9 Reset button
- 10 Back button
- 11 Slideshow button
- 12 Reset button
- 13 Slideshow fade options

Time set

- Time set allows user to select the delay time between photos during slide show playback
- 3,5,or 10 second intervals can be selected.

Direction

- This feature allows the user to select the direction pictures will transfer during slideshow.
- Pressing the up arrow will slide photos upward when replacing with the next.
- Pressing the down arrow will slide photos downward and so on.

Fade options

- Pressing the fade in option will render new images during slideshow from top and bottom toward the center.
- Pressing the fade out option will render new images during slideshow from center toward the top and bottom.

Save Cancel and Reset

- After changes are made you must save to have the changes take effect.
- Cancel will disregard changes currently made to slideshow settings.
- Reset allows the user to bring all slideshow settings back to factory default.

Image display Window

- The image display window will show an example of your slideshow including settings that have been made.
- Press the image display window to enlarge the slideshow to full screen.
- Touching the screen while in full screen mode will return the user to the Main control Panel.

Back

- The Back button will return the user to the previous screen

 
Pull down menu in the Photo source

- While operating in the Photo source the Navi PIP button will switch to full screen Navigation when selected. Note: the Navi PIP button will not switch back to Photo when pressed from the Navigation source.
- All other pull down buttons have standard function as listed on page 14.



Memo Pad

Make and save notes for future reference.

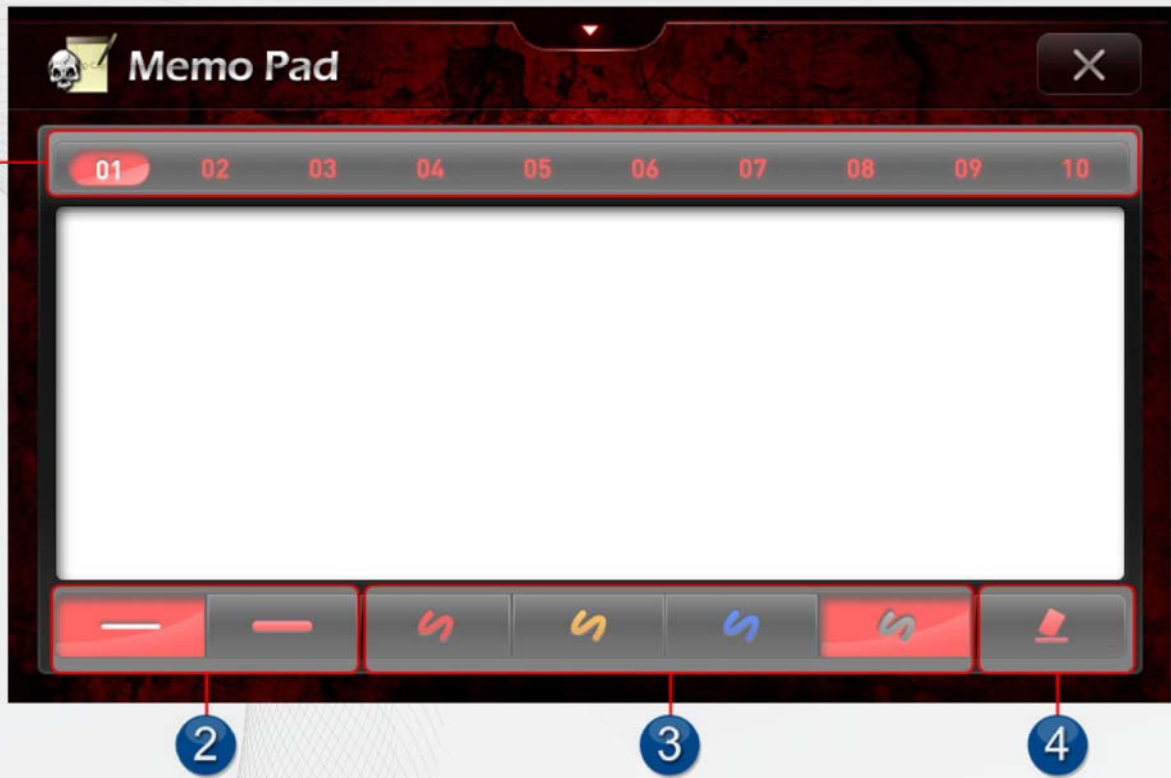

- 1 Memo Note selector buttons
- 2 Font width selector buttons
- 3 Font color selector buttons
- 4 Erase button

Memo Pad interface

- The memo pad interface screen allows the user to write or draw note to be saved for future reference.
- Up to 10 memo notes can be saved at one time.
- Users have the four optional colors and 2 optional writing sizes to choose from.

Using the Memo pad

- Select which memo note you are storing by pressing 1 through 10 buttons at the top of the screen.
- Select font width by pressing the appropriate button.
- Select your desired font color by pressing one of the color buttons.
- After writing your memo the note will remain in the selected memo location (1 through 10) unless erased
- Pressing the erase button will erase only the select memo note. All notes in other locations will remain.

 
Pull down menu in the Memo Pad source

- While operating in the Memo Pad source the Navi PIP button will switch to full screen Navigation when selected. Note: the Navi PIP button will not switch back to Memo Pad when pressed from the Navigation source.
- All other pull down buttons have standard function as listed on page 14.



Utility

Games, Biorhythm check, World clock, Calculator, and Scheduler

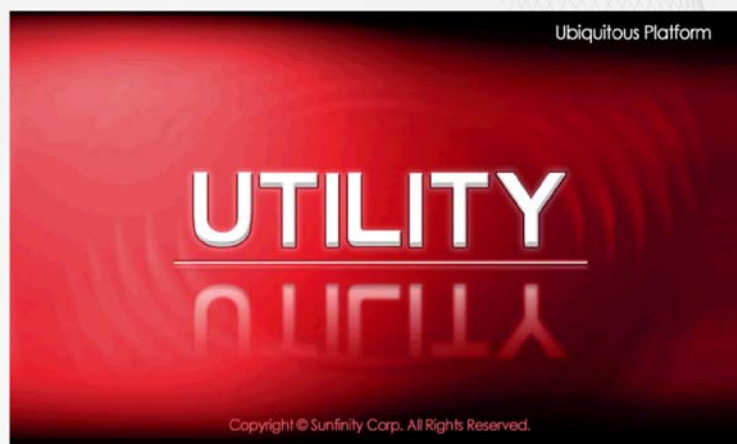




Utility options

- The utility source is a list of programs.
- Inside the utility source you will find six programs
- Texas Hold'em, Biorhythm check, World clock, Scheduler, Car Organizer, and Calculator
- To select the program you would like to open touch either the left and right arrows or the icons in the lower option bar. Once selected touch either the main display window or "Execute" to begin the program.
- While highlighted in the main display window program options will be available.
- "Execute" will begin the program.
- "Registration information" will display program information including title, version, producer, and file size.
- "Registration information" will also allow the user to initialize the program
- "Update" will allow the user to update the program.
- "Initialization" will reset any saved data on the program.

INGENIX

 Elice Poker (Texas Hold'em)

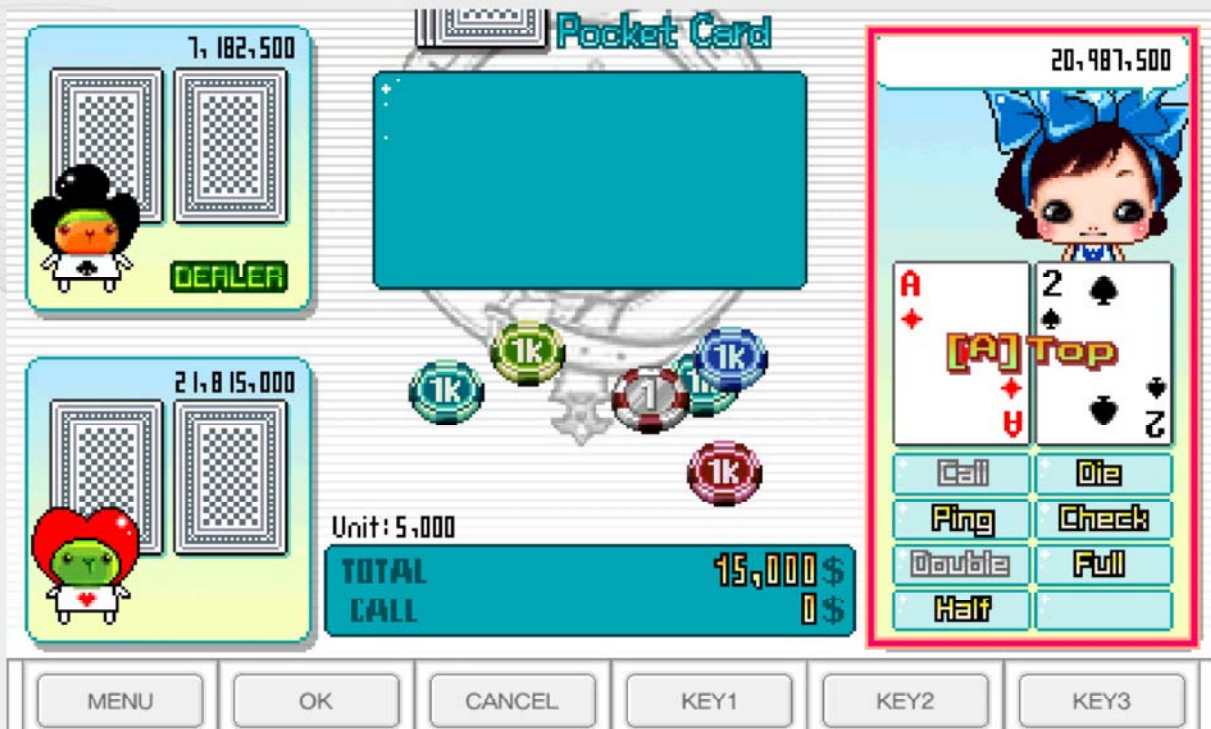

Elice Poker is very similar to Texas Hold'em. In Elice poker you will play against 2 computer players.

After the game starts you will have option keys located at the bottom of the screen. The key buttons allow for three different game saves to be made. You can either press menu screen or one of the key buttons to begin to play. You will be given an option menu before the game can begin. Select to either "Start" a New game or continue a saved game, reset the game through the options button, see your current score, or exit the game.

Once the game has begun you will see the computer opponents. Touch the screen to load the play screen at this time. Each player will be dealt two cards. Each round you have the option to: "Die" or fold your hand and wait until the current play is finished.

"Check" or match any bet increases made but not raise the bet yourself.

"Ping" or raise the bet a minimum amount.

"Full" or raise the full amount allowed in the current round

"Half" or raise half of the amount allowed in the current round

"Double" or double the bet made by another player

"Call" or call the round, meaning you match the bet and stop bet increases from being made by the player that made the last bet. This play will not stop the player making the last bet raise if a different player makes an increase.

Note: always pay attention to the information window showing the total pot and cost to call the bet.

Biorhythm

* Biorhythm is an attempt to predict various aspects of a person's life through simple mathematical cycles.

 
* According to believers in biorhythms, a person's life is affected by rhythmic biological cycles which affect one's ability in various domains, such as mental, physical, and emotional activity.

 
* These cycles begin at birth and oscillate in a steady sine wave fashion throughout life; thus, by modeling them mathematically, a person's level of ability in each of these domains can be predicted from day to day.

* To begin tuning your biorhythm by selecting one of the five user presets.

* Enter the year, month, then day of birth.

* After birth date is entered press "Enter" to save information to that user location.

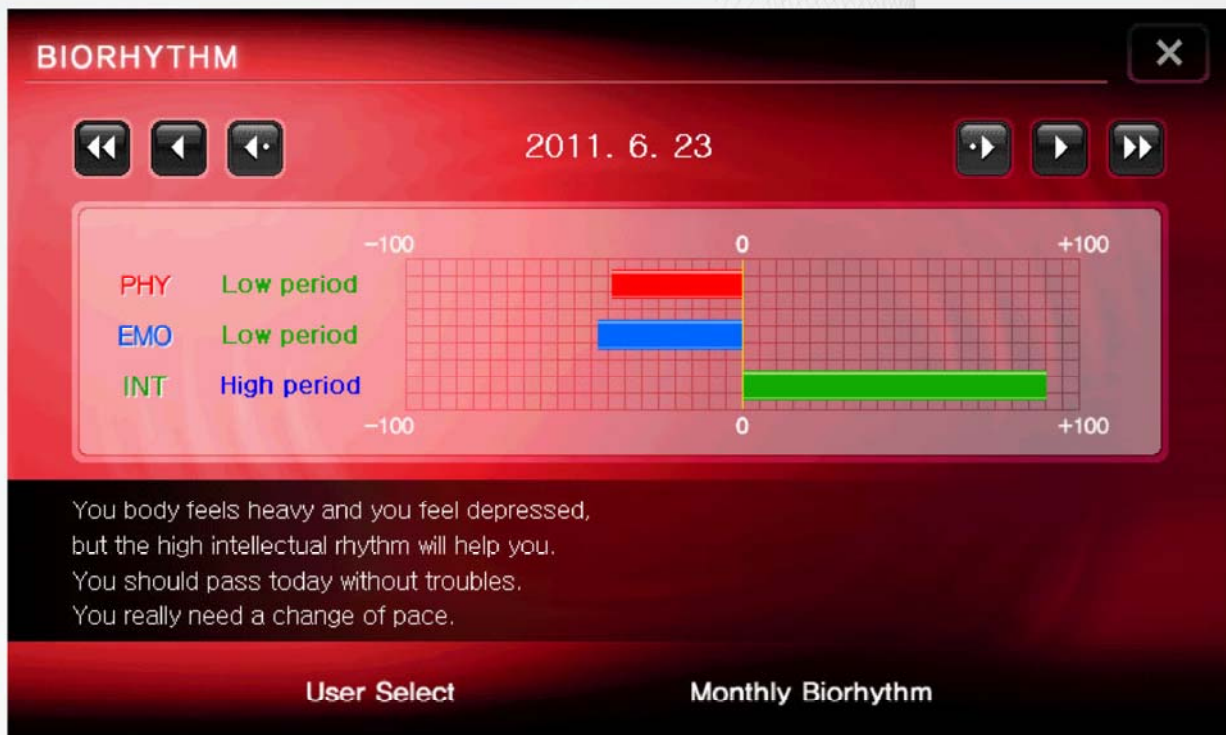

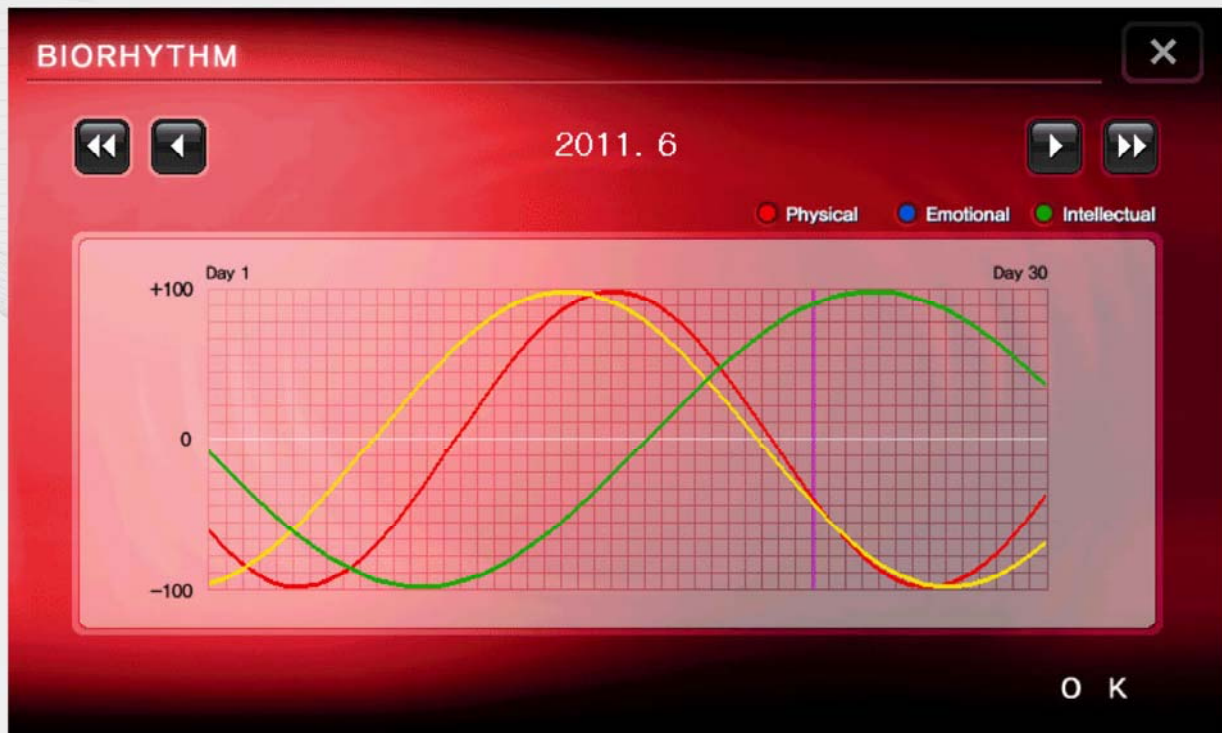

Calculator

- The calculator program is a standard full function calculator.




Car Organizer

- The Car Organizer will allow the user to enter vehicle records in the calendar.
- First choose a date.
- The previous and next month arrow keys will move through months.
- The previous and next year arrow keys will move through years.
- Select the day you wish to enter information by touching the day on the calendar.
- Once selected the day will display a green border.
- Press the "Enter Contents" key or the date on the calendar.



- | | |
|--|--------------------------------|
| 1 Previous year button | 5 Forward year button |
| 2 Previous month button | 6 View Graph button |
| 3 Currently selected month and year | 7 Enter contents button |
| 4 Forward month button | 8 View list button |

 
- You will have four options in which to enter information.
- The four options are "Payment status, Repair status, Tax related, and Option status".

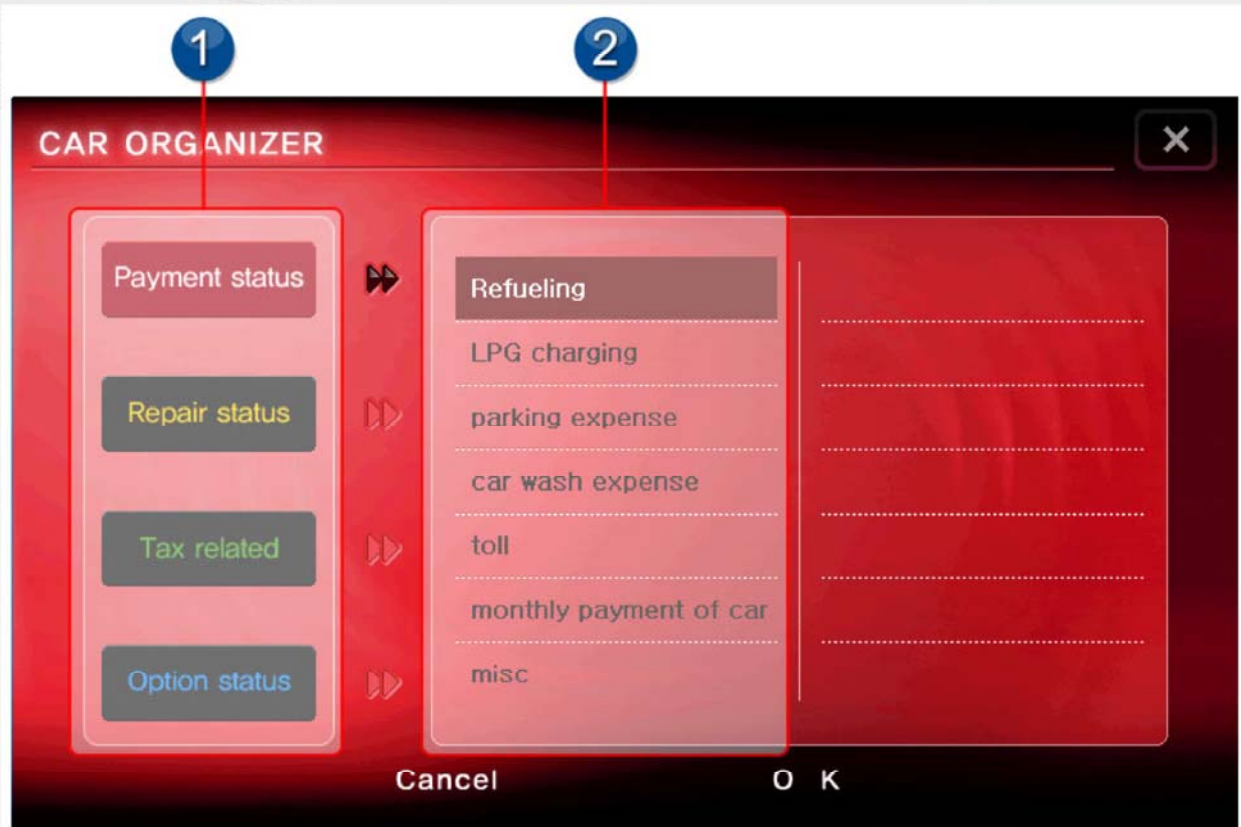

1 Car information category

2 Car information sub category

 - Each category will have sub categories.
- Select the sub category that applies to the information to be entered.
- Press "OK" to select the sub category.
- A data table or tables will be displayed.

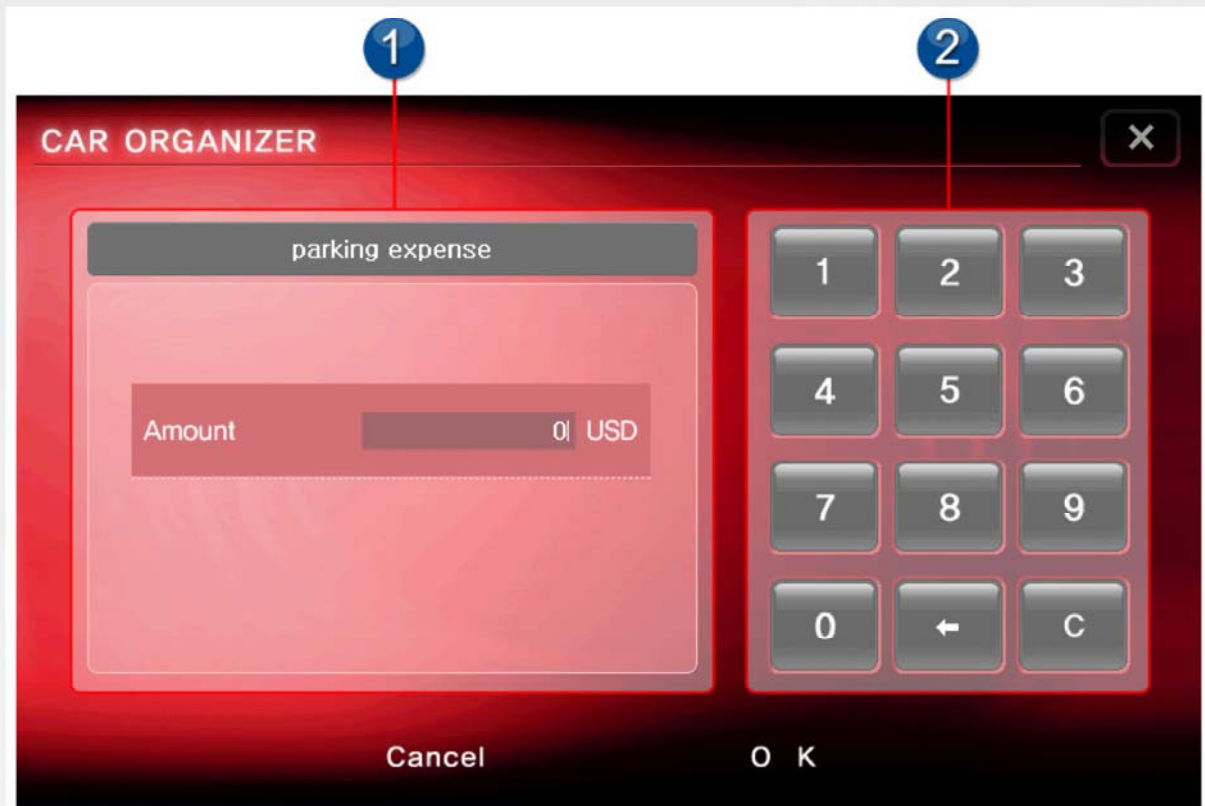

1 Data information window

2 Number keypad

- Enter the data in the data information window and select "OK"
- Data will be entered to the organizer and the daily information screen will be displayed.
- Press "OK" again to return to the monthly display.
- "View list" will display the daily information screen.
- "View Graph" will display the annual graph