

## Glue here Schok Special Edition Card with Serial Number

### Schok freedom turbo ports location



**Schok freedom turbo is a powerful new smartphone built with a new generation Quad-Core, 64-bit processor that supports the most demanding applications such as intense 3D gaming, large spreadsheets, long emails, constant streaming videos and heavy Internet browsing.**

**We dedicated hundreds of hours developing and tuning the very capable Schok freedom turbo, our commitment is that you don't need to spend hundreds of dollars to have a reliable, powerful, an easy to use, cool smartphone. ENJOY!**

### How to charge your Schok freedom turbo:

- 1- Connect the Micro USB side of the cable to the freedom turbo Micro USB charging port. (The Micro USB side has the smaller tip of the cable)
- 2- Connect the USB side of the cable to the wall charger USB port.
- 3- Connect the Smartphone wall charger to the electric outlet.
- 4- Charge your device for at least two hours.

#### TIP:

Although your smartphone arrives pre-charged, a good practice dictates that prior to the first time of operation, let the battery charge for at least two full hours. Also, never charge it for more than six hours.

### How to Turn it on:

- 1- Firmly, "press and hold" the power button for four seconds.

### How to Turn it off:

- 1- Firmly, "press and hold" the power button for two seconds.
- 2- You will be presented with two options:
  - A- To completely turn off the system
  - B- To reboot the system.
- 3- Click "Power off"
- 4- System will turn off in approximately five seconds.

### How to Unlock your Schok freedom turbo:

To save battery, the display will go off in 30 second and the smartphone will lock itself. (Later, you can change this in settings)

To unlock it, you need to follow these easy steps:

- 1- Press the power button for half a second, The smartphone will wake immediately and the lock screen will be visible.
- 2- From the bottom centered location of the screen slide your finger towards the top of the display in a straight line, Now, Have fun!

### How to lock your Schok freedom turbo:

- 1- Your Schok freedom turbo will go to sleep and lock itself as soon as you press the power button.

#### TIP:

If you decide not to use your Smartphone for a long time is preferred to turn it off. If it's just for a couple of hours you can save some battery by turning off its location, Wi-Fi & Bluetooth services.

### Schok freedom turbo detailed Specs:

Model number:	freedom turbo SFT5216
Android operating system:	7.0 64Bit Nougat
Display Size:	5" Tempered Glass 2.5D Curved
Touch Panel:	5 Points
Display resolution:	720 x 1280 (HD)
Processor:	MT6737T
Processor speed:	1.5GHz
Number of cores:	4
System bandwidth:	64 Bit
Graphic processing unit (GPU):	ARM Mali-T720 MP2 600MHz
Number of GPU's:	2
Memory (RAM):	2 GB DDR 3
Memory:	16 GB
SD Card Slot max capacity:	256 GB
Sim card slots:	2
Sim card size:	Micro
Rear Camera:	13MP with Autofocus and Flash
Front Camera:	8MP
Face detection on both cameras:	Yes
Rear camera video recording:	1080P @ 30 FPS
Front camera video recording:	1080P @ 30 FPS
Battery type:	Lithium ION rechargeable
Battery capacity:	3,8V 2,400 mAh / 9,12Wh
Battery limited voltage:	4,35V
Battery standard:	GB/T 18287-2013 / 1 CP4/59/78
Wi-Fi:	802.11/a/b/g/n
Wi-Fi bands:	2,4 GHz + 5 GHz
GPS:	GPS & AGPS
Bluetooth:	4,1 with EDR + LE
USB port:	Micro
USB OTG:	Yes, Version 2.0
G-Sensor:	Yes
Light Sensor:	Yes
Proximity Sensor:	Yes
Gyroscope:	Yes (Great for VR/AR Games)
Smartphone bands main features:	Full 4G LTE /VoLTE/VoWifi/ViLTE
Smartphone bands 2G:	2G: GSM 850/900/1800/1900
Smartphone bands 3G:	Band 2/4/5
Smartphone bands 4G:	Band 2/4/5/12/17
Dimensions:	144,6mm x 72mm x 10mm
Weight:	172g (with Battery)
Structure outside:	Plastic
Structure inside:	Steel + Plastic
Telephone electric input:	5,0V ± 1,0A
USB Wall charger input:	100-240V ~ 50/60Hz 0,3A
USB Wall charger output:	5,0V ± 1,0A

### Emergency call

If any emergency arises, dial 911 for help (or your local emergency call number)

Note: Due to the nature of cellular networking, the success of an emergency call is not guaranteed.

### FCC Warning:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:


- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. freedom turbo (FCC ID: 2AM9L-SFT5216) has also been tested against this SAR limit. The highest reported SAR values for head, body-worn accessory is 0.78 W/kg, 1.19 W/kg respectively. The Max simultaneous SAR is 1.35W/kg. This device was tested for typical body-worn operations with the back of the handset kept 10mm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 10mm separation distance between the user's body and the back of the handset. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided. The antenna(s) used for this transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

**Warranty:** All Schok products are manufactured with the best quality standards to offer years of trouble-free operation. In the event that this unit is not working correctly or it is defective in workmanship or materials we will repair or replace it (at our option) free of charge for 12 months from the date of purchase. For easier and faster warranty service, please call our toll-free number 1-888-48-SCHOK, a customer service representative will explain in detail the steps to follow. If the product is still in warranty Schok will be happy to repair or replace your unit free of charge. If the owner wants to return the defective product to the store, this needs to be done within the first 15 days of the date of purchase, presenting the original receipt and the product in its original box and with all its accessories. Before you call our help desk please read in detail the warranty policy that came in this product and fill the small questionnaire in the space "TO FILL", be prepared to write down the RMA number that our customer service representative is going to give you. If the product has been damaged by an accident or failure to follow this instruction manual, acts of God, has been tampered, misused or fixed by any unauthorized personnel, this warranty policy will be void. Any implied warranties, obligations, or liabilities, including but not limited to the implied warranty of merchantability and fitness for a particular purpose, shall be limited in duration to the 12-Month duration of this written, limited warranty policy. (Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.) In no event shall Schok be liable for any special, incidental, or consequential damages for breach of this or any other warranty, express or implied, whatsoever. (Some states do not allow the exclusion or limitation of special, incidental, or consequential damages, so the above limitation may not apply to you.) This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state. For more information please visit our webpage [www.schokgear.com](http://www.schokgear.com)

### The Navigation Bar:

In order to control your Schok freedom turbo you need to understand the icons on the Navigation bar, here we go:

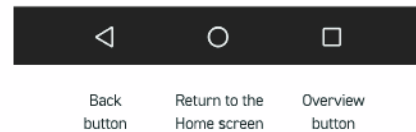

### How to appear the Navigation Bar:

On certain applications, the navigation bar which is located across the bottom of the screen will disappear. Bringing it back is very simple.

- 1.- Slide your finger upwards from the bottom of the screen, The Navigation bar will appear immediately.



**Glue here Schok Back Cover with phone numbers in the USA and Mexico**