

FCC ID: EMOHBH88
 IC: 986B-HBH88

HBH88 Staff Quick Start Guide

Included

- HBH88 system
- Security tether



IMPORTANT SAFETY INSTRUCTIONS

1. Read these instructions.
2. Do not use the apparatus near water.
3. Keep these instructions.
4. Follow all instructions.
5. Do not use the apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources (radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat).
9. Do not defeat the safety purpose of the polarized or grounding plug. A polarized plug has two blades with one wider than the other.
10. A grounding plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
11. Protect the power cord from being walked on or pinched particularly at the plugs, convenience receptacles, and at the point where they exit from the apparatus.
12. Only use attachments/accessories specified by the manufacturer.
13. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart or rack is used, use caution when moving the cart/rack assembly to avoid injury from tipping.
14. Unplug the apparatus during lightning storms or when unused for long periods of time.
15. Refer all servicing to qualified personnel. Servicing is required when the apparatus has been damaged in any way. Examples of damage include: Power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.



Portable Cart
 Warning

WARNING:


To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.

CAUTION:

Use of controls or adjustments or performance of procedures other than those specified may result in hazardous radiation exposure.



CAUTION - TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK) NO USER-SERVICEABLE PARTS INSIDE. REFER TO QUALIFIED SERVICE PERSONNEL.

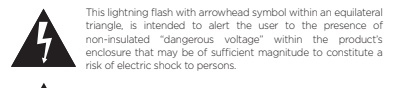

The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of non-insulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

IMPORTANTES INSTRUCTIONS DE SÉCURITÉ

1. Lisez la présente notice.
2. Conservez cette notice.
3. Tenez compte des avertissements.
4. Suivez l'ensemble des consignes.
5. N'utilisez jamais cet appareil à proximité d'eau.
6. Le nettoyage doit s'effectuer uniquement à l'aide d'un chiffon sec.
7. Veillez à ne pas obstruer les ouvertures permettant la ventilation. Veillez à installer le produit conformément aux exigences du fabricant.
8. N'installez pas l'appareil près de sources de chaleur telles que les radiateurs, les poêles ou autres appareils (amplificateurs inclus) produisant de la chaleur.
9. Ne remplacez pas l'adaptateur de prise de mise à la terre ou la fiche extensible sans la sécurité. Une fiche polarisée comporte deux broches. L'une est plus large que l'autre. Une prise de mise à la terre comporte deux broches, plus une troisième broche de mise à la terre. Cette troisième broche, plus large, est prévue pour la sécurité de l'utilisateur. Si l'introduction de cette broche dans votre prise de courant s'avère impossible, contactez un électricien qui effectuera le remplacement de la prise obsolète.
10. Protégez le cordon d'alimentation électrique des piétements ou des traitements, en particulier à hauteur des prises ou des fiches d'alimentation électrique, et à leur sortie des appareils.
11. Utilisez uniquement les accessoires précisés par le fabricant.
12. Utilisez l'appareil uniquement avec le chariot, le socle, le tripode, le support ou la table précisés par le fabricant ou vendus avec l'appareil. Si un chariot ou un présentoir est utilisé, assurez la plus grande prudence pour éviter toute blessure provoquée par un renversement accidentel.
13. Débranchez l'appareil durant un orage ou lorsque l'appareil ne sera plus utilisé pendant de longues périodes.
14. Reportez toute réparation à un personnel qualifié. Les réparations sont exigées lorsque l'appareil a été endommagé d'une manière quelconque. Voici des exemples de dommages: le cordon d'alimentation ou la fiche est endommagé(e), ou liquide a été versé(e) ou des objets sont tombés dans l'appareil, l'appareil a été exposé à la pluie ou à l'humidité, l'appareil ne fonctionne pas normalement ou a été éjecté.



Avertissement
 portatif de chariot

AVERTISSEMENT - POUR ÉVITER LE RISQUE D'INCENDIE OU DE CHOC ÉLECTRIQUES, NE PAS EXPOSER CET APPAREIL À LA PLUIE OU À L'HUMIDITÉ.


ATTENTION:

L'utilisation des commandes ou des ajustements ou l'exécution des procédures autres que ceux spécifiques peut avoir comme conséquence l'exposition de rayonnement dangereux.

* Caution Marking was located at bottom enclosure of the apparatus.
 Les marquages sont inscrits en bas de l'appareil.



ATTENTION - TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK) NO USER-SERVICEABLE PARTS INSIDE. REFER TO QUALIFIED SERVICE PERSONNEL.

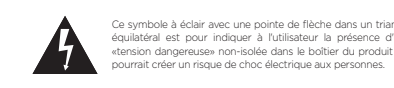

Ce symbole à éclair avec une pointe de flèche dans un triangle équilatéral est pour indiquer à l'utilisateur la présence d'une réaction dangereuse non isolée dans le boîtier du produit qui pourrait créer un risque de choc électrique aux personnes.

 
AVERTISSEMENT -

POUR RÉDUIRE LE RISQUE DE CHOC ÉLECTRIQUE, NE RETIREZ PAS LE COUVERCLE (OU L'ARRIÈRE) AUCUN USER-SERVICING AU PERSONNEL DE SERVICE QUALIFIÉ.



Le point d'exclamation dans un triangle équilatéral est pour avertir l'utilisateur à la présence d'instructions importantes d'utilisateur et d'entretien dans la documentation accompagnant l'appareil.


Set Up

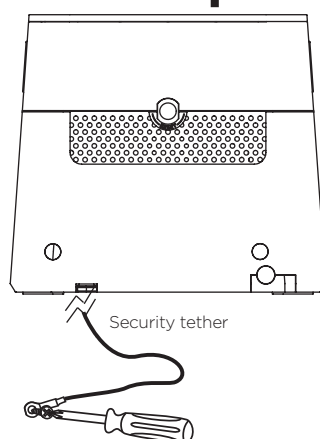


1 Secure the attached Security Tether to a wall or other permanent surface.

CAUTION: DO NOT attach to an AC outlet or cause it to become entangled with anything that can create a hazardous situation.

 2 Connect AC plug to a working outlet that is not controlled by an On/Off switch.

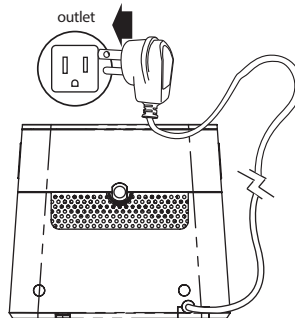

 3 Set the **Volume Limiter Switch** on the bottom of the unit (High for large rooms, Low for smaller rooms).

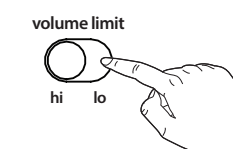


Setting the Time Zone and Clock (Factory Preset Clock)

The first time you connect your new preset clock to the AC outlet, the unit will automatically show the correct Eastern Standard time, which is the default setting. If you are not in the Eastern time zone, you must change the default setting to match your time zone (see *Time Zone Setting* below). Once the correct time zone is set, if the time displayed is not correct, follow steps under *Manual Clock Setting* to set the correct time, year and date.

Time Zone Setting

Make sure unit is in **Power OFF** mode.

 Press and hold the **Time Zone Button** on the back of the unit for 2 seconds. The time zone will flash.

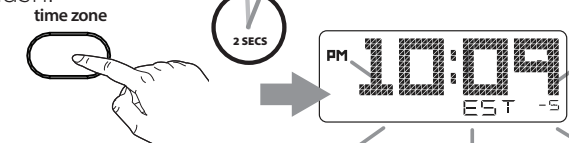


Press the << or >> button to cycle to local time zone.



Press **Time Zone Button** again to confirm.

Daylight Saving Time

 The unit ships with the Daylight Saving Time (DST) switch in Auto position, and will automatically adjust when the time changes in March and November. If Daylight Saving Time is NOT observed in your location, move the DST switch from AUTO to -1 or +1 BEFORE setting time.

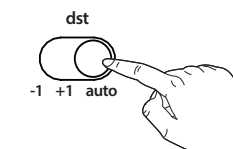

Bluetooth Pairing

1. Press and hold the **Bluetooth Button**. Unit will enter pairing mode.
2. Select "HBH88" on your device's Bluetooth menu.

Manual Clock Setting

 
Press and hold the **Time Set Button** for 2 seconds to enter clock setting mode.



Press the << or >> button to set the **time**. Make sure to set the correct AM/PM hour (indicator to left of time).




Press the **Time Set Button** to confirm the time. The year will flash.

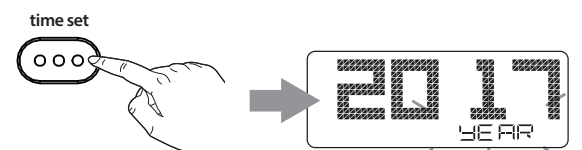

Press the << or >> button to set the **year**.



 
Press the **Time Set Button** to confirm the year. The date will flash.

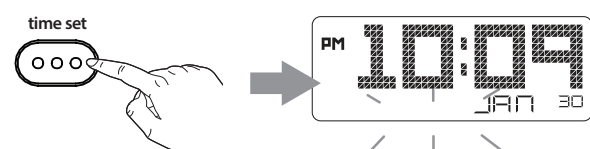

Press the << or >> button to set the **date**. Hold for rapid adjustment.



  
Press the **Time Set Button** to confirm the date and exit clock setting.

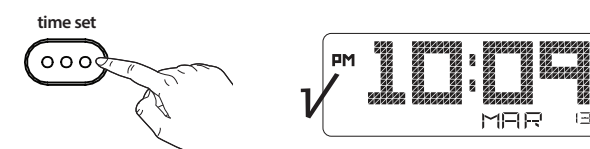


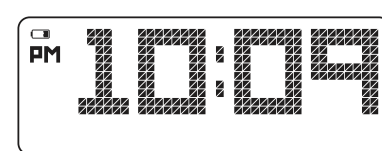 
TIP: Press the Alarm Set Button when display is flashing during clock setting to toggle between 12 hour and 24 hour display modes.

Backup Batteries

Keep unit connected to AC power when replacing batteries or you will lose settings.

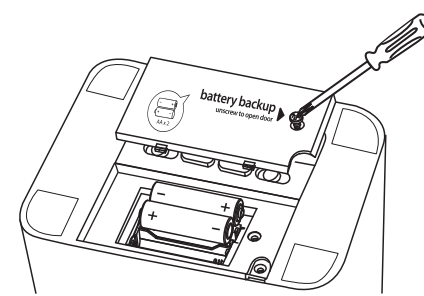


When Low Battery Icon  appears on display, replace backup batteries with 2 fresh AA batteries. Make sure polarity (+/-) markings match illustration.



Reset Button

 The total output current of both courtesy plugs (one on each side of the unit) is 10 amps 1250 watts. If a guest connects a device that overloads the outlet(s), the built in circuit breaker will prevent damage to the unit. The **Reset Button** on the back of the unit will pop out to indicate the outlet was overloaded. Press and release the **Reset Button** to reset the circuit breaker and restore the courtesy plug to operation.

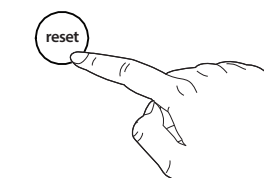

Maintenance

- Place the unit on a level surface away from sources of direct sunlight or excessive heat.
- Protect your furniture when placing your unit on a natural wood and lacquered finish. A cloth or other protective material should be placed between it and the furniture.

The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on apparatus. L'appareil ne doit pas être exposé aux écoulements ou aux éclaboussures et aucun objet ne contenant de liquide, tel qu'un vase, ne doit être placé sur l'objet.

Mains plug is used as disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the mains completely, the mains plug should be disconnected from the mains socket outlet completely. La prise du secteur est utilisé pour déconnecter le système. La prise du secteur ne doit pas être obstruée ou doit être facilement accessible pendant son utilisation. Pour être complètement déconnecté de l'alimentation d'entrée, la prise doit être débranchée du secteur. Battery shall not be exposed to excessive heat such as sunshine, fire or the like. Les piles ne doivent pas être exposées à de forte chaleur, tel qu'à la lumière du soleil, au feu ou autres choses de semblable.

An appliance with a protective earth terminal should be connected to a mains outlet with a protective earth connection. Un appareil avec la borne de terre de protection doit être connecté au secteur avec la connexion de terre de protection.

 
Minimum distances 10 cm around the apparatus for sufficient ventilations. 10cm de distance minimale autour de l'appareil pour une ventilation suffisante.

The ventilation should not be impeded by covering the ventilation openings with items such as newspaper, table-cloths, curtains etc. Ne pas recouvrir les entrées d'aérations avec des objets tel qu'un journal, une nappe, un rideau, etc...

No naked flame sources such as lighted candles should be placed on the apparatus. Aucune source de flamme nue, tel qu'une bougie, ne doit être placée sur l'appareil.

Attention should be drawn to the environmental aspects of battery disposal. Les piles usagées doivent être jetées en respectant l'environnement.

Apparatus should only be used in moderate climates. El aparato debe usarse en climas moderados.

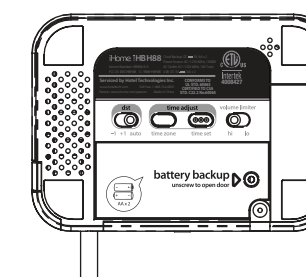

Model plate
 Plaque modèle

Bottom of unit
 Bas de l'unité

IMPORTANT SAFETY INSTRUCTIONS

When used in the directed manner, this unit has been designed and manufactured to ensure your personal safety. However, improper use can result in potential electrical shock or fire hazards. Please read all safety and operating instructions carefully before installation and use, and keep these instructions handy for future reference. Take special note of all warnings listed in these instructions and on the unit.

- Water and Moisture** – The unit should not be used near water. For example: near a bathtub, washbowl, kitchen sink, laundry tub, swimming pool or in a wet basement.
- Ventilation** – The unit should be situated so that its location or position does not interfere with its proper ventilation. For example, it should not be situated on a bed, sofa, rug or similar surface that may block ventilation openings. Also, it should not be placed in a built-in installation, such as a bookcase or cabinet, which may impede the flow of air through the ventilation openings.
- Heat** – The unit should be situated away from heat sources such as radiators, heat registers, stoves or other appliances (including amplifiers) that produce heat.
- Power Sources** – The unit should be connected to a power supply only of the type described in the operating instructions or as marked on the appliance.
- Power-Cable Protection** – Power supply cables should be routed so that they are not likely to be walked on or pinched by items placed upon or against them. It is always best to have a clear area from where the cable exits the unit to where it is plugged into an AC socket.
- Cleaning** – The unit should be cleaned only as recommended. See the Maintenance section of this manual for cleaning instructions.
- Objects and Liquid Entry** – Care should be taken so that objects do not fall and liquids are not spilled into any openings or vents located on the product.
- Attachments** – Do not use attachments not recommended by the product manufacturer.
- Lightning and Power Surge Protection** – Unplug the unit from the wall socket and disconnect the antenna or cable system during a lightning storm or when it is left unattended and unused for long periods of time. This will prevent damage to the product due to lightning and power-line surges.
- Overloading** – Do not overload wall sockets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.
- Damage Requiring Service** – The unit should be serviced by qualified service personnel when:
 - the power supply cable or plug has been damaged.
 - objects have fallen into or liquid has been spilled into the enclosure.
 - the unit has been exposed to rain.
 - the unit has been dropped or the enclosure damaged.
 - the unit exhibits a marked change in performance or does not operate normally.
- Periods of Nonuse** – If the unit is to be left unused for an extended period of time, such as a month or longer, the power cable should be unplugged from the unit to prevent damage or corrosion.
- Servicing** – The user should not attempt to service the unit beyond those methods described in the user's operating instructions. Service methods not covered in the operating instructions should be referred to qualified service personnel.

FCC Information

This device complies with FCC radiation exposure limits set forth for an uncontrolled environment.

This device complies with Part 15 of the FCC Rules, operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

- Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
 - Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.

CAN ICES-3 (B)/NMB-3(B)

Questions? visit www.hoteltech.com or call 1-888-744-6835 Toll Free

LIMITED 30 DAY WARRANTY

(valid in contiguous U.S.A. only; not valid in Hawaii or Alaska)

Hotel Technologies, a division of HTI Industries LLC, (hereafter referred to as Hotel Technologies), warrants this product to be free from defects in workmanship and materials, under normal use and conditions, for a period of 30 days from the date of receipt of the item.

Should service be required by reason of any defect or malfunction during the warranty period, Hotel Technologies will repair or, at its discretion, replace this product without charge. This decision is subject to verification of the defect or malfunction upon delivery of this product to the Factory Service Center listed below.

Before returning this product for service, please first replace the batteries (if applicable) with fresh ones, as exhausted or defective batteries are the most common cause of problems encountered. If service is still required:

- Fax a representative at 915.633.1388 with a Return Authorization request including proof of purchase date (i.e., invoice number and date from distributor or HTI) to receive a Return Authorization Number. Issuance of Return Authorization Number is subject to review prior to granting.

NO ITEM CAN BE ACCEPTED WITHOUT A RETURN AUTHORIZATION NUMBER.

- Remove batteries (if applicable) and pack the unit in a well-padded, heavy corrugated box.
- Send the unit by method agreed to with your representative to the Factory Service Center listed below:

Consumer Repair Department

Hotel Technologies Inc.
1330 Goodyear Drive
El Paso TX 79936-6420

NOTE: Improperly packed items or Items received without an RA # cannot receive credit.

NOTE: This warranty is valid only if the product is used for the purpose for which it was designed. It does not cover (i) products which have been damaged by negligence, misuse or accident, or which have been modified or repaired by unauthorized persons; (ii) cracked or broken cabinets, or units damaged by excessive heat; (iii) damage to tape cassettes (if applicable); (iv) the cost of shipping this product to the Factory Service Center and its return to the owner.

This warranty is valid only in the United States of America and does not extend to owners of the product subsequent to the original purchaser. Any applicable implied warranties are also limited to 30 days, and Hotel Technologies will not be liable for consequential damages. (Some states do not allow limitations on implied warranties or exclusion of consequential damages, so these restrictions may not apply to you.) This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

If you did not purchase this product directly from Hotel Technologies, please contact the appropriate distributor for their warranty terms

IC Statement for RF Device

This device complies with Industry Canada's licence-exempt RSSs. Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

The device meets the exemption from the routine evaluation limits in section 2.5 of RSS 102 and compliance with RSS-102 RF exposure, users can obtain Canadian information on RF exposure and compliance.

Le dispositif rencontre l'exemption des limites courantes d'évaluation dans la section 2.5 de RSS 102 et la conformité à l'exposition de RSS-102 rf, utilisateurs peut obtenir l'information canadienne sur l'exposition et la conformité de rf.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. This equipment should be installed and operated with a minimum distance of 20 centimeters between the radiator and your body.

Cet émetteur ne doit pas être Co-placé ou ne fonctionnant en même temps qu'aucune autre antenne ou émetteur. Cet équipement devrait être installé et actionné avec une distance minimum de 20 centimètres entre le radiateur et votre corps

FCC Radiation Exposure Statement

This device complies with FCC radiation exposure limits set forth for an uncontrolled environment and it also complies with Part 15 of the FCC RF Rules. This equipment must be installed and operated in accordance with provided instructions and the antenna(s) used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter. End-users and installers must be provided with antenna installation instructions and consider removing the no-collocation statement.