 


HiP50 IB
Size: 178 x 178 mm (16 pages)
Printing color: Black
Mat'l: 90gsm book paper
Nov. 14, 11.

P1

iHome

Model HiP50 iPhone Alarm Clock Radio w/ Bluetooth

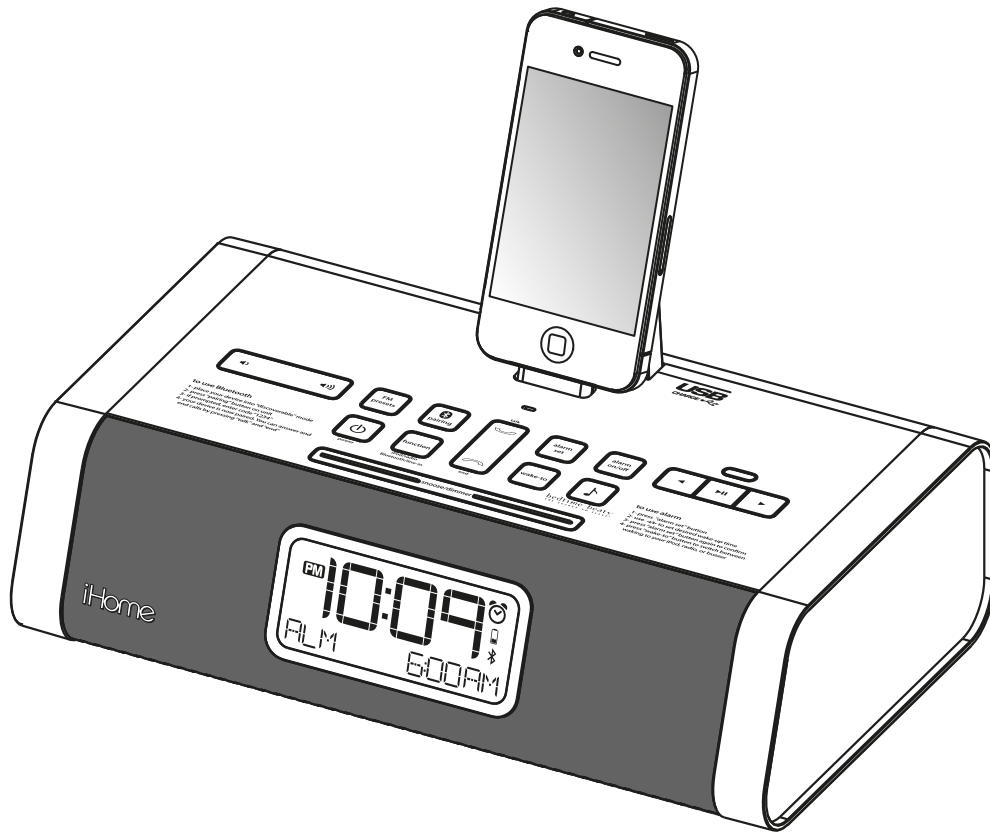

Questions? visit www.hoteltech.com

Table of Contents

Controls and Indicators / Display.....	1
Quick Start Setup.....	2
Setting Up the Unit	4
Using the Unit.....	5
Using the Unit in other Countries / Listening to Bluetooth Music	7
Making Calls with Bluetooth Mobile Phone / Replacing Clock Backup Battery.....	8
A Consumer Guide to Product Safety	9
Troubleshooting.....	10
Warranty Information	12



is a registered trademark of SRS Labs, Inc. TruBass technology is incorporated under license from SRS Labs, Inc.

SRS WOW®, which features TruBass®, significantly improves the playback quality of audio, delivering a dynamic 3D entertainment experience with deep, rich bass and high frequency clarity for crisp detail.



NOTE : The HiP50 is designed for use with Bluetooth wireless devices compatible with the **HFP, HSP, A2DP** and **AVRCP** streaming audio profiles. Refer to your Bluetooth device's user manual or technical support to determine if your Bluetooth device supports these profiles.

Maintenance

- Place the unit on a level surface away from sources of direct sunlight or excessive heat.
- Protect your furniture when placing your unit on a natural wood and lacquered finish. A cloth or other protective material should be placed between it and the furniture.
- Clean your unit with a soft cloth moistened only with mild soap and water. Stronger cleaning agents, such as Benzene, thinner or similar materials can damage the surface of the unit.

FCC and IC Information

This device complies with Part 15 of the FCC Rules and RSS-210 of the IC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC & IC Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment and meets the exemption from the routine evaluation limits in section 2.5 of RSS 102.

1. This Transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.
2. This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20 centimeters from user and bystanders.

The device meets the exemption from the routine evaluation limits in section 2.5 of RSS 102 and users can obtain Canadian information on RF exposure and compliance from the Canadian Representative Burnport Holdings Ltd. 72MT Belcher Pls, East, Calgary, Alberta, T2Z 2G1, CANADA. Tel:403-257-4961

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Le dispositif rencontre l'exemption des limites courantes d'évaluation dans la section 2.5 de RSS 102 et la conformité à l'exposition de RSS-102 rf, utilisateurs peut obtenir l'information canadienne sur l'exposition et la conformité de rf.

Getting Started

Thank you for purchasing the iHome HiP50, the app-friendly alarm clock radio for iPhone or iPod. Designed to play music through Bluetooth from your mobile phone or computer (through Bluetooth or Line in), the HiP50 features SRS WOW audio enhancement. This instruction booklet explains the basic operation and care of the unit. There are many exciting performance enhancements available by downloading the free iHome+Sleep app from the iTunes App Store.

In addition, the iHome Radio app (available as a paid app at the iTunes App Store) gives you access to thousands of internet radio stations around the globe.

For information on the iHome Sleep app and iHome Radio internet radio app and how they work with your unit, please use these resources:

web: www.ihomeaudio.com/apps

email: apps@ihomeaudio.com

 
Note: app is for iPad, iPhone and iPod touch only.

Please read this instruction book carefully before the appliance is operated and keep it for future reference.


QDID:B018643

Controls and Indicators


Top Panel

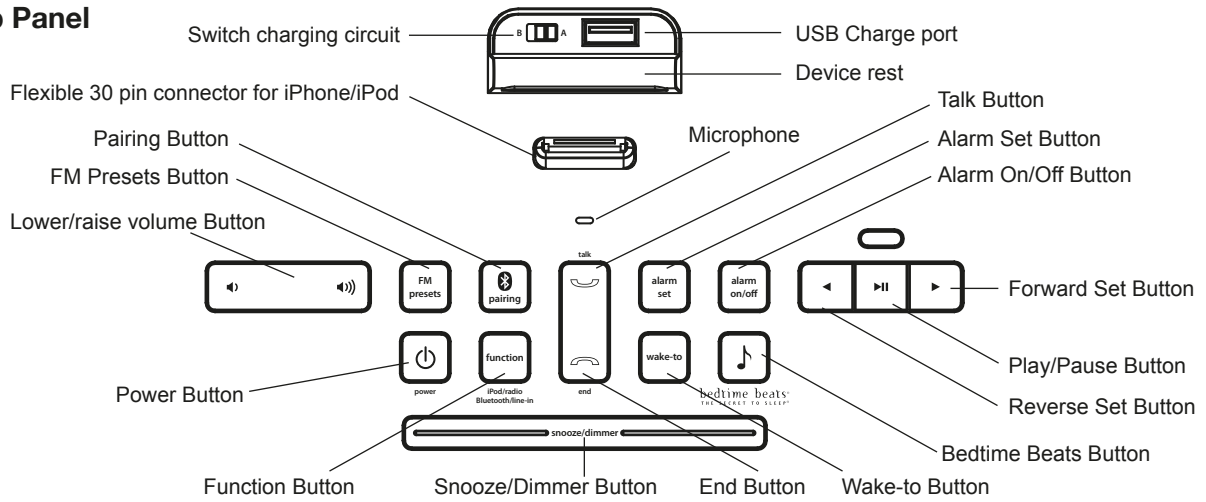

Rear Panel

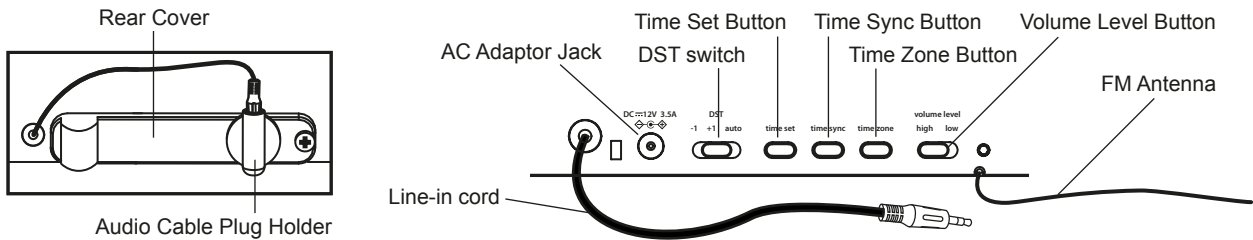 


Display

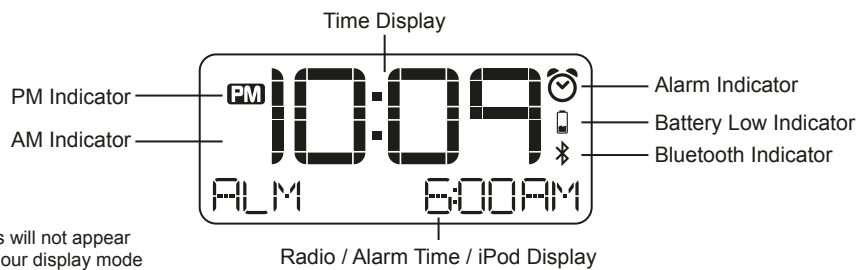 

NOTE: AM/PM indicators will not appear when clock is set to 24 hour display mode


Quick staff setup

 1: Rear cover

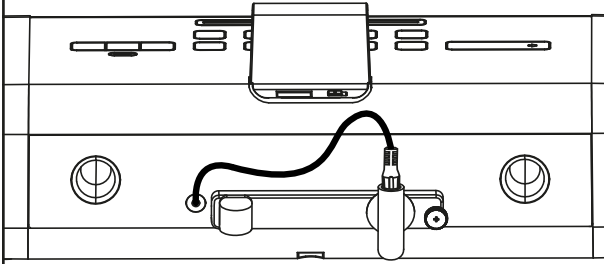

Staff can access DST (Daylight Saving Time), Time Set, Time Sync, Time Zone, High/Low Volume settings and power supply jack on the rear of the unit. Turn the thumbscrew to remove the Rear Cover. Replace Rear Cover after adjusting settings.

 2: Power

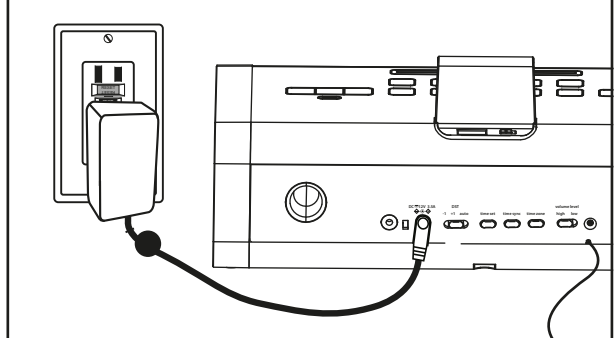


Attach AC adaptor cable to DC jack on back of the unit and plug the other end into a wall socket

3: Docking your iPhone/iPod



Gently dock your iPhone or iPod into the 30 pin dock. The iPhone or iPod will charge while docked. Press the **▶|| Button** on the unit to play your iPhone or iPod.

 
4: Room volume

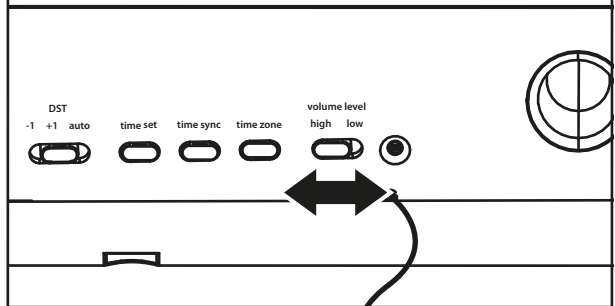

The unit has a High/Low Volume setting switch on the back. Move the switch to the desired position for the room size.

Quick staff setup

 5: Time sync

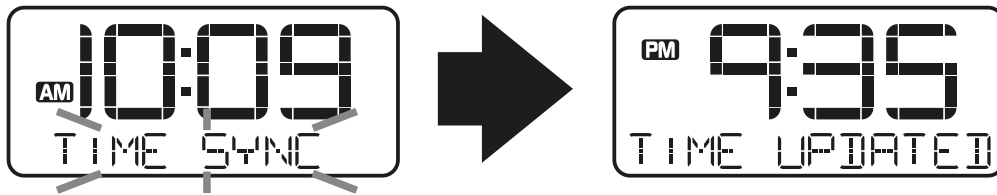

The fastest and best way to set the time on the unit is via the time sync feature.

 
- Dock an iPhone (see step 3).
- Press and release the **Time Sync Button** located on back of the unit. "TIME SYNC" will flash on the display, followed by "TIME UPDATED" upon successful syncing. If sync fails, "SYNC FAILED" will appear on the display and the time must be set manually (see page 4).

6: Radio Operation



- Press the **Function Button** as needed to select FM band.
- Press the **FM Presets Button** to select a preset number (P1 - P6), and then hold the **FM Presets Button** until the selected preset number begins flashing in the display.
- Press the **◀** or **▶** **Button** to tune radio to a desired station.
- Press the **FM Presets Button** to confirm the preset number for the current station.
- Repeat steps b) through d) to set further presets

7: security

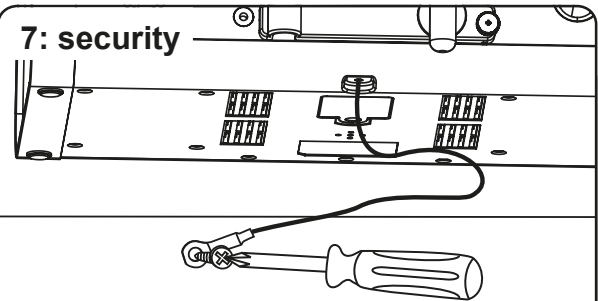

- Secure the attached security tether to a wall or other permanent surface.
- DO NOT attempt to attach the tether to an AC wall outlet or cause it to become entangled with anything that can create a hazardous situation.
- Attach the Rear Cover to the unit.

Setting Up the Unit

Attach Rear Security Cover After Staff Adjusts These Control Settings and Functions:

Access to the power supply jack, DST switch, time set, time sync, time zone and room volume settings is on the rear of the unit. Attach the rear cover using the supplied thumbscrew once these settings are complete to prevent tampering. Remove cover for any future adjustments and reattach once adjustments are completed.

Connect Unit to Power Source

Plug the AC adaptor cable into the AC Adaptor Jack and the other end into a standard 120V AC wall socket. Adaptor must be plugged in to operate unit. **The unit does not operate on batteries** (a battery back up system maintains clock settings during power failures).

Setting the Clock Time Using Time Sync

The Time Sync feature allows you to sync the time setting on the unit to the time on your iPhone or recent model iPod (iPod touch, iPod nano and iPod Classic; older iPod models such as iPod mini do not support this feature).

1. Press and release the **Time Sync Button** located at the back of the unit. "TIME SYNC" flashes on the display.
2. Once sync is completed, "TIME UPDATED" appears on the display followed by 2 beeps indicating time sync is complete. The updated time will appear on the display.
3. If sync was not successful, "SYNC FAILED" will appear on the display and a long beep will sound. If this happens, please try again, with a different iPhone or iPod if needed. If sync still fails, please see Setting Clock Manually below to set the clock.

NOTE: iPhone time is automatically updated to the correct time via cell phone towers. The time on your iPod is accurate only to the time on the computer the last time the iPod was synced to it. It's possible to have up to 59 seconds difference between the unit and synced iPhone/iPod.

Setting Time Zone, Daylight Saving Time, Clock and Calendar Manually

If you want to set the clock manually instead of using the Time Sync feature please proceed as follows:

1. This unit ships with the **DST Switch** set to "AUTO" and will automatically adjust for daylight savings time in that position. To set DST manually, set to "+1" to advance the time 1 hour. Slide to "- 1" to turn the clock back 1 hour.
2. The default clock setting is Eastern Time. If you live in the Eastern Time zone no further adjustments are necessary. If you live in a different time zone press and hold the **Time Zone Button** on the back cabinet until the unit beeps and "EASTERN" appears in the clock display, then press and release the ◀ or ▶ **Buttons** until your own time zone appears in the display. Press and release the **Time Zone Button** to exit the Time Zone setting mode. The unit beeps twice and the display shows the time in your time zone.
3. Press and hold the **Time Set Button** on the back cabinet until the time display begins flashing, then press and release the ◀ or ▶ **Buttons** to adjust the time display. Hold the ◀ or ▶ **Buttons** for rapid adjustment, then release the buttons and press repeatedly to set the display to the exact minute. Observe the AM and PM indicators to make sure you have set the time correctly.
4. Press and release the **Time Set Button** again. The Year flashes in the display. Press and release the ◀ or ▶ **Buttons** to set the correct year if necessary.
5. Press and release the **Time Set Button** again. The Month and Date flashes in the display. Press and release the ◀ or ▶ **Buttons** to set the correct month and date if necessary.
6. Press and release the **Time Set Button** once more to exit the setting mode. The unit beeps twice to confirm that the time and calendar settings are complete.

Room Volume

1. Slide the **Volume Level Switch** located on the back of the unit to High for large rooms or to Low for smaller rooms.

Using the Unit

Using the Alarms

Setting the Alarms

1. Press and release the **Alarm Set Button**. The alarm time flashes on the lower part of the display. Press the ◀ or ▶ **Button** to set the alarm time (hold for faster setting). Remember to set the correct AM or PM time.
2. Press the **Alarm Set Button** again. Alarm is now armed, indicated by the alarm icon and alarm source icon.
3. Press and release the **Wake To Button**, then press and release the ◀ or ▶ **Button** to select an alarm source to wake to: (Tone, iPod or Radio).

Arming and Disarming Alarm (Turn Alarm Function On and Off)

1. Press the **Alarm On/Off Button** to arm or disarm alarm function. When armed, the alarm icon appears in display.

One Day Alarm

1. Once the alarm sounds it will be disarmed and must be set again to come on the following day. This prevents waking to unwanted alarms.

Snooze Operation

1. Press the **Snooze/Dimmer Button** after alarm sounds, the alarm will be silenced and come on again 9 minutes later. Snooze can be pressed several times during the 1 hour alarm cycle

Sure Alarm

The unit has a sure alarm feature. If back-up battery is installed, the buzzer alarm will still sound in the event of a power failure.

Charging your iPhone/iPod

1. Gently dock your iPhone or iPod. While an iPhone/iPod is docked in the unit and the unit is connected to AC power, it recharges (until fully charged).

Listening to iPhone/iPod

1. Dock the already playing iPhone/iPod in Dock. The unit will automatically turn on and you will hear the music playing from your iPhone/iPod.

Note: If the playing song volume is too low on the iPhone/iPod, the unit may not detect iPhone/iPod is in play mode. Press the ▶|| **Button** to play it.

2. When an iPhone/iPod is docked and in standby mode, press the ▶|| **Button** to play it. "iPod" will appear on the lower part of display to indicate iPhone/iPod playing mode.
3. Press the ▶|| **Button** again to pause play; press again to resume it.
4. Press the ◀ or ▶ **Button** to skip to the next or previous track on your iPhone/iPod. Press and hold the ◀ or ▶ **Button** to search within a track.
5. Press the ◀) or)◀ to adjust the system volume.
6. To turn off the unit, press the ⏻ **Button**. An iPhone/iPod will continue charging while docked.

Using the Unit

Listening to Radio

Setting up Antenna

Extend FM wire antenna fully for best reception. Do not strip, alter or attach to other antennas.

Tuning and Playing the Radio

1. Press and release the **Function Button** as needed to turn on the unit and cycle through iPod, FM radio, Bluetooth, Line-in modes.
2. When the FM mode is selected, press the ◀ or ▶ **Button** to tune the radio to a desired station. The current radio frequency appears in the lower right of the display. Press the ◀ or ▶ **Button** for a few seconds to scan for the next clear station.
3. **To memorize a station as a preset:**
 - A. Press the **FM Presets Button** as needed to step through the 6 presets (P1 - P6) to the number you wish to assign, then press and hold the **FM Presets Button** until the selected preset number begins flashing in the display.
 - B. Press the ◀ or ▶ **Button** to tune the radio to a desired station. Hold briefly to have the radio autoscan/search for the next clear station.
 - C. Press the **FM Presets Button** to confirm the setting, two confirmation beeps will confirm the setting and the preset number you wish to assign. Repeat steps A-C to preset up to 6 FM band stations.
4. To listen to a preset station, use the **Function Button** to select FM mode, then press the **FM Presets Button** to choose the desired preset.
5. Press the ◀) or ◀ **Button** on the unit to adjust the system volume.
6. Press the ⏻ **Button** to turn off the radio.

Using the Line-in Cord

1. An audio line-in cord comes with the unit. Use it to play non-docking iPod models or other audio devices through the unit. Make sure there is no iPhone/iPod docked in the unit when using the line-in cord. Press the **Function Button** until "LINE-IN" appears on the display. Store the audio line-in cord properly in provided plug holder when not in use to avoid static charge which can interfere with proper operation.

Playing Bedtime Beats

The unit has 4 Bedtime Beats tracks, each featuring restful pre-recorded music to aid sleep.

1. Press the **Bedtime Beats Button** to activate whichever track was last accessed. Press the **Bedtime Beats Button** repeatedly to cycle between tracks (Classical, New age, Jazz and Mix). The lower part of the display will show the currently playing track name.
2. To turn Bedtime Beats off, press the ⏻ **Button**. Bedtime beats will turn off automatically after playing for 90 minutes.

Dimmer Operation

During normal operation, press the **Snooze/Dimmer Button** to control the brightness of the LCD display.

Charging a USB Device

Plug one end of a USB cable (not included) into the device you wish to charge and the other into the USB port located on the top of the unit behind the dock. Observe the charging status on your device. If the device is not charging, switch the USB circuit switch.

Note: Some devices use a proprietary USB connections and cannot be charged by the unit.

Using the Unit in Other Countries


Different regions of the world use different FM radio frequency steps and ranges. You will need to select the one that matches the standards in your region (USA, EUROPE, JAPAN, AUSTRALIA, or CHINA). The default setting is USA; if you live in the US, you may skip this section.

1. Make sure the unit is OFF (not playing in any mode). Press and hold the **Function Button** for about 2 seconds until "Radio xxx" appears in the lower part of display. Press and release the ◀ or ▶ **Button** to set the "xxx" to your region.
2. Press and release the **Function Button** again (or no button within 10 seconds) to exit the radio frequency setting mode. Two beeps will confirm radio frequency setting.

Listening to Bluetooth Music

You need to pair your Bluetooth device with the unit before you can auto-link to play/stream Bluetooth music through the unit. Pairing creates a permanent "bond" so two devices can always recognize each other.

Pairing:

1. Press and hold the **Pairing Button** to begin pairing operation. The Bluetooth and "pairing" icons will flash.
2. Activate Bluetooth on your device according to the device's user manual to link to the unit. You may need to input the iHome device pass code: "1234".
3. Once connected, the Bluetooth Icon  will remain.
4. The unit will auto link with the last linked device when that device is in range.

Playing Bluetooth Music:

1. Once your device and the HiP50 are linked you can start to play Bluetooth music through the HiP50.
2. Press and release the **Function Button** as needed until "Bluetooth" appears in the lower part of the display .
3. Press the ▶|| **Button** on the HiP50 to play your Bluetooth-enabled device. The display will show "Bluetooth". (Depending on the Bluetooth device you are using, you may need to manually go into media player mode on your device to make it work properly).
4. Press the ▶|| **Button** again to pause play; press again to resume it.
5. Press the ◀)) or ◀) **Button** on the HiP50 to adjust the system volume.






Please remember to turn off Bluetooth device manually.

NOTE: The HiP50 must be in Bluetooth mode to play a Bluetooth-enabled device.

 



Making Calls with a Bluetooth Mobile Phone

Before you make a call with the HiP50, you need to pair and link your Bluetooth-enabled phone with the HiP50. Please refer to Pairing procedure on page 7.


Answer a Call:

1. To answer a call, press the  **Button**. Now you can use the HiP50 as a speaker phone.
2. Speak into the MIC (located above the  **Button**) and press the  or  **Button** on the HiP50 to adjust the call volume.
3. To end the call, press the  **Button**.

Dial/Re-dial Dialing:

1. Once the HiP50 is paired to a Bluetooth mobile phone, you can use the keypad on your phone to dial a phone number. Press the  **Button** to cancel the call.
2. To redial the last dialed number, press the  **Button** twice.
3. Press the  or  **Button** on the HiP50 to adjust the call volume.

NOTE: Changes to volume settings for phone operation may affect the volume of other modes.

 
4. To end a call, press the  **Button**.

Replacing Clock Backup Battery

The unit comes with 1 CR2450 back-up battery installed to provide continuous alarm operation and clock settings in the event of a power failure. **Remove the battery pull tab before use.** When the Battery Low Icon located on the lower right of the display is flashing, it is time to replace the back-up battery. The battery compartment is located on the bottom of the unit.

1. Use a Phillips screwdriver to remove the battery compartment cover located on the bottom of the unit.
2. Please make sure the AC adaptor is connected, otherwise all settings may be lost during battery replacement.
3. Insert 1 CR2450 battery checking that the + side is facing you. Replace the compartment door.

Note: Make sure you dispose of battery properly (see your local regulations).

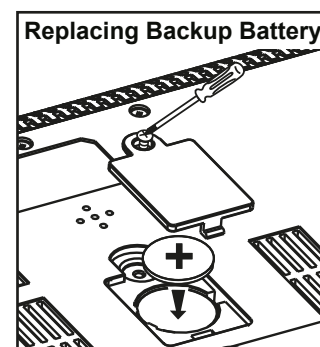

WARNING: Lithium batteries can explode or cause burns if disassembled, shorted, recharged, exposed to water, fire, or high temperatures. Do not place loose batteries in a pocket, purse, or other container containing metal objects, mix with used or other battery types, or store with hazardous or combustible materials. Store in cool, dry, ventilated area. Follow applicable laws and regulations for transport and disposal.

A Consumer Guide to Product Safety

IMPORTANT SAFETY INSTRUCTIONS

When used in the directed manner, this unit has been designed and manufactured to ensure your personal safety. However, improper use can result in potential electrical shock or fire hazards. Please read all safety and operating instructions carefully before installation and use, and keep these instructions handy for future reference. Take special note of all warnings listed in these instructions and on the unit.

1. **Water and Moisture** – The unit should not be used near water. For example: near a bathtub, washbowl, kitchen sink, laundry tub, swimming pool or in a wet basement.
2. **Ventilation** – The unit should be situated so that its location or position does not interfere with its proper ventilation. For example, it should not be situated on a bed, sofa, rug or similar surface that may block ventilation openings. Also, it should not be placed in a built-in installation, such as a bookcase or cabinet, which may impede the flow of air through the ventilation openings.
3. **Heat** – The unit should be situated away from heat sources such as radiators, heat registers, stoves or other appliances (including amplifiers) that produce heat.
4. **Power Sources** – The unit should be connected to a power supply only of the type described in the operating instructions or as marked on the appliance.
5. **Power-Cable Protection** – Power supply cables should be routed so that they are not likely to be walked on or pinched by items placed upon or against them. It is always best to have a clear area from where the cable exits the unit to where it is plugged into an AC socket.
6. **Cleaning** – The unit should be cleaned only as recommended. See the Maintenance section of this manual for cleaning instructions.
7. **Objects and Liquid Entry** – Care should be taken so that objects do not fall and liquids are not spilled into any openings or vents located on the product.
8. **Attachments** – Do not use attachments not recommended by the product manufacturer.
9. **Lightning and Power Surge Protection** – Unplug the unit from the wall socket and disconnect the antenna or cable system during a lightning storm or when it is left unattended and unused for long periods of time. This will prevent damage to the product due to lightning and power-line surges.
10. **Overloading** – Do not overload wall sockets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.
11. **Damage Requiring Service** – The unit should be serviced by qualified service personnel when:
 - A. the power supply cable or plug has been damaged.
 - B. objects have fallen into or liquid has been spilled into the enclosure.
 - C. the unit has been exposed to rain.
 - D. the unit has been dropped or the enclosure damaged.
 - E. the unit exhibits a marked change in performance or does not operate normally.
12. **Antenna** – Do not connect an external antenna to the unit (other than that provided).
13. **Periods of Nonuse** – If the unit is to be left unused for an extended period of time, such as a month or longer, the power cable should be unplugged from the unit to prevent damage or corrosion.
14. **Servicing** – The user should not attempt to service the unit beyond those methods described in the user's operating instructions. Service methods not covered in the operating instructions should be referred to qualified service personnel.

Questions? Visit www.hoteltech.com

Troubleshooting

Symptom	Possible Problem	Solution
Unit does not turn on	AC adaptor isn't plugged into a working wall socket or not plugged into the power supply jack on back of the unit	Plug the AC adaptor into a working wall socket and plug the connector into the supply jack on the unit
Unit doesn't respond	Unit requires a reset	If unit is plugged in and doesn't respond, try resetting the unit by following these steps: a) remove iPhone/iPod from dock b) unplug unit from power source c) remove back up battery d) wait a few minutes, then restore battery and resume use
	iPhone/iPod is not docked properly	Remove your iPhone/iPod from the dock and check for obstruction on the connectors in the dock and on your iPhone/iPod. Then reseal it in the dock.
Battery Low icon always flashing	Battery is weak	Replace with new battery
	Battery was not installed properly	Check to make sure the + side is facing outwards
iPhone/iPod does not respond to the unit/iPod is playing but no sound comes out	iPhone/iPod is not docked properly	Remove your iPhone/iPod from the dock and check for obstruction on the connectors in the dock and on your iPhone/iPod. Then reseal it in the dock.
	Your iPhone/iPod software is too old	Upgrade software on your iPhone/iPod via iTunes on your computer
	iPhone/iPod is locked up/plays but no sound comes out	Check the volume setting. Make sure your iPhone/iPod is working properly before docking into the unit. Please refer to your iPhone/iPod manual for details. See above for software upgrade information. You may need to reset your iPhone/iPod. Refer to your iPhone or iPod user guide for details on how to perform a reset.
	Using 1 st or 2 nd generation iPod, iPod Shuffle or other devices.	Unit cannot control those iPod models or other devices.
Unit/iPhone/iPod performance is erratic	The unit is reacting to external interference	Move unit away from potential sources of external interference such as computers, modems, wireless devices (routers) or fluorescent light.
No sound from unit	Volume is set too low on unit	Make sure volume is turned up
iPhone/iPod didn't charge up	iPhone/iPod is not docked properly	Remove your iPhone/iPod from the dock and check for obstruction on the connectors in the dock and on your iPhone/iPod. Then reseal it in the dock.
	iPhone/iPod is locked up/ frozen	Please make sure your iPhone/iPod is working properly before docking into the unit. Please refer to your iPhone/iPod manual for details.
	iPhone/iPod battery has problem	
Time sync didn't work	Older iPod models such as iPod mini do not support time sync function	Make sure you are using an iPhone or newer iPod such as touch, nano or classic. If not available, set time manually (see page 4).

Troubleshooting

Symptom	Possible Problem	Solution
Sound is distorted	Volume level is set too high	Decrease the volume
	Sound source is distorted	If the iPhone/iPod original sound source (MP3) is old or of poor quality, distortion and noise are easily noticed with high-power speakers. Try a different file from a trusted source such as iTunes.
		If you are using an external sound source like older generation of iPod or iPod Shuffle, try reducing the output volume on the device itself. Also try turning bass boost OFF.
Unit/adaptor gets warm after extended play at high volume	This is normal	Turn unit off for awhile or lower volume
Alarm not working	AM/PM time/alarm time not set correctly	When setting clock or alarm time, take note of the AM/PM indicators
Bluetooth music is broken up	Bluetooth device is out of range of unit	Move your Bluetooth device within 30 feet of the unit
Can't play Bluetooth music from cellphone or other Bluetooth devices	Device does not support the A2DP and AVRCP Bluetooth profiles	While you need the A2DP and AVRCP Bluetooth profiles to stream music to the unit, you can still use the handsfree speaker phone functionality
	Device and unit are not paired AND linked	Make sure your phone supports the A2DP and AVRCP Bluetooth profiles before linking/pairing. The unit defaults to the last linked device, so a new device may need to be linked from the device itself (see your device's user guide).
Can't hear caller's voice	Bluetooth device is out of range of unit	Move your cell phone closer to unit
	Volume on unit is too low	Raise volume on unit
Others can't hear my voice/voice isn't clear to listener	You are too far from unit microphone	The mic is near the Talk Button. Move closer to the unit.
Clock reset/changed times	Electrostatic charge from line-in cord	Store the end of the line-in cord properly away in provided plug holder on back of unit when not in use. Adjust clock to proper time.

Note: When not in use, attached line-in cord plug must be stored in plug holder on rear of unit to avoid improper operation.

LIMITED 30 DAY WARRANTY

(valid in contiguous U.S.A. only: not valid in Hawaii or Alaska)

HTI, a division of Hotel Technologies Inc. (hereafter referred to as Hotel Technologies), warrants this product to be free from defects in workmanship and materials, under normal use and conditions, for a period of 30 days from the date of receipt of the item.

Should service be required by reason of any defect or malfunction during the warranty period, Hotel Technologies will repair or, at its discretion, replace this product without charge. This decision is subject to verification of the defect or malfunction upon delivery of this product to the Factory Service Center listed below.

Before returning this product for service, please first replace the batteries (if applicable) with fresh ones, as exhausted or defective batteries are the most common cause of problems encountered.

If service is still required:

1. Fax a representative at 915.633.1388 with a Return Authorization request including proof of purchase date (i.e., invoice number and date from distributor or HTI) to receive a Return Authorization Number. Issuance of Return Authorization Number is subject to review prior to granting.

NO ITEM CAN BE ACCEPTED WITHOUT A RETURN AUTHORIZATION NUMBER.

2. Remove batteries (if applicable) and pack the unit in a well-padded, heavy corrugated box.
3. Send the unit by method agreed to with your representative to the Factory Service Center listed below:

Consumer Repair Department

Hotel Technologies Inc.
1330 Goodyear Drive
El Paso TX 79936-6420

NOTE: Improperly packed items or Items received without an RA # cannot receive credit.

NOTE: This warranty is valid only if the product is used for the purpose for which it was designed. It does not cover (i) products which have been damaged by negligence, misuse or accident, or which have been modified or repaired by unauthorized persons; (ii) cracked or broken cabinets, or units damaged by excessive heat; (iii) damage to tape cassettes (if applicable); (iv) the cost of shipping this product to the Factory Service Center and its return to the owner.

This warranty is valid only in the United States of America and does not extend to owners of the product subsequent to the original purchaser. Any applicable implied warranties are also limited to 30 days, and Hotel Technologies will not be liable for consequential damages. (Some states do not allow limitations on implied warranties or exclusion of consequential damages, so these restrictions may not apply to you.) This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

© 2011 Hotel Technologies, Inc. All rights reserved