




## Using the iBT22A

### Setting the Alarms

1. By default, the unit selects the most recently linked Bluetooth device as your wake-to source. If no Bluetooth device is detected, the iBT22A will automatically default to buzzer alarm. See page 8 to setup your Bluetooth device.  
Note: make sure you have an hour of audio on your Bluetooth device.
2. Press and hold the  **Button** until the current alarm time flashes in the lower part of the display and a beep sounds.  
Press the **-** or **+** **Button** to set the alarm time. Remember to set the correct AM or PM time.
3. Press the  **Button** (or if no button is pressed within 10 seconds). Two beeps will confirm alarm time and exit alarm setting mode. The alarm will be armed and the corresponding alarm icon will appear.
4. To set Alarm 2 just follow steps 2 - 3 using the  **Button**.

### Reviewing, Arming and Disarming Alarms

1. Once an alarm is set, it is armed and the lower part of the display will show the alarm time. If both alarms are armed, the earliest alarm time will show.
2. To arm/disarm the alarm, just press the associated alarm button to toggle it on or off. If the alarm is armed, the related alarm icon will appear in the upper part of the display.

### Resetting the Alarm to Come On the Next Day

When the alarm is sounding, press the  **Button** to stop alarm and reset it to come on the following day.

## Using the iBT22A

### Snooze Operation

1. Press and hold the **Snooze/Dimmer Button** for a few seconds to enter set snooze timer mode. A beep will sound and the display will flash. Press the **-** or **+** **Button** to set the snooze timer from 1 to 29 minutes. Press the **Snooze/Dimmer Button** to exit. Two confirmation beeps will sound.
2. Press the **Snooze/Dimmer Button** after the alarm sounds. The alarm will be silenced and come on again after the set snooze time. Snooze can be pressed several times during the 1 hour alarm cycle.

### Sure Alarm

The iBT22A has a sure alarm feature. If backup batteries are installed, the buzzer alarm will still sound in the event of power failure.

## Using Bluetooth: Pairing Your Device

## Using the iBT22A

**NOTE:** See the iBT22A Bluetooth Connection Guide for complete pairing details.

Whenever it is powered on, this unit will attempt to autolink to a previously paired device. If no device is detected, the unit will automatically enter pairing mode for 2 minutes. You can manually initiate pairing without turning on the unit by following steps 1-3 below.

1. Make sure your Bluetooth device is fully charged. Turn on your Bluetooth device and make it "discoverable" by turning on Bluetooth mode (check in Options or Settings) .
2. **Press and hold the Bluetooth Pairing Button** on the back of the unit for 2 seconds. The unit will beep and the Bluetooth icon will flash on the display, indicating the unit is in pairing mode.
3. "iHome iBT22A" should appear in your device's menu. If "Not Paired", "Not Connected" or similar message appears, select "iHome iBT22" to connect it. If prompted for a passcode, enter "1234" on your device's keypad.
4. If pairing is successful, a beep will sound, "PAIR" will appear briefly in the bottom display and the Bluetooth icon will become solid. There should also be an indication on your device. If no device is successfully paired within 2 minutes the unit will default to previous mode. Once unit is paired to a device, it will attempt to autolink when the device is within range (about 30 feet).

## Using the iBT22A

### Pairing with a Different Device

1. When you power ON the speaker, it will automatically link with the previously paired Bluetooth device as long as that device is still within range (approx. 30 feet). So, to pair with a different device you must turn off the Bluetooth capability of the already paired device.

### Playing Audio Via Bluetooth


1. Press the **⏻ Button** to turn on the unit. The Bluetooth icon will be displayed when a linked device is in range and detected. You can then listen to audio streamed wirelessly from your paired iPad, iPhone, iPod or other Bluetooth device.
2. Press the **▶|| Button** to play audio from your device. Press again to pause play and once more to resume play. When Bluetooth audio is active, the audio icon will be displayed around the Bluetooth icon (⌘).
3. Press the **-** or **+ Button** to navigate tracks on your device.
4. Press the **🔊** or **🔊) Button** to adjust the system volume. You can also adjust volume on your device.
5. When done listening, press the **⏻ Button** to turn the unit OFF. Remember to turn off your device, too.

## Using the iBT22A

### Playing Audio via Aux In

1. Connect one end of the included 3.5mm stereo audio cable to the Aux-in jack on the back of the unit and connect the other end to the headphone or line-out jack on your audio device.
2. Press the **Power Button** on the unit to turn it on.
3. Power on the audio device and use the controls on the device to play or pause audio, and navigate tracks.
4. Press the **Volume** **Button** to adjust the system volume. You can also adjust volume on your device.
5. When done listening, press the **Power Button** to turn the unit OFF. Remember to turn off your device, too.

NOTE: Make sure no Bluetooth device is playing or you will hear both the Aux -in and Bluetooth playing.

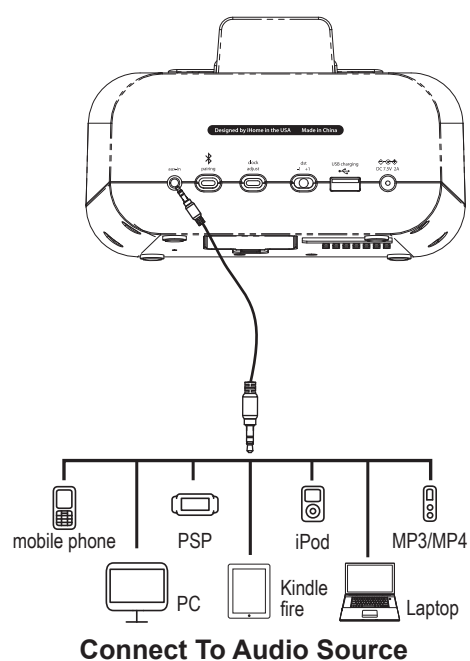

## Using the iBT22A

### Sleep Operation

Sleep mode lets you sleep to your Bluetooth device until the unit shuts off at a selected time. It will send a power off command to your device, too.

1. Press the **Sleep Button** to enter sleep mode. The Sleep Icon will appear on the display to indicate it is in sleep mode.
2. Press the **Sleep Button** as needed to adjust the sleep timer from 120, 90, 60, 30 or 15 minutes (or turn sleep mode OFF by pressing the **⏻ Button**).
3. When the display changes back to show the real time, press the **Sleep Button** once to show the sleep time remaining. Pressing it again to change sleep time to the next lowest increment.
4. To stop listening at any time, press the **⏻ Button** to turn the unit OFF. Remember to turn off your device, too.

NOTE: The next time you turn the unit on and press **Sleep Button** it will default to the last set sleep time.

### Dimmer Operation

During normal operation, press the **Snooze/Dimmer Button** to control the brightness of the LCD display.

### USB Charging

You can charge devices via the USB port located on the back of the unit while the unit is connected to AC power. Clock backup batteries do not power the USB charging port. Connect a USB cable (not included) to the USB port and connect the other end to your device. Monitor the charging status on your device. If it doesn't charge, you must charge it using the charger that came with it.

## Consumer Product Safety Guide

# IMPORTANT SAFETY INSTRUCTIONS

When used in the directed manner, this unit has been designed and manufactured to ensure your personal safety. However, improper use can result in potential electrical shock or fire hazards. Please read all safety and operating instructions carefully before installation and use, and keep these instructions handy for future reference. Take special note of all warnings listed in these instructions and on the unit.

1. **Water and Moisture** – The unit should not be used near water. For example: near a bathtub, washbowl, kitchen sink, laundry tub, swimming pool or in a wet basement.
2. **Ventilation** – The unit should be situated so that its location or position does not interfere with its proper ventilation. For example, it should not be situated on a bed, sofa, rug or similar surface that may block ventilation openings. Also, it should not be placed in a built-in installation, such as a bookcase or cabinet, which may impede the flow of air through the ventilation openings.
3. **Heat** – The unit should be situated away from heat sources such as radiators, heat registers, stoves or other appliances (including amplifiers) that produce heat.
4. **Power Sources** – The unit should be connected to a power supply only of the type described in the operating instructions or as marked on the appliance.
5. **Power-Cable Protection** – Power supply cables should be routed so that they are not likely to be walked on or pinched by items placed upon or against them. It is always best to have a clear area from where the cable exits the unit to where it is plugged into an AC socket.
6. **Cleaning** – The unit should be cleaned only using a warm damp cloth. Do not use solvents, etc.
7. **Objects and Liquid Entry** – Care should be taken so that objects do not fall and liquids are not spilled into any openings or vents located on the product.

8. **Attachments** – Do not use attachments not recommended by the product manufacturer.
9. **Lightning and Power Surge Protection** – Unplug the unit from the wall socket and disconnect the antenna or cable system during a lightning storm or when it is left unattended and unused for long periods of time. This will prevent damage to the product due to lightning and power-line surges.
10. **Overloading** – Do not overload wall sockets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.
11. **Damage Requiring Service** – The unit should be serviced by qualified service personnel when:
  - A. the power supply cable or plug has been damaged.
  - B. objects have fallen into or liquid has been spilled into the enclosure.
  - C. the unit has been exposed to rain.
  - D. the unit has been dropped or the enclosure damaged.
  - E. the unit exhibits a marked change in performance or does not operate normally.
12. **Periods of Nonuse** – If the unit is to be left unused for an extended period of time, such as a month or longer, the power cable should be unplugged from the unit to prevent damage or corrosion.
13. **Servicing** – The user should not attempt to service the unit beyond those methods described in the user's operating instructions. Service methods not covered in the operating instructions should be referred to qualified service personnel.

Questions? Visit [www.ihomeaudio.com](http://www.ihomeaudio.com)  
or call 1-800-288-2792 Toll Free



## Troubleshooting

### Unit doesn't respond (no power)

- Check that all connections are correct and properly plugged in.
- Make sure your device is properly paired with the iBT22A.
- Make sure the **Power** is ON, indicated by "ON" appearing briefly on the display.

### Resetting the Unit

If Bluetooth function is not operating properly, you may wish to reset Bluetooth. To do so, press and hold the **⏻ Button** for 10 seconds. You will hear a beep and the Bluetooth icon will be gone from the display. You will then need to re-pair any previously paired devices.

### Trouble pairing device/computer with iBT22A

Bluetooth implementation varies depending on your device's hardware and operating system. Please see our website for updates on pairing.

- Make sure you have the latest firmware for your device.
- Make sure your device is working properly. Check your device's manual for details on Bluetooth pairing and linking.
- When you power ON the speaker, it will automatically link with the last previously paired Bluetooth device if the device is still within range (approx. 30 feet). To pair with a different device you must turn off Bluetooth capability on the already paired device, or take it out of range.

For further information and to see the latest instructions, visit [www.ihomeaudio.com/support](http://www.ihomeaudio.com/support)

## Limited 1 Year Warranty

iHome Products, a division of SDI Technologies Inc. (hereafter referred to as SDI), warrants this product to be free from defects in workmanship and materials, under normal use and conditions, for a period of one (1) year from the date of original purchase.

Should this product fail to function in a satisfactory manner, it is best to first return it to the store where it was originally purchased. Should this fail to resolve the matter and service still be required by reason of any defect or malfunction during the warranty period, SDI will repair or, at its discretion, replace this product without charge. This decision is subject to verification of the defect or malfunction upon delivery of this product to the Factory Service Center authorized by SDI Customer Service. The product must include proof of purchase, including date of purchase. An out-of-warranty fee for service will be charged for units that are received without proof of purchase.

Before returning this product for service, please first replace the batteries (if applicable) with fresh ones, as exhausted or defective batteries are the most common cause of problems encountered.

If service is still required:

1. Call SDI Customer Service at 1-800-288-2792 for Return Authorization and for the address of the Factory Service Center.
2. Remove the batteries (if applicable) and pack the unit in a well padded, heavy corrugated box. SDI is not responsible for damage that occurs during shipping to the Factory Service Center.
3. Enclose a photocopy of your sales receipt, credit card statement, or other proof of the date of purchase, if within the warranty period. Also include your name and address information, a brief description for why the unit is being returned, and the return authorization number. No unit can be processed without a return authorization number.
4. Write the return authorization number on the side of the shipping package and send the unit prepaid and insured to the Factory Service Center address authorized by SDI Customer Service.

### Disclaimer of Warranty

NOTE: This warranty is valid only if the product is used for the purpose for which it was designed. It does not cover (i) products which have been damaged by negligence or willful actions, misuse or accident, or which have been modified or repaired by unauthorized persons; (ii) cracked or broken cabinets, or units damaged by excessive heat; (iii) damage to digital media players, CD's or tape cassettes (if applicable); (iv) the cost of shipping this product to the Factory Service Center and its return to the owner. This warranty is valid only in the United States of America and does not extend to owners of the product other than to the original purchaser. In no event will SDI or any of its affiliates, contractors, resellers, their officers, directors, shareholders, members or agents be liable to you or any third party for any consequential or incidental damages, any lost profits, actual, exemplary or punitive damages. (Some states do not allow limitations on implied warranties or exclusion of consequential damages, so these restrictions may not apply to you.) This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Your acknowledgement and agreement to fully and completely abide by the above mentioned disclaimer of warranty is contractually binding to you upon your transfer of currency (money order, cashier's check, or credit card) for purchase of your SDI product.

© 2013 SDI Technologies, Inc. All rights reserved  
Questions? Visit [www.ihomeaudio.com](http://www.ihomeaudio.com)  
or call 1-800-288-2792 Toll Free