Ρ1



with Speakerphone for iPad, iPhone or iPod





Questions? Visit www.ihomeaudio.com

Introduction

Thank you for purchasing this unit. This product is designed to provide high quality wireless sound for your iPad, iPhone, iPod, computer, PDA or other Bluetooth audio device.

Along with the included Quick Bluetooth Connection Guide this instruction booklet explains the basic operation and care of the unit. Please read them carefully and keep for future reference.

Maintenance

- Place the unit on a level surface away from sources of direct sunlight or excessive heat.
- Protect your furniture when placing your unit on a natural wood and lacquered finish. A cloth or other protective material should be placed between it and the furniture.
- Clean your unit with a soft cloth moistened only with mild soap and water. Stronger cleaning agents, such as Benzene, thinner or similar materials can damage the surface of the unit.

Table of Contents

Meet Your Unit	1-2
Setting up the Unit	3
Playing your iPad, iPhone or iPod / Playing Audio Via Aux	
Using Bluetooth: Pairing Your Device	
Playing Audio Via Bluetooth / Using the Speakerphone	6
Watching Videos in Landscape Mode / Troubleshooting	
Consumer Product Safety Guide	
Warranty Information'	



is a registered trademark of SRS Labs, Inc. TruBass technology is incorporated under license from SRS Labs, Inc. SRS WOW®, which features TruBass®, significantly improves the playback quality of audio, delivering a dynamic 3RD entertainment experience with deep, rich bass and high frequency clarity for crisp detail.

FCC Information

FCC Radiation Exposure Statement
This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

This Device complies with RSS-210 of the IC Rules; Operation is subject to the following two conditions:

This device may not cause interference and

(2) This device must accept any interference received, including interference that may cause undesired operation

This device complies with Part 15 of the FCC Rules, operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

- Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment
- NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.


These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.


This Class B digital apparatus complies with Canadian ICES-003. Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

This equipment should be installed and operated with a minimum distance of 20 centimeters between the radiator and your body.

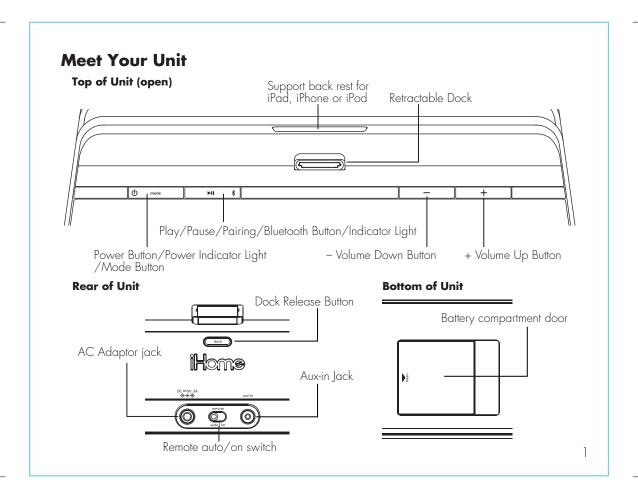

Meet Your Unit Included

 
- IC system1 100V-240V AC Adaptor



2

Setting up the Unit to Operate on Power


- 1. Connect the included AC adaptor to the AC Adaptor Jack on the back of the unit.
- 2. Connect the plug to a working outlet.

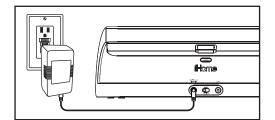

Setting up the Unit to Operate on Batteries

The unit operates on 4 AA batteries for portable use. When the sound becomes weak or distorted, it's time to replace the batteries with fresh ones.

- Turn the unit over and slide open the battery compartment door located on the bottom of the unit.
- 2. Insert 4 AA batteries as shown, making sure to match the polarity (+ or -) to the diagram inside the battery compartment.
- 3. Close the battery compartment.

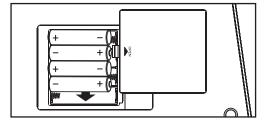

NOTE: When the unit is connected to a power source, it will charge a docked iPad, iPhone or iPod. It will not charge while operating on batteries.

Make sure to dispose of batteries according to local regulations.

Playing your iPad, iPhone or iPod

- 1. Make sure the unit has a power source (4 AA batteries are installed or AC adaptor is connected). Power output (volume) will be lower when operating on batteries.
- 2. Press the **Dock Release Button** on the back of the unit to expose the flexible 30 pin connector (if dock is retracted).
- 3. Gently dock a playing iPad, iPhone or iPod. The unit will power on indicated by the power light turning blue and in a moment, you will hear the audio from your device.
- 4. If the volume on your sound source is too low, the unit may not detect it/turn on. If this happens, press the **button** to turn the unit on.
- 5. Control your iPad, iPhone or iPod music using its iPod controls. Use the Volume +/- Buttons on the unit to adjust system volume.
- 6. When you are done listening, press the **button** to turn unit off.

Playing Audio via Aux-in

- 1. Un dock (or pause/stop) any currently docked device. Connect a standard 3.5 mm stereo audio plug to the headphone or line-out jack on your audio device and the other end to the Aux-in jack located on the back of the unit.
- 2. Press and hold the 🕁 Button for about 2 seconds to turn on the unit.
- 3. Turn on your audio device and place it in play mode.
- 4. Press and release the **Mode Button** to toggle the unit between iPod/Aux-in audio mode and Bluetooth mode (the **Button** is NOT lit in iPod/Aux-in mode).
- 5. Use the **Volume** +/- **Buttons** to adjust volume. You may wish to adjust the volume on your audio device, too.
- 6. When done listening, press and release the **U** Button to turn the unit off. Remember to turn off your audio device, too.

/

Using Bluetooth: Pairing Your Device

NOTE: See the iD11 Bluetooth Connection Guide for complete pairing details.

- 1. Turn on Bluetooth capability on your device and make it discoverable (see your device's instructions to add or setup a Bluetooth device).
- 2. Press and hold the Play/Pause/Pairing Button for about 2 seconds to turn the unit on in Bluetooth mode. The \$\frac{1}{2}\$ light will alternately flash blue and green while the unit attempts to pair.
- 3. "iD11" should appear in your device's list of Bluetooth devices; its status display may indicate "not paired" or "not connected". Select iD11 to connect. If your device asks for a password, enter **1234** on the keyboard, keypad or display of your device. If no device is paired within 3 minutes, the pairing attempt will stop. If this occurs, retry steps 2-3.
- 4. Once paired with a device, the \$\ \text{light will glow steadily blue.} There should be an indication on your device that pairing is complete. On some devices, you must then select "Use as Audio Device (stereo)" or similar on the device's Bluetooth menu. Once paired, your device should link to the iD11 whenever within range.

Playing Audio Via Bluetooth

Use Bluetooth mode to listen to audio streamed wirelessly from your paired iPad, iPhone, iPod or other Bluetooth device.

- 1. Press and hold the ►II \$ Button to turn on the unit in Bluetooth mode. The \$ Button light will flash as the unit searches for a previously paired device, then turn solid when a previously paired device is detected. (If unit is already ON, press the Mode Button to toggle the unit between iPod/Aux-in audio mode and Bluetooth mode (the \$ Button is lit in Bluetooth mode).
- 2. Press and release the Play/Pause/Pairing Button to play or pause audio from your Bluetooth device.

NOTE: Play/Pause only controls connected Bluetooth or docked iPad, iPhone or iPod devices. It does not control aux line-in devices.

- 3. Use the Volume +/- Buttons to adjust volume.
- 4. When done listening, press and hold the **button** for 2 seconds to turn the unit off.

Using the Speakerphone

You can use the unit as a speakerphone for a linked Bluetooth-capable phone during an incoming or active call. To make a call, dial your phone as usual. To redial the last number called (on phones that support the feature), press the \$ Button on the unit twice.

- 1. The **७ Button** will flash red and the **≯ Button** will flash green during an incoming call. When a call is received, playing music is muted to hear the ring tone.
- 2. Press the \$ Button to answer the call, or press the \$\oldsymbol{\text{B}}\$ Button to ignore it. Use the same controls for call waiting: press the \$\oldsymbol{\text{B}}\$ Button to answer and switch between calls, or press the \$\oldsymbol{\text{B}}\$ Button to ignore a new call.
- 3. Use the Volume +/- Buttons to adjust speaker volume.
- 4. When the call is completed, press the **\phi Button** to end the call and resume previous function.

Watching Videos in Landscape Mode

- 1. Remove any docked device from the unit.
- 2. Press gently on the Retracting Dock to store it inside the body of the unit.
- 3. Place your device sideways in the dock area resting against the back rest.
- 4. For Aux-in audio: Connect audio cable to the device's headphone jack to the aux in jack on the back of the unit, and press and release the **Mode Button** to access Aux-in mode (make sure the **\$ Button** is not lit, indicating iPod/Aux-in mode.
 - For Bluetooth Audio: Press and hold the >II \$ Button for 2 seconds to place unit in Bluetooth mode if unit is off, or press and release the Mode Button to toggle to Bluetooth mode (make sure the \$ Button is lit, indicating Bluetooth mode.
- 5. Play the video on your device.
- 6. Use the Volume +/- Buttons to adjust volume.
- 7. When done listening, press the **b Button** to turn the unit off.

Troubleshooting

Unit doesn't respond (no power)

• Check that all connections are correct and properly plugged in. If operating on batteries, make sure batteries are fresh and are properly installed.

Resetting the unit

If the unit does not respond properly or appears to be "frozen", you may wish to try resetting it. To do so, press and hold the + and - Buttons at the same time for 8 seconds until the unit makes a long beep. Note: Resetting the unit you erase all current settings. You will have to re-pair any Bluetooth devices.

- Make sure you have the latest firmware for your iPad, iPhone or iPod (update via iTunes if needed).
- Make sure your device is working properly.

For further information and to see the latest instructions, visit www.ihomeaudio.com/support

Consumer Product Safety Guide IMPORTANT SAFETY INSTRUCTIONS

When used in the directed manner, this unit has been designed and manufactured to ensure your personal safety. However, improper use can result in potential electrical shock or fire hazards. Please read all safety and operating instructions carefully before installation and use, and keep these instructions handy for future reference. Take special note of all warnings listed in these instructions and on the unit.

- Water and Moisture The unit should not be used near water. For example: near a bathtub, washbowl, kitchen sink, laundry tub, swimming pool or in a wet basement.
- Ventilation The unit should be situated so that its location or position does not interfere with its proper ventilation. For example, it should not be situated on a bed, sofa, rug or similar surface that may block ventilation openings. Also, it should not be placed in a built-in installation, such as a bookcase or cabinet, which may impede the flow of air through the ventilation openings.
- Heat The unit should be situated away from heat sources such as radiators, heat registers, stoves or other appliances (including amplifiers) that produce heat.
- Power Sources The unit should be connected to a power supply only of the type described in the operating instructions or as marked on the appliance.
- Power-Cable Protection Power supply cables should be routed so that they are not likely to be walked on or pinched by items placed upon or against them. It is always best to have a clear area from where the cable exits the unit to where it is plugged into an AC socket.
- Cleaning The unit should be cleaned only using a warm damp cloth. Do not use solvents, etc.

 Objects and Liquid Entry Care should be taken so that objects do not fall and liquids are not spilled into any openings or vents
- Attachments Do not use attachments not recommended by the product manufacturer.

 Lightning and Power Surge Protection Unplug the unit from the wall socket and disconnect the antenna or cable system during a lightning storm or when it is left unattended and unused for long periods of time. This will prevent damage to the product due to lightning
- and power-line surges.

 10. Overloading Do not overload wall sockets, extension cords, or integral convenience receptacles as this can result in a risk of fire or
- Damage Requiring Service The unit should be serviced by qualified service personnel when:

 A. the power supply cable or plug has been damaged.

 B. objects have fallen into or liquid has been spilled into the enclosure.
- C. the unit has been exposed to rain.
 D. the unit has been dropped or the enclosure damaged.
 E. the unit exhibits a marked change in performance or does not operate normally.

 12. Periods of Nonuse If the unit is to be left unused for an extended period of time, such as a month or longer, the power cable should
- be unplugged from the unit to prevent damage or corrosion.

 Servicing The user should not attempt to service the unit beyond those methods described in the user's operating instructions. Service methods not covered in the operating instructions should be referred to qualified service personnel.

Questions? Visit www.ihomeaudio.com or call 1-800-288-2792 Toll Free

Limited 1 Year Warranty

ithome Products, a division of SDI Technologies Inc. (hereafter referred to as SDI Technologies), warrants this product to be free from defects in workmanship and materials, under normal use and conditions, for a period of one (1) year from the date of original purchases. Should this product fail to function in a satisfactory manner, it is best to first return it to the store where it was originally purchased. Should this fail to resolve the matter and service still be required by reason of any defect or malfunction during the warranty period, SDI Technologies will repair or, at its discretion, replace this product without charge (except for a \$15.00 charge for handling, packing, return UPS/postage, and insurance). This decision is subject to verification of the defect or malfunction upon delivery of this product to the Factory Service Center listed below. The product must include proof of purchase, including date of purchase. The fee for service without proof of purchase is \$40.00. for service without proof of purchase is \$40.00.

Before returning this product for service, please first replace the batteries (if applicable) with fresh ones, as exhausted or defective batteries are the most common cause of problems encountered.

service is still required:

1. Remove the batteries (if applicable) and pack the unit in a well padded, heavy corrugated box.
2. Enclose a photocopy of your sales receipt, credit card statement, or other proof of the date of purchase, if within the warranty period.
3. Enclose a check or money order payable to the order of SDI Technologies, for the sum of \$15.00 (\$40.00 without proof of purchase).

4. Send the unit prepaid and insured, to the Factory Service Center listed below.

SDI Technologies Inc. 1330 Goodyear Drive El Paso, TX 79936-6420

Disclaimer of Warranty

Disclaimer of Warranty is valid only if the product is used for the purpose for which it was designed. It does not cover [i] products which have been damaged by negligence or willful actions, misuse or accident, or which have been modified or repaired by unauthorized persons; (ii) cracked or broken cabinets, or units damaged by excessive heat; (iii) damage to digital media players, CD's or tape cassettes (if applicable); (iv) the cost of shipping this product to the Factory Service Center and its return to the owner. This warranty is valid only in the United States of America and does not extend to owners of the product other than to the original purchaser. In no event will SDI Technologies or any of its affiliates, contractors, resellers, their officers, directors, shareholders, members or agents be liable to you or any third party for any consequential or incidental damages, any lost profits, actual, exemplary or punitive damages. (Some states do not allow limitations on implied warranties or exclusion of consequential damages, so these restrictions may not apply to you.) This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Your acknowledgement and agreement to fully and completely abide by the above mentioned disclaimer of warranty is contractually binding to you upon your transfer of currency (money order, cashier's check, or credit card) for purchase of your SDI Technologies product

© 2012 SDI Technologies, Inc. All rights reserved

Questions? Visit www.ihomeaudio.com or call 1-800-288-2792 Toll Free.

iD11-050312-A

Printed in China