iDM8 IB Size: 153mm x 120mm Printing color: Black

Jan 15, 13.


Р1



# iDM8N

portable rechargeable Bluetooth speaker



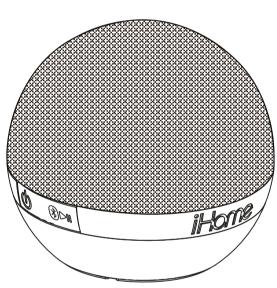

instruction manual

## iDM8N

#### Introduction

Thank you for purchasing the iHome iDM8. This product is designed to provide high quality wireless sound for your iPad, iPhone, iPod, computer, PDA or other Bluetooth audio device. Along with the included Quick Bluetooth Connection Guide this instruction booklet explains the basic operation and care of the unit. Please read them carefully and keep for future reference.

#### Maintenance

- Place the unit on a level surface away from sources of direct sunlight or excessive heat.
- Protect your furniture when placing your unit on a natural wood and lacquered finish. A cloth or other protective material should be placed between it and the furniture.
- Clean your unit with a soft cloth moistened only with mild soap and water. Stronger cleaning agents, such as benzene, thinner or similar materials can damage the surface of the unit.

TruBass is a registered trademark of SRS Labs, Inc. TruBass technology is incorporated under license from SRS Labs, Inc.

SRS WOW®, which features TruBass®, significantly improves the playback quality of audio, delivering a dynamic 3D entertainment experience with deep, rich bass and high frequency clarity for crisp detail.

#### **FCC** Information

## iDM8N

FCC ID: EMOIDM8N
FCC Radiation Exposure Statement
IC: 986B-IDM8N
This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be

co-located or operating in conjunction with any other antenna or transmitter.

This Device complies with RSS-102 of the IC Rules; Operation is subject to the following two conditions:

(1) This device may not cause harmful interference and

(2) This device must accept any interference received, including interference that may cause undesired operation.

The device meets the exemption from the routine evaluation limits in section 2.5 of RSS 102 and compliance with RSS-102 RF exposure, users can obtain Canadian information on RF exposure and compliance.

This device complies with Part 15 of the FCC Rules, operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

- Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the
  user's authority to operate the equipment.
- NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This Class B digital apparatus complies with Canadian ICES-003.


Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada

QDID:B018834

# iDM8N

### Table of Contents

Meet Your iDM8	1-2
Charging the Unit	3
Using Bluetooth:Pairing Your Device	4
Playing Audio Via Bluetooth	5
Playing Audio Via Aux	6
Internal Rechargeable Lithium-ion Battery	7
Consumer Product Safety Guide	8-9
Troubleshooting	10
Warranty	11

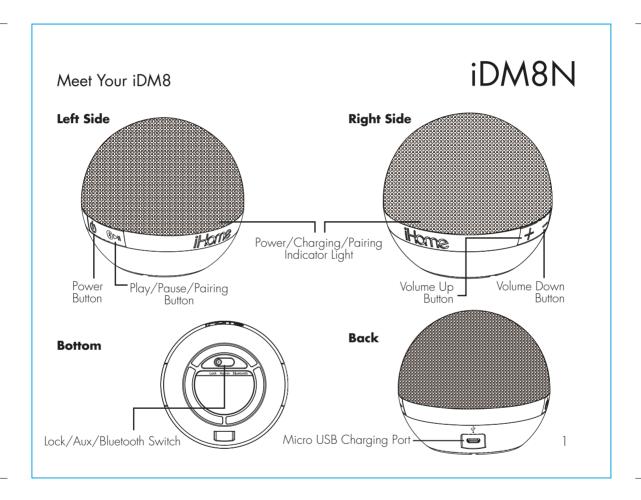

### Included

- iDM8 system
- Micro USB to USB/3.5 mm audio cable


# Travel Lock (bottom of unit)



The unit includes a travel lock position (left) to save battery life and prevent inadvertent button activation when in transit.

When in the travel lock position, all functions are disabled. Make sure the switch is in Bluetooth position (right) for use with a Bluetooth device or in Aux position (center) for use with any other audio device connected via the audio cable



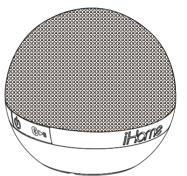




### Charging the Unit

- 1. Connect the micro USB plug to the micro USB charging port on the back of the unit.
- 2. Connect the standard USB plug end of the cable to a power USB port on a computer or other USB charging device. For first time use, charge unit for about 8 hours.
- 3. A green light flashes while the unit is charging and glows steadily when unit is fully charged. If unit is not powered on when micro USB plug is connected, the green light flashes once to indicate unit is charging.

# Using the iDM8N

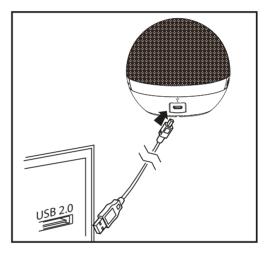

NOTE: When unit is on and not connected to power source, flashing green light indicates battery needs charging.

# Using the iDM8N

#### Using Bluetooth: Pairing Your Device

NOTE: See the iDM8 Bluetooth Connection Guide for complete pairing details.

- 1. Move the Lock/Aux/Bluetooth Switch to the Bluetooth position (right).
- 2. Turn on Bluetooth capability on your device and make it discoverable (see your device's instructions to add or setup a Bluetooth device).
- 3. To turn on the unit, press and hold the **Power Button** on the iDM8 until an amber light flashes on front of the unit and it beeps twice to indicate auto-pairing attempt.
- 4. Press and hold the Play/Pause/Pairing Button. The amber light will flash while the unit attempts to pair. On some devices, tap on the device name to begin pairing. If your device asks for a password, enter 1234 on the keyboard of your device. If no device is paired within 3 minutes, the unit will power off. If this occurs, retry steps 2-3.
- 5. Once paired with a device, the amber light will glow steadily, then turn green. There should be an indication on your device that pairing is complete. On some devices, you must then select "Use as Audio Device (stereo)" or similar on the device's Bluetooth menu. Once paired, your device should link to the iDM8 whenever within range.

# Using the iDM8N

### Playing Audio Via Bluetooth

- 1. Move the Lock/Aux/Bluetooth Switch to the Bluetooth position (right) to listen to audio streamed wirelessly from your paired iPad, iPhone, iPod or other Bluetooth device.
- 2. Press and hold the **Power Button** for 2 seconds to turn on the unit. The amber light will flash as the unit searches for a previously paired device, and then turn green when a previously paired device is detected.
- 3. Press the Play/Pause/Pairing Button to play or pause audio from your Bluetooth device. NOTE: Play/Pause only works in Bluetooth mode. It does not control aux line-in devices.
- 4. Use the Volume +/- Buttons to adjust volume.
- 5. When done listening, press the **Power Button** to turn the unit off.

# Using the iDM8N

### Playing Audio via Aux

- 1. Move the Lock/Aux/Bluetooth Switch to the Aux position (center) to listen to audio via aux in.
- 2. Connect the micro USB plug to the micro USB charging port on the back of the unit and connect the 3.5 mm audio plug to the headphone or line-out jack on your audio device.
- 3. Power on the audio device and place in play mode.
- 4. Press and hold the Power Button to turn on the unit (release when green light appears).
- 5. Use the **Volume +/- Buttons** to adjust volume. You may wish to adjust the volume on your audio device, too.
- 6. When done listening, press the **Power Button** to turn the unit off. Remember to turn off your audio device, too.

### Internal Rechargeable Lithium-ion Battery

This device uses an internal rechargeable lithium-ion battery that should last the lifetime of the device. If you suspect your battery may be dead, try charging it several times. If the battery does not recharge, please contact us for repair information

#### WARNING/DISPOSAL OF UNIT

Please do NOT attempt to change the battery yourself. If the battery has died and you do not want us to replace your battery, you should follow the disposal instructions below:

- Never dispose of used batteries/electronics with ordinary solid wastes, since they contain toxic substances.
- Always dispose of used batteries/electronics in accordance with the prevailing community regulations that apply to the disposal of batteries/electronics. If there are no local regulations concerning battery/electronics disposal, please dispose of the device in a waste bin for electronic devices.
- Many electronics retailers now recycle batteries and other electronic components at no charge. Check to see which ones in your area do so.

#### **CAUTION**

#### The battery used in this device may present a risk of fire, explosion or chemical burn if mistreated

- Never use or charge the battery if it appears to be leaking, discolored, deformed, or in any way abnormal.

  Never disassemble the unit or attempt to remove battery as that could cause leakage of alkaline solution or other electrolytic
- Always confirm that the temperature is  $5^{\circ}$ C  $-35^{\circ}$ C  $(41^{\circ} 95^{\circ} \text{ Fahrenheit})$  before you charge the battery. Leakage or deterioration of the battery may occur if this warning is not heeded.
- Never expose the battery to any liquid.
- Never expose the battery to excessive heat such as direct sunlight or fire. Never use the battery pack in an unventilated vehicle where excessive internal temperatures may be encountered.

  Always keep the battery out of the reach of infants and small children.

## Consumer Product Safety Guide

### IMPORTANT SAFETY INSTRUCTIONS

When used in the directed manner, this unit has been designed and manufactured to ensure your personal safety. However, improper use can result in potential electrical shock or fire hazards. Please read all safety and operating instructions carefully before installation and use, and keep these instructions handy for future reference. Take special note of all warnings listed in these instructions and on the unit.

- Water and Moisture The unit should not be used near water. For example: near a bathtub, washbowl, kitchen sink, laundry tub, swimming pool or in a wet basement.
- 2. **Ventilation** The unit should be situated so that its location or position does not interfere with its proper ventilation. For example, it should not be situated on a bed, sofa, rug or similar surface that may block ventilation openings. Also, it should not be placed in a built-in installation, such as a bookcase or cabinet, which may impede the flow of air through the ventilation openings.
- 3. **Heat** The unit should be situated away from heat sources such as radiators, heat registers, stoves or other appliances (including amplifiers) that produce heat.
- 4. Power Sources The unit should be connected to a power supply only of the type described in the operating instructions or as marked on the appliance.
- 5. Power-Cable Protection Power supply cables should be routed so that they are not likely to be walked on or pinched by items placed upon or against them. It is always best to have a clear area from where the cable exits the unit to where it is plugged into an AC socket.
- 6. Cleaning The unit should be cleaned only using a warm damp cloth. Do not use solvents, etc.
- 7. Objects and Liquid Entry Care should be taken so that objects do not fall and liquids are not spilled into any openings or vents located on the product.

- 8. Attachments Do not use attachments not recommended by the product manufacturer.
- 9. Lightning and Power Surge Protection Unplug the unit from the wall socket and disconnect the antenna or cable system during a lightning storm or when it is left unattended and unused for long periods of time. This will prevent damage to the product due to lightning and power-line surges.
- 10. Overloading Do not overload wall sockets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.
- 11. Damage Requiring Service The unit should be serviced by qualified service personnel when: A. the power supply cable or plug has been damaged.
  - B. objects have fallen into or liquid has been spilled into the enclosure.
  - C. the unit has been exposed to rain.
  - D. the unit has been dropped or the enclosure damaged.
  - E. the unit exhibits a marked change in performance or does not operate normally.
- 12. **Periods of Nonuse** If the unit is to be left unused for an extended period of time, such as a month or longer, the power cable should be unplugged from the unit to prevent damage or corrosion.
- 13. Servicing The user should not attempt to service the unit beyond those methods described in the user's operating instructions. Service methods not covered in the operating instructions should be referred to qualified service personnel.

Questions? Visit www.ihomeaudio.com or call 1-800-288-2792 Toll Free

## Troubleshooting

#### Unit doesn't respond (no power)

Make sure unit is completely charged. Check that all connections are correct and properly plugged in. Make sure your device is properly paired with the iDM8. Make sure the Lock/Aux/Bluetooth switch is not in the Lock (left) position (Lock disables all functions).

#### Resetting the Unit

If the unit does not respond properly or appears to be "frozen", you may wish to try resetting it. To do so, move the Lock/Aux/Bluetooth Switch to the Bluetooth position (right), then press and hold the Play/Pause/Pairing Button and the Volume – Button simultaneously for about 8 seconds until a long beep sounds. Doing so will restore the unit to default settings. NOTE: After a reset, you will need to re-pair your Bluetooth device(s).

#### Trouble pairing device/computer with iDM8

Bluetooth implementation varies depending on your computer's hardware and operating system. Please see our website for updates on pairing.

- Make sure you have the latest firmware for your iPad, iPhone or iPod (update via iTunes if needed).
- Make sure your device is working properly. Check your device's manual for details on Bluetooth pairing and linking.

For further information and to see the latest instructions, visit www.ihomeaudio.com/support

## Limited 1 Year Warranty Information

iHome Products, a division of SDI Technologies Inc. (hereafter referred to as SDI), warrants this product to be free from defects in workmanship and materials, under normal use and conditions, for a period of one (1) year from the date of original purchase. Should this product fail to function in a satisfactory manner, it is best to first return it to the store where it was originally purchased. Should this fail to resolve the matter and service still be required by reason of any defect or malfunction during the warranty period, SDI will repair or, at its discretion, replace this product without charge. This decision is subject to verification of the defect or malfunction upon delivery of this product to the Factory Service Center authorized by SDI Customer Service. The product must include proof of purchase, including date of purchase. An out-of-warranty fee for service will be charged for units that are received without proof of purchase.

Before returning this product for service, please first replace the batteries (if applicable) with fresh ones, as exhausted or defective batteries are the most common cause of problems encountered.

batteries are the most common cause of problems encountered.

If service is still required:

1. Call SDI Customer Service at 1-800-288-2792 for Return Authorization and for the address of the Factory Service Center.

2. Remove the batteries (if applicable) and pack the unit in a well padded, heavy corrugated box. SDI is not responsible for damage that occurs during shipping to the Factory Service Center.

3. Enclose a photocopy of your sales receipt, credit card statement, or other proof of the date of purchase, if within the warranty period. Also include your name and address information, a brief description for why the unit is being returned, and the return authorization number. No unit can be processed without a return authorization number.

4. Write the return authorization number on the side of the shipping package and send the unit prepaid and insured to the Factory Service Center address authorized by SDI Customer Service.

Disclaimer of Warranty
NOTE: This warranty is valid only if the product is used for the purpose for which it was designed. It does not cover (i) products which have been damaged by negligence or willful actions, misuse or accident, or which have been modified or repaired by unauthorized persons; (ii) cracked or broken cabinets, or units damaged by excessive heat; (iii) damage to digital media players, CD's or tape cassettes (if applicable); (iv) the cost of shipping this product to the Factory Service Center and its return to the owner. This warranty is valid only in the United States of America and does not extend to owners of the product other han to the original purchaser. In no event will SDI or any of its affiliates, contractors, resellers, their officers, directors, shareholders, members or agents be liable to you or any third party for any consequential or incidental damages, any lost profits, actual, exemplary or punitive damages. (Some states do not allow limitations on implied warranties or exclusion of consequential damages, so these restrictions may not apply to you.) This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Your acknowledgement and agreement to fully and completely abide by the above mentioned disclaimer of warranty is contractually binding to you upon your transfer of currency (money order, cashier's check, or credit card) for purchase of your SDI product.

© 2013 SDI Technologies, Inc. All rights reserved

Questions? Visit www.ihomeaudio.com or call 1-800-288-2792 Toll Free

iDM8-011513-A

Printed in China