


User Interface Design Specs.

iHome

iH52 Bookshelf Audio System for your iPod®

3/30/06

Remote Control Operation

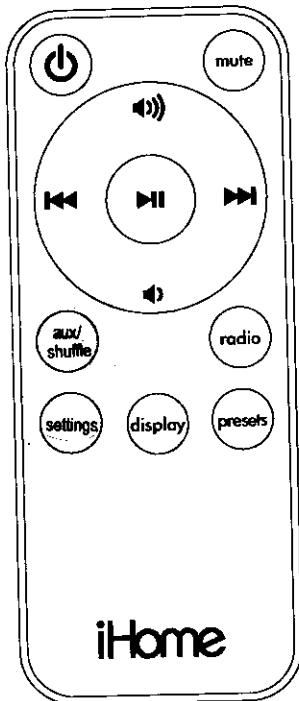

NOTE: Remote code should be effective with dip switch change.



Pressing POWER when unit is on, will turn it off.
Pressing POWER while the unit is off, will turn it on to the last mode used.

Pressing the aux/shuffle button works exactly like pressing the iPod button on the main unit.

Pressing the Radio button works exactly like on the main unit

Pressing the ◀◀ and ▶▶ buttons while in iPod mode forwards and reverses the iPod

Pressing and holding the ◀◀ and ▶▶ buttons while in iPod mode seeks forward and reverse within the playing track.

Pressing the ◀◀ and ▶▶ buttons while in any mode other than iPod mode works exactly like pressing the + and - buttons

Pressing the PLAY/PAUSE ◻◻ button while in any mode switches unit to iPod mode and begins playing iPod.

Pressing the PLAY/PAUSE button while in iPod mode and the iPod is already playing will pause the iPod

Pressing and holding the PLAY PAUSE button while in iPod mode shuts off iPod and puts in into charging mode.

Pressing the settings button works exactly like pressing the "eq/dimmer" button on the main unit.

Pressing volume up or down, works exactly like volume on main unit. Pressing volume up or down while unit is in MUTE mode will also exit MUTE mode.

Pressing the "Presets" button when in AM Radio mode will cycle between AM radio presets 1-6, starting with last one accessed.

Pressing the "Presets" button when in FM Radio mode will cycle between FM radio presets 1-6, starting with last one accessed.

Pressing MUTE while unit is on mutes volume and shows the following screen (either in extended or standard mode). Pressing MUTE again returns unit to previous volume

Pressing the DISPLAY button works exactly like on the main unit.



Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.