iWBT1 IB (English) Size: 90 x 120 mm Color: 1C + 1C (Black text on white paper) Date: Jun. 11, 2015



Model: iWBT1

# Bluetooth Clip-On Speaker

with rechargeable battery and speakerphone



instruction manual



Questions? Contact Customer Service at 1-800-288-2792

# Contents

What's Included	2
Controls & Indicators	3
Getting Started: Charging	4
Using the Universal Bracket	5
Pairing a Device	6-7
Listening to Bluetooth Audio	7
Aux-out Audio via Bluetooth	8
Using the Speakerphone	9
Consumer Product Safety	10-11
FCC Information	12
Troubleshooting	13
Warranty	14


#### Introduction

Thank you for purchasing the iHome iWBT1 Bluetooth rechargeable clip-on speaker. This product is designed for high quality wireless audio on the go.


Please read these instructions fully and save for future reference


#### What's included

- iWBT1 Bluetooth Clip-On Speaker
- USB charge cable
- Universal bracket
- Travel pouch

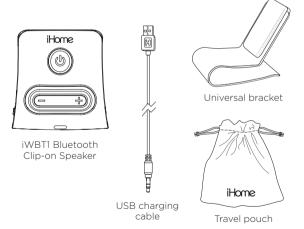

## Controls and indicators

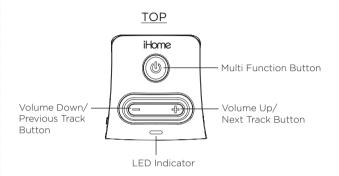

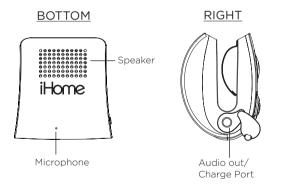


## **Getting Started**

#### CHARGING

Charge unit before use.

For first time use, charge for about 3 hours.

- 1. Move the cover from the Audio/Charging Port and connect the 3.5mm plug on the included charging cable.
- 2. Connect the USB end of the charging cable to a USB power source, such as a computer or USB adaptor. The LED indicator turns RED while the unit is charging then turns off when charging is complete. Unit can operate up to 8 hours once fully charged.

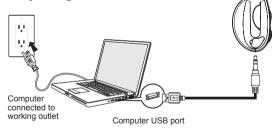


NOTE: to save battery power, the unit will power off automatically after 5 minutes if no audio is detected.

## **Getting Started**

## USING THE UNIVERSAL BRACKET

1. Insert Universal Bracket into opening slot of unit as shown

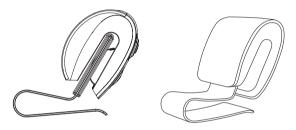

Clip unit with bracket inserted to desired flat surface (car visor, etc.) making sure controls are accessible.

## **Using Bluetooth**

#### PAIRING A DEVICE

Pairing is the set-up process to introduce your Bluetooth-capable device to the iWBT1. Once your device is paired, the iWBT1 can recognize it and you can play your audio through it.

- Turn on your Bluetooth device and make it discoverable by turning on Bluetooth mode (check in Options or Settings on device).
- Make sure unit is OFF. Press and hold the Multi-function Button for 8 seconds. The LED indicator will flash blue and red and tones will sound, indicating pairing attempt.



- 3. "iHome iWBT1" should appear on your device's Bluetooth menu. Tap to select. If prompted for a password, enter "1234".
- 4. When pairing is successful, 2 beeps will sound and the LED indicator will flash 3 times every 4 seconds indicating the iWBT1 is ready to play music. There should also be an indication on your device.

## **Using Bluetooth**

## PAIRING A DEVICE (continued)

- If no device is paired within 3 minutes the iWBT1 will default to previous mode.
- Once the iWBT1 is paired to a device, it will attempt to connect to the most recently paired device when the device is within range (about 30 feet).
- If no device is connected, press the Multi-function Button to attempt to connect to last connected device.
- To pair with other devices, follow steps above.

## LISTENING TO BLUETOOTH AUDIO

- Press and hold the Multi-function Button for 4 seconds to turn the iWBT1 ON. The LED indicator will flash blue and a tone will sound.
- Tap the Multi-function Button to play the current track on your device, and again to pause.
- Tap the or + Buttons to lower or raise speaker volume. Hold longer for previous or next track.
- 4. Press and hold the Multi-function Button for 4 seconds to turn the iWBT1 OFF. The LED indicator will flash red and a tone will sound.









## **Using Bluetooth**

#### AUX OUT AUDIO VIA BLUETOOTH



Stream audio to iWBT1 connected via audio cable to speaker

The iWBT1 allows you to play music from your paired Bluetooth device through any speaker or audio device that has a standard 3.5mm aux line-in iack.

- Connect a standard 3.5 mm audio cable (not included) from the Audio Out/Charge Port on the iWBT1 to the aux/line-in jack on the speaker.
  - Turn on the speaker and adjust volume to mid level.
- Follow directions under "Listening to Bluetooth Audio" on the preceding page to play, pause and navigate tracks. You may be able to use controls on your speaker, too.
- Press and hold the Multi-function Button for 4 seconds to turn the iWBT1 OFF. The LED indicator will flash red and a tone will sound.

# TIP: Plug in any headphone for stereo audio

#### USING THE SPEAKERPHONE

The iWBT1 allows you to answer, end and ignore calls, mute calls, transfer calls between a paired phone and the unit, and to switch between calls.

- Press and hold the Multi-function Button for 4 seconds to turn the iWBT1 ON. The LED indicator will flash blue and a tone will sound.
- To answer a call, tap the Multi-function Button.
  Tap again to end the call.
- To ignore a call, press and hold the Multi-function Button for 2 seconds
- To transfer an active call from iWBT1 to your phone, press and hold the Multi-function Button for 2 seconds. Repeat to transfer it back to iWBT1
- Call waiting: To place a current call on hold and answer a new one, double click the Multi-function Button. Repeat to switch back to the first call.
- To mute the microphone, double click the Multi-function Button. Repeat to unmute
- To adjust speaker **volume**, tap the or **+ Buttons**
- Press and hold the Multi-function Button for 4 seconds to turn the iWBT1 OFF. The LED indicator will flash red and a tone will sound

#### CONSUMER SAFETY INFORMATION

#### IMPORTANT SAFETY INSTRUCTIONS

When used in the directed manner, this unit has been designed and manufactured to ensure your personal safety. However, improper use can result in potential electrical shock or fire hazards. Please read all safety and operating instructions carefully before installation and use, and keep these instructions handy for future reference. Take special note of all warnings listed in these instructions and on the unit.

#### Water and Moisture -

- Splash-resistant cover must be properly sealed before use near water.
- Dry unit completely before opening splash resistant cover.
- Do NOT open cover if wet or in a wet environment.
- Heat The unit should be situated away from heat sources such as radiators, heat registers, stoves or other appliances (including amplifiers) that produce heat.
- Power Sources The unit should be connected to a power supply only of the type described in the operating instructions or as marked on the appliance.
- 4. Power-Cable Protection Power supply cables should be routed so that they are not likely to be walked on or pinched by items placed upon or against them.
- 5. Cleaning The unit should be cleaned only using a warm damp cloth. Do not use solvents, etc.
- Objects and Liquid Entry Care should be taken so that objects do not fall and liquids are not spilled into any openings or vents located on the product. Keep splash-resistant cover free of dirt, sand, or objects that could interfere with a proper seal.

- Attachments Do not use attachments not recommended by the product manufacturer.
- Lightning and Power Surge Protection Unplug the unit from the wall socket and disconnect the antenna or cable system during a lightning storm or when it is left unattended and unused for long periods of time. This will prevent damage to the product due to lightning and power-line surges.
- Damage Requiring Service The unit should be serviced by qualified service personnel when:
  - A. the power supply cable or plug has been damaged.
  - B. objects have fallen into or liquid has been spilled into the enclosure.
  - C. the unit has been exposed to rain.
  - D. the unit has been dropped or the enclosure damaged.
  - E. the unit exhibits a marked change in performance or does not operate normally.
- 10. Periods of Nonuse If the unit is to be left unused for an extended period of time, such as a month or longer, make sure to charge the unit before storing and periodically during storage to maintain battery.
- 11. Servicing The user should not attempt to service the unit beyond those methods described in the user's operating instructions. Service methods not covered in the operating instructions should be referred to qualified service personnel.

Questions? Visit www.ihome.com or call 1-800-288-2792 Toll Free

## FCC/IC INFORMATION

#### FCC Radiation Exposure Statement

FCC ID: EMOIWBT1 IC: 986B-IWBT1

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:

(1) This device may not cause interference, and

(2) This device must accept any interference, including interference that may cause undesired operation of the device.

Le présentappareilestconforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitationestautorisée aux deux conditions suivantes:

(1) l'appareil ne doit pas produire de brouillage, et

(2) l'utilisateur de l'appareildoit accepter tout brouillageradioélectriquesubi, mêmesi le brouillageest susceptible d'encompromettre le fonctionnement.

This device complies with Part 15 of the FCC Rules, operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and

(2) this device must accept any interference received, including interference that may cause undesired operation.

- Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- · Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help. CAN ICES-3 (B)/NMB-3(B)

The device meets the exemption from the routine evaluation limits in section 2.5 of RSS 102 and compliance with RSS-102 RF exposure, users can obtain Canadian information on RF exposure and compliance.

## Troubleshooting

## Unit doesn't respond (no power)

- Check that unit is fully charged.
- Make sure your device is properly paired with the iWBT1.
- · Make sure the Power is ON.

#### Resetting Bluetooth

If Bluetooth function is not operating properly, you may wish to reset Bluetooth. To do so, *press and hold* the **Power Button** for 10 seconds. You will hear a long high tone. You will need to re-pair your paired devices.

#### Trouble pairing device/computer with iWBT1

Bluetooth implementation varies depending on your device's hardware and operating system. Please see our website for updates on pairing.

- Make sure you have the latest firmware for your device.
- Make sure your device is working properly. Check your device's manual for details on Bluetooth pairing and linking.
- When you power ON the speaker, it will automatically link with the last previously paired Bluetooth device if the device is still within range (approx.30 feet). To pair with a different device press and hold the Talk/Pairing/Play/Pause Button for 2-3 seconds.

#### LIMITED 1 YEAR WARRANTY

iHome Products, a division of SDI Technologies Inc. (hereafter referred to as SDI), warrants this product to be free from defects in workmanship and materials, under normal use and conditions, for a period of one (1) year from the date of original purchase

Should this product fail to function in a satisfactory manner, it is best to first return it to the store where it was originally purchased. Should this fail to resolve the matter and service still be required by reason of any defect or malfunction during the warranty period, SDI will repair or, at its discretion, replace this product without charge. This decision is subject to verification of the defect or malfunction upon delivery of this product to the Factory Service Center authorized by Customer Service.

If service is required, please call Customer Service at 1-800-288-2792 to obtain a Return Authorization Number and shipping instructions.

#### Disclaimer of Warranty

NOTE: This warranty is valid only if the product is used for the purpose for which it was designed. It does not cover (i) products which have been damaged by negligence or willful actions, misuse or accident, or which have been modified or repaired by unauthorized persons; (ii) cracked or broken cabinets, or units damaged by excessive heat; (iii) damage to digital media players, CD's or tape cassettes (if applicable); (iv) the cost of shipping this product to the Factory Service Center and its return to the owner.

This warranty is valid only in the United States of America and does not extend to owners of the product other than to the original purchaser. In no event will SDI or any of its affiliates, contractors, resellers, their officers, directors, shareholders, members or agents be liable to you or any third party for any consequential or incidental damages, any lost profits, actual, exemplary or punitive damages. (Some states do not allow limitations on implied warranties or exclusion of consequential damages, so these restrictions may not apply to you.) This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Your acknowledgment and agreement to fully and completely abide by the above mentioned disclaimer of warranty is contractually binding to you upon your transfer of currency (money order, cashier's check, or credit card) for purchase of your SDI product.

> © 2015 SDI Technologies, Inc. All rights reserved Questions? Visit www.ihome.com or call 1-800-288-2792 Toll Free