

Zenith Audio Products Limited Warranty

Zenith Audio Products, Division of SDI Technologies Inc., warrants this product to be free from defects in workmanship and material under normal use and conditions for a period of One Year Parts/90 Days Labor from the date of original purchase.

Should service be required by reason of any defect or malfunction, it is best to first return this product and all parts there of, to the store where it was originally purchased. If the product still needs service and is during the first 90 days of the warranty period, Zenith Audio Products will repair, or at its discretion, replace this product with proof of purchase, without charge (except for a \$5.00 charge for handling, packing, return UPS/postage and insurance). After 90 days the cost of labor is the customer's responsibility. The fee for service after the warranty period or without proof of purchase is \$10.00.

Before returning this product for service, replace the batteries (if applicable) with fresh ones, because exhausted or defective batteries are the most common cause of problems encountered.

If service is still required:

1. Remove the batteries (if applicable) and pack the unit in a well padded, heavy corrugated box.
2. Enclose a photocopy of your sales receipt, credit card statement, or other proof of the date of purchase, if within the warranty period.
3. Also enclose a check or money order payable to the order of Zenith Audio Products, for the sum of \$5.00 (or \$10.00 after the warranty period).
4. Send the unit prepaid and insured, to the Factory Service Center listed below.

Repair Dept.
 Consumer Repair Department
 Zenith Audio Products
 A Licensee of Zenith Electronics Corporation
 8889 Gateway West
 El Paso, Texas 79926

Please Note: This warranty is valid only in the United States of America. Any applicable implied warranties are also limited to One Year Parts/90 Days Labor, and Zenith Audio Products will not be liable for consequential damages. (Some states do not allow limitations on implied warranties or exclusions of consequential damages, so that these restrictions may not apply to you). This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state.

Serial No:

You may wish to make a record of the Serial No. of this product. You will find the Serial No. on the back or bottom of the unit.


Z139 - 20000120-0



Printed in China

zenith Instant Weather Alarm Clock Radio


OWNER'S MANUAL AND WARRANTY

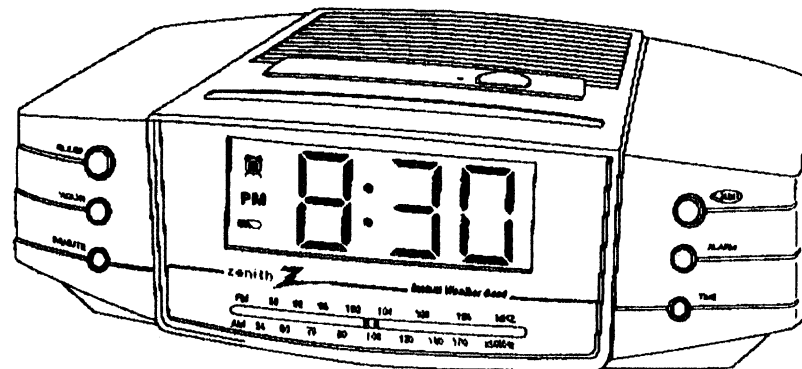

•Questions?
 Call the Zenith Audio Products Consumer Service Hotline
 1-800-888-4491
 Para asistencia o instrucciones en Español llamar al 1-800-888-4491

Z139

Controls and Indicators

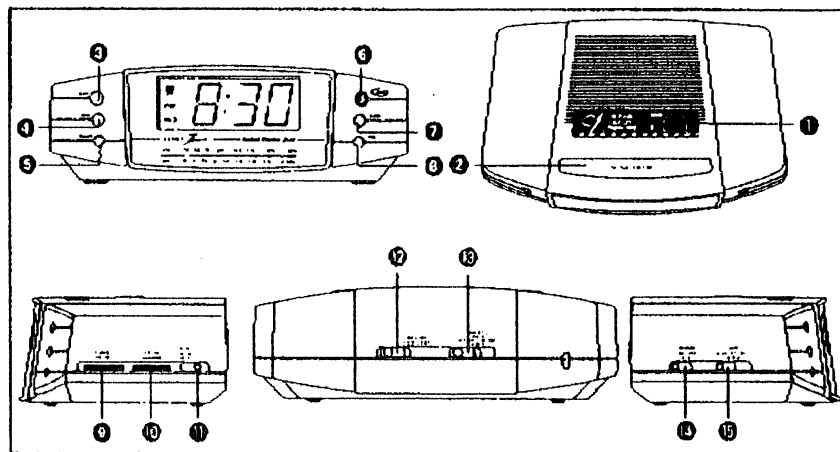

Top Panel

1. On/Off Weather Button
2. Snooze/Sleep Off Button

Front Panel

3. Sleep Button
4. Hour Button
5. Minute Button
6. Alarm Reset Button
7. Alarm Set Button
8. Time Set Button

Right Side Panel

9. Tuning Dial
10. Volume Control
11. Band Switch


Back Panel

12. Weather Selector
13. Wake to Switch


Left Side Panel

14. Dimmer Switch
15. Mode Switch

Display

 Alarm "on" Indicator

PM PM Indicator

 Battery Low Indicator

Dimmer Switch

Set the Dimmer Switch **14** on Hi or Low depending on the brightness in your room.

Setting the Clock and Alarm Time

Setting the Clock Time

1. Press and hold the Time Set Button **8**, then press the Hour Button **4** until the current hour is displayed. Remember to set the correct AM or PM. The PM Indicator will light up in the lower right corner of the display.
2. Press and hold the Time Set Button **8**, then press the Minute Button **5** until the correct time is displayed.

Setting the Alarm Time

1. Press and hold the Alarm Set Button **7**, then press the Hour Button **4** until the correct hour is displayed. Remember to set the correct AM or PM. The PM Indicator will light up in the lower right corner of the display.
2. Press and hold the Alarm Set Button **7**, then press the Minute Button **5** until the correct alarm time is displayed.

Instant Weather Broadcast

1. Press the **On/Off Weather Button** ①. The Instant Weather LED will light to indicate that the weather band has been turned on.
2. Set the **Weather Channel Selector** ⑫ to the number position that has the best reception in your living area. They are as follows:

1 - 162.475MHz	2 - 162.450MHz	3 - 162.400MHz
4 - 162.425MHz	5 - 162.525MHz	6 - 162.500MHz
7 - 162.550MHz		
3. Fully extend the FM wire antenna and adjust the unit's direction for the best possible reception.
4. Adjust the **Volume Control** ⑩ as desired.
5. When finished listening, press the **On/Off Weather Button** ①. The Instant Weather LED will not remain lit, indicating that the weather band has been turned off.

Note: While listening to the weather, the Alarm, Sleep, and Radio will not play.

Important Information Regarding Weather Broadcasts

- Weather band broadcast transmission is a very low power and is not the same as the transmission of FM radio broadcasts.
- Weather band stations are located in specific geographic locations and terrain, which means the area in which you live may not be within the range of such a station. If you receive AM and FM stations without a problem, but cannot receive weather band information, it means you are beyond the range of the nearest weather station, not that your radio is defective.
- To help improve reception, move the antenna or rotate the radio until you get the best reception. Reception will also vary from daytime to night time.


Battery Backup

Note: After installing the Battery Backup and reading through the Maintenance below, plug the AC line cord correctly into a wall outlet. When the unit is connected to AC power for the first time the display may blink.

If the battery is installed and a power failure occurs or the AC cord is accidentally disconnected, the display will not remain lit, but the current time and alarm time settings will be temporarily maintained.

If the battery has not been installed or is dead, when the AC power resumes, the display will flash and you must reset the time and alarm time settings.

1. Turn the unit upside down and place it gently on a flat surface.
2. Open the battery compartment cover and install a 9 volt battery. (We recommend using an alkaline battery for longer life).
3. Close the battery compartment door and turn the unit right side up.

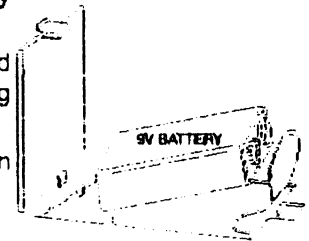

Battery Low Indicator

A **Battery low icon** is located in the lower left corner of the display. When the icon lights up, it is time to replace the 9 volt battery.

Maintenance

- Place the unit on a level surface, away from direct sunlight, and excessive heat.
- Protect your furniture when placing the unit on a natural oil or lacquered finish. A cloth or other protective material should be placed between the unit and the furniture.
- Clean your unit with a soft cloth moistened only with mild soap and water. Stronger cleaning agents can mar the surface of the case.

A Consumer Guide to Product Safety (Continued)

10. **Damage Require Service** - The unit should be serviced by qualified service personnel when:
- The power supply cord or plug has been damaged.
 - Objects have fallen into or liquid has been spilled into the enclosure.
 - The unit has been exposed to rain.
 - The unit has been dropped or the enclosure damaged.
 - The unit does not appear to operate normally or exhibits a marked change in performance.
11. **Servicing** - The user should not attempt to service the unit beyond that described in the user's operating instructions. All other servicing should be referred to qualified service personnel.
12. **Antenna** - Do not connect to an external antenna.
13. If you have any questions, call SDI Technologies Inc., A licensee of Zenith Electronics Corporation, 1-800-888-4491.

Listening to the Radio

- Slide the **Mode Switch ⑤** to ON. The Dial Pointer will light.
- Set the **Band Switch ①** to AM or FM.
- Rotate the **Tuning Dial ⑨** to the station you prefer and adjust the **Volume Control ⑩** if needed.
- When you are finished listening, slide the **Mode Switch ⑤** to OFF.

Alarm Operation

Wake to Radio, Weather or Buzzer

- Set the alarm time as indicated in **Setting the Alarm Time**.
- Slide the **Mode Switch ⑤** to ALARM. The alarm bell icon will light in the upper left corner of the display. The alarm is now set to automatically turn on at the time you selected.

Note: Please make sure that the **On/Off Weather Button ①** is off and the LED is not lit, otherwise the alarm will not turn on at the time selected.
- If you choose to wake to radio, slide the **Wake to Switch ⑬** to RADIO. Make sure you have used the **Band Switch ①** and **Tuning Dial ⑨** to find the station you wish to wake to. Also, use the **Volume Control ⑩** to set the desired "wake to" volume level. (See **Listening to Radio**).
- If you choose to wake to weather, slide the **Wake to Switch ⑬** to WEATHER. Make sure you have selected the desired weather station with the **Weather Station Selector ⑫**. Also, use the **Volume Control ⑩** to set the desired "wake to" volume level. (See **Instant Weather Broadcast**).
- If you choose to wake to buzzer, slide the **Wake to Switch ⑬** to BUZZER. The buzzer alarm is equipped with a "Gentle Wake" alarm system. When the alarm turns on it will begin at a low level and gradually become louder until it reaches it's maximum volume level or has been turned off.

Thank you ... for selecting this Zenith Audio Products Instant Weather Alarm Clock Radio. It has been designed, engineered, and manufactured to meet the highest standards of quality and performance, and to provide you with many years of enjoyment and trouble free operation with a minimum of care. This Owner's Manual explains all the features and operations of your new Clock Radio. Please read it before using your system and keep it handy for future reference. Once again, thanks for choosing ZENITH AUDIO PRODUCTS.

<div style="display: inline-block; text-align: center; border: 1px solid black; padding: 2px;"> CAUTION RISK OF ELECTRIC SHOCK. DO NOT OPEN. </div>
<p>CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.</p> <p>WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.</p>
<div style="display: flex; align-items: center;"> <p>This symbol is intended to alert the user of the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.</p> </div>
<div style="display: flex; align-items: center;"> <p>This symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.</p> </div>

The symbols above are located at the bottom of the cabinet.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.