

OWNER'S MANUAL

SEARS



 
MODEL NO.
308.730 980

- safety rules • assembly care • replacement parts

THREE ROOM DOME TENT


CAUTION: READ ALL INSTRUCTIONS CAREFULLY BEFORE USE AND RETAIN THEM FOR FUTURE REFERENCE.

FOR CONSUMER SERVICE, CALL 1-800-325-8368

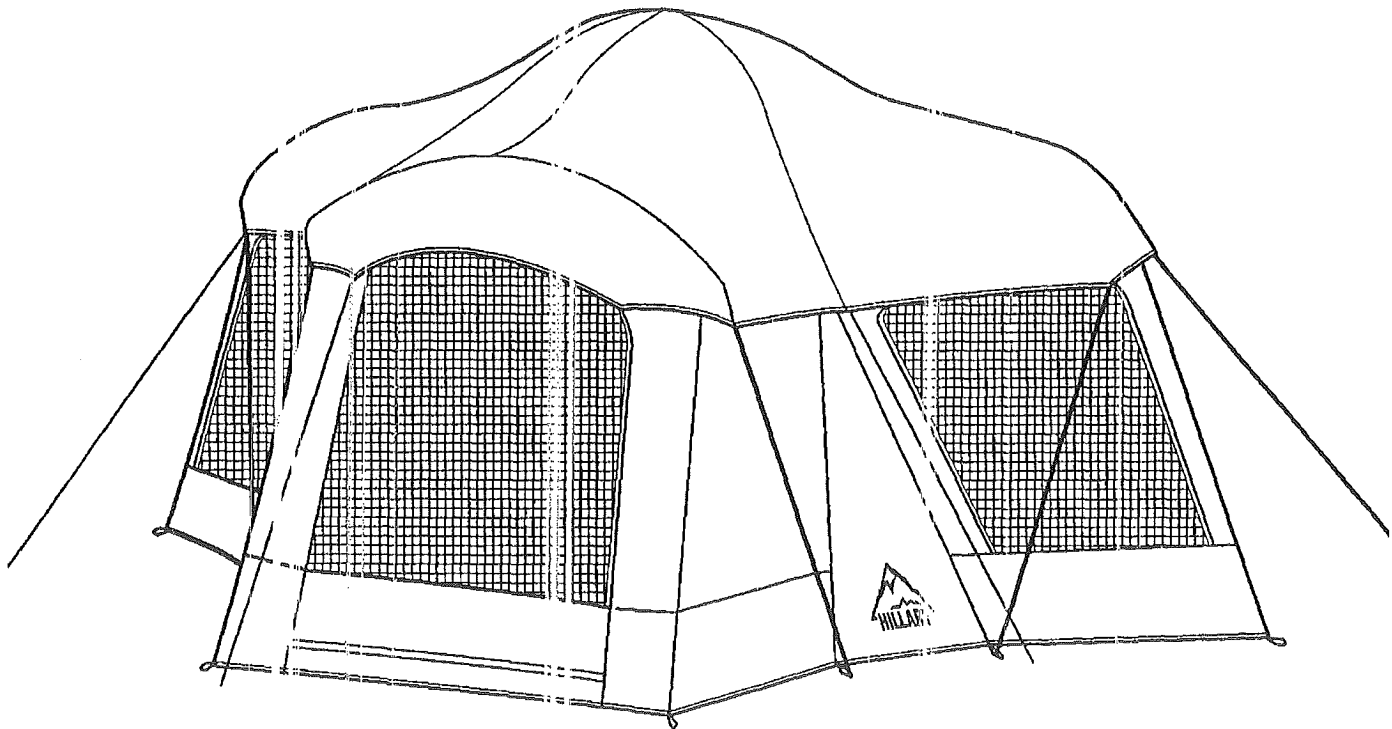

REPLACEMENT PARTS

 Congratulations on your purchase of a Sir Edmund Hillary tent,
an exclusive brand of Sears.

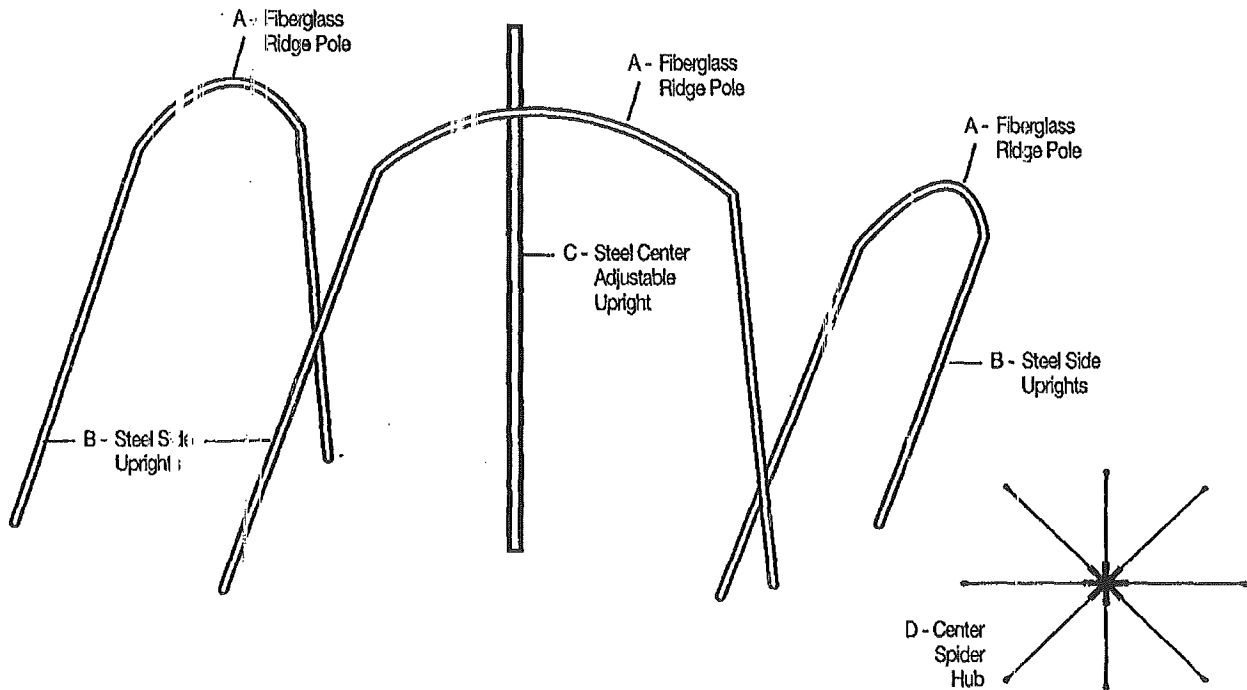

HOW TO ORDER REPLACEMENT PARTS FOR YOUR NEW DOME TENT

The Model Number for your tent will be found on the convenience pocket sewn on the inside of the tent. Always mention the Model Number in all correspondence regarding your Sears Tent and when ordering replacement parts.

For questions concerning your tent or to order replacement parts, call 1-800-325-8368.

WHEN ORDERING REPAIR PARTS, ALWAYS GIVE THE FOLLOWING INFORMATION:

1. Part Number
2. Parts Description
3. Model Number
4. Name of Item

KEY NO.	DESCRIPTION	MODEL NO. 730980	QUANTITY REQUIRED
		PART NO.	
A	Fiberglass Ridge Poles	02-0060	3
B	Steel Side Uprights	02-0061	6
C	Steel Center Adjustable Upright	02-0062	1
D	Center Spider Hub	02-0063	1
	Complete Frame	73098FR	1
	Replacement Fly	73098FLY	1
	Wire Hangers	73098WH	3
	Carry Bag	73098BAG	1
	Divider Curtain	73098DC	2


REVISED ASSEMBLY INSTRUCTIONS

IMPORTANT: We advise you to assemble the tent once before going camping to become familiar with the assembly of the tent. For this model, it is recommended two people be involved in the set up.


NOTE: Please look at the replacement parts diagram to see how your frame is assembled.

- To prolong the life of the tent floor, select a level, clean area for the campsite.
- To prevent damage to the zipper, unzip the doors, prior to tent set-up, to allow air to enter the tent.
- To improve the weather resistance of your tent, it is advisable to use seam sealer to coat all exposed seams. You should apply only to the underside of the fly and inside seams of the tent. If applied to the outside of seams, discoloration of your tent may occur. Seam sealer is available at the camping section of your local Sears store.
- For your convenience and improved tent functionality, we have developed a self-contained storm flap pocket. Simply unzip the storm flaps covering the windows and doors and drop into the pocket that has been formed between the bottom of the storm flap and the mesh window.


STEP 1: Spread tent out flat, floor side down. Unzip doors. Stake down the main tent room first, by inserting the metal pin stakes through the rings located at the base of the main tent room. Stake down by hammering each stake into the ground at a 45° angle, making certain to pull the main room floor out tight, so there are no wrinkles in the inside tent floor. Continue to stake down the tent by inserting the plastic tent stakes through the webbing stake loops at the corners of the side rooms. Make certain the side room floor is pulled out even and taut.

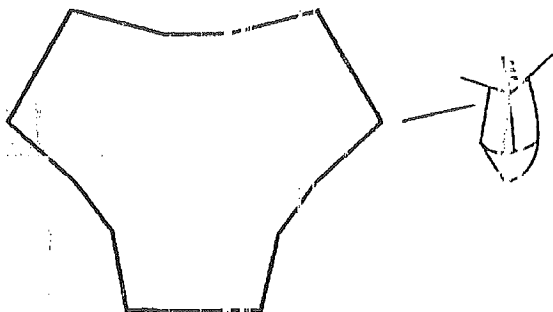


STEP 3: Insert the knob on the underside of the center hub into the reinforced hole at the center roof of the tent. The fiberglass sections should be extended to hold the center roof of the tent in place.

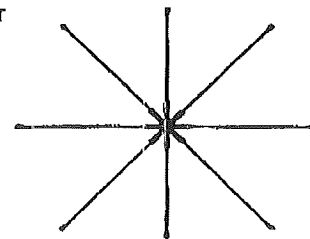

STEP 4: Locate the three fiberglass ridge poles (Key A). Extend each pole by inserting the fiberglass sections into the metal ferrules. Each ridge pole will have a plastic elbow joint on each end. Slide one ridge pole through each of the pole sleeves located on the ends of the tent side rooms. Attach small hooks at each roof corner to the holes in each of the plastic elbow joints. Flexing the fiberglass will be necessary.

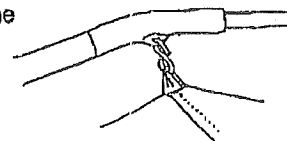

STEP 2: Locate the center spider hub (Key D). Go to the center roof of the tent and insert one of each of the eight fiberglass sections, attached to the center hub through the tent sleeves at the very center roof of the tent. The flat, smooth side of the center hub should be UP. Once the fiberglass sections are inserted into the sleeves, the fiberglass sections should be inserted and seated into the center hub.

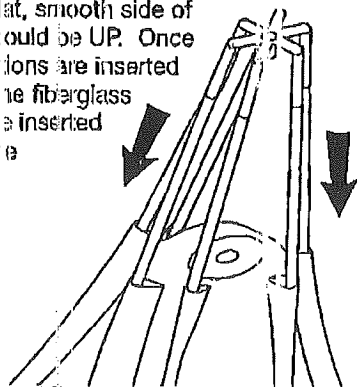


STEP 5: Unfold the fly and place over the tent.

STEP 6: Locate the six steel side uprights (Key B). Join the upper end of each upright, which will have a metal ring attached for the fly attachment near the end, to the plastic elbow joints on each of the fiberglass ridge poles. With one person on either side of the tent, raise the side rooms by raising the side upright poles and adjusting until the walls are taut. The open ends of the steel poles should rest upon the ground. Repeat this step with the remaining side rooms and steel side upright poles.

ASSEMBLY INSTRUCTIONS

STEP 7: Attach the hooks on the fly corners to the metal rings on each of the side uprights. Fasten the Velcro fasteners, which are sewn to the underside of the fly corners to each of the side uprights.

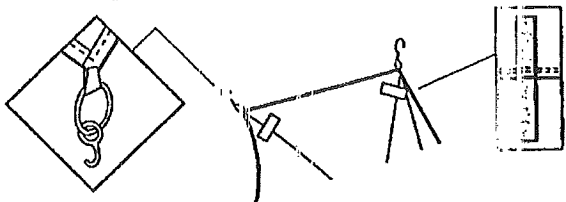


Divider curtains are included which can be used to divide your tent into separate rooms for privacy. Simply attach to the loops located at the inside center and side walls. We have also included wire hangers, which can be attached to the center pole for hanging plants, flashlights, etc.

NOTE: To take down tent, follow steps above in the reverse order. Be sure to leave doors and windows unzipped. Place stakes and wire hangers into the stake bag and poles into pole bag, which are provided. The tent should be folded into equal parts toward the center of the tent to distribute the bulk. Fold fly and lay on top of tent. Start a small tight roll, the width of your carry bag. Roll tent toward door to allow air to escape. Once rolled, secure with strings or rope. Slide tent and stake bag into carry bag. Make sure tent is clean and dry before storing.

STEP 8: Extend the remaining steel center adjustable upright and enter the tent. Carefully place the open, upper end of the steel center pole over the knob of the center spider hub. Adjust the center pole to the desired tent center height.

STEP 9: There are guy rope loops located on the fly of the tent. Tie a guy rope to each of these webbing loops. Make a loop at the opposite end of the guy rope by using the plastic slider and place loop over tent stake. Stake guy rope to the ground with the extra stakes that are included. Adjust slider to make guy rope tight.

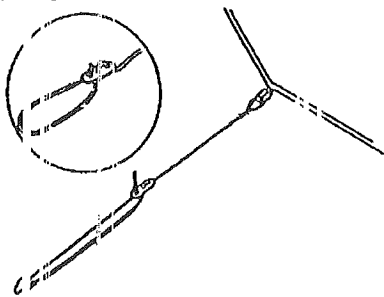

Tent should appear as shown.

