Bluetooth CarKit

SEEFreeKit

User's Manual



SEECODE Co., Ltd. 3rd Floor, amin Bldg., 110-1, Yangjae-dong, Seocho-gu, Seoul 137-891, Korea

http://www.seecode.com

+82-2-552-2620

Features

- Superior noise suppression
- Excellent echo cancellation
- Superior full duplex
- Digital volume control
- Microphone / Speaker mute
- Easy installation
- Quick connection to Bluetooth phone
- Pairable up to 3 Bluetooth phone
- Support for the Bluetooth Headset profile

Specifications

- Rated input voltage : 12Vdc

- Operating voltage: 12V - 24V

- Operating current : 30mA - 250mA

- Speaker output power : max 1 Watt

- Operating temperature: -10 to 60

How to install

Just insert CarKit to Cigar jack of your car.

Part Description



- Volume Up : Used for volume up

- Volume Down : Used for volume down

- Send : Used for calling, Answering, Voice call, Audio transfer, etc.

- End : Used for entering pairable mode, Hanging up a call

- LED Red : After impressig power, this lamp becomes on and indicates a sta te

which is ready

(See LED indication section below for additional information)

- LED Blue: Used for showing a state the line is busy

(See LED indication section for additional information)

- Mic input : A port for connecting a microphone.

(A microphone outside is used for the handsfree)

- Earphone : Insert a earphone for a private call.

Power On

- 1. After installing the CarKit to cigar jack, start the car to impress power.
- 2. After impressing power, the Carkit plays a melody notifying it is booted.
- 3. If there is at least one device registered(paired) the Carkit will operate in the Ready mode in which mode you can connect the Carkit and the registe

red phone by pressing SEND button or by using phone's bluetooth connect function. Otherwise (there is no device registered in the Carkit's phone data base) it will operate in the Pairable mode - in which mode you can register the phone into the CarKit's phone database. (See LED indication section fo r additional information)

Power Off

1. When car's operation is off or pulling out the CarKit from the cigar jack the power will become down automatically.

Pairing

- 1, Press END button for more than 5 secs.
- 2. It will notify it is in pairable mode with a melody.
- Flickering Red and Blue LED at a sec interval by turns means that it is op erating as pairable mode. (See LED indication section for additional informati on)
- 4. Register the CarKit to the Bluetooth enabled phone while the CarKit is in pairable mode.
- 5. When registration is completed, a melody notifying registration is completed will be played.
- 6. Requested Pin No. required while registering is 0000.
- 7. Example registering process :
 - 1) Check if the CarKit is in the pairable mode.
 - 2) If it is not in the pairable mode, you should press the END button for m ore than 5 seconds to make the CarKit to enter the pairable mode.
 - 3) Register with the Bluetooth enabled phone.
 - Register using a Nokia phone:
 Access the menu and scroll to "Bluetooth" → Select "Search for audio accessories" → The display reads "SEEFreeKit 1.0" → Press "Select" to make the connection → The display reads "Enter passcode" → type "0000" → Press "Select"
 - Register using a Samsung phone :
 Select 'Menu No.6' → Select 'Environment configuration' → Select 'Register device' → The display reads 'XXXXXX' → press Menu No. 2' →
 The display reads "SEEFreeKit 1.0" → Press 'Confirm' → Type "0000"
 → Wait until you can read 'Ready to connect'

- Register using a Ericsson phone :

```
Connect → Bluetooth → Extras → Bluetooth → Add devices → Phone initiate → Headset → The display reads 'SEEFreeKit 1.0' → Add to d evices → Type "0000" → You can read "Pairing succeeded"
```

Establishing connection between CarKit and Mobile phone

If you want to establish a connection between the Carkit and the mobile phone, when there is no connection, you could do the following:

- 1. Press SEND button for less than one second
- 2. The carkit will try to connect to the paired mobile phone.
- 3. When connection is established, you can see that with your mobile ph one's display.

Making a call

(When an active call does not exsist)

1, Press SEND button for less than one second.

Hanging up a call

(When an active call exsists)

1. Press the END button.

Answering an incomming call

1. Press SEND or END.

Transferring audio between the phone and the CarKit

- Phone → CarKit: Press SEND while there is an active call.
- CarKit → Phone : Refer to your phone's manual

Muting speaker / microphone

- Mic mute :
 - 1. Pressing Volume Up button and Volume Down button simultaneously toggl es Mute mode.
 - 2. A melody notifying mute mode rings once per 5 seconds.
- Speaker mute :
 - 1. Adjust the volume to level 0.

Volume Up / Down

- 1. Adjust volume with the buttons located on the side of the CarKit.
- 2. If you press the Volume Up or Down button for a while, volume will be c hanged continuously at the interval of 0.2 second.
- 3. There are 8 volume levels.

LED Indications

State	Red LED	Blue LED	Blinking interval
Waiting for connection	Don't care	Blink	Blinks once per 5 sec
Connecting (initiated by Carki	Don't care	Blink	Blinks once pre 0.5 sec
t)			
Connected	Don't care	Blink	Blinks once per 5 sec
Active call exists	Don't care	ON	
Ring indication (there is an incomming call)	Blink	Blink	Red and Blue lights alternatively for interval of 0.2 sec
Pairable mode	Blink	Blink	Red and Blue lights alternatively for interval of 1 sec

note: When the volume level is 0, the Red LED is on whatever the CarKit's sta te is.

When the melodies generated

- 1. Power on
- 2. Start pairing
- 3. End pairing
- 4. Ring indication
- 5. SEND Button pushed
- 6. Volume Up / Down button pushed
- 7. Mic mute enabled.

Notice: The changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

IMPORTANT NOTE: To comply with the FCC RF exposure compliance requirements, no change to the antenna or the device is permitted. Any change to the antenna or the device could result in the device exceeding the RF exposure requirements and void user's authority to operate the device.