

**SEECODE CO.,LTD**

Rm.308, 1st Woorim E-biz Center, 170-5, Guro-dong, Guro-gu, Seoul, Korea  
A/S center : +82-2-853-3194~5

**ENGLISH**

# Bluetooth® PTT General



[www.seecode.com](http://www.seecode.com)



 **Bluetooth**    **RoHS**

**PTT FULL KIT**



# Contents

Product overview .....	4
In the package .....	5
Part description .....	6

## How to use Bluetooth PTT Full Kit

Charging .....	7
Power on / off .....	8
Pairing .....	9
Use as walkie-talkie mode .....	10
Use as Phone mode(TRS/PTT) .....	10
When any device works abnormally .....	11

## How to use Bluetooth Headset in separate

Pairing .....	12
Making a call .....	13
Answering a call .....	13
Ending a call .....	13
Rejecting a call .....	14
Volume control .....	14
Transferring a call .....	14

## Appendix

Precautions for safety .....	15
Specifications .....	16
Declaration of confirmation .....	17
warranty .....	18

## Product overview

Thank you for choosing Seecode **Bluetooth PTT Full Kit**. This device connect your non-Bluetooth TRS/PTT Phone & two-way radio to **Bluetooth Headset** without wire and let you more comfortable to use TRS/PTT Phone & two-way radio.

You can place heavy phones on the belt or in the bag and just need to wear **Bluetooth headset** and hold **PTT Remote** control instead. This device removes inconvenience and danger especially for construction site, industrial field, transportation business, police activity, guard service, etc.

 
To use with mobile phone in the car, home and office

You can use **Bluetooth Headset** with general mobile phone in separate. You shall pair SCM-711 with your mobile phone. Please refer to manual for details.


## In the package



Bluetooth headset  
(SCM-711)



PTT Dongle  
(SHD-612)

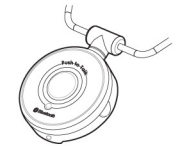 


PTT Remote Control  
(SHP-612)




User's Manual



 Charging Adapter



Multi-charging jack

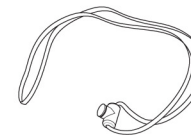 


Necklace




Velcro

## Part description

 
### SCM-711 (Bluetooth Headset)

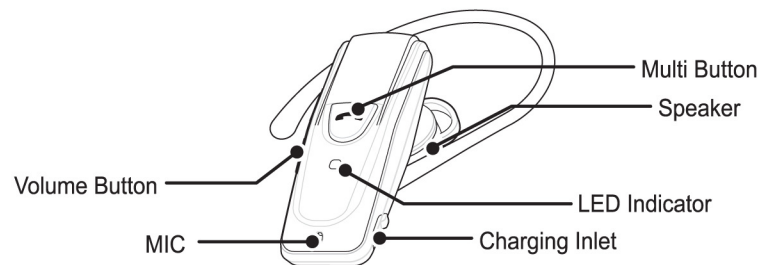

### SHD-612 (PTT Dongle)

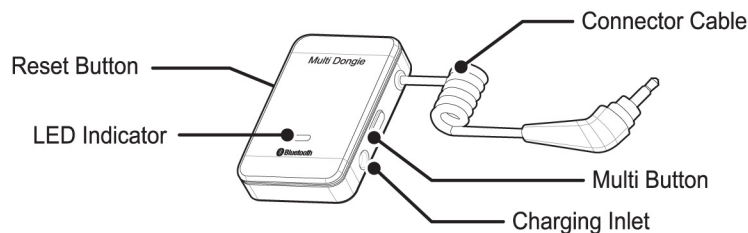 

### SHP-612 (PTT Remote Control)

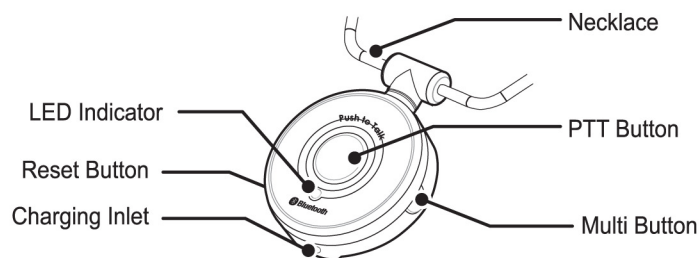 

## How to use Bluetooth PTT Full Kit

This device connect your non-Bluetooth TRS/PTT Phone & two-way radio to **Bluetooth Headset** without wire and let you more comfortable to use TRS/PTT Phone & two-way radio.

## Charging

**Bluetooth Headset, PTT Dongle and PTT Remote Control** have a built-in battery and need to fully charged before you use.

1. You can charge **Bluetooth Headset, PTT Dongle and PTT Remote Control** at the same time with Multi Charging Jack and Charging Adapter.

While charging, the LED turns on and it turns off when charging is completed.

2. The charging time is less than 3 hours.

 **Tip** All devices are working normally while charging and you could use them.



#### Low Battery State

Bluetooth Headset : Blue LED flashes twice at 1 minute interval and beep sound  
PTT Remote Control : Red LED flashes at a 10 seconds interval  
PTT Dongle : Blue and Red LED flashes at 10 seconds interval



**notice**

Do not use other charger except the supplied charger.  
It may cause a trouble and damage.

## | Power on / off |

Turning On	Button Action	LED State
Bluetooth Headset	Press 2 seconds	Blue LED turns on for 1 second and turns off
PTT Remote Control	Press 2 seconds	Red LED flashes 5 times
PTT Dongle	Press 2 seconds	Blue LED flashes 5 times

Standby	Button Action	LED State
Bluetooth Headset	X	Blue LED flashes at a 3 second interval
PTT Remote Control	X	Red LED flashes at a 5 second interval
PTT Dongle	X	Blue LED flashes at a 5 second interval

Turning Off	Button Action	LED State
Bluetooth Headset	Press 4 seconds	Blue LED turns off / Blue light remains on until Multi Button is released
PTT Remote Control	Press 4 seconds	Red LED turns on for 1 second and turns off
PTT Dongle	Press 4 seconds	Blue LED turns on for 1 second and turns off

## | Pairing |

Turning On	Button Action	LED State
Bluetooth Headset	As power off, press 6 seconds	Blue LED rapidly flashes (pairing standby)
PTT Remote Control	As power off, press 6 seconds	Red LED flashes 5 times continuously and rapidly flashes (pairing standby)
PTT Dongle	As power off, press 6 seconds	Blue LED flashes 5 times continuously and rapidly flashes (pairing standby)

- When pairing standby mode, **PTT Dongle** register **Headset** and **PTT Remote Control** automatically. (Recommend to turn on **PTT Dongle** at last)
- When pairing failed, please proceed from the first step.
- Once pairing completed, you don't need to pair any more and just need to press Multi Button once of Headset & **PTT Remote Control**.

Paired Standby	Button Action	LED State
Bluetooth Headset	X	Blue LED flashes at a 3 second interval
PTT Remote Control	X	Red LED flashes twice at a 5 second interval
PTT Dongle	X	Blue LED flashes three times at a 5 second interval