



**WIRELESS MICROPHONE
SYSTEM**

**INSTRUCTION
MANUAL**


SEKAKU® AW-86HC(D)/88HC(D)

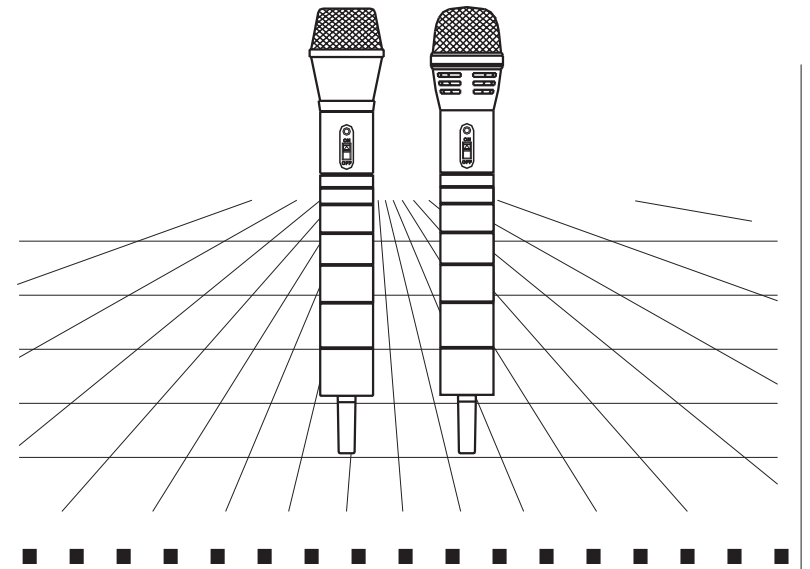

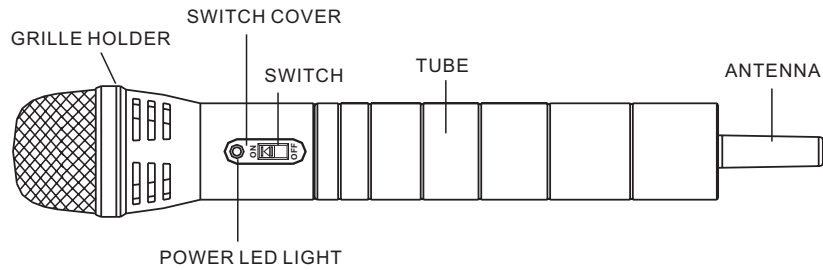

BATTERY INFORMATION:

NOTE: Make sure the power switch is in the "OFF" position when changing or installing new battery. Average life on an alkaline battery is 6-8 hours. Be sure to use good quality long life 9V alkaline battery only.

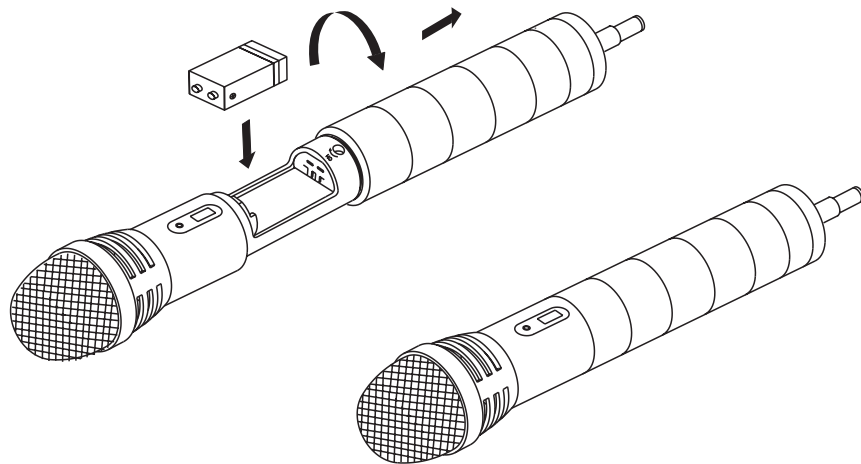

1. This microphone has a 3-level power switch design.
2. In using first turn on the receiver and then the transmitter.
3. New battery the power light is in "OFF".
The light is "ON". It indicates the battery needs to be replaced.
4. Remember to turn the switch "OFF".
When the microphone is not in use in order to save power. In "STAND-BY" set the switch to the center.

SAFETY INSTRUCTIONS



CAUTION: To reduce the risk of electrical shock, do not remove the cover (or back) .No user serviceable parts inside; refer servicing to qualified personnel.

WARNING: To reduce the risk of fire or electrical shock, do not expose this appliance to rain or moisture.



This symbol, wherever it appears, alerts you to the presence of uninsulated dangerous voltage inside the enclosure - voltage that may be sufficient to constitute a risk of shock.



This symbol, wherever it appears, alerts you to important operating and maintenance instructions in the accompanying literature. Read the manual.

DETAILED SAFETY INSTRUCTIONS:

All the safety and operation instructions should be read before the appliance is operated.

Retain Instructions:

The safety and operating instructions should be retained for future reference.

Heed Warnings:

All warnings on the appliance and in the operating instructions should be adhered to.

Follow instructions:

All operation and user instructions should be followed.

Water and Moisture:

The appliance should not be used near water (e.g. near a bathtub, washbowl, kitchen sink, laundry tub, in a wet basement, or near a swimming pool etc.)

Ventilation:

The appliance should be situated so that its location or position does not interfere with its proper ventilation. For example, the appliance should not be situated on a bed, sofa, rug, or similar surface that may block the ventilation openings; or placed in a built-in installation, such as bookcase or cabinet that may impede the flow of air through the ventilation openings.

Heat:

The appliance should be situated away from heat sources such as radiators, heat registers, stoves, or other appliance (including amplifiers) that produce heat.

Power source:

The appliance should be connected to a power supply only of the type described in the operating instructions or as marked on the appliance.

Grounding or Polarization:

Precautions should be taken so that the grounding or polarization means of an appliance is not defeated.

Power-Cord Protection:

Power supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords and plugs, convenience receptacles and the point where they exit from the appliance.

Cleaning:

The appliance should be cleaned only as recommended by the manufacturer.

Non-use Periods:

The power cord of the appliance should be unplugged from the outlet when left unused for a long period of time.

Object and Liquid Entry:

Care should be taken so that objects do not fall and liquids are not spilled into the enclosure through openings.

Damage Requiring Service:

The appliance should be serviced by qualified service personnel when:

- The power supply cord or the plug has been damaged; or
- Objects have fallen, or liquid has been spilled into the appliance; or
- The appliance has been exposed to rain; or
- The appliance does not appear to operate normally or exhibits a marked change in performance; or
- The appliance has been dropped, or the enclosure damaged.

Servicing:

The user should not attempt to service the appliance beyond that is described in the Operating Instructions. All other servicing should be referred to qualified service personnel.

INSTRUCTION:

1. After operation the microphone must be switched off as well. Otherwise the batteries will soon be exhausted. In order to avoid untuned consumption of the inner battery: if pilot lamp of the wireless microphone (1) remains lighted, it means that the battery has no more power: (2) the lamp must flash only for the time of the switching -on; this indicates that the microphone works well. When switches the power switch to "on" position, then the power indicator lights, indicate the apparatus is on. When switches the power switch to "off" position, then the power indicator lights, indicate the apparatus is off.
2. INSTALL BATTERY:
PLS. make sure the positive/negative before you replacement batteries.
3. We congratulate you for the choice of this excellent professional apparatus microphone which will give you outstanding results at the high fidelity. the microphone suit for school speech, meeting speech, teachers and performer on the stage. to avoid of problem like wireless microphone.

SPECIFICATION**TRANSMITTER PERFORMANCE SPECIFICATION:**

| MODEL: AW-86HC(D) AW-88HC(D) | | DATE: 30,07,2002 | TESTER: J.H.LIN |
|---------------------------------|---------------------------|------------------|-----------------|
| NO. | ELECTRIC PARAMETER | SPECIFICATION | |
| 1 | Carrier Frequency Range | UHF 790-865 Mhz | |
| 2 | RF Power Output | 10mW (TYPE) | |
| 3 | Spurious Emission | > 45dBc | |
| 4 | Total Harmonic Distortion | ≤ 1% | |
| 5 | Power Source | DC + 9V | |
| 6 | Current | 30mA | |
| 7 | Tone Osc.Frequency | 32.768KHz | |
| 8 | Dimensions | 290mm/11.4" | |
| 9 | Weight | 350g(0.77 lb) | |

FEATURES:

- "STAND-BY" function.
- Steel net based to prevent from rolling.

AW-86HC(D)

