

170.0 mm

125.0 mm

Justice™



USER'S MANUAL: Item JUSEB01

 
SPECIFICATIONS

Bluetooth Range: Up to 33 feet (10 meters)
Battery Type: Polymer Lithium Ion Battery
Charging Input: DC 5V
Play Time: Approximately 6 hours*

*Applicable at 50% of maximum volume. Results will be lower when volume is higher.

The Bluetooth® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by Sakar International is under license. Other trademarks and trade names are those of their respective owners.


A QUICK LOOK



CHARGING


Micro USB Plug

 USB Plug



1. The included USB charging cable has a Micro USB plug and a standard USB plug.

 2. Insert the charging cable's Micro USB plug into the earbud's charging port.



3. Insert the charging cable's standard USB plug into the USB port of a computer or suitable USB charging adapter.

Red = Charging
Blue = Charging complete

4. The LED indicator turns red when the earbud's are charging and turn blue when charging is complete.

BLUETOOTH PAIRING



1. Press and hold the power button for 2-3 seconds to turn the earbuds On.

Pairing Mode
Red & Blue Flashing LED

 


2. The LED indicator will flash red and blue indicating the earbuds are in pairing mode.



3. Go to the Settings app and into the Bluetooth page. Make sure Bluetooth is on before connecting to 'Fashion Earbuds'.

Paired
Blink Blue



4. The LED indicator will blink Blue for every 5s when the earbuds have connected to your device.

 
USING YOUR EARBUDS: MUSIC




1. Press the power button to pause and play music.



2. Press the plus button increase the volume. Press and hold the button to go to the next song.



 3. Press the minus button to decrease the volume. Press and hold the button to go to the previous song.



4. Press and hold the power button for 1-2 seconds to activate Siri or Google Assistant.

IMPORTANT SAFETY PRECAUTIONS

Before using the Wired Earbuds, basic safety precautions should always be followed, including:

1. READ ALL INSTRUCTIONS BEFORE USING YOUR EARBUDS.
2. Do not use your earbuds near water. Do not place your earbuds on any wet surfaces.
3. Do not allow children to use the earbuds without proper adult supervision.
4. Do not expose your earbuds to excessive heat or fire.
5. Do not use in extremely dry environments, as this can lead to static discharge during usage.
6. Do not expose your earbuds to temperatures above 100°F. Keep out of direct sunlight.
7. Do not attempt to repair this product yourself. Contact a qualified service center if your earbuds are in need of service.
8. Do not drop, crush or expose your earbuds to excessive physical force.
9. Your earbuds are not intended for commercial use.
10. Do not place the earbuds near objects that generate a strong magnetic field.
11. Use only the supplied charging cable. Unplug this device when not in use for long periods of time and during lightning storms.
12. Use a soft cloth to clean your earbuds. Never use any abrasive chemicals.
13. Please recycle or dispose of your earbuds properly based on the laws and rules of your municipality. Contact local recycling facilities and/or the manufacturer of your earbuds for further information.

VIVITAR ONE YEAR WARRANTY

This warranty covers the original consumer purchaser only and is not transferable.

This warranty covers products that fail to function properly UNDER NORMAL USAGE, due to defects in material or workmanship. Your product will be repaired or replaced at no charge for parts or labor for a period of one year.

What is Not Covered by Warranty

Damages or malfunctions not resulting from defects in material or workmanship and damages or malfunctions from other than normal use, including but limited to, repair by unauthorized parties, tampering, modification or accident.

To Obtain Warranty Service and Troubleshooting Information:

Call 1-800-592-9541 in the U.S. or visit our website at www.vivitar.com.

To receive Warranty service along with the name and address of an authorized product service center, the original consumer purchaser must contact us for problem determination and service procedures. Proof of purchase in the form of a bill of sale or receipted invoice, evidencing that the product is within the applicable Warranty period(s), MUST be presented in order to obtain the requested service. It is your responsibility to properly package and send any defective products along with a dated copy of proof of purchase, a written explanation of the problem, and a valid return address to the authorized service center at your expense. Do not include any other items or accessories with the defective product. Any products received by the authorized service center that are not covered by warranty will be returned unrepaid.

USING YOUR EARBUDS: PHONE CALLS



1. Press the power button to answer an incoming call. Press the button again to end the phone call.



2. Press and hold the power button for 1-2 seconds to reject an incoming call.

FCC STATEMENT

FCCID: 2AL9B-JUSEB01

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

RF Exposure Information
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

©2021 Sakar International
195 Carter Drive
Edison, NJ 08817
Support: 1800 592 9541
www.vivitar.com