 


Universal Wireless VR Remote & Gamepad User Manual

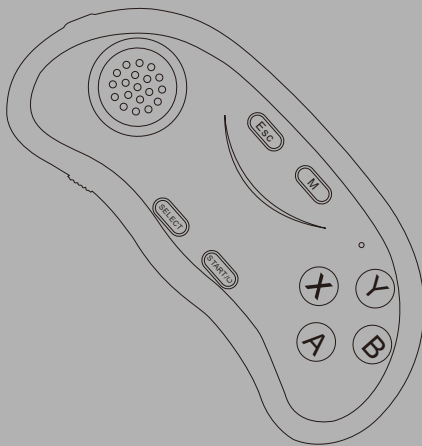

like: **B** key is for mute under iOS, but for camera selfie under Android.

4.2 Selfie operation:

For iOS mobile, press **X** key to shutter; for Android Samsung mobile, then press **B** key to shutter, Volume key to adjust focus; for other Android mobile, please enter camera setup first, then set volume key to shutter or scan QR code to download camera software.

4.3 Mouse operation (just for Android):

When the controller is in the music operation function, Press **M**, then joystick can change to mouse function, **SELECT** is for mouse confirm key. Press **M** again, then can switch to music mode. If need move mouse function, please press the confirm key on the top and at same move the joystick (Turn side switch to Game side). MENU function: press **Y** is MENU key function.

4.4 E-Book flip function:

 
In iReader: use Volume +/- to turn page up down; In Kindle or PPT for iOS, use joystick in Game mode to turn page.

5. GAME function: Turn side switch to Game side (there is "GAME" on side), now device is operated by two-hands horizontal.

5.1 Game function on Android:

In Menu, if joystick can move cursor, Key **A** is confirmation button, Key **B** is returning button, then means your mobile system can support international standard gamepad, just download game and play directly (If can't operate, then refer to part 6, Android MTK mobile operation)

Game Download: use QR code software to scan QR code on the packing (or enter into website: <http://www.migamepad.com/>) to

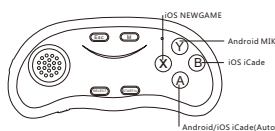

03

5.4 Key mapping function:

Download the NEWGAME gamepad assistant application, can realize the key mapping function, press **SELECT** and **START** button can be used the key mapping function.

6. Android MTK mobile operation:

Like Redmi 3G version, Huawei Honor3X, CoolPAD, Zhongxing, these old style mobiles use MTK CPU, due to MTK bad compatibility, they can't support international standard gamepad agreement. So if by standard Android connection method, unusual problems will happen. We preset MTK mode to support MIGAMEPAD games.

6.1 MTK Power on mode: under power off state, press key **Y** first, then press **START** at same time until LED light is on, the device turn on successfully. Next time, press key then default to MTK mode. If want to shift to standard Android mode, press key **A** and **START**, then ok.

6.2 Function instruction on MTK mode Music, mouse and shutter are same with standard Android, just game mode is different. MTK mode can support MIGAMEPAD simulation directly, but can't support standard Android APK games.

7. VR 3D virtual reality game or video operation:

Scan QR code to download VR application, then you can operate the game or video.

8. Battery:

Our product is need two 1.5V batteries of type size AAA, when power is low, LED will flash, please change the batteries.

Notes:

1. When accident cause not boot or unable to shutdown, please use needle to take out the batteries.
2. If already paired, but can't connect, please cancel the pair and boot the device and again.
3. If can't use the input method, please download from the QR code for Android, and press the M button for iOS.

05

Many thanks for choosing our product! This is a portable wireless controller, used for mobile phone, MID, TV box, smart TV, PC and so on. It can be used as gamepad, VR remote, wireless mouse, music control, E-book page, PPT presentation etc. and support iOS, Android, Windows and so on.

 
Important Note: Products are subject to change without any notice. And this product has applied for patents, counterfeiting is not permitted.

Operating instructions:

1. Power On: Press **START** button until LED is on (about 2 seconds). (First put the batteries.)
2. Power Off: Press **START** button until LED is off (about 5 seconds). Note: If no connecting with wireless device after 5mins, system will power off automatically; after connecting with wireless device, if no any operation, system will power off after 30mins.
3. Pair and connect: after power on, LED indicator will flash, the device will enter into the wireless pair mode automatically to find the address and name of this device (VRSHINECON-xxxx), click then can connect. Pair and connect successfully, LED indicator will turn off. Next power on, it can connect and match the last wireless device. Under turn off state, press **START** (over 8 seconds), LED will flash, then go to pair mode again, and can't connect last paired device automatically.
4. KEY Mode: Turn switch on side to KEY (there is "KEY" on the side), The device operation is one-hand vertical operation. (as shown to the right)

4.1 Music operation:

After connecting with wireless, open mobile's music player (like Samsung's player), click play, then can use this device to operate, like music play, pause, changing songs and so on. There are some difference due to different software and system,

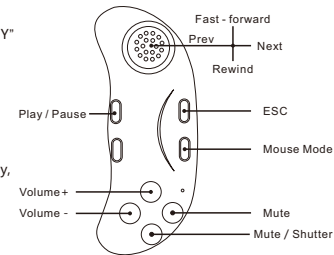

02

enter into MIGAMEPAD download center, then you can download MIGAMEPAD game application or third party's game application. Game center have all gamepad games, and support NES/GB/GBC/SFC/SMD/GBA/N64/MAME/PS games. Users can also download simulator BIN files to Games file folder in mobile, then can use MIGAMEPAD software to open the game file, like many famous games: Super Mario, Metal Slug, Sangokushi and so on.

Android games usually have gamepad type, download this kind of games, just connect with wireless then can operate with gamepad directly (please note, turn side switch to "Game"), this kind of games are like: Eternity Warriors 2, FIFA 15 and so on. (Some games maybe need set to use gamepad control when playing)

senior game combination key:

SELECT + **A** = L1, **SELECT** + **B** = R1, **START** + Joystick = Right Joystick
SELECT + **X** = L2, **SELECT** + **Y** = R2

5.2 iOS game:

Game download: Enter into iOS APP store or other Apple store, search "iCade", then you can find games of iCade which support gamepad, download and install then ok, like Akane Lite, Brotherhood, TTR Premium and so on.

Before play games, please set keyboard input mode to English input and can input English letters then ok. Next, please connect with wireless and enter games then can play (Some games maybe need set to use iCade when playing)

Combination keys: **SELECT** + **A** = L1, **SELECT** + **B** = R1

5.3 iOS NEWGAME Mode:

Under power off state, press key **X** first, then press **START** at same time until LED light is on, the device turn on successfully. Next time, press key **START** then default to NEWGAME mode. If want to shift to standard Android mode, press key **A** and **START**, then ok.

Scan QR code to download iOS NEWGAME game center, and can play iOS game like: The Hon, Kowloon war and son on.

04

Product Specifications

Item	Specifications
Size	130mmx60mmx14mm
Wireless Protocol	Bluetooth 3.0 compliant
Wireless Distance	2-10 Meters
OS	Android /iOS/PC
CPU	ARM968E-S Core
Battery	Type size alkaline AAA 1.5V x 2
Working time (Continuous game)	About 40 hours
Work current	0.5~8mA
Standby current	0.5-1mA
Shutdown current	<20uA

FCC STATEMENT :

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
Reorient or relocate the receiving antenna.
Increase the separation between the equipment and receiver.
Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
Consult the dealer or an experienced radio/TV technician for help.

RF warning statement:
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.