

TECHNICAL SUPPORT AND WARRANTY INFORMATION

For technical support issues please visit our website at www.polaroid.com. For further assistance, call 877-408-0033UK or visit our website at www.polaroid.com. For email support, please contact us at polaroid@sakar.com. You can also call our technical support department toll free at 1-774-608-0033 UK call 0800 917 4831 or for e-mail support, please contact us at polaroid@sakar.com.

Warranty Care

The warranty covers the original consumer purchaser only and is not transferable. This warranty covers products that fail to function properly UNDER NORMAL USAGE, due to defects in material or workmanship. Your product will be repaired or replaced at no charge for parts or labor for a period of one year.

What is Not Covered by Warranty

Defects or malfunctions not resulting from defects in material or workmanship and damages or tampering, modification or accident. Functions from other than normal use, including but limited to, repair by unauthorized parties, or damage to malfunctions not resulting from defects in material or workmanship and damages or tampering, modification or accident.

To Obtain Warranty Service and Troubleshooting Information:

Call 877-408-0033UK (call 0800 917 4831) or visit our website at www.polaroid.com.

To receive Warranty Service along with the name and address of an authorized product service center, the original consumer purchaser must contact us for problem determination and service procedures. Proof of purchase in the form of a bill of sale or receipted invoice, evidencing that the product is within the applicable Warranty period(s), MUST be presented in order to obtain the required service. It is your responsibility to protect your package and send any defective products along with a dated copy of proof of purchase, a written explanation of the problem, and a valid return address to the authorized service center at your expense. Do not include any other items or accessories with the defective product. Any products received by the authorized service center that are not covered by warranty will be returned unrepaired.

NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, OTHER THAN THOSE EXPRESSLY DESCRIBED ABOVE SHALL APPLY. DISTRIBUTOR/FURTHER DEALERS ALL WARRANTIES ARE THE PROPERTY OF POLAROID HOLDINGS, LLC AND ARE NOT SPONSORED, ENDORSED OR APPROVED BY THIS PRODUCT. P&P Holdings, LLC does not manufacture this product or provide any manufacturer's Warranty or support.

© 2016 All Rights Reserved
In the US:
Sakar International
Attention: Service Department
2D, Skikin Parkway East
Coventry, CV3 4SU
In the UK:
Sakar International Inc
2D, Skikin Parkway East
Coventry, CV3 4SU
Some countries, states or provinces do not allow the exclusion or limitation of incidental or consequential damages or allow limitations on warranties, so limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may have other rights that vary from state to state or province to province. Contact your authorized retailer to determine if another warranty applies.
This product is manufactured, warranted and sold by Sakar International, Inc. Polaroid and Polaroid, Make in Polaroid and Polaroid Class B logo are trademarks of P&P Holdings, LLC and P&P Holdings, LLC is not responsible to provide any specific warranty or support. P&P Holdings, LLC does not manufacture this product or provide any manufacturer's Warranty or support.

This device complies with the part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.
Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
NOTICE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with instructions may cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on. The user is encouraged to try to correct the interference by one or more of the following measures:
Reorient or relocate the receiving antenna.
Increase the separation between the equipment and receiver.
Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
Consult the dealer or experienced radio/TV technician for help.

Waste - P&P Holdings, LLC, its licensees, affiliates, and Sakar International, Inc. fully supports all electronic waste initiatives. As responsible stewards of the environment, and to avoid creating established laws, you should properly dispose of this product in compliance with all applicable regulations, directives or other government in the area where you reside. Please check with local authorities or the retailer where you purchased this product to determine a location where you can appropriately dispose of the product.

You may also go to www.polaroid.com and reference Social Responsibility to learn more about the specific laws in your area and to locate a collection facility near your home.
If your electronic device has internal memory on which personal or other confidential data may be stored, you may want to perform a data sanitization process before you dispose your device. To assure that the party cannot access your personal data, data sanitization varies by the type of product and its software, and you may want to research the best data sanitization process for your data sanitization procedures during the recycling process.
This device complies with the part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.
Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
NOTICE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with instructions may cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on. The user is encouraged to try to correct the interference by one or more of the following measures:
Reorient or relocate the receiving antenna.
Increase the separation between the equipment and receiver.
Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
Consult the dealer or experienced radio/TV technician for help.

Let's Get Started

Questions? Need some help? This manual will help you enjoy your new product.
 If you still have questions, call our Helpline for more help. (Call 877-408-0033)
 or visit us at: www.polaroid.com



CDOE4 Quick Start Guide READ ME FIRST



System Requirements

Operating system	WinXP (SP3) Vista (SP1) Win7 and Mac OS X v10.5.x or above
CPU	Pentium III or above
RAM	1GB
Interface	USB port
CD	4x speed CD ROM or above

If you would like more detailed instructions beyond the Quick Start Guide, the full camera manual is available on the Home screen or in the "Help" menu after installing the Polaroid Instant Memories

Windows and the Windows logo are registered trademarks of Microsoft Corporation. All other trademarks are the property of their respective companies.

This camera is a plug and play device. You can download the pictures and videos captured by your camera without the software by directly accessing the camera's memory card from your computer. It is recommended however that you install the Polaroid Instant Memories Software to enjoy the full Polaroid experience.



Install Software

- 1 Locate software CD found in package
- 2 Connect your PC or MAC to the internet
- 3 Insert CD
- 4 Follow all instructions to install software
- 5 Software will open

Download Images

- 1 Turn on your camera
- 2 Connect camera via USB to computer
- 3 Open software and press the "Get Images" button
- 4 Follow instructions on the screen to download images
- 5 Edit and Upload images to social networks


1 WHAT'S INCLUDED



- | | |
|--------------------|--------------------|
| 1. Digital Camera | 4. Installation CD |
| 2. Lithium Battery | 5. Wrist Strap |
| 3. USB cable | 6. AC Charger |

Micro SD Card not included

2 PARTS OF THE CAMERA

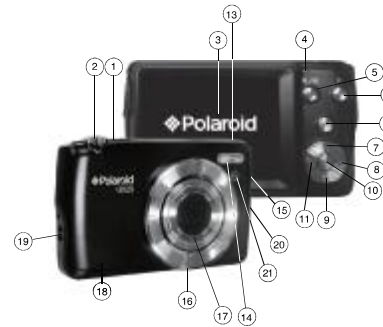

- | | |
|---------------------------------|---------------------------------|
| 1. Power button | 12. MODE button |
| 2. Shutter button | 13. Microphone |
| 3. LCD Screen | 14. Flash |
| 4. LED (Charge/Flash Indicator) | 15. USB Slot |
| 5. Zoom Out | 16. Tripod Mount |
| 6. Zoom In | 17. Optical Lens |
| 7. Up/Flash/Slide Show button | 18. Battery/SD memory card slot |
| 8. Right/Delete button | 19. Wrist Strap connector |
| 9. Down/Insta-share button | 20. Buzzer |
| 10. SET (Menu/OK) button | 21. Af Assist Lamp |
| 11. Lef/Scene button | |

3 INITIAL SETUP

Installing the battery



- To Charge the Battery:
- Insert the battery (as shown above).
 - Power Off the camera.
 - Connect the camera using the USB cable to the computer's USB port or to the AC Adapter (which is then connected to a standard wall socket).
 - Charge light will turn off when battery is fully charged.

Installing memory card




- Micro SD Memory card (up to 32GB) needed for normal use
- Important: you must use a class 4 micro SD card or higher only.

Turning On the camera



Accessing the menu

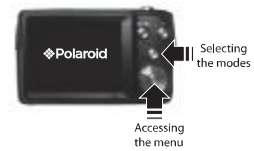

4 MAIN CAMERA MODES

Your camera has different modes for the various camera functions. You can switch modes by pressing the MODE button on your camera after the camera has been powered ON.

Photo Capture Mode

Use this mode to capture pictures with your camera.

This is the default mode when the camera is powered ON. To take a picture, aim your camera as desired and press the "Shutter" button. The picture will be automatically saved to your camera's memory card.

To access the various menus for the Photo Capture mode, press the SET button while in the Photo Capture mode. For more information, please refer to your camera's user manual.

Video Capture Mode

Use this mode to capture videos with your digital camera.

After turning on your camera, press the MODE button once to open the Video Capture mode. To take a video, aim your camera as desired and press the "Shutter" button to start the recording. A red indicator will appear on the LCD screen while the recording

is in progress. To stop recording, press the "Shutter" button again. The video will be automatically saved to your camera's memory card.

To access the various menus for the Video Capture mode, press the SET button while in the Video Capture mode. For more information, please refer to your camera's user manual.

Playback Mode (Photos & Videos)

Use this mode to view and manage the photos and videos on your camera.

After turning on your camera, press the MODE button twice to open the Playback mode for photos and videos. You can scroll through the photos and videos that you've previously taken to view, edit or delete them as desired.

To access the various menus for the Playback mode for photos and videos, press the SET button while in the Playback mode. For more information, please refer to your camera's user manual.

Label Statement: This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. FCC Statement: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radiocommunications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna. • Increase the separation between the equipment and receiver. • Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. • Consult the dealer or an experienced radio/TV technician for help. To assure continued compliance, any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment. (BC)