

User Guide EVC355WG

11.5"

User Guide
EVC355WG

In the box

- Action Camera
- Waterproof Housing
- Bicycle Mount
- USB Cable (connects to your computer)
- Camera Shield
- Attachment Buckle
- Helmet mount with strap
- User Guide

Setting up your camera

Charging the battery

- Connect the camera to your computer using the included USB cable.
- The Charging indicator light will illuminate red.
- The battery indicator is located on the lower left corner of the camera's LCD screen.

SD card installation

This camera has no internal memory and requires a Micro SD card (not included) to take and save pictures or record videos. The camera can support Micro SD cards up to 32GB. To install the Micro SD card into the camera, follow the steps below:

- Turn off the camera.
- Insert the Micro SD card into the card slot (as shown below) until it clicks and locks into place.
- Remove the card, gently push it in until it pops out.

NOTE: A card can only be inserted one way. Do not use force when inserting the card. Inserting or removing a card while the camera is on may damage the card. Also, never use the card.

Using your camera

Turning the camera on/off

- Turn on the camera, and press and HOLD the [POWER] button until the display turns on.
- To turn the camera off, press and HOLD the [POWER] button until the display turns off.

Using the Camera Mode Selector Switch

Camera Mode Selector

This camera has three different modes depending on what you are doing with the camera. For example:

- To take pictures switch the [Camera Mode Selector] all the way up to the picture mode position.
- To take videos switch the [Camera Mode Selector] to the middle, video mode position.
- To playback pictures/videos switch the [Camera Mode Selector] to the bottom position, playback mode.

- Use the [Camera Mode Selector] Switch to activate any of the camera modes.
- Slide the selector up and down to choose one of three desired modes.

Picture Mode

- Make sure that a Micro SD card is inserted into the camera.
- Turn on the camera, and switch the [Camera Mode Selector] to picture mode.
- Press the [SHUTTER / BACK] button to take a picture.

Video Mode

- Make sure that a Micro SD card is inserted into the camera.
- Turn on the camera, and switch the [Camera Mode Selector] to video mode.
- Press the [SHUTTER / BACK] button, the camera starts recording video.
- To stop recording press the [SHUTTER / BACK] button again.

Playback Mode

- Turn on the camera, and switch the [CAMERA MODE SELECTOR] to playback mode.
- Use the [▲] or [▼] buttons to scroll through picture and video files.

Connecting the camera

Connect your camera to a computer

- Turn off the camera, and that a Micro SD card is inserted in the camera before connecting it to your computer.
- Press the [SHUTTER / BACK] button, the camera starts recording video.
- Connect the larger end of the USB cable into your computer's USB port.
- Turn ON the camera.
- Autoplay will prompt your device is connected.
- On your PC select "open folder" to view files.
- Select "DCIM" then select "100MEDIA".
- Pictures and videos will be displayed in this folder.
- Before disconnecting the camera, click on the "Safely Remove Hardware" icon usually located on the lower right corner of your desktop.

NOTE: Please make sure both a secure and that all pins are in place to ensure no water can seep in.

System Settings

Picture Mode Settings

Video Mode Settings

Playback Mode Settings

System Settings Options

POWER FREQUENCY	50Hz / 60Hz
POWER SAVE	Select OFF, 1, 3, or 5 minutes. To conserve battery power, the camera will shut off if no buttons are pressed within the selected time.
DATE & TIME	Set the camera's date and time.
LANGUAGE	Set the camera's language.
FORMAT	Erase all data on the SD card.
RESET ALL	Reset the camera's settings to factory default.

Picture Mode Settings Options

RESOLUTION	1080P (4K) / 720P (HD) / 30FPS (30) / 60FPS (60)
QUALITY	Super Fine / Fine / Normal
METERING	Center / Multi / Spot
WHITE BALANCE	Auto / Daylight / Cloudy / Fluorescent / Tungsten
EXPOSURE	Adjust the exposure.
DRIVER MODE	"OFF" disables the self timer, "2" or "10" second options
EFFECT	Normal / BW / Sepia / Negative / Flip / Green / Blue

Video Mode Settings Options

MOVIE SIZE	HD 1080P (20) / 640X480 / 30FPS (30)
Frame Rate	High/Low
METERING	Center / Multi / Spot
WHITE BALANCE	Auto / Daylight / Cloudy / Fluorescent / Tungsten

Playback Mode Settings Options

LOCK	Lock one or all of your picture and video files. When locked the files will not be visible.
DELETE	"On" Deletes the currently displayed video or picture or "Off"
SLIDE SHOW	Start a slide show, and adjust the slide show settings.

FRONT

Mount Kit Assembly

Waterproof case

Assembling camera into case

Your action cam comes with a water proof case for underwater action and added durability. To assemble your camera to the case, follow the instructions below:

- Open the latch on the water proof case.
- Insert the camera lens forward into the case.
- Close the door and secure the latch.

NOTE: Please make sure both a secure and that all pins are in place to ensure no water can seep in.

NOTE: This camera with the case properly sealed is rated to 3 meters (10 feet) under water.

Bike Mount Assembly

Assembling camera to bike mount

Your action cam includes the necessary accessories for bike action. To assemble the camera to the bike mount, follow the instructions below:

- Install the bike mount onto your bikes handle bars by putting the bottom half of your bike mount onto the handle bar and connecting it to the top part of the mount.
- Use the included rubber switch to mount it securely.
- Use the included screw to secure the bike mount, tighten till the bike mount is secure.
- With the camera assembled to the water proof case or included shield align the bolt on the attachment buckle to the hole on your waterproof case or shield and turn. When the desired position is reached, you can use the wheel on the bottom end of the bolt to tighten.
- Connect the attachment buckle to the bike mount by pinching both sides on the attachment buckle and sliding it on to the mount.

NOTE: You must either use the waterproof case or shield to assemble the camera to the attachment buckle.

Helmet assembly

Assembling camera to helmet mount

Your action cam includes the necessary accessories for helmet action. To assemble the camera to the helmet mount, follow the instructions below:

- With the camera assembled to the water proof case or included shield align the bolt on the attachment buckle to the hole on your waterproof case or shield and turn. When the desired position is reached, you can use the wheel on the bottom end of the bolt to tighten.
- Connect the attachment buckle to the helmet mount by pinching both sides on the attachment buckle and sliding it on to the mount.
- Insert the helmet strap through the slots on the side of the helmet mount and velcro the mount through the holes on your helmet.

NOTE: You must either use the waterproof case or shield to assemble the camera to the attachment buckle.

FCC information

FCC Part 15: This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
 (1) this device may not cause harmful interference, and
 (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this equipment not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the requirements for a Class B digital device under Part 15 of the Federal Communications Commission (FCC) rules. These requirements are intended to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Limited Warranty

In the unlikely event that this product is defective, or does not perform properly, you may within ninety (90) days from your original date of purchase return it to the authorized service center for repair or exchange.

TO OBTAIN WARRANTY SERVICE:

- Provide proof of the date of purchase within the package (Dated bill of sale).
- Prepay all shipping costs to the authorized service center, and remember to insure your return.
- Include a return shipping address (no P.O. Boxes), a telephone contact number, and the defective unit within the package.
- Describe the defect or reason you are returning the product.

Your product will be repaired or replaced, at our option, for the same or similar model of equal value if examination by the service center determines this product is defective. Products received damaged as a result of shipping will require you to file a claim with the carrier.

The shipping address of the authorized service center is:

Southern Telecom, Inc.
 Attention: Customer Service (2nd Floor)
 14-C 32nd Street
 Brooklyn, NY 11232

Should you have any questions or problems concerning this product, please contact our customer service department at:

Customer Support:
 1-877-768-8483 (Toll Free)
 cs@southern telecom.com

Monday - Thursday: 9AM - 3PM (EST)
 Friday: 9AM - 3PM (EST)
 www.southern telecom.com

Warranty service not provided
 This warranty does not cover damage resulting from accident, misuse, abuse, improper installation or operation, lack of reasonable care, and unauthorized modification. This warranty is voided in the event any unauthorized person opens, alters or repairs this product. All products being returned to the authorized service center for repair must be suitably packaged.

Limitation of Warranty
 THE WARRANTY STATED ABOVE IS THE ONLY WARRANTY APPLICABLE TO THIS PRODUCT. ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING ALL IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE HEREBY DISCLAIMED. NO VERBAL OR WRITTEN INFORMATION GIVEN BY A.T.E. INC. ITS AGENTS, OR EMPLOYEES SHALL CREATE A GUARANTEE OR IN ANY WAY INCREASE THE SCOPE OF THIS WARRANTY.

Southern Telecom, Inc. warrants that the product is free from defects in materials and workmanship under normal use and service for the period of time stated above. This warranty is limited to the repair or replacement of the product. It does not cover damage to the product caused by accident, misuse, abuse, improper installation or operation, lack of reasonable care, and unauthorized modification. This warranty is voided in the event any unauthorized person opens, alters or repairs this product. All products being returned to the authorized service center for repair must be suitably packaged.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you also may have other rights that vary from state to state.

BACK

Note:

Shielded cables with Core must be used with this unit to ensure compliance with the Class B FCC limits.