


# User manual

\_\_\_\_RC01

## 1. Buttons on watch remote control

Buttons on the remote control are shown in the picture below

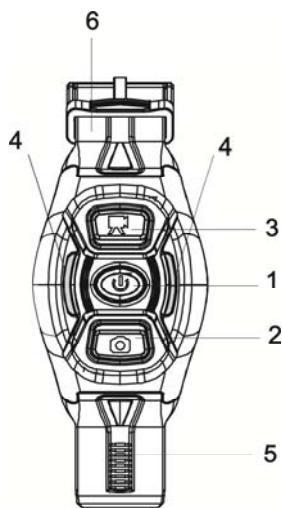


- 1. Power button
- 2. Video button
- 3. Photo button
- 4. Button indicator (red)
- 5. Strap
- 6. Buckle

## **2. Using the remote control**

The watch remote control allows you to power on/off the DV and to take photos or video at 30M away without operating on DV directly; just press a button to achieve the said functions.

**Remark:** press any button the two indicator lamps at both sides will light in red at the same time.

## **3. Power on/off the DV by remote control**


Power on: press and hold the  button until the indicator goes off, the DV will turn on and the buzzer will beep once.

Power off: press and hold the  button, the DV will turn off and the buzzer will beep once.

## **4. Changing battery of the remote control**

You need to change the battery of the remote control when the battery level is low. Open the battery cover carefully with a coin and avoid scratching the surface.

To change the battery, put a coin in the slot at the center of the battery cover and unscrew the cover according to the direction marked on it, replace the old battery with the new one (pay attention to the +/-), then cover and screw the cover.

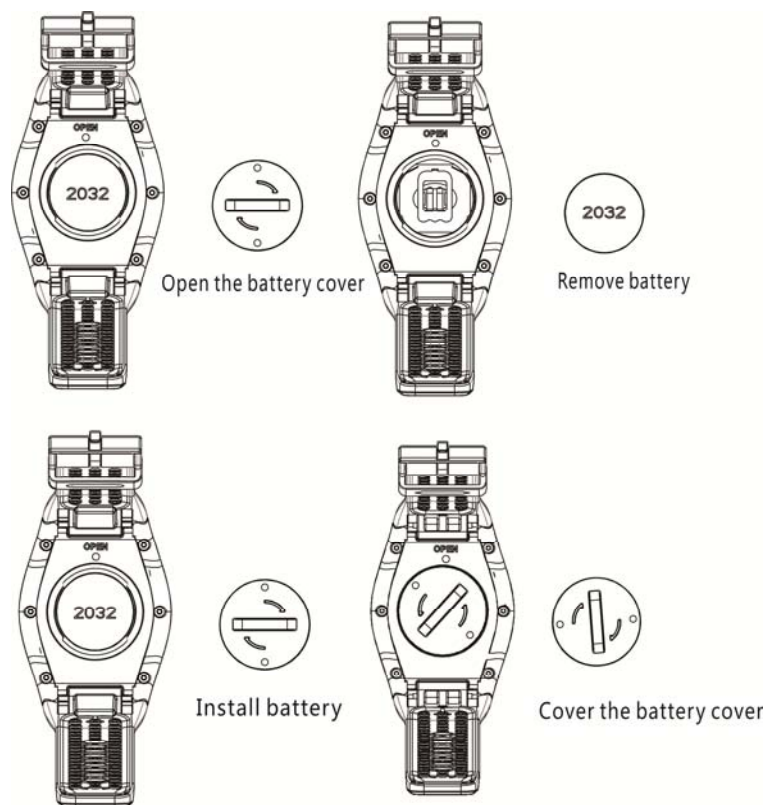

**Label Statement:**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**FCC Statement**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To assure continued compliance, any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

**WARNING**

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable condition without restriction.

