 


# User's Manual

## WDVV9S

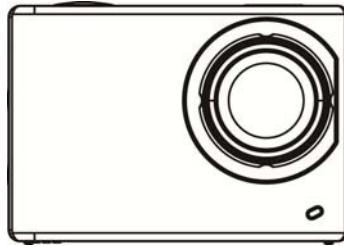

### Foreword

Thank you for purchasing our WIFI DV. Before use, please carefully read this User's Manual for best performance and longer service life of this product, and properly keep this manual for future reference.

This manual covers the latest information while it was prepared. The displays and pictures used in this manual are for better understanding of the operation of the product. Due to technical reasons and different production batches, the DV you receive may be different from how it is described herein.

### System requirement

 
Before using and operating your DV, please know the minimum system requirement to operate it and we strongly recommend you to use a better PC to operate the product for best performance of the DV. The minimum system requirement to operate the product is as below:

<b>System Requirements</b>	
Operating System	Microsoft system:Microsoft Window 2000, XP, Vista, 7, 8 Apple system:Mac OS X ver: 10.0.0 or above version
CPU	Intel Pentium of more than 1GB Hz or other CPU with equivalent performance
Internal Memory	Larger than 1GB
Sound Card and Display Card	The sound card and video card shall support DirectX8 or higher version.
CD Driver	Speed of 4 times or faster
Hard Disk	Free space of more than 2GB
Others	USB1.1 or USB2.0 port

## Features and functions

- WIFI, photo shooting, video recording (1080P FHD, 30fps), car recorder, Playback
- 5m effective pixels
- ◆ 1.77" LCD
- ◆ Powered by external 1100mah battery
- ◆ micro USB port + TF card slot + mini HDMI port
- ◆ 120° wide angle 4G lens
- ◆ IR wireless remote

## Appearance and buttons

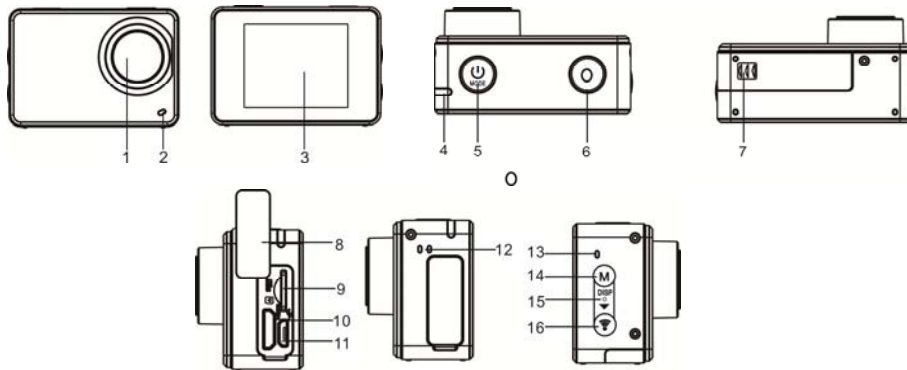


- |                           |   |                                     |
|---------------------------|---|-------------------------------------|
| 1.Lens                    | 2. charging indicator /busy lamp (blue/red) | 3. 1.77"LCD                         |
| 4.busy lamp (red)         | 5. Power on/off (mode switch)               | 6. OK/shutter                       |
| 7. battery cabin          | 8. Dust Cover                               | 9. TF card slot (inserting TF card) |
| 10. HDMI port             | 11. Micro-USB port (connecting PC)          | 12. horn hole                       |
| 13. Mic                   | 14. DISP/MENU button                        | 15. Wifi indicator (red)            |
| 16.WIFI/ Selection button |   |                                     |

### I. Using your Wifi DV for the first time

 1.Insert a micro SD or a micro SDHC card first, see right picture

High speed card of Class 6 or above is recommended. When using professional video mode, Class 10 is required.

**Turn off your DV before inserting/removing card.**

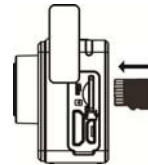

### 2. Power on/off

2. 1 Power on: press and hold power button for about 2 seconds then the screen turns on and the camera goes into power on state.

2. 2 Power off: when the camera is in idle state, press the power button for about 2 seconds for power off.

Auto power-off: when the camera's idling time reaches power saving mode (1 minute in default), the camera screen will be automatically turned off for energy saving. When in power saving mode, the work indicating lamp will be on normally. In case no operation is made for 3 minutes after in power saving mode, it will be turned off automatically powered off.

2. 3 Shutdown due to Low Power: When its power is extremely low, LCD will display the icon “”, the camera will automatically shut down, and please charge the battery timely .

### 3. Charging battery

The DV uses external li-battery. While power-off, connect the DV to the PC by a USB cable to charge the battery; while charging, the charging indicator will remain on. It takes about 3 to 4 hours to fully charge the battery, and the indicator will go off when charging completes.

Remark: blue lamp while charging, red lamp while working and in wifi mode;

### 4. Function mode switch

The camera has 4 modes, after power on, press Mode button to switch to mode selection, or use APP to switch mode.

Video mode (📹): For video recording;

Driving mode (🚗): For car recording;

Photo mode (📷): For photo taking;

Playback mode (▶️): Playing back the saved videos or photos;

## II . Mode Preview

### 1. Video Mode Operation

After power on, DV is recoding mode automatically. When in preview state, press the shutter to start recording. Press shutter again to stop recording. If the memory card gets full or battery gets low, it will stop recording automatically.

- 1 Mode icon, indicate recording mode
- 2 Recording frame rate
- 3 Indicate video size, FHD 1080P(30FPS)  
/ HD 720P(60FPS) / HD 720P(30FPS) available
- 4 Indicate video quality
- 5 Recording time, indicate minutes left for recording.
- 6 Battery icon, indicate current battery volume.
- 7 REC icon, flash when recording.
- 8 Recording length.



### 2. Driving Mode Operation

After power on, shortly press power button for one time to enter driving mode.

- 1 Mode icon, indicate car recording mode.
- 2 Recording frame rate
- 3 Indicate video size, FHD 1080P(30FPS)  
/ HD 720P(60FPS) / HD 720P(30FPS) available
- 4 Indicate video quality
- 5 Recording time, indicate minutes left for recording.
- 6 Battery icon, indicate current battery volume.
- 7 REC icon, flash when recording.
- 8 Recording length



Tips: 1. Car recording mode saves one video segment every three minutes. When the memory card gets full, the earliest video segment will be deleted, thus it records in loop.

2. After power on, select car recording mode, then turn off normally and turn on again, connect it with car charger, it will automatically enter car recording mode and start recording.

### 3. Photo Mode Operation

After power on, shortly press power button for two times to enter photo mode. When in preview state, press shutter to take a photo:

- 1 Mode icon, indicate photo mode.
- 2 Photo size, click the icon to choose 3M/5M/8M/10M/12M.
- 3 Indicate photo quality
- 4 Counter, indicate photos left at the moment.
- 5 Battery volume icon.

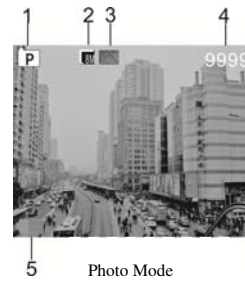 


Photo Mode

### 4. Playback mode:

After power on, enter Preview state, then continuously short press the power button to switch to playback mode. When in playback mode, firstly choose mode file for playing back as shown in the image below:

Choose CAR indicates playing back car recording file mode;

Choose VIDEO indicates playing back normal recording file mode;

Choose JPG indicates photo file mode;



### Play Image Introduction:

#### Recording file imgae:



- 1 Playback mode icon;
- 2 Indicate current file sequence number/total files number;
- 3 Indicate dater of the recording day;
- 4 Indicate recording time parameter;
- 5 Play timer ;
- 6 Operation button reminder to pause play;
- 7 Operation button reminder to stop play;

When playing video, click OK to pause play; click MENU to stop play.

#### Photo image:



- 1 Playback mode icon;
- 2 Indicate current file sequence number/total files number;

Tip: when in playback, press WIFI to choose other files, and it realizes cycle pick..

### III.Menu Operation:


There are different menus in every work mode, see the following menu images:




Video, Driving mode menu



 Photo mode menu

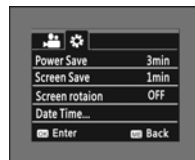

Setting mode menu

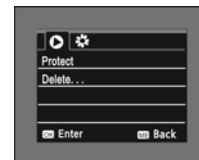 


Playback mode menu

Operation: press MENU, LCD displays the mode menu, and then short press power button so that the cursor is able to be moved left and right to choose menu. Press WIFI to move the cursor down (recyclable) to choose menu, at this moment, the menu is in highlight display, press OK to confirm, and press MENU to return or exit the menu mode.

### IV. Watch remote control:
 
#### 1. Buttons on watch remote control:

Buttons on the remote control are shown in the picture below

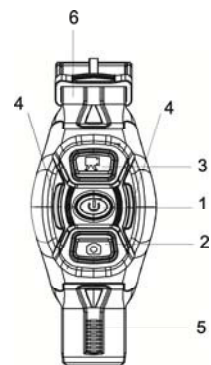


1. Power button
2. Photo button
3. Video button
4. Button indicator (red)
5. Strap
6. Buckle


#### 2. Using the remote control:

The watch remote control allows you to power on/off the DV and to take photo or video at 30M away without operating on DV directly; just press a button to achieve the said functions.

Remark: press any button the two indicator lamps at both sides will light in red at the same time.

#### 3. Power on/off the DV by remote control

 
Power on: press and hold the  button until the indicator goes off, the DV will turn on and the buzzer will beep once.

Power off: press and hold the  button, the DV will turn off and the buzzer will beep once.

#### 4. Changing battery of the remote control:


You need to change the battery of the remote control when the battery level is low. Open the battery cover carefully with a coin and avoid scratching the surface.

To change the battery, put a coin in the slot at the center of the battery cover and unscrew the cover according to the direction marked on it, replace the old battery with the new one (pay attention to the +/-), then cover and screw the cover.

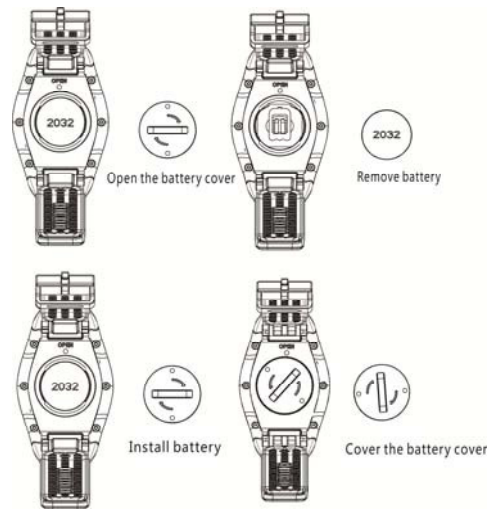

**V.Connect device to HDTV:**

 Connect the video camera to an HDTV with a HD cable as shown in the following figure, display signals in the camera will be output into the HDTV automatically, and you can browse HD videos and photos that are recorded or taken in the HDTV.

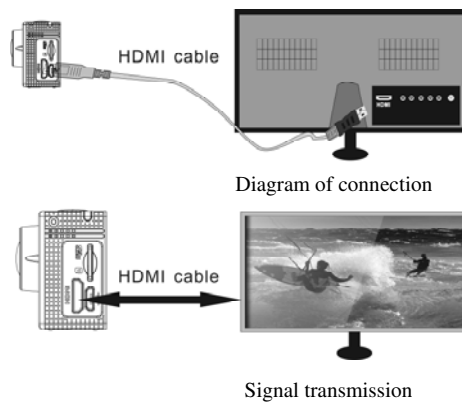

**APP (support Android and iOS)**

**I. Installing the APP**

1. For Android, search for “SYMAGIX2” at Play Store and install the APP according to the prompt; or scan the QR code



on the package to install.

2. For iOS, search for “SYMAGIX2” at APP Store and install the APP according to the prompt; or scan the QR code



on the package to install.

## II. Android APP


1. Install SYMAGIX2 APP (obtained from your vendor or internet) on your Android smart phone or tablet, the icon

 


will display on the screen;

2. Insert card and power on the DV, press the Wi-Fi button to enable Wi-Fi, the Wi-Fi indicator will flash, and then remain on after successful connection;


3. Enable Wi-Fi on your phone or tablet, search for wireless AP name WDVV9 and connect, the system will display when connection successes;

4. Click the APP icon  on your phone or tablet, you can see the preview picture (see picture below) of the DV on your phone or tablet, then you can operate the DV.

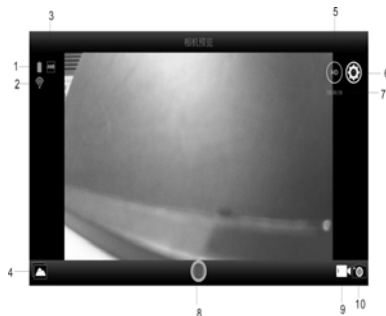

1. Battery level of the DV
2. WIFI signal icon
3. White balance
4. Enter playback mode
5. Video resolution
6. Setting (enter setting menu)
7. Rest recording time
8. Video button
9. Video mode
10. Photo mode


## III. iOS APP

 
1. Install SYMAGIX2 APP (obtained from your vendor or internet) on your iPhone or iPad, the icon  will display on the screen;

2. Insert card and power on the DV, press the Wi-Fi button to enable Wi-Fi, the Wi-Fi indicator will flash, and then remain on after successful connection;

3. Enable Wi-Fi on your iPhone or iPad, search for wireless AP name WDVV9 and connect, the system will display when connection successes;

Remark: for first use, please enter password: 1234567890.

4. Click the APP icon  on your iPhone or iPad, you can see the preview picture (see picture below) of the DV on your phone or tablet, then you can operate the DV.

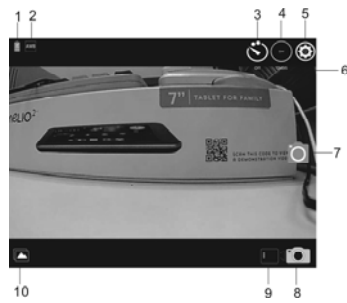

1. Battery level of the DV
2. White balance
3. Time-lapse selfie
4. Photo size
5. Setting (enter setting menu)
6. Counter, indicating photo numbers left.
7. Photo button
8. Photo mode
9. Video mode
10. Playback mode

- Note: 1 You need to insert a TF card into the DV to take or download picture via your phone or tablet;
2. After successful connection between your phone/tablet and the DV, the Wi-Fi indicator will remain on.

### Application on PC

The DV supports plug-and-play function. After power on, the mobile hard disk mode is activated automatically when the DV is connected to PC via USB cable.

The icon of the mobile hard disk will display in "My computer". The photos taken will be saved in I:\jpg folder (I is the volume label of your mobile hard disk which varies); the car files will be saved in I:\CAR folder.

**Note:** driver is not required to use mobile hard disk function on Windows 2000 or above.

### Technical parameters

<b>Image sensor</b>	5m pixels (CMOS)	
<b>Function mode</b>	Video recording、 photo taking、 Driving mode、 Playback mode、	
<b>Lens</b>	F=2.4 f=3.1mm	
<b>LCD</b>	1.77" LCD	
<b>Photo resolution</b>	12M、 10M、 8M、 5M 、 3M	
<b>Video resolution</b>	1920x1080(FHD/30fps)、 1280x720 (HD/60fps)、 1280x720 (HD/30fps)	
<b>White balance</b>	Auto/Daylight/Cloudy/Tungsten/Fluorescent	
<b>File format</b>	Video	H.264 (MOV)
	Photo	JPG
<b>Storage</b>	TF card (up to 32GB)	
<b>USB port</b>	High speed USB 2.0/3.0 port	
<b>Power Supply</b>	Powered by external 1100mah battery	
<b>Dimensions</b>	59*41*23.5mm	

### Label Statement:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

### FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.



If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To assure continued compliance, any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

