

VC1120: User Guide

尺寸: 500x625mm 128克铜版纸彩色正反面印刷7折

Print Actual Size

6/29/2011

In the box

- Digital Video Camera
- USB Cable (connects to your computer)
- Audio/Video Cable (connects to your TV)
- CD-ROM (ArcSoft Media Impression software)
- USB SD Card
- User Guide

Setting up your camera

Battery installation

- Open the battery cover by sliding it open with your thumb.
- Insert 4 batteries. **AAAs** (not included) are recommended into the compartment as shown below.
- Close the battery cover.

SD card installation

- Insert the SD card into the slot on the side of the camera.
- Push the card in until it is fully seated.
- Turn off the camera.
- Slide the cover over the card slot. Push the cover back and lock it in place.
- Turn on the camera. Gently push it up until it pops out.

Basic Operation

Turning the camera on/off

- To turn the camera on, press and HOLD the **(POWER)** button until the display turns on.
- To turn the camera off, press and HOLD the **(POWER)** button until the display turns off.

Camera modes

Video Mode

Picture Mode

Playback Mode

System Settings

Video Mode Settings

Picture Mode Settings

Playback Mode Settings

System Settings Screens

Video Mode Settings Options

Picture Mode Settings Options

Playback Mode Settings Options

Resolution	2048 (HD) / 1280 (HD) / 640 (SD) / 320 (SD)
Quality	Super High / Fine / Normal
Metering	Center / Multi / Spot
White Balance	Auto / Daylight / Cloudy / Tungsten / Fluorescent
Exposure	Auto / Manual
Capture Mode	Off / Interval / Photo Mode / On / Off / Interval / Photo Mode / On / Off / Interval / Photo Mode

Connecting the camera

Connecting your camera to a TV

Connect your camera to a computer

ArcSoft® Media Impression

Installing

Transferring videos and pictures from the camera to your computer

Uploading videos to YouTube™

Webcam feature

Installing the Webcam Driver

Trouble Shooting

Camera won't turn on

The display does not light up or message "Card is damaged" is displayed

My videos / pictures are blurry or poor quality

Using your camera as a webcam

My videos are blurry or shaky

My camera won't work as a webcam

Customer Support

Monday - Thursday 9AM - 5PM (EST)
Friday - SAT - 9PM (EST)
www.southmole.com

24.6"

24.6"

19.6" FRONT

19.6" BACK

Slick is a registered trademark of Southern Telecom, Inc. (www.southmole.com).
"Slick" is a registered trademark of Southern Telecom, Inc. (www.southmole.com).
"Slick" is a registered trademark of Southern Telecom, Inc. (www.southmole.com).
All trademarks and trade names are those of their respective owners.
© 2011 Slick. All rights reserved.