 


DV152英文说明书  
In the package

---

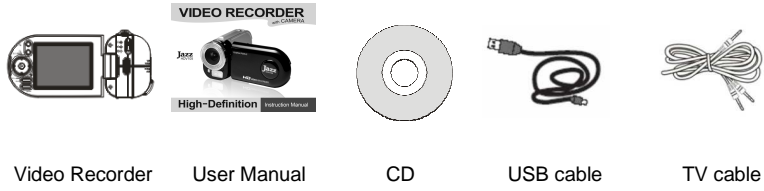

 
Video Recorder

User Manual


CD

USB cable

TV cable

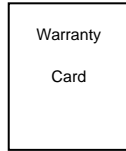

Warranty Card

 

Quick Guide

In the package.....	2
FCC statement.....	4
Introductory information.....	5
Basic information.....	5
Know your recorder.....	6
Basic Operation Ready to go.....	9
Installing Batteries.....	9
Using the SD Card.....	9
Select the Focusing Range .....	10
Power ON & OFF your recorder.....	11
Select the mode.....	12
Advanced Operations:- Setting Date / Time .....	13
LED Light / Indicators.....	13
Video MODE.....	15
Camera MODE .....	18
Voice Recording MODE.....	22
Playback MODE.....	23
Setup / Internal setting mode.....	29
Connecting recorder to the computer.....	31
Driver installation.....	31
Downloading video, pictures to your computer.....	33
Installing software.....	34
Connecting recorder to TV.....	39
Safety Precautions.....	40
System requirements.....	41
Technical specifications.....	42

**FCC statement**

This device complies with part 15 of FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio TV technician for help.

Pertinent testing documentation is available for verification.

Shielded USB cables must be used with this unit to ensure compliance with the Class B FCC limits.

Note: The contents of this Manual refer to the latest technical information available when the Manual was compiled. The screen display, illustrations and information shown in the manual are for detailed understanding of the recorder functions. Some information & illustrations may slightly differ from your recorder as a result of continuous development and improvement in production.

#### **Introduction information**

 
Thank you for purchasing this video recorder. Please read following operating instructions carefully in order to know and use digital video recorder correctly and enjoy best performance and results.

Keep this Manual handy and refer to the text anytime you need to do so.

See safety precautions listed near end of manual

**Know your video recorder**

---

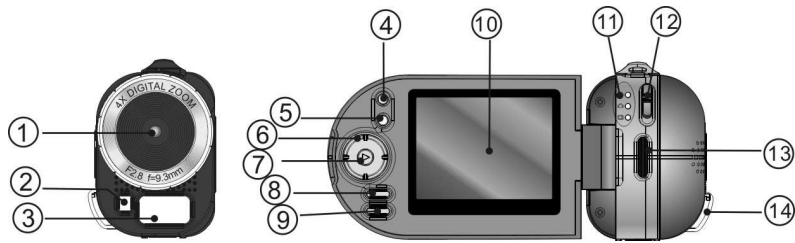

1 Lens 2 Self timer LED light 3 LED support light 4 Zoom in button 5 Zoom out button 6 Direction buttons (Up/Down/Left/Right) 7 OK button 8 Display button 9 MENU button 10 LCD screen 11 Mode indicator 12 Mode switch 13. Hand strap anchor post 14. Hand strap attachment post

TOP VIEW

 
BOTTOM VIEW



15. Macro / Normal lens switch    16. Zoom button    17. Shutter button    18. Tripod Socket    19. SD Memory card slot

RIGHT SIDE VIEW

LEFT SIDE VIEW (with LCD SCREEN opened)

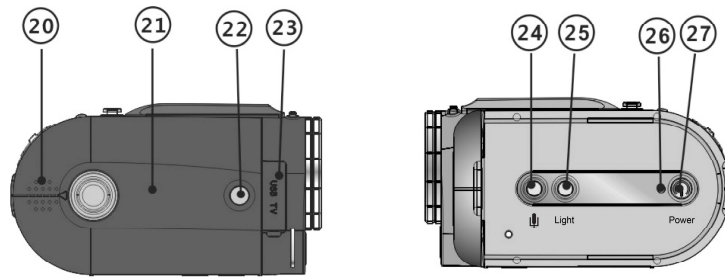

- 20. Built in speaker
- 21. Battery cover
- 22. Battery cover LOCK Button
- 23. TV/USB port
- 24. Voice recording button
- 25. Support LED light button
- 26. Power Indicator
- 27. Power ON / OFF button

## **Basic Operation - Ready to go**

---

### **1. Installing Batteries**

1. Press in the Battery cover LOCK button and slide back / open the cover.
2. Insert four (4) fresh AAA alkaline batteries; note terminals polarity and align batteries correctly.
3. Close the Battery cover; the LOCK will click securing the cover.

Note: Batteries are not supplied and need to be purchased separately

### **2. Using the SD Card - Insert / remove the SD Card**

1. Insert SD Memory Card into the card slot located on the bottom of the recorder and press it down until the Card is latched.
2. Lightly press the Card downwards to release and then eject the card when you wish to remove or replace the Card.

 
Note: SD card is not supplied and needs to be purchased separately





### 3. Select the Focusing range

Slide the Macro / Normal lens switch to select required position;

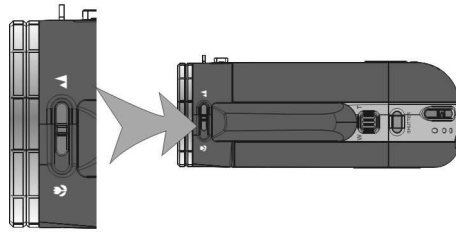


TOP VIEW

1. **Normal:** Set to Normal ▲ for typical video or picture taking when the subject is located at 5 feet or more from the recorder.
2. **Macro:** Set to Macro ▼ only for shooting very close-up objects located just 6 ~ 10 inches from recorder.

**4. Power ON and OFF your recorder**

 
1. Open the LCD screen
2. Press and then hold the Power button down for two to three seconds to turn the power ON. The Power indicator will light, the recorder becomes active and the LCD will display the scene.

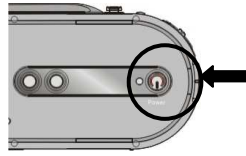

3. Press the Power button again for two to three seconds (when recorder is active) to turn the power OFF.

**Auto Power OFF:** Your recorder has Auto Power OFF feature.


If recorder is unused for 1 minute, the power will turn OFF automatically to save batteries. The Auto Power OFF time may be set to 1, 3 or 5 minutes (review Setup Menu mode for details).

3. Low Power / Battery level indicator: The low power icon  will appear on the LCD Screen when the batteries are exhausted and recorder will be automatically

turned OFF. Replace exhausted batteries

#### 5. Select the MODE

 Slide the Mode switch up or down to select desired MODE

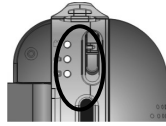

**Video Mode:** select this mode to record Videos

**Camera Mode:** select this mode to take Still Pictures

**Playback Mode:** select this mode to playback video, voice recordings or review still pictures.

#### 6. Basic operations

**Video Recording:** In video mode press shutter button to start Video Recording. Press again to stop.

**Still Pictures (Camera):** In camera mode press shutter button once to take a Still Picture.

**Voice recording:** Press voice (audio) recording button to start Voice Recording. Press again to stop.

**Zooming:** Tilt the zoom switch to T (tele) position to zoom in on the scene or action and tilt to W (wide) position to zoom out

**Playback:** In playback mode press OK button to playback recorded video clips or voice records. Press OK again to stop playback. Press LEFT or RIGHT button to browse still pictures.

 
**Menu selection:** Press menu button to see and adjust many different setting options. Use Up/Down/ Left/ Right buttons to scroll and select. Press OK to confirm selection and menu button to exit.

## **Advanced Operations**

---

### **7. Setting Date / Time**

1. Press MENU button, then select Setup to enter setting date / time adjustment mode

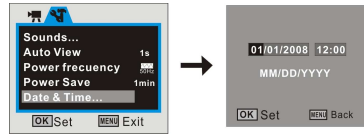

2. Use the Directional Button (Up/ Down/ Left/ Right) to select current date / time and adjust digits as needed.
3. Press OK Button to confirm setting, then press Menu button to exit.

### **8. LED Light / Indicators**

### **LED support light**

- Use this LED support light when taking images in dark or low light scenes.  
Note that as this light has limited range, please use additional auxiliary light to brighten the scene instead to get proper exposure.

Press the LED support light button to activate this lamp. Press again to turn OFF.

### **Self timer LED indicator**

- This lamp indicates that the recorder is active in Self-timer Mode.

Refer to section in manual for Self-timer setting details.


 

 



### **Display Button operation**

 
Pressing the Display Button will create following changes:

- Press once to remove all information icons and numbers from the LCD screen; this will help you to improve framing and selecting the recorded scene.
- Press it a second time and the screen becomes blank but camera is still active as indicated by the Power indicator lamp. The blank screen will help you to save battery power during recording of long video.
- Press again to return to LCD displaying typical screen with all icons

## 9. Video MODE

**Preview / scene mode:** The following icons / information are displayed on the LCD screen in Video MODE.

- 1  Video Mode icon
- 2  **Auto** White Balance icon  
Available: Auto/Daylight/Cloudy/Fluorescent/Tungsten
- 3  Metering / exposure (multi)
- 4  Video resolution indicator 1080x720, 640x480 or 320x240.
- 5 **00:00:00** Video recording counter; hours, min, sec.
- 6  **SD Card** icon: the icon appears when the SD card is inserted
- 7  the battery power indicator
- 8  **LED** Supporting light icon: the lamp is ON
- 9 **Zoom** range: numbers indicate current setting of the zoom (max. 4X available)
- 10 **Memory Full:** message indicates that the SD card memory is full and no more recording is possible.

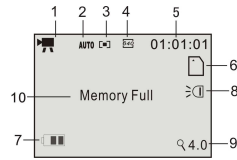


### Recording Video clips

Turn the recorder ON and select the Video MODE


Point the lens towards the subject, observing the scene appearing on the LCD screen.

 - 1 Press the Shutter button to start recording video
- 2 The video recording counter will start counting the elapsed recording time
- 3 Press the Up button to pause recording and press again to continue
- 4 Press the Shutter button again if you wish to stop recording
- 5 You can zoom IN or zoom OUT of the scene while recording a Video clip; use Zoom IN / OUT buttons or Zoom IN / OUT switch to adjust the zoom.

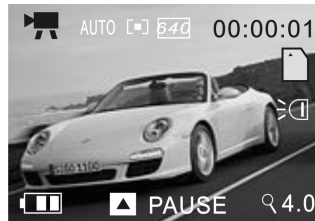

### Video mode / Menu

 When the recorder is in Preview / scene Mode press the Menu button to enter available settings as below:

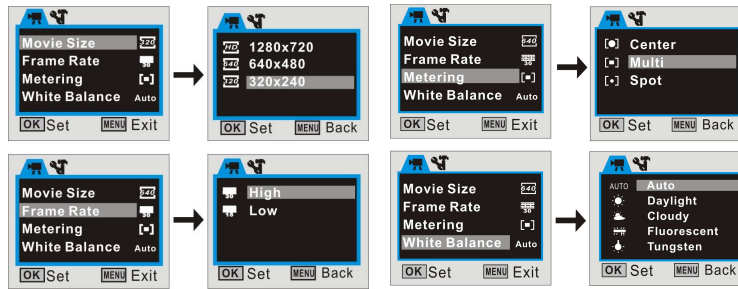

Use the Up / Down buttons to browse and select available Menu options then press the Right button to review available settings.

Press Up / Down button to select desired setting then press OK button to confirm your selection.

Press the Menu button to exit the Video Menu mode and return to Preview / scene










Mode.




Note: When 'HD' video resolution is selected, 'Frame Rate' option is disabled.


## 10 Camera MODE

 **Preview / scene Mode:** The following icons and information are displayed on the LCD screen in Camera MODE.

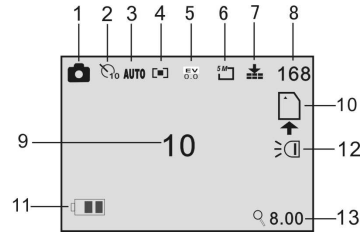- 1  Camera / still picture icon
- 2  Self-timer mode symbol
- 3 **Auto** White balance (Auto)
- 4  Metering / exposure mode
- 5  Exposure value
- 6  Picture resolution value
- 7  Image quality icon



- 8 168 Image counter shows number of available pictures remaining
- 9 10 Self timer / delay time in seconds
- 10  SD card icon; the card is inserted
-  The SD card is locked – no storage is possible. Unlock the card to use it
- 11  Battery / power level status

 12  LED Supporting light ON icon

13 **4.0** Zoom value indicator.

### Taking Still pictures

Turn the recorder ON and move the Mode Selector to the Camera Mode

Aim at the scene or subject visible on the LCD screen

 
Keep recorder steady then press the Shutter Button to take a picture.

 
**Note:** The LCD will display "Card Locked!" message if the inserted SD memory card is set in LOCK (locked) position and recorder will NOT take a picture.

Remove, unlock and re-insert the SD card to take and store pictures.

### Camera Mode / Menu:

When the recorder is in Preview / scene Mode press the Menu button to enter available settings as below:

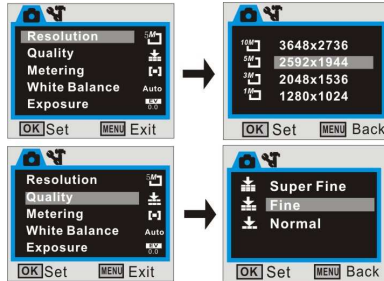

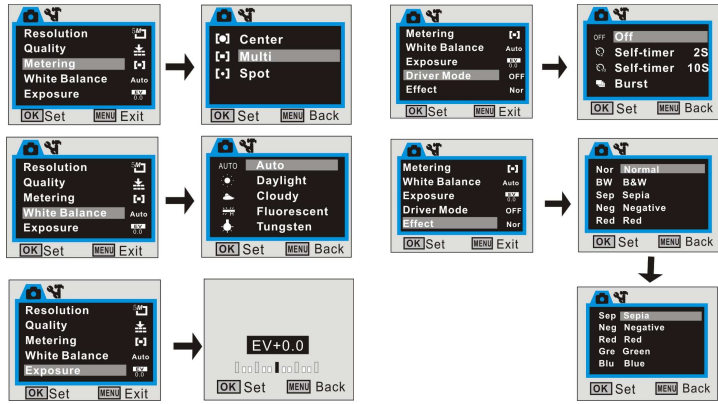

Use the Up / Down buttons to browse and select available Menu options, then press the Right button to review available options.

Press Up / Down button to select desired setting, then press OK button to confirm.  
Press the Menu button to exit the Camera Menu mode.

**Driver Mode**

The Driver Mode will allow you to adjust / set the **Self- timer**, or take three consecutive pictures in the **Burst Mode**.

**- Self timer**

Browse and select the Driver Mode then press the Right button to access the available Self Timer options then select 2 or 10 seconds delay time.

Press OK to confirm, then press MENU to exit setting.

Press the Shutter button and recorder will "beep" while counting down the delay time, then the picture will be automatically taken.

Note: You can also quickly access the Self Timer / Setting mode when the recorder is set in Camera Mode. Simply press the Right Button to access the Self-timer setting.

**- Burst / Consecutive photos:**

Activate the recorder, then press the MENU button.

Select the Driver Mode and Set the Burst option.

Press OK to confirm, then MENU to exit setting.

 
 
Press the Shutter button and the recorder will automatically take three consecutive

pictures.

### 11 Voice Recording MODE:

Set Recorder to Video or Camera recording mode.

- 1 Press the Voice Recording button to enter the Voice recording options
- 2 Press the Shutter button to start recording
- 3 Press Up button to pause recording, press again to continue recording
- 4 Press the Shutter button to stop recording

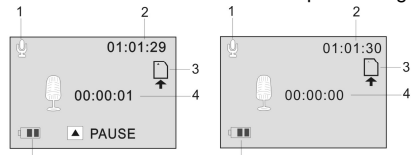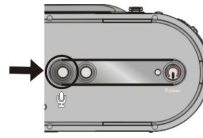

1. Voice recording mode icon
2. Counter showing available recording time remaining
3. SD Memory card icon
4. Actual recording elapsed time

5. Battery / power level status

**12 Playback MODE**

Power the recorder ON and slide the MODE selector all way down to enter the Playback mode.

Use Right / Left buttons to review / select stored records; Video, Still Pictures or recorded Voice. Press OK button to play selected video or recorded voice file.



You can “zoom” the displayed photo images by pressing the zoom IN / OUT buttons or sliding Zoom IN / OUT switch.


When the image is zoomed IN, press OK button and you can “pan” the displayed image by pressing directional buttons. To exit from Pan and Zoom status, press OK button again. You can view other photos, video or voice files by pressing Left/ Right buttons

**Thumbnail mode**


Press Zoom Out button to enter the Thumbnail / Playback mode.



Note:

 : This icon indicates recorded voice file

 
 : This icon indicates video media file.

 : This icon indicates photo with "voice added memo" file.

You can use the direction key to select desired image file, and press OK key or Zoom IN key to exit this Thumbnail mode and return to full screen display mode.

**Playing the Video or Voice file**



Select the Video or Voice file then press OK button to start playing selected record.  
You may press Up button to pause or press OK again to stop playing.

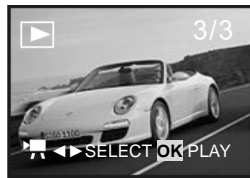

Stop mode



  Playing mode

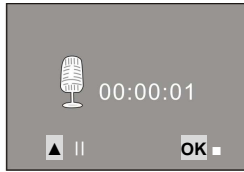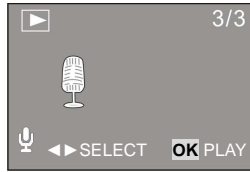


**Playback / Menu**


In Playback mode, press MENU button to enter available settings as below:



 Use Up / Down buttons to select desired function, use Right button to obtain access to available setting. Use Up / Down buttons to select option, then press OK to confirm.

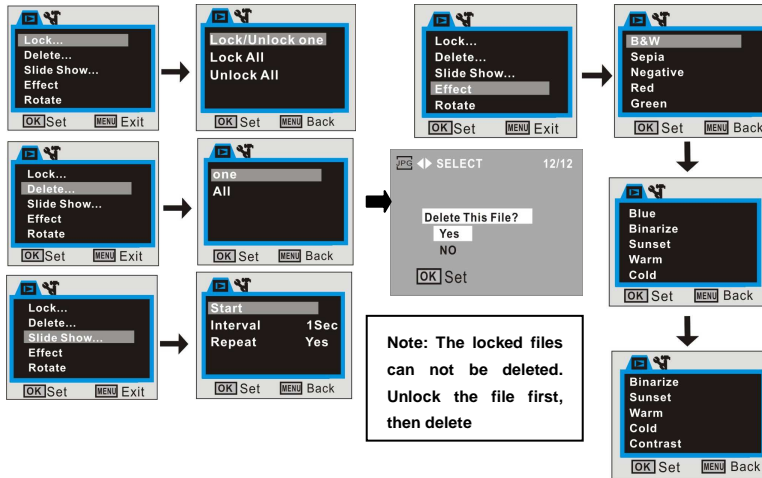

**Note: The locked files can not be deleted. Unlock the file first, then delete**

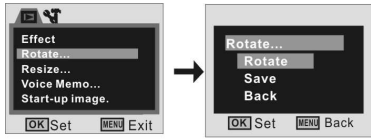 

**Resize function**  
You can "resize" the image only to the smaller size than original

Press Shutter button to stop the recording;

Note: Options highlighted in gray color are not available for selection.

### Adding Voice Memo to Images

You may add a Voice Memo / comment to selected image.  
30 seconds is the maximum Voice Memo recording time.



 
### Playing image with the Voice Memo file


- 1 Use direction buttons and select the image with the Voice Memo
- 2 Press OK to start playing the selected jpg with voice memo
- 3 Press Up key to pause / resume playing, press OK to stop

### Start up image


You can set your favorite picture as your own "Welcome" screen.


1. Scroll down Playback setting and activate Start-up Image option on selected photo.
2. Press the Right button and select Set, then press OK to confirm.

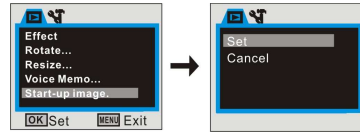


3. Press the MENU button entering the Internal settings 
4. Use the UP/ Down buttons to select Start-up Image option.
5. Press the Right button and select My Image. Then press OK to confirm.

**13 Setup / Internal setting mode:**

  1. Turn the recorder ON then press the MENU and Right button to enter  internal settings
2. Use the Up/ Down buttons to select desired setting and press the Right button to access available options; see available setting options below.
3. Press OK key to confirm and press MENU key back or exit.

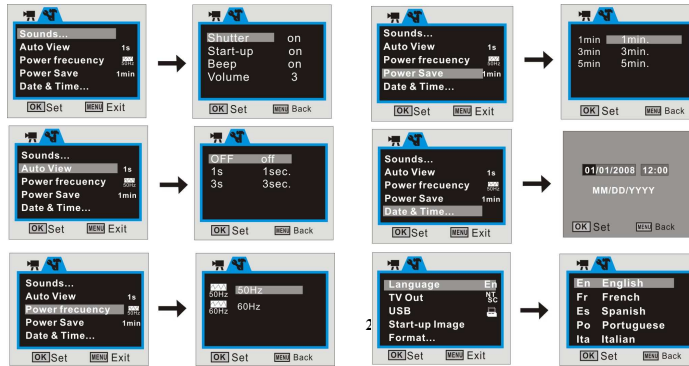

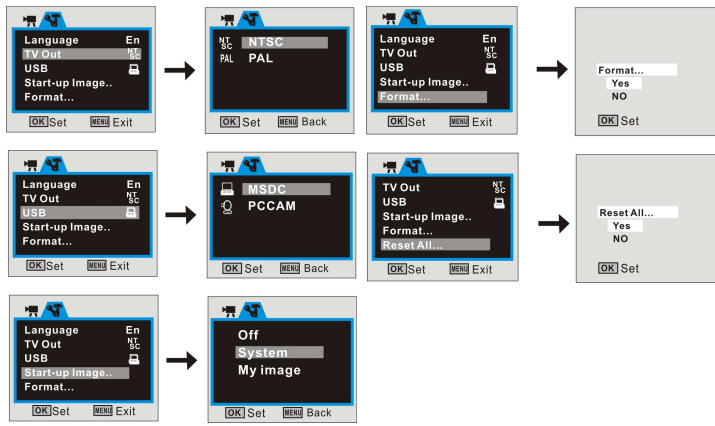

**Note:**

**Format:**

Formatting the SD card (when the card is inserted) will erase all data.

Make sure to back up & save important files / records before formatting SD card.

 
**Connecting Recorder to the Computer**

**Please install the Driver (bundled on supplied CD) first, before connecting recorder to the computer.**

**Note:** Installation of the Driver is required **ONLY** if you wish to use your recorder as a PC cam to see or transfer live images, scenes through the Internet.

**1. Driver Installation**


1. Please insert supplied CD into computer's CD ROM drive.
2. The system will start CD Installer interface; see the screen shown below:

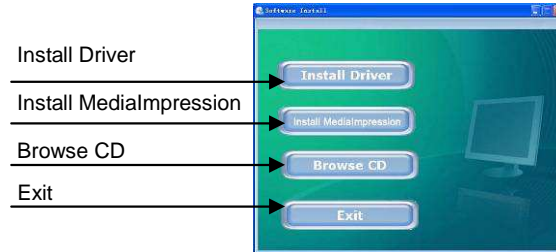

**Note:** If your computer did not start CD Installer as Auto run, please open My Computer, go to CD ROM, and select "autorun.exe" program located in the CD root directory.


- Driver installation

 Click "Install Driver" button, follow provided steps and complete installation.

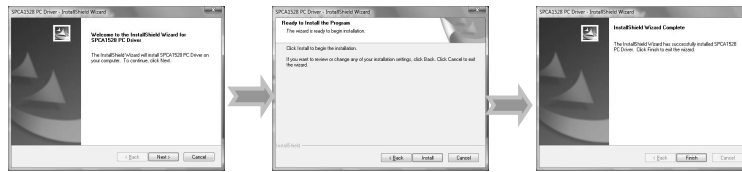

- Restart computer when installation has been completed.

 Note: The Driver (bundled on CD) is suitable for Windows XP, Vista, 7  
Use supplied USB cable and connect video recorder to computer USB port.

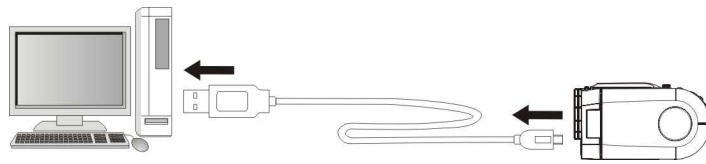

- Note:** The recorder has two USB modes; MSDC (default, when power ON) and PCCAM (when selected from Internal Setting Menu)
- The default MSDC (Mass Storage / Removable Disc) is used for playback and downloading video, pictures into the computer.
  - The PCCAM (PC camera / webcam) can be used for transferring live images, scenes into the computer.

**3. Download video, picture files to the computer:**

- Power ON recorder and connect to the computer using USB cable.
- Select and open "My Computer" on the computer screen.
- Scroll down and open the "Removable Disc" which represents your recorder in Mass Storage mode.
- Open selected "Removable Disc" then select DCIM / 100MEDIA folder.
- Open 100MEDIA folder to see all captured images / video files.



- You can click to play / review selected records and / or store valuable records inside computer's memory.
- Copy or drag files into the folder where you wish to save your records.

### **MediaImpression Installation**

You may install MediaImpression software into your computer from installation CD. This program will allow you to import / store all, or selected records from your camera (when connected) to your computer. Also MediaImpression will give you easy access to YouTube and other popular websites.

### **Software installation**

Click "Install MediaImpression" button and complete the installation according to the following steps






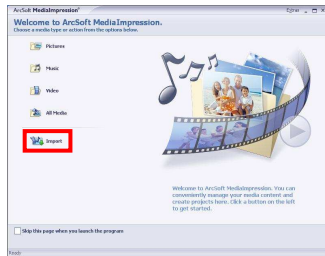 
Please restart the computer when prompted to complete the installation, computer will install MediaImpression shortcut / icon on the Desktop.

### Using MediaImpression

 
The MediaImpression program will also provide “one button” access to the YouTube website: - post your video and share with millions of Internet users!

Double click the  icon on the desktop or follow “Start → Programs” to open MediaImpression

After starting MediaImpression, click “Import” to import the media.




Choose the video camera storage and choose the output location.

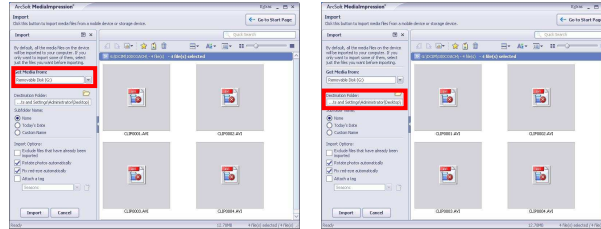

Choose required file and click "Import" - selected file will be stored in the indicated output

 location.

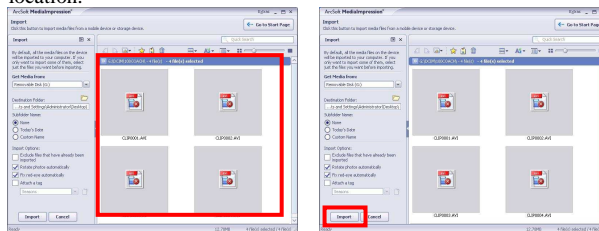

Click “Go to Start Page” to return the main screen; click the “Video” or “All Media” to get the “YouTube” access.




 
Choose file and click “Upload to YouTube”



Enter your username and password to login to YouTube, execute upload / post selected Video.

Note that when software installation is complete, please reboot the computer for the first time operation.

##### 5. PC Camera function

- Power ON the recorder and set it at the PC Cam Mode (refer to the Manual if required).
  - Connect recorder with your PC and open MediaImpression program.
  - Click  and follow onscreen prompts
- Live images, scene will appear.
- Click  button to exit or close the PC Cam if session completed.

**Note:** If no images or scene is visible; please check whether the Driver for the recorder is installed properly and check whether the selected Video recorder  is indicated. Refer to MedialImpression "Help" if further information required.

 
### Connecting recorder to TV

You may connect recorder to your TV and watch recorded video clips or view photos on the TV screen.

Turn on the power of the recorder.

Use supplied AV cable and connect TV output port on your recorder to Video input (yellow connector) and Audio input (red / white connector) on your TV. Set your TV to Video/ External mode.

Slide the MODE selector of the recorder all the way down to enter the Playback mode.

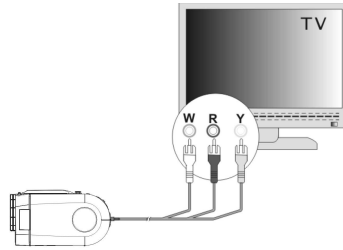

Use Right / Left buttons of the recorder to review / select stored Video and Photos. Press OK button to play selected video on your TV.

#### **Safety precautions**

---

Your video recorder is a complex electronic digital device and you need to be aware of and follow basic precautions: .

- ◆ Do not try to open the housing of the video recorder or attempt to modify this video recorder in any way. Maintenance and repairs should be carried out only by an authorized service agent.
- ◆ Keep the recorder away from dust, sand, water and other liquids or harmful chemical substances.
- ◆ The recorder is not waterproof. Protect from humidity. Do not use recorder if your hands are wet.
- ◆ Keep your recorder away from extreme heat and do not point recorder directly into strong sunlight.
- ◆ Use only AAA type alkaline batteries. If batteries become exhausted, remove all old and install new batteries. Dispose of old batteries according to local disposal regulations.
- ◆ Check your recorder and the condition of batteries after long storage period or before recording important events.
- ◆ Remove batteries if you do not intend using recorder for an extended time
- ◆ Do not touch the lens surface with finger, use soft cloth if necessary or blow away any dust contamination. Do not use any solvent to clean lens or plastic housing.

- ◆ Format the SD memory card before using with the recorder; save important records first before formatting the card, as the formatting will erase all data.
- ◆ Using the SD memory card:
  1. Keep the card away from extreme heat or dust, do not bend or tamper with the card.
  2. Do not force the card when inserting into the recorder; if you feel resistance check card alignment and reinsert card carefully.
  3. Note that the card has a tiny LOCK slide / switch; set the slide to non-LOCK position when you wish to save recordings or images on the card.

**System requirements**

<b>Computer System Requirements</b>	
<b>Operating System</b>	Windows XP, Vista, 7
<b>C P U</b>	Pentium III 1GHz or above
<b>Memory</b>	512 MB or above
<b>Sound Card, Display Card</b>	The sound card and the display card should support DirectX8 or higher version.
<b>CD Driver</b>	4 x speed or above
<b>Hard Disk</b>	1 GB or more available hard disk space
<b>Interface</b>	USB 2.0



**Key features**

Digital video recorder – HD video resolution and other resolution options  
Still picture capability up to 10 Mega pixel image resolution  
Mass Storage / PC webcam mode  
4 X digital zoom  
TV output  
2.4inch color LCD display  
SD Memory card slot, up to 8GB SD/ SDHC card capacity  
Macro / Normal lens settings

**Technical Specifications**

<b>Video record resolution</b>	HD: 1280 x 720 VGA: 640x480 QVGA: 320x240
<b>Still Picture resolution</b>	10MP- 3648x2736, 5MP- 2592x1944, 3MP- 2048x1536, 1.3MP- 1280x1024, VGA - 640x480
<b>Lens Focus distance</b>	5ft(140cm)~infinity (Normal setting); 6~10inches/15~25cm (Macro setting);
<b>Digital zoom</b>	4x
<b>LCD display screen</b>	2.4" TFT LCD
<b>Function modes</b>	Video recording, Still photo taking, Voice recording, Playback,

	Mass storage, Web Cam	
<b>White balance</b>	Auto/manual: Daylight, cloudy, Tungsten and Fluorescent	
<b>Exposure</b>	Automatic/manual (-2.0EV~+2.0EV, 0.3EV/step)	
<b>Self-timer</b>	2/10 seconds delay	
<b>File format</b>	Video	AVI
	Photo	JPEG
	Voice	WAV
<b>External Memory</b>	SD Card slot - accepts up to 8 GB card (card not supplied)	
<b>USB interface</b>	USB 2.0 interface	
<b>Power supply</b>	Battery: 4xAAA alkaline 1.5V (not supplied)	
<b>Dimensions (LxWxH)</b>	4.5 x 1.65 x 2.45 inches	
<b>Weight</b>	5.3oz (excluding batteries)	