

1 What's Included



1. Digital Camcorder
2. AV Cable
3. Installation CD
4. Wrist Strap
5. Built-in USB Connector (not shown)

SD Memory Card not included

2 Parts of the Camera



- | | |
|--|---|
| <ol style="list-style-type: none"> 1. AV Out Port 2. Wrist Strap Connector 3. Tripod Socket 4. USB Connector 5. USB Lever 6. LED Indicator Light 7. Microphone 8. Lens 9. Speaker 10. Mode Button 11. Menu Button | <ol style="list-style-type: none"> 12. Left / Resolution Button 13. Shutter / OK Button 14. LCD Screen 15. Up / Zoom In Button 16. SD Memory Card Slot 17. Power Button 18. Delete Button 19. Right Button 20. Down / Zoom Out Button 21. Battery Compartment |
|--|---|


3 Initial Setup

Installing the Battery




Insert 3 x AAA (1.5V) batteries.
Alkaline batteries recommended
(not included).

Installing the Memory Card

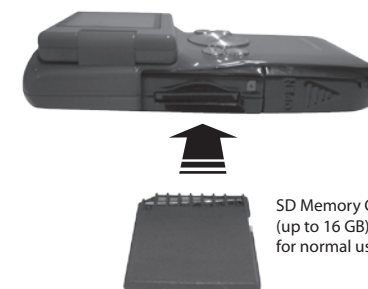


SD Memory Card
(up to 16 GB) needed
for normal use.

Turning On the Camera

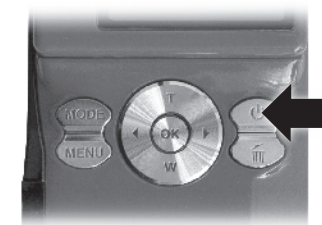

Using the Camera

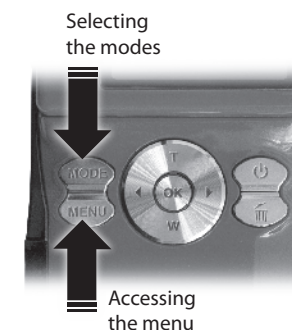

4 Main Camera Modes

Your camera has different modes for the various camera functions.

You can switch modes by pressing the **MODE** button on your camera after the camera has been powered ON.



Video Capture Mode

Use this mode to capture videos with your digital camera. This is the default mode when the camera is powered ON. To take a video, aim your camera as desired and press the "Shutter" button to start the recording. A red recording indicator will appear while the recording is in progress. To stop the recording, press the "Shutter" button again. The video will be automatically saved to the memory card.

To access the various menus for the Video Capture mode, press the **MENU** button while in the Video Capture mode. For more information, please refer to the camera's User Manual in the software or online.



Photo Capture Mode

Use this mode to capture photos with your camera.

After powering on your camera, press the **MODE** button once to open the Photo Capture mode. To take a photo, aim your camera as desired and press the "Shutter" button. The photo will be automatically saved to the memory card.

To access the various menus for the Photo Capture mode, press the **MENU** button while in the Photo Capture mode. For more information, please refer to the camera's User Manual in the software or online.



Playback Mode (Photos & Videos)






Use this mode to view and manage the videos and photos saved to the SD memory card.

After powering on your camera, press the **MODE** button twice to open the Playback mode. You can scroll through the videos and photos that you captured with your camera to view or delete as desired.






To access the various menus for the Playback mode for videos and photos, press the **MENU** button while in the Playback mode. For more information, please refer to the camera's User Manual in the software or online.

尺寸：360x290mm 105克铜版纸彩色双面印刷

Install Software

- 1  Locate software CD found in package
- 2  Connect your PC or MAC to the internet
- 3  Insert CD
- 4  Follow all instructions to install software
- 5  Software will open

Download Images

- 1  Turn on your camera
- 2  Connect camera via USB to computer
- 3  Open software and press the "Get Images" button
- 4  Follow instructions on the screen to download images
- 5  Edit and Upload images to social networks

System Requirements

- Microsoft® Windows XP SP3, Vista SP1 or Windows 7
- Mac computer with an Intel Processor Mac OS X 10.5.x or later
- 250MB Free Space
- QuickTime® 6 or higher
- Microsoft® Internet Explorer 7 or higher
- Windows Media Player 10 or higher
- Internet Connection

If you would like more detailed instructions beyond the Easy Guide, the full camera manual is available on the Home screen or in the "Help" menu after installing the Vivitar Experience Image Manager software

Windows and the Windows logo are registered trademarks of Microsoft Corporation. All other trademarks are the property of their respective companies.

1. warning:
Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
2. Class B digital device or peripheral or cordless phone, Note:
NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.



Easy Guide™



READ ME FIRST

© 2009-2011 Sakar International, Inc. All rights reserved.

EN

This device complies with the part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with instructions may cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on. The user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or experienced radio/TV technician for help.

MAIL TO THE APPROPRIATE ADDRESS BELOW:

Sakar / Vivitar International
Attention: Service Department
 195 Carter Drive
 Edison, NJ 08817

Sakar / Vivitar UK
 2D, Siskin Parkway East
 4020 Middlesbrough Business Park
 Coventry, CV3 4PE

For Australia Customers Only
 Return faulty camera to the Refund
 Counter at the store where purchased.

For technical support issues please visit our website at www.vivitar.com. You can find manuals, software and FAQs on the website. Can't find what you are looking for? E-mail us at support@vivitar.com and one of our technical support team members will answer your questions. For phone support in the US please call 1-800-592-9541, in the UK call 0800 917 4831 in Australia call 1800-006-614. If you are calling from anywhere else, please visit www.vivitar.com for your local toll free number.

Warranty Information:
 This warranty covers the original consumer purchaser only and is not transferable. Products that fail to function properly UNDER NORMAL USAGE, due to defects in material or workmanship will be repaired at no charge for parts or labor for a period of one year from the time of purchase.

What Is Not Covered By Warranty:
 Damages or malfunctions not resulting from defects in material or workmanship and damages or malfunctions from other than normal use, including but limited to, repair by unauthorized parties, tampering, modification or accident.

What To Do When Service Is Required:
 When returning your defective product (postage pre-paid) for service, your package should include:
 1. Copy of original bill of sale
 2. A detailed written description of the problem.
 3. Your return address and telephone number (Daytime)

Technical Support and Warranty Information