

in the box

Location of controls

Basic operation

Main buttons: Power, Home, Back, Menu, Volume Up, Volume Down.

Inserting the SD card (see included): Steps for inserting an SD card into the slot.

Charging the battery: Diagram showing the device connected to an AC adapter.

Connecting a USB stick: Diagram showing the device connected to a USB stick via the adapter.

Turning on or off: Instructions for power on and off.

How to use the touch-screen display: Diagrams showing correct and incorrect touch gestures.

Home screens: Overview of the home screen layout and navigation.

Apps screen: Overview of the application menu.

Setting up the Websurfer: Initial setup steps including language selection and network connection.

Web browsing: Instructions for navigating the internet.

Multimedia: Instructions for viewing photos, videos, and playing music.

Transferring and managing files: Instructions for connecting to a PC and transferring data.

FRONT

Downloading the Amazon Appstore: Step-by-step screenshots for downloading the Amazon Appstore from the Google Play Store.

Downloading Apps: Screenshots showing the process of downloading various applications like Angry Birds, Facebook, and others.

Managing apps: Instructions for managing installed applications, including uninstalling and updating.

Connecting to an HDMI television or monitor: Diagram showing the device connected to a TV via an HDMI cable.

Resetting: Instructions for performing a factory reset.

Legal information: Copyright and trademark notices.

Limited Warranty: Details of the product warranty, including terms and conditions.

WebSurfer

BACK