

MID PA0752

User Manual



User Manual

Notice

- Before operating the device, please read the safety precautions and user's guide carefully to ensure safe and proper usage.
- The descriptions in this user's guide are based on the factory default settings.
- The pictures and screenshots in this user's manual may slightly differ from the look of your tablet.
- The format and information of this user's manual is based on Google Android 4.0 ICS operating system.
- The applications and their functions vary according to their release date and the operating system that they were designed for. 4Sight, LLC won't be responsible for problems in performance caused by third party applications.

Contents

Introduction of device and accessories

Accessories.....	3
Battery charging.....	3
Appearance.....	5
Turning on/off.....	6
Touch screen usage.....	7
Operation interface.....	7
Main interface description.....	8
Adding and deleting shortcuts on the main screen.....	10
Connecting to PC through USB.....	12
Basic settings.....	13
Troubleshooting.....	20
Safety precautions.....	20

Introduction of device and accessories

Accessories


After unpacking, first check that the following items are included:

- Tablet
- USB cable
- AC/DC Adapter
- 4Sight, LLC will not be responsible for any incompatibility or damage caused by third party accessories.



Battery charging

The device is equipped with a built-in battery. Charge the battery fully before using the device for the first time. It is recommended to charge the device for a minimum of at least ten hours for first use.


Only use the provided charger or USB cable (input: AC110~240V 50/60Hz; output: DC5V/2.5A). 4Sight, LLC will not be responsible for any device damage caused by an unapproved charger.

- The user can't replace the built-in battery. Please contact the service provider for information on battery replacement.
- You can charge the battery with the charger or USB cable.
- When the battery level drops lower than **15%**, the device will send an alert and display a low battery message. The battery icon  in the lower right corner also appear empty. If the battery power runs out, the device powers off automatically. Connect the charger before attempting to power the unit back on.
- If the battery completely runs out, the device cannot be turned on even when first connecting the power adapter. In this instance, charge the unit for five minutes and power it back on.
- You can use the device while charging, but this will increase

the charging time.

- While charging, the battery icon will display the 'charging' lightning bolt 
- It is normal for the device to become hot while charging, the device's battery life and performance will not be affected.
- When the battery is fully charged,  please disconnect the power adapter.

Full charging requires roughly 4 hours.


The battery is consumed faster if APPS or WiFi is running in background. To save battery power, close unused applications. You can also reduce the battery consumption time by turning down the brightness of the display also, when being unused, press the power button [

Appearance:

Front View:



Rear View:

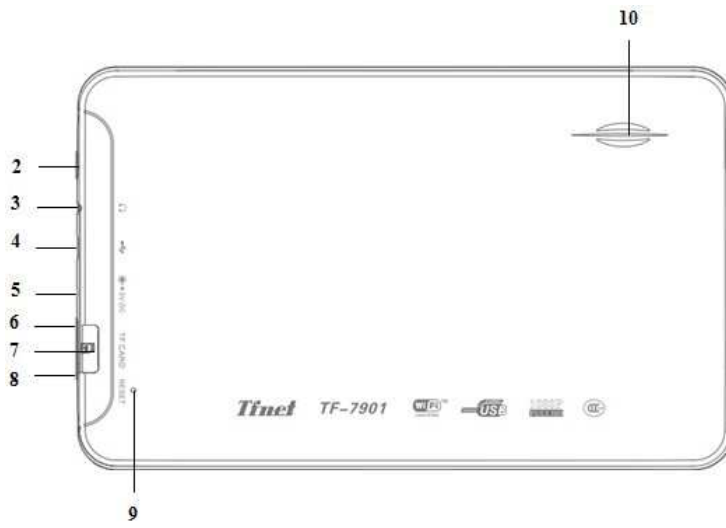


Number#	Description
1	Camera
2	Power button, Power on/off
3	Earphone jack, 3.5mm standard earphone jack
4	Micro USB interface. Used for: charging, connecting to external USB devices, as well as connecting to your PC for data transmission
5	Charging interface, support DC5V/2.5A adapter
6	VOL up button, VOL+
7	Micro Memory Card Slot, supports 2GB-32GB
8	VOL down button, VOL-
9	RESET
10	Speaker

Turning on/off

To turn on the device, press and hold [] for 3 seconds (3s)

To turn off the device, press and hold [] for 5s, then select Power off from the pop up menu

Standby Mode: When powered on, press the Power key  to enter the device into standby mode. Press the button again to exit standby mode.

When exiting first powering on the device, or returning from standby


mode, you will be prompted with a 'lock' screen
To unlock the device, touch and hold the 'lock' icon on the screen and drag it to the unlock icon on the right

Touch screen usage

The PA0752 has a 7" capacitive touch screen, which allows users to easily select or execute functions. Before using the touch screen, please review the below advice on proper use.

- Do not use foreign objects to make selections on the touch screen as this will damage the screen
- Do not saturate the touch screen with water, or any other liquid
- This device is equipped with a capacitive touch screen, which detects the charge sent out by the human body. To achieve the best results, touch the screen with your fingertips; do not operate the device using a stylus, pen or any sharp object.

There are a few basic commands that are available to control the unit through the touch screen:

- Tap: tap once quickly
- Tap and hold: tap and hold an item for at least two seconds
- Drag: tap and hold an item, and drag it to your desired location
- Double tap: quickly tap an item twice
- Slide: slide up, down, left or right to browse through lists or menus
- If your tablet remains untouched for an extended period of time, it will automatically enter standby mode and shut down the display to save battery power. Press the power button [] to wake up the screen


Operation interface

When the screen wakes up after being in standby mode, it will be


locked. You can view the device status (charging or not) as well as view the time.




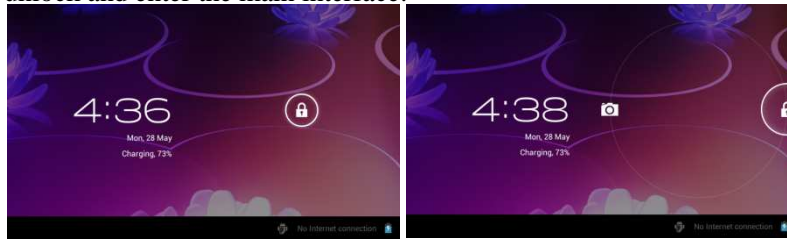

Unlocking:



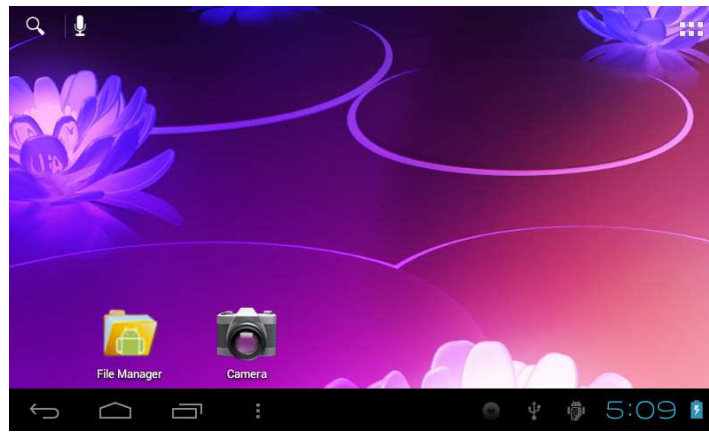

 
When powering on the unit, the device enters the locked screen interface; tap and hold the lock icon, and drag to the unlock icon to unlock and enter the main interface:



Main interface description:



Icon	Function
	Search; allows you to conduct an internet search easily from the home screen of your tablet
	Tap this button to enter the Apps menu and browse your device's installed apps
	Back; a tap of this button will take you back to the previous screen you were working on.
	Home; tap this button within any App and you will be taken to the device's home screen
	Multitasking; tap this button to view a list of recently used Apps, then select the App you desire to easily switch between multiple apps

	USB connected icon; When this icon appears on the bottom of the screen, it indicates that the device has been connected to a PC via the USB Cable
	USB debugging icon; tap to enter the Android development interface
	Time display
	Battery Status
	Settings button; tap this button to bring up a list of settings options from the home screen of your tablet or from any App

 
Adding and deleting shortcuts on main screen

- Adding App shortcuts to the home screen: tap the application icon from the home screen to bring you to the apps list:



In the list, tap and hold the icon of the app that you want to create a home screen shortcut form, drag and drop it to your desired position on the main screen. The shortcut icon of this application will be added to the main screen.

- Add widgets to the home screen: tap the application icon from the home screen to bring you to the apps list. Slide the screen to the right, until your desired widget appears on the screen

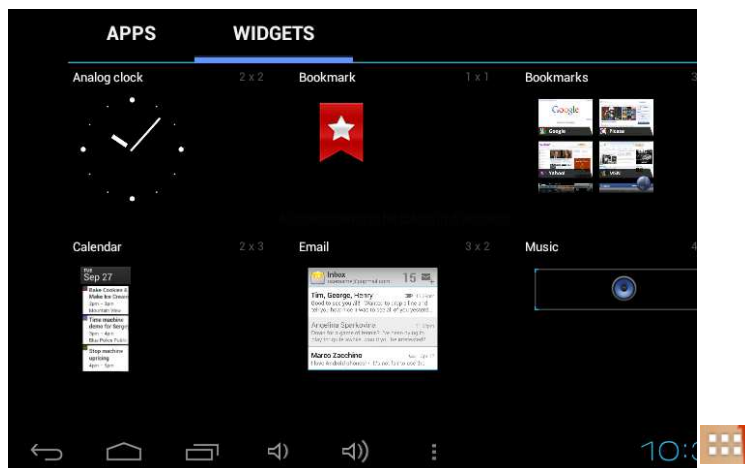


Tap and hold your desired widget, drag and drop it to your desired position on the main screen. The widget will be added to the main

screen.


- Delete items from the main screen: From the home screen of your tablet, tap and hold the item to be removed -- the Recycle Bin will appear on the top of the main screen. Drag and drop the icon into the Recycle Bin and release the item when the Recycle Bin turns red, your item will be deleted from the main screen

Wallpaper settings: on the main screen, tap and hold anywhere on the background (do not tap in icon). The “Choose wallpaper from” dialog box appears to set the background image.

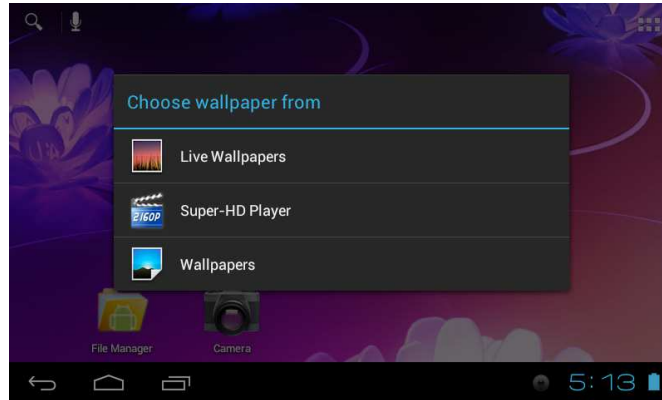

Connecting to PC through USB:

Connect your PC via the USB cable to your tablet. The “USB connected” icon will appear in the bottom right of the screen; tap to pop up the USB storage window, select the “USB connected” option to pop up the ‘USB connected’ interface. Tap “Turn on USB storage” to finish connect your device to your PC.

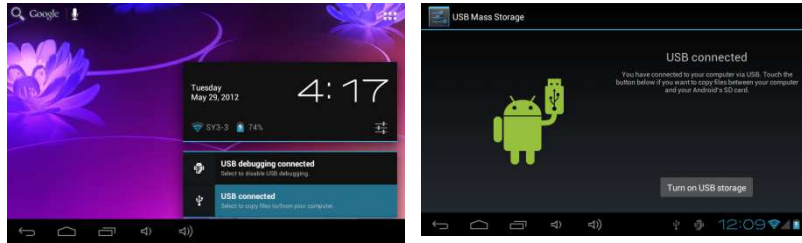


When your device is in this mode, you can copy, cut, or delete files from the device's hard drive or the device's micro memory card.


Basic settings


Settings: tap the Settings icon  to enter the settings interface


1) Wifi settings:


1. Turn on Wi-Fi;
2. All available access points will be listed; tap and select the desired IP name;
3. If the IP isn't encrypted, tap "Connect" in the popup window;
4. If the IP is encrypted, type the password in the popup window and tap "Connect";
5. When the network is connected successfully, the wireless connection icon appears in the lower right status bar of the screen and 'connected' shows below the IP.

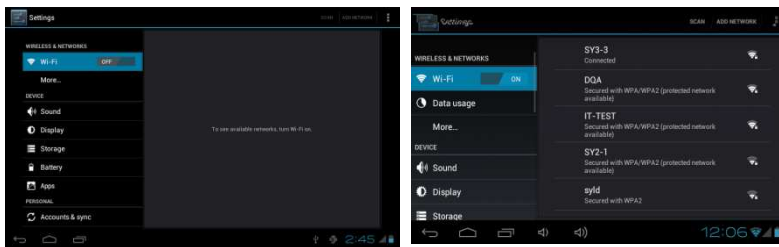



2) Data usage : view the data flow of the wireless network, and set up warnings.


3) Sound : adjust the volume, and modify ringtone & notifications, etc.

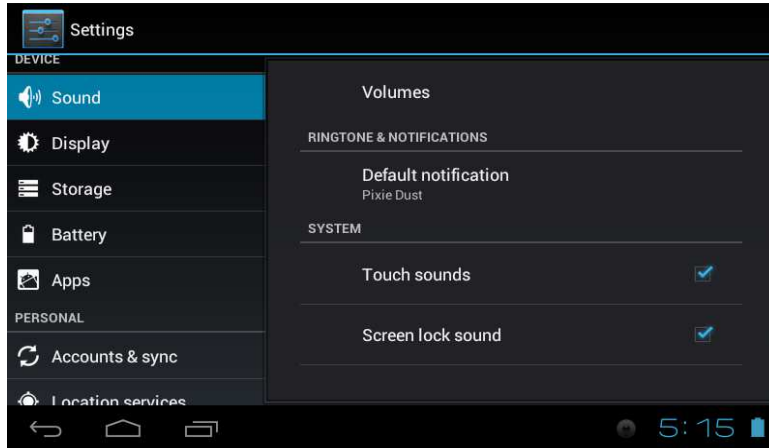


4) Display : set up the brightness, wallpaper, auto-rotate screen, font size, etc.

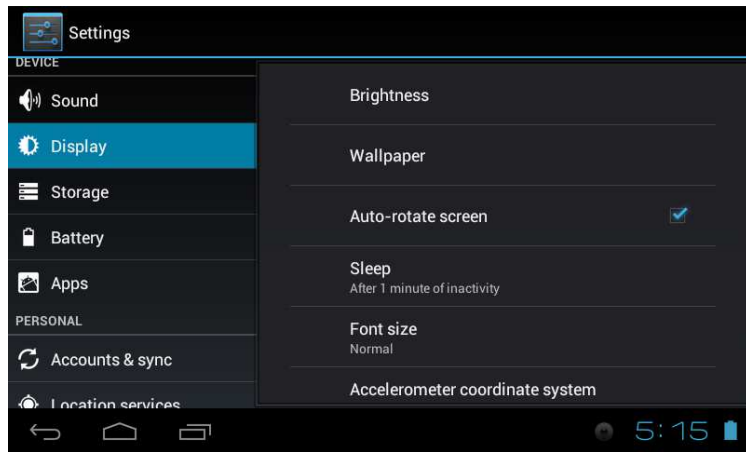

 
5) Storage : manage the device's internal storage as well as the external memory card

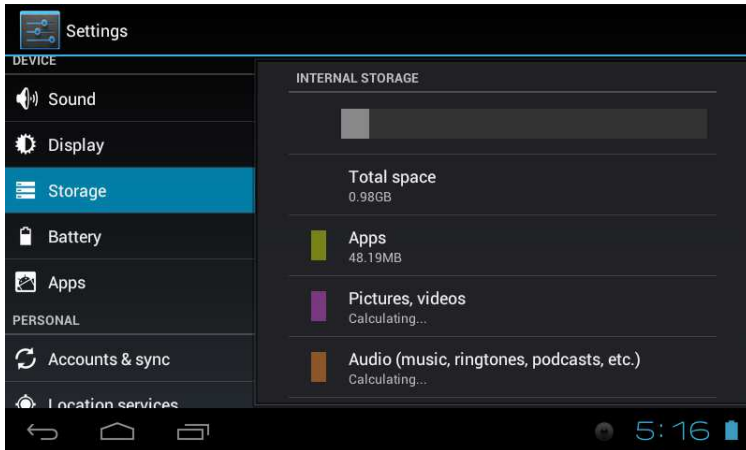

   
6) Battery : view the complete battery status info.

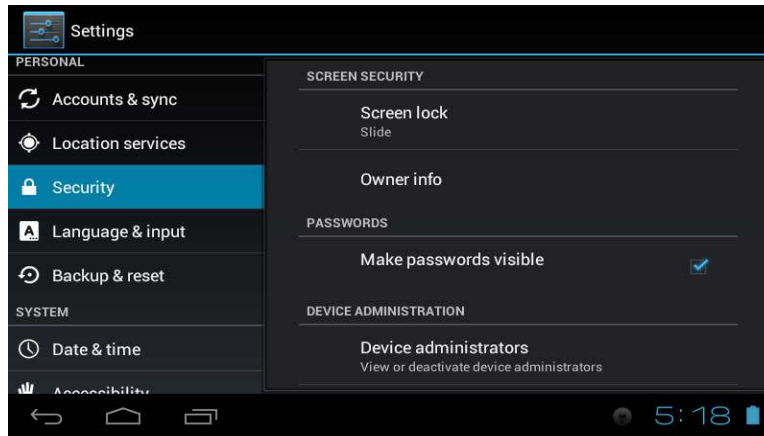


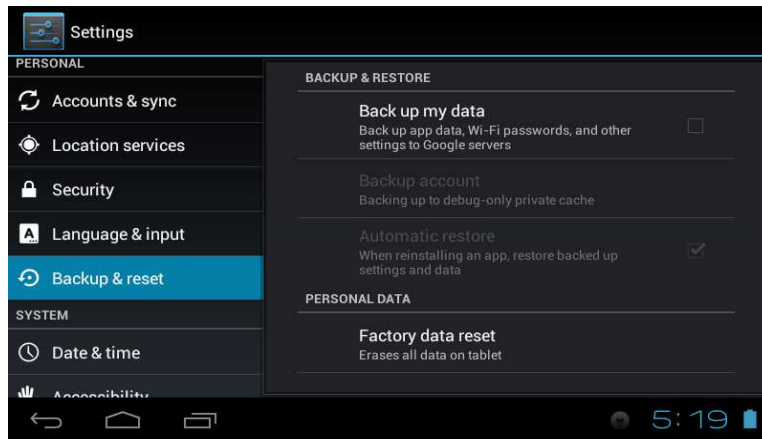 
7) Apps : view all downloaded and running applications

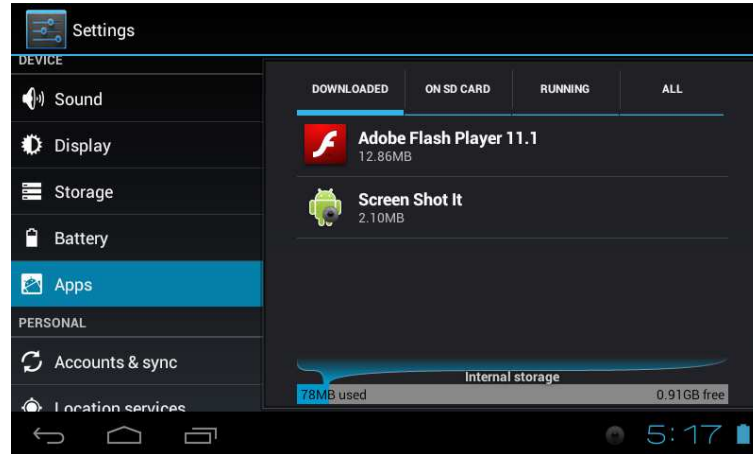


Tap an application in the DOWNLOADED section to stop or uninstall it (cannot uninstall the factory installed applications)

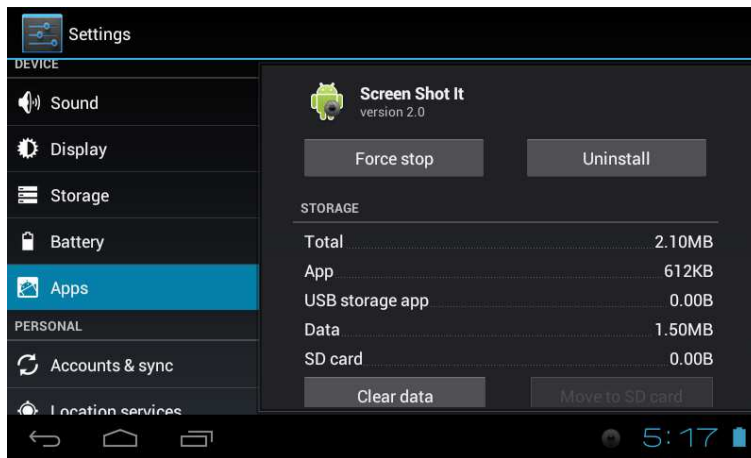 


8) Accounts & sync : tap **ADD ACCOUNT** in the top right to add an account, which can synchronize with your calendar, contacts and e-mail.

 



9) Location services : set up whether you want your device

 
determining your location through Wi-Fi.

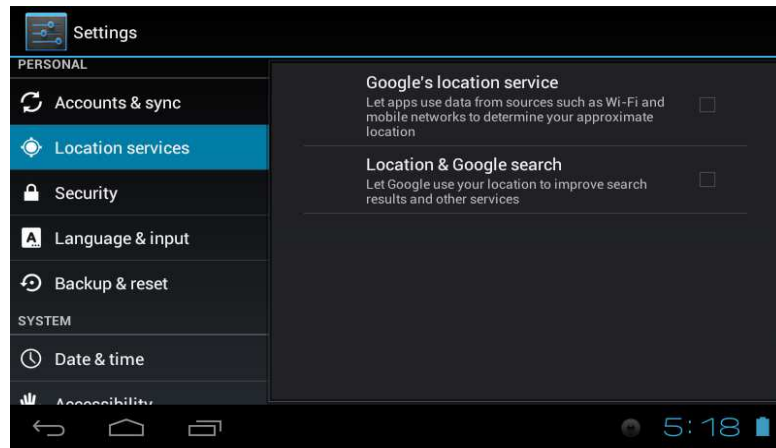


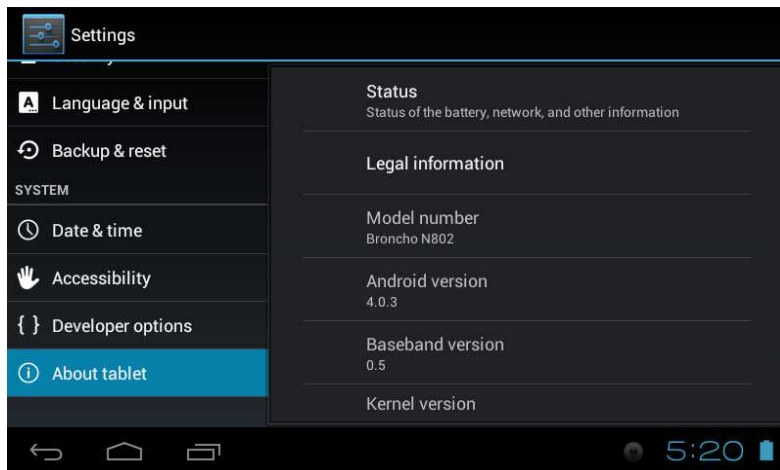 
10) Security : set up screen lock, owner info, password, etc.

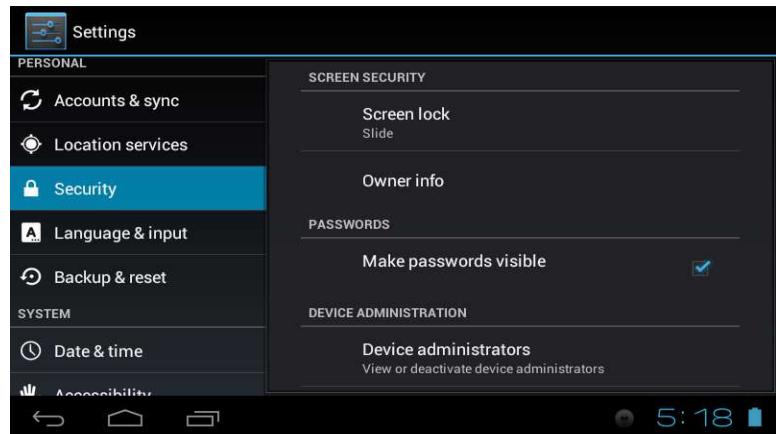


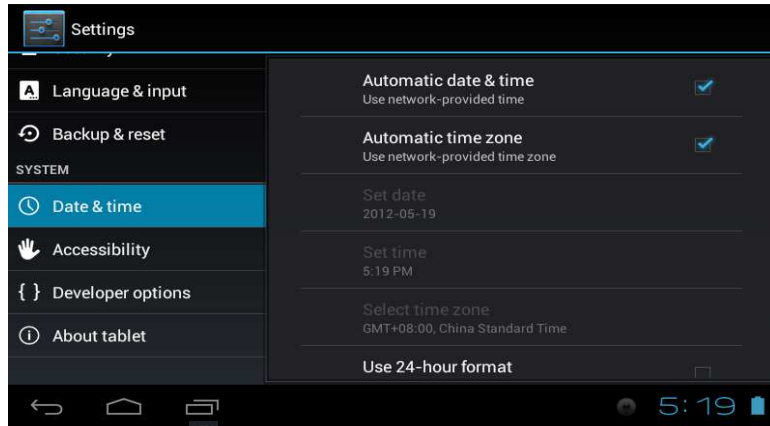 
11) Language & input : chose your preferred language and input method.

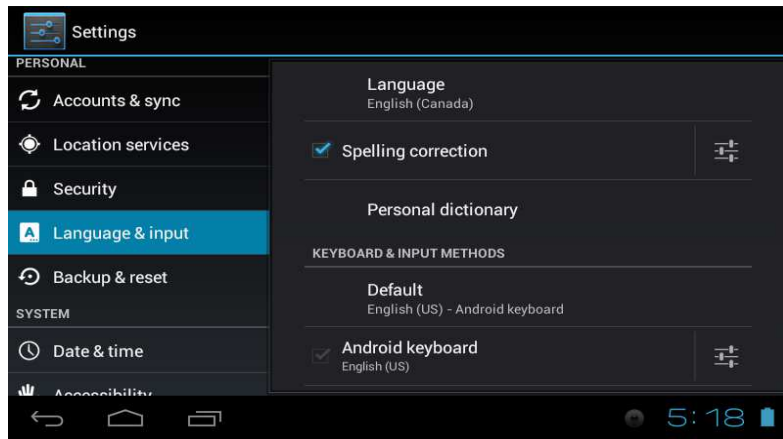


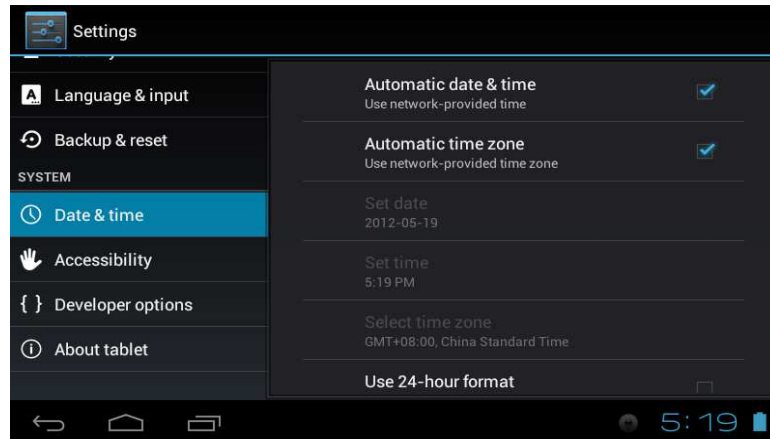 
12) Backup & reset : back up your tablet's data using your Google account. Also restore the tablet to its factory default settings (note: this operation will clear all personal information and downloaded applications)



13) Date & time : set the date, time, and the format of both the time and dates



14) About tablet : view the model number and version information



Troubleshooting:

The device is frozen:

If the device is frozen or suspended, you may need reset the device to resume normal function. Using a paperclip, press the reset button on the back of the unit, unit will restart.

Safety precautions:

To protect you and others from hurt and avoid damaging the device, please read the following information carefully before using the device.

Warning:

Handle your unit with care

- Do not put the device in or on the top of heating devices (e.g. microwave oven, oven or radiator)
- Do not squeeze or pierce the battery.
- Do not expose the device to extreme temperature.

Keep the device dry

- Moisture and liquids may damage the parts or electronic circuits.
- Do not turn on the device if it is wet. If the device has been turned on when wet, turn it off immediately. Wait sufficient time for the unit to dry before powering back on.
- The warranty is void if the device is damaged due to water intake.

Do not use or store the device in dusty or dirty places.

Do not store the device in any places with extreme temperature. Use the device in the temperature range of $-4^{\circ}\text{F}\sim 120^{\circ}\text{F}$.

- Do not leave the device in a closed vehicle, as temperatures many times exceed this range
- Do not expose the device in direct sunlight for long periods of time

Do not put the device near magnetic fields

- Doing so will drain the battery
- Do not use device covers or parts with magnetic shells

Do not drop or harshly impact your device.

- This may damage the screen of the device.
- If bent or deformed, the device's internal parts may be damaged.

Do not disassemble, refit or repair the device

- The warranty will be void if you change or modify the device without permission.
- Do not disassemble or pierce the battery to avoid possible bodily harm

To clean the device:

- Wipe the device with a tissue or towel
- Do not use chemicals or cleaning agents

Only use the device for intended purposes

Ensure the safety of personal and important data

- Please back up your important data

FCC Warning:

- This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
 - (1) this device may not cause harmful interference, and
 - (2) this device must accept any interference received, including interference that may cause undesired operation.
- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
 - -- Reorient or relocate the receiving antenna.
 - -- Increase the separation between the equipment and receiver.
 - -- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - -- Consult the dealer or an experienced radio/TV technician for help.

FCC RF warning statement: The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.