


IMPORTANT NOTICE

Radio Dock Adapter Installation & Identification


The three Radio Dock Adapters included with your Portable Speaker Dock are designed to align your particular Satellite Radio with the Portable Speaker Dock's connector, and provide support for your Radio. The adapters are constructed from precision molded plastic. During installation, extra care must be taken to not bend, force, or otherwise stress the adapter. Take care to align the tabs on the underside of the adapter with the corresponding receptacles on the Portable Speaker Dock, so as not to bend or break these tabs. Refer to step 4 of the enclosed Quick Start Guide, or page 16 of the User Guide, for specific installation instructions.

The three different Radio Dock Adapters are identified below. Each adapter has a sticker affixed on the bottom which identifies the brand of Radio associated with the adapter (SIRIUS, XM, or XMP3i). Turn the adapters over and select the correct adapter for your brand and model of Radio.


SIRIUS Radio Adapter

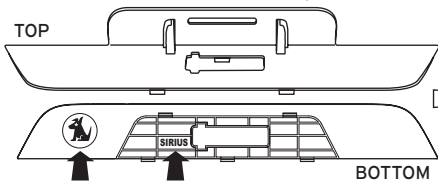

Sportster 5

 


Stratus 4, 5, 6

 


Starmate 3, 4, 5




XM Radio Adapter

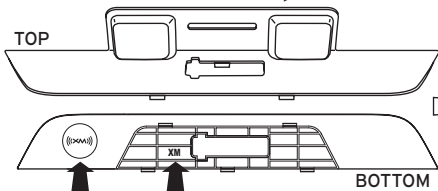


Onyx

 


XpressRCi
XpressRC

 


XpressR

 


Xpress

 

XpressEZ

 

XMP3i Radio Adapter

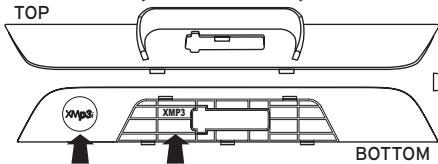

XMP3i
XMP3



SIRIUS | **XM**
SATELLITE RADIO