 


**IM-700I CDMA MODE CELLULAR
MOBILE STATION MANUAL**

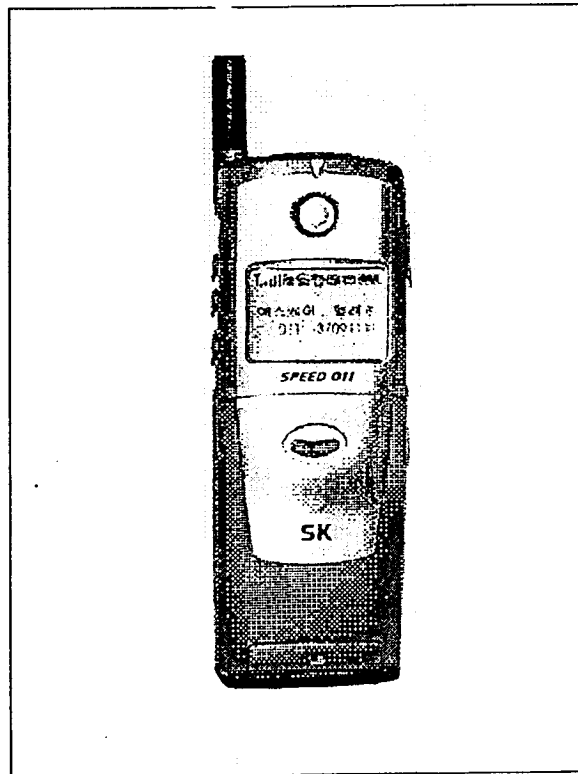

SK Teletech Corporation

Table of Contents

1. Introduction

1.1. About This Manual	1- 1
1.2. Document Conventions	1- 4
1.3. Definition of Terminology	1- 5
1.4. Highlights	1- 9
<i>1.4.1. Silent Mode</i>	
<i>1.4.2. Built-in Digital Recorder</i>	
<i>1.4.3. Built-in Answering Machine</i>	
<i>1.4.4. Alarm</i>	
<i>1.4.5. Built-in Calculator</i>	
<i>1.4.6. Built-in Calendar</i>	
<i>1.4.7. World Time Display</i>	
1.5. Precautions	1-11

2. Getting Started

2.1. Unpacking IM-700I	
2- 1	
2.2. Overview of IM-700I	2- 2
2.3. Fastening Carrying Strap	2- 7
2.4. Proper Use of Antenna	2- 7
2.5. Using Battery	2- 8

2.5.1.	<i>Cautions</i>	
2.5.2.	<i>Installing A Battery</i>	
2.5.3.	<i>Removing A Battery</i>	
2.5.4.	<i>Recharging A Battery</i>	
2.5.5.	<i>Battery Recharge Indicator</i>	
2.5.6.	<i>Battery Talk & Standby Time</i>	
2.5.7.	<i>Minimum Charging Time</i>	
2.6.	Understanding ICON	2-14
2.7.	Understanding SKY Navigator™	2-16

3. Basic Operations

3.1.	Chapter Summary	3- 1
3.2.	How to Power IM-700I On	3- 3
3.3.	How to Power IM-700I Off	3- 3
3.4.	How to Make A Call	3- 4
3.5.	How to Answer A Call	3- 5
3.6.	'Hot Menu' during A Call	3- 5
3.6.1.	<i>Send Your Cellular Number</i>	3- 6
3.6.2.	<i>Mute Mic</i>	3- 7
3.6.3.	<i>Adjust Earpiece Volume (in 'Talk Mode')</i>	3- 7
3.7.	How to Select Ringer	3- 8
3.7.1.	<i>Set to Ring or Vibrate</i>	3- 8
3.7.2.	<i>Select Ringer Style</i>	3- 9
3.7.3.	<i>Set Number of Rings</i>	3- 9
3.8.	How to Set Various Alert Tone	3-10
3.9.	How to Adjust Volumes	3-11
3.9.1.	<i>Earpiece Volume (in 'Standby Mode')</i>	3-11
3.9.2.	<i>Earpiece Volume (in 'Talk Mode')</i>	3-11

3.9.3. <i>Ringer Volume</i>	3-12
3.9.4. <i>Keypad Tone Volume</i>	3-12
3.10. How to Use 'Silent Mode'	3-13
3.10.1. <i>Set 'Silent Mode' (in 'Standby Mode')</i>	3-13
3.10.2. <i>Set 'Silent Mode' (in 'Talk Mode')</i>	3-14
3.11. How to Redial Last Number	3-14
3.11.1. <i>Redial Last Number</i>	3-14
3.11.2. <i>Redial A Number in 'Call History'</i>	3-15
3.12. Memory Dial	3-15
3.12.1. <i>One Digit Address Memory</i>	3-15
3.12.2. <i>Two Digit Address Memory</i>	3-16
3.13. How to Display Your Cellular Number	3-16

4. Phone Book Management

4.1. How to Store A Phone Number	4-1
4.2. How to Search for A Phone Number	4-3
4.2.1. <i>Search by Group</i>	4-3
4.2.2. <i>Search by Name</i>	4-4
4.2.3. <i>Search by Memory Location</i>	4-5
4.2.4. <i>Search by Number</i>	4-6
4.3. How to Edit A Phone Number	4-7
4.3.1. <i>How to Change Name</i>	4-8
4.3.2. <i>How to Change Phone Number</i>	4-8
4.3.3. <i>How to Change Group Assignment</i>	4-9
4.3.4. <i>How to Change Memory Location</i>	4-10
4.3.5. <i>How to Delete A Phone Number</i>	4-11
4.4. How to Edit Group	4-11
4.4.1. <i>How to Add A Group</i>	4-11
4.4.2. <i>How to Change Group Name</i>	4-13

4.4.3.	<i>How to Delete A Group Name</i>	4-14
4.5.	How to Delete 'Phone Book'	4-14
4.6.	How to View Received Calls	4-15

5. Advanced Features

5.1.	Calculator	5- 1
5.2.	Calendar	5- 2
5.3.	Alarm	5- 3
5.4.	World Time Display	5- 5
5.5.	Answering Machine	5- 5
5.5.1.	<i>How to Set 'Answering Machine Mode'</i>	5- 6
5.5.2.	<i>How to Activate Answering Machine</i>	5- 6
5.5.3.	<i>How to Play Recorded Messages</i>	5- 7
5.5.4.	<i>How to Disable Answering Machine</i>	5- 8
5.5.5.	<i>How to Record Announcement</i>	5- 8
5.5.6.	<i>How to Set Number of Rings before Answering Machine</i>	5- 9
5.6.	Built-in Recorder	5-10
5.6.1.	<i>How to Record</i>	5-10
5.6.2.	<i>How to Play</i>	5-11
5.6.3.	<i>How to Set 'Play in Talk Mode'</i>	5-12
5.6.4.	<i>How to Erase All Recorded Messages</i>	5-13
5.7.	Call Time Info.	5-13

6. Convenient Features

6.1.	How to Set 'Auto Area Code Insert Mode'	6- 1
6.2.	How to Set 'Auto Redial Mode'	6- 2

6.3.	How to Set 'Auto Backlight Mode'	6-3
6.4.	How to Set 'HFK Auto Answer Mode'	6-4
6.5.	How to Change International Access Code	6-5
6.6.	How to Set 'Auto Hyphen Mode'	6-6

7. SMS

7.1.	How to Check Voice Messages	7-1
7.2.	How to Use Text Message Utility	7-2
	<i>7.2.1. View Received Text Messages</i>	7-2
	<i>7.2.2. Edit A Text Message to Send</i>	7-4
	<i>7.2.3. Delete A Text Message to Send</i>	7-6
7.3.	How to Delete All of Received Messages (Voice & Text Messages)	7-7

8. Protection

8.1.	Set 'Auto Lock Mode'	8-1
8.2.	Lock International Call	8-2
8.3.	Lock Phone Book Access	8-3
8.4.	Lock Menu Access	8-4
8.5.	Lock 'Call History' Access	8-5

9. System Setup

9.1. Select 'Power On Screen'	9- 1
9.2. Select 'Standby Mode Screen'	9- 2
9.3. Edit Banner	9- 3
9.4. Change Password	9- 4
9.5. Initialize Your IM-700I	9 - 4

10. Voice Dial

10.1. How to Use 'Voice Dial'	10-1
10.2. How to Register A Voice Dial Entry	10-2
10.3. How to Listen or Delete A Voice Dial Entry	10-3
10.4. How to Set 'Voice Dial Mode'	10-4

11. Games

11.1. How to Play Games	
<i>11.1.1. A Number Matching Game</i>	11-1
<i>11.1.2. Moon Patrol™</i>	11-2
<i>11.1.3. Sam Trees™</i>	11-3
<i>11.1.4. Puzzles</i>	11-3
11.2 How to Check Game Scores	11-3

12. Accessories

12.1. Earphone-Mic	12-1
12.2. Hands Free Car Kit	12-2

Appendix

- A.1. How to Enter Characters**
- A.2. Trouble Shooting**
- A.3. Specification of IM-700I**

1. Introduction

Congratulations! You now became an owner of IM-700I, one of the highest featured CDMA cellular phones in the world. Your IM-700I is an integrated package containing a digital recorder, an answering machine, an alarm, a calculator, a calendar, a world time display, and games that make your daily mobile communication life easier and more productive than ever before.

Your IM-700I has been manufactured under a very strict quality assurance program to deliver best possible quality to our customers. During development, IM-700I went through rigorous durability tests such as temperature (low, room, and high), humidity (rain and salt water), shock, dust, vibration, and drop tests.

Because of such convenient features and durability we put in your IM-700I, we, at SK Teletech, feel so confident that IM-700I shall be a good reliable communication partner in your daily life.

1.1. About This Manual

This manual is arranged to help you get familiar with

IM-700I as soon as possible.

Information is presented in 12 Chapters and 1 Appendix: In this *Introduction*, versatile features of IM-700I are highlighted. Also, we present precautions to keep your IM-700I in a good shape.

Chapter 2, *Getting Started*, tells you about the very basic things to do before using your IM-700I.

Chapter 3, *Basic Operations*, explains how to do basic operations such as powering on or off, making a call, answering a call, and others.

Chapter 4, *Phone Book Management*, tells you how to manage '**Phone Book**' in IM-700I. It explains how to store a phone number, how to assign a name and group to the number, how to edit the phone number, and how to retrieve the number from '**Phone Book**'.

Chapter 5, *Advanced Features*, tells you how to use IM-700I's advanced features such as built-in digital recorder, answering machine, alarm, calculator, calendar, world time display, and many others.

Chapter 6, *Convenient Features*, tells you how to automate some features in IM-700I such as auto area code insert, auto backlight, auto redial, and others.

Chapter 7, *SMS*, tells you how to utilize the SMS utilities

in IM-700I such as sending or receiving SMS messages.

Chapter 8, *Protection*, tells you how to prevent others from accessing your IM-700I in many different levels.

Chapter 9, *System Setup*, tells you how to setup up IM-700I. Topic includes how to setup '**Power On Screen**' or '**Power Off Screen**', how to change password, and how to initialize your IM-700I for resetting it to the factory default setting.

Chapter 10, *Voice Dial*, tells you how to use the voice dial feature in IM-700I.


Chapter 11, *Games*, tells you how to play games available in IM-700I.

Chapter 12, *Accessories*, tells you how to use accessories such as the earphone-mic or the hands free car kit.

Appendix tells you how to enter characters in IM-700I. The feature is useful in editing names of phone numbers, the banner, or text messages to send.

1.2. Document Conventions

This User Guide uses the following typographic conventions:

Example	Description
[SEND]	Letters in a pair of brackets indicates a key or a button of IM-700I. The example refers to the key labeled "SEND" located on the keypad of IM-700I.
"No Memory.."	Pharase in a pair of double quotes indicates a text message appearing on LCD.
 [Menu]	The oval shaped symbol represents a key assigned in SKY Navigator™. The example refers to the left key in SKY Navigator to access 'Main Menu'. [Menu] is the text icon that appears on the bottom line of LCD.

1.3. Definition of Terminology

Terminology	Description
'press'	refers to an action of pressing a key or a button about less than 0.5 second.
'press and hold down'	refers to an action of pressing a key or a button and holding it down at least 1 second.
'SKY Navigator™'	refers to the oval shaped switch with 4 directional keys (left, upper, lower, and right).
'Answering Machine'	refers to the built-in answering machine in IM-700I.
'HFK'	refers to the optional Hands Free Car Kit.
'SMS'	refers to the Short Messaging System that enables you to send or receive voice or text messages.
'keypad tone volume'	refers to loudness of the tone that IM-700I plays when a key is pressed.
'ringer volume'	indicates loudness of the ringer that IM-700I plays when receiving incoming calls.
'earpiece volume'	indicates loudness of the voice sound that IM-700I plays in the earpiece.

- 'Standby Mode'** indicates the status of IM-700I when it waits for incoming calls or your call requests.
- 'Talk Mode'** indicates the status of IM-700I when you are in a call.
- 'Vibration Mode'** indicates the mode that enables IM-700I to vibrate instead of ringing when receiving incoming calls.
- 'Silent Mode'** indicates the mode that enables IM-700I to operate silently (no keypad tone, **'Vibration Mode'**, and high mic gain enabling you to whisper).
- 'Answering Machine Mode'** refers to the status when **'Answer Machine'** is activated.
- 'HFK Auto Answer Mode'** refers to the mode that enables IM-700I to automatically answer incoming calls without having you touch any key. It is only valid when **'HFK'** is connected to IM-700I.
- 'Auto Area Code Insert Mode'** indicates the mode that enables IM-700I to automatically enter the preset area code when you open the flip.
- 'Auto Redial Mode'** indicates the mode that enables IM-700I to automatically redial if

requested call fails.

'Auto Backlight Mode' indicates the mode that enables IM-700I to automatically turn On the backlight of LCD when the flip is open. After 10 seconds, LCD backlight automatically turns Off.

'Auto Hyphen Mode' indicates the mode that enables IM-700I to insert a hyphen when you enter a phone number.

'International Call Lock Mode' indicates the mode that enables IM-700I to block international calls being made.

'Auto Lock Mode' indicates the mode when IM-700I totally blocks an access to your IM-700I.

'Phone Book Access Lock Mode' indicates the mode when IM-700I blocks an access to your **'Phone Book'**.

'Lock Menu Mode' indicates the mode when IM-700I blocks an access to menu's.

'Call History Access Lock Mode' indicates the mode when IM-700I limits an access to **'Call History'**.

'Voice Dial Mode' indicates the mode when you speak into IM-700I instead of pressing keypad to dial.

- 'Power On Screen'** indicates the LCD screen that IM-700I displays when you turn IM-700I on.
- 'Power Off Screen'** indicates the LCD screen displayed when powering IM-700I off.
- 'Standby Mode Screen'** indicates the LCD screen when IM-700I is in **'Standby Mode'**.
- 'call history'** indicates the memory buffer allocated in IM-700I to store phone numbers you have called recently. IM-700I stores upto 10 entries in **'call history'**.
- 'Phone Book'** indicates the memory buffer allocated in IM-700I to store phone numbers, names, and group assignment.
- 'memory dial'** indicates the operation of retrieving a phone number from IM-700I's memory and calling it.
- 'Main Menu'** refers to the menu interface you can access when you press the left key of SKY Navigator™ in **'Standby Mode'**.
- 'Hot Menu'** refers to the menu interface you can access when you press the left key of SKY Navigator™ in **'Talk Mode'**
- 'SMS Menu'** refers to the menu interface you can access when you press the down key of

SKY Navigator™ in 'Standby Mode'.

1.4. Highlights

1.4.1. 'Silent Mode'

In public places like a theatre or a bus, a loud ringer tone and your voice may bother people around you. Put IM-700I into '**Silent Mode**' to enable IM-700I to operate quietly. Just press and hold down the [**Silent**] button on the side panel to activate the feature. '**Silent Mode**' is defined in the table below;

Ringer Tone	Disabled. Vibrates instead.
Key Tone	Disabled.
Mic. Gain	High so that you can whisper.

1.4.2. Built-in Digital Recorder

IM-700I has a built-in digital recorder capable of recording **upto 4 minutes and 10 seconds** of voice messages. It allows you to record a phone conversation as well. Please, note that use of this feature is subject to the local regulatory laws regarding privacy of phone conversation.

1.4.3. Built-in Answering Machine

IM-700I has a built-in answering machine which allows you to leave announcement message in your voice and to record callers' voice messages.

1.4.4. Alarm

IM-700I has a alarm capable of setting alarms (up to 10 alarm settings).

1.4.5. Built-in Calculator

IM-700I has a built-in calculator capable of adding, subtracting, multiplying, and dividing.

1.4.6. Built-in Calendar

IM-700I has a built-in calendar capable of displaying days and months from January 1996 to September 2015.

1.4.7. World Time Display

IM-700I can display local time of 38 world cities.

1.5. Precautions

For added protection to IM-700I, please keep the following precautions.

- Fully charge your battery supplied with IM-700I prior to initial use. Also, the battery may have to be recharged when IM-700I is left unattended and unused for long periods of time.
- Do not use IM-700I near water – for example near a bathtub, wash bowl, kitchen sink, and laundry tub, in a wet basement, near a swimming pool or similar location. If IM-700I has been exposed to rain or water, have it serviced by an authorized service center near you.
- Never spill liquids of any kind into IM-700I. Should spillage occur, have it checked by an authorized technician before use.
- Do not attempt to service IM-700I yourself as opening or removing covers may result in a refusal of warranty service at an authorized service center.
- Please, do not store IM-700I in vibratory places.

- For a better reception, the antenna should not contact any objects or any part of your body.
- To clean IM-700I, gently wipe with soft cloth or towel. Never use thinner or solvent.
- Since IM-700I is a delicate high tech electronic product, unauthorized antenna or accessories may deteriorate the performance of IM-700I. Also, avoid placing IM-700I on top of a steel table, a computer, or an electronic range since this may cause a worse reception.

2. Getting Started

 
The chapter tells you about the very basic things to do before using your IM-700I.

2.1. Unpacking IM-700I

Please, check that your IM-700I package contains all of following items.

- One IM-700I
- One Carrying Strap
- One Standard Battery
- One Desk Top Charger
- User Guide (this book)

2.2. OverView of IM-700I

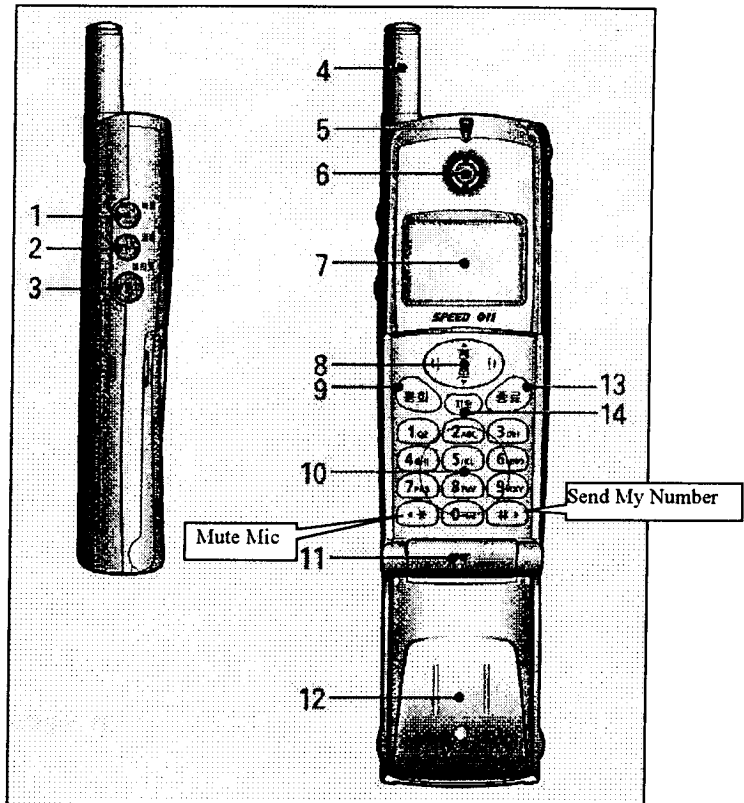

The figure will be replaced by New One.

1. **[Rec] (Record)**

Press and hold it down to begin or end a recording session.

2. **[Play]**

Press and hold it down to begin or stop playing recorded messages.

3. **[Silent]**

Press and hold down the key to activate '**Silent Mode**'. To disable '**Silent Mode**', press and hold down the key again. '**Silent Mode**' is defined in the table below;

Ringer	Disabled. Vibrates instead.
Key Tone	Disabled.
Mic. Gain	High so that you can whisper.

4. **Antenna**

When the antenna is pulled out to its full length, reception is improved by about 3 dB. It is a good practice to pull the antenna out at a place where CDMA signal is not strong.

5. Call Indicator Lamp

It flashes when IM-700I receives incoming calls or SMS messages (See Chapter 7 for more info on SMS).

6. Earpiece (speaker)

7. LCD displays the status of IM-700I.

8. SKY Navigator™

The SKY Navigator™ has four different directional keys, allowing you to make 4 distinct choices for accessing most of IM-700I's features very easily.

9. [SEND]

To make a call, you enter a phone number and press the key. By pressing the key without entering a phone number, IM-700I shall retrieve the last phone number in 'call history' and try connecting to the number.

10. Numeric Keys

11. Microphone (Mic)

12. Flip

 
Open the flip to answer an incoming call. To end a call, close the flip.

13. [END]

To turn IM-700I on or off, press and hold it down.
To end a call, press it.

14. [CLR] (Clear)

Press it to erase a character. Pressing and holding
down the key shall erase your entire entry.
Sometimes, the key can be used to cancel a menu
selection or a function.

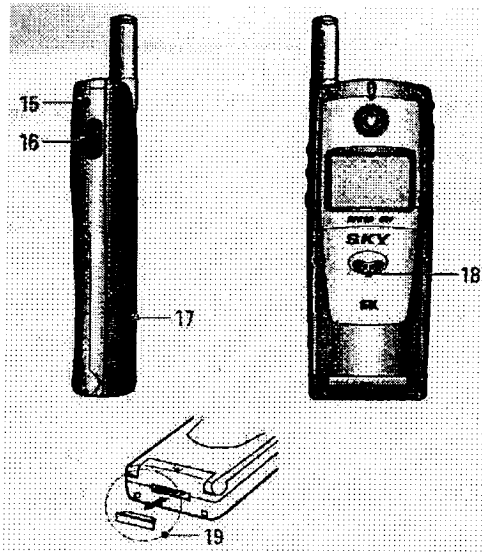

15. Buzzer produces a ringer tone.

16. Earphone-Mic Jack

17. Battery (See Section 2.5.)

 
18. [Ans. Machine] (Answering Machine)

To activate the built-in answering machine, press and hold down the button. To deactivate the answering machine, press and hold it down again.

19. ICC (In Car Connector)

When connecting IM-700I to an optional hands free car kit, the plug from the hands free car kit is inserted here.


2.3. Fastening Carrying Strap

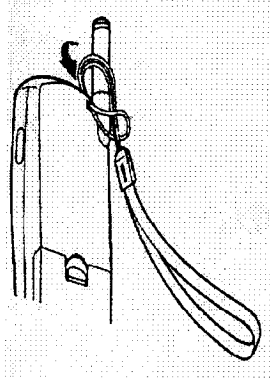

Insert the fine end of the carrying strap through the hole located at the bottom of the antenna.

Hold the other end of the strap and run it through the opening formed by the fine end of the strap.

 2.4. Proper Use of Antenna

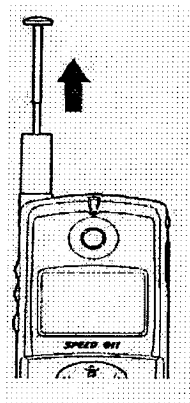


When the antenna is pulled out to its maximum length, IM-700I performs better. If the antenna is positioned vertically, IM-700I performs even better.

2.5. Using Battery


2.5.1. Cautions

 - You **MUST** use the battery and desk top charger provided by SK Teletech. Unauthorized batteries or chargers may cause a damage to your IM-700I or an explosion.
- You **MUST NOT** press the safety switch located on bottom center of the battery. This is to prevent a fire or an explosion that may happen when two charging pins accidentally contact each other by metal objects such as coins or pins.
- Please keep the battery and desk top charger in a clean condition. Dirt on the charging pins may slow down or stop the charging process.
- Do not disassemble the battery or the desktop charger.
- Do not store the battery or the desktop charger near fire. They may explode.

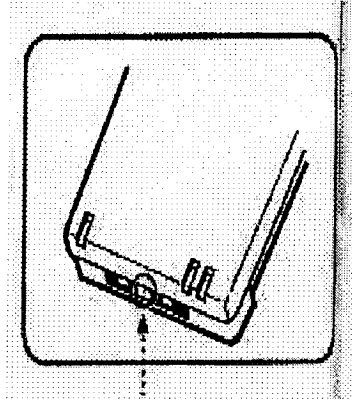


- Do not drop the battery or expose to a strong shock. It may damage the battery or shorten the battery life.
- Always store the battery at a room temperature (5 ~ 35°C). In a severe cold or hot places, the battery may decrease its capacity and its life. When the battery is left unattended or unused, separate the battery from IM-700I and stow it in a safe place.
- It is recommended to replace your battery with new one every six months since batteries may perform poor after repeated charging and discharging events.

 2.5.2. *Installing A Battery*

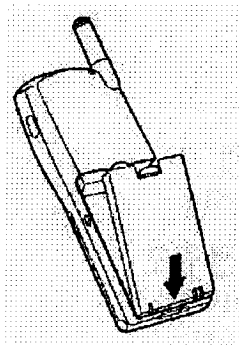


 Align the bottom part of the battery to the lower guide of IM-700I as indicated in the figure.

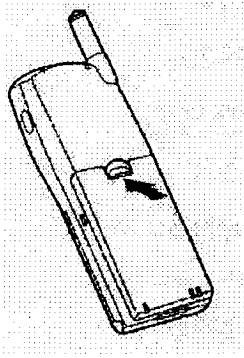

Push the other end toward IM-700I until a click is heard.

 2.5.3. *Removing A Battery*

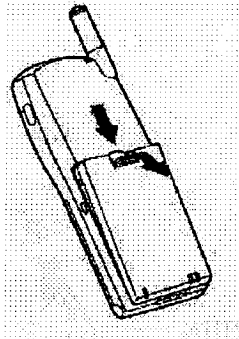

Push down the release knob of the battery and pull it away from IM-700I as shown in the figure.

Turn IM-700I off before removing the battery.

2.5.4. Recharging A Battery

- Plug the desktop charger into the wall outlet (110V ~ 220V AC, 50/60Hz).
- When charging the battery attached to IM-700I, use the front receptacle. When properly placed, the desktop charger shall start charging as indicated by the left LED indicator turning into Red.
- When charging an extra battery, use the rear charging slot. Note that the right LED indicator is changed into Red when charging in the rear slot.
- When charging is completed, the LED indicator turns into Green.

NOTE

- When charging from both of front receptacle and rear slot, the front receptacle is charged first. When the front receptacle finishes charging, the rear slot starts charging.
- It is recommended to leave the battery for about 2 or 3 additional hours in the charger even though the Green LED indicator is turned ON. This insures that the battery reaches to a full charge level.
- If the Orange LED flashes, the battery is not firmly

placed in the charging slot. Please, remove the battery and try to put it back securely.

- Never put objects of any kind into the openings of the charger since it may cause a damage to the charger.
- Keep the charger away from children or animals or pets.

2.5.5. Battery Recharge Indicator

- When the battery needs recharging, IM-700I keeps beeping “BEEP-BEEP-BEEP”. IM-700I also flashes the battery ICON on LCD. Continuing use of IM-700I shall result in powering off.

2.5.6. Battery Talk & Standby Time

	Slim Battery (Option)	Standard Battery
Talk Time	About 90 Minutes	About 120 Minutes
Standby Time	About 30 ~ 40 Hours	About 50 ~ 60 Hours

The above figures represent the lab test results performed in SK Teletech's lab (using HP® 8924C, Slot Index 2, 40% of voice activity)

NOTE

 
- The actual battery discharge time may be less when walking or moving in a car, mainly due to the handoff management necessary to maintain a good connection with base stations.

2.5.7. Minimum Charging Time





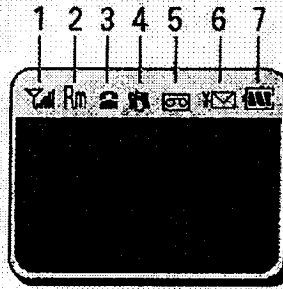


Battery Type	Slim Battery (Option)	Standard Battery
Charging Time	About 70 Minutes	About 95 Minutes

2.6. Understanding ICON


IM-700I has 7 ICON's on the top line of LCD to indicate various status of IM-700I.



- ①.  **Signal Strength**


						 Flashing
Good			Bad		No Service	


- ②.  **Roaming Indicator**

 
 
- ③.  indicates that IM-700I is in 'Standby Mode', waiting for a call.








indicates that IM-700I is in 'Talk Mode'.


- ④.  indicates that IM-700I is in 'Vibration Mode'.




 
- ⑤.  indicates that IM-700I is recording or playing.

	
Recording	Playing

- ⑥.  IM-700I has received text (T) or voice (V) messages.


	New voice message		New text message
	Old voice messages in IM-700I		Old text messages in IM-700I

- ⑦.  Indicates the battery charge level.

			
Full	Half	1 / 4	Recharge required.

2.7. Understanding SKY Navigator™

 SKY Navigator™ allows you to navigate through all of menu trees quickly. Simply look at one line instruction given at the bottom line of LCD and select one out of 4 directional keys in SKY Navigator™.

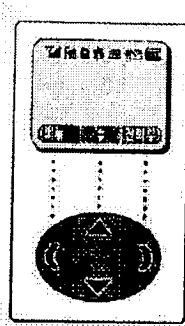

Press to select the left item among entries on LCD's bottom line.



Press to select middle item.



Press to select the right item.

3. Basic Operations

The chapter tells you how to do basic operations such as powering on, powering off, making a call, answering a call, redialing last numbers, memory dialing, adjusting the earpiece volume, and others.

3.1. Chapter Summary

Function	Instruction
Power ON	Press and hold down the [END] key.
Power OFF	Press and hold down the [END] key.
Make A Call	Enter the phone number and press [SEND].
Receive A Call	Open the flip. Or, press any key if the flip is open.
How to Use 'Hot Key' in 'Talk Mode'	
Sending My Cellular Number	During a call, press and hold down the [#] key to transmit your cellular phone number.
Muting Mic	During a call, press and hold down the [*] key to mute the mic. To reactivate the mic, press and hold down the [*] key.
How to Select Ringer	
Ring or Vibrate	See Section 3.7.1
Ringer Style	See Section 3.7.2.
Set # of Rings	See Section 3.7.3.

Your IM-700I operates strange. Or, you can not turn it on. IM-700I gets off by itself.	Remove your battery from IM-700I and reinsert the battery. Try again. If the problem still remains, get it serviced by an authorized service center.
--	--

A.3. Specifications of IM-700I

Frequency Range	Transmission: 824.64~848.37 MHz Reception: 869.64~893.37 MHz	
Frequency Accuracy	Less than ± 300 Hz	
Dimension	115 X 42 X 21 mm	
Transmission Power	0.32 W \pm 50%	
Temperature	IM-700I	-20o C ~ 50o C
	Charger	0o C ~ 40o C
Humidity	5 % ~ 95 %	

placed in the charging slot. Please, remove the battery and try to put it back securely.

- Never put objects of any kind into the openings of the charger since it may cause a damage to the charger.
- Keep the charger away from children or animals or pets.

2.5.5. Battery Recharge Indicator

- When the battery needs recharging, IM-700I keeps beeping “BEEP-BEEP-BEEP”. IM-700I also flashes the battery ICON on LCD. Continuing use of IM-700I shall result in powering off.

2.5.6. Battery Talk & Standby Time

	Slim Battery (Option)	Standard Battery
Talk Time	About 90 Minutes	About 120 Minutes
Standby Time	About 30 ~ 40 Hours	About 50 ~ 60 Hours