

SK-6000

User Manual



Advanced features of SK-6000

<p>New style! Slide-up!</p>	<p>Slide-up ! The phone implements a new style different from the existing flip and folder styles in a way to push up the top slide with one hand. You can enjoy a fancy attractiveness of slide-up style far from the common flip and folder types.</p>
<p>40 chord melody</p>	<p>More vivid melody! The phone provides diverse and more vivid music in various fields with 40-chord melody.</p>
<p>CDMA2000 1x superhigh speed data communication</p>	<p>SK-6000 is a mobile phone faster than a modem. The phone implements the CDMA 2000 1x superhigh speed communication function of 153.6Kbps with MSM6000 equipped, enabling you to navigate the wireless Internet in super high speed or to swiftly download the multimedia data.</p>
<p>Wireless internet</p>	<p>You can enjoy a hundredfold realistic wireless Internet at anytime and anywhere by downloading various multimedia contents to SK-6000.</p>
<p>Other features</p>	<p>Still smart and various functions! auto answering/recorder, 99 memory location numbers, stopwatch, electronic pocketbook (Calendar/scheduler, alarm, morning call, and calculator), various animations, my melody, etiquette, music bell, etc.</p>

SK-6000 User's Manual Table of Contents

The contents of this user's manual are subject to change without prior notice for enhancement of product performance.










Advanced features of SK-6000	2
Precautions for using the mobile phone	6
Safety information.....	7
Package Contents.....	8
Part Names and Functions	Error! Bookmark not defined.
Display Indicators	Error! Bookmark not defined.
Muti-function keys	Error! Bookmark not defined.
Basic key usage	Error! Bookmark not defined.
Using the battery	Error! Bookmark not defined.
Basic Operation	Error! Bookmark not defined.
Switching the phone on/off	Error! Bookmark not defined.
Making a call.....	Error! Bookmark not defined.
Redialing calls	Error! Bookmark not defined.
Speed dial.....	Error! Bookmark not defined.
Answering calls	Error! Bookmark not defined.
Functions available during a call.....	Error! Bookmark not defined.
Search call history (list)	Error! Bookmark not defined.
Etiquette mode	Error! Bookmark not defined.
My Information	Error! Bookmark not defined.
Timers	Error! Bookmark not defined.
PIM Phone Book	Error! Bookmark not defined.
Add phonebook	Error! Bookmark not defined.
SPEED Search	Error! Bookmark not defined.
Search by name.....	Error! Bookmark not defined.
Search by number.....	Error! Bookmark not defined.
Edit group.....	Error! Bookmark not defined.
Edit Speed dial	Error! Bookmark not defined.
Electronic dialing using Pause	Error! Bookmark not defined.
Message Function.....	Error! Bookmark not defined.
Text Message.....	Error! Bookmark not defined.
Voice Message	Error! Bookmark not defined.
Create New Message.....	Error! Bookmark not defined.
Outbox	Error! Bookmark not defined.
Delete All Messages	Error! Bookmark not defined.

SMS Alert.....	Error! Bookmark not defined.
WWW.....	Error! Bookmark not defined.
Connect WWW	Error! Bookmark not defined.
Games World	Error! Bookmark not defined.
Multimedia	Error! Bookmark not defined.
Ringtones	Error! Bookmark not defined.
Animations	Error! Bookmark not defined.
Voice Portal.....	Error! Bookmark not defined.
What's New.....	Error! Bookmark not defined.
SMS Info.....	Error! Bookmark not defined.
Sound	Error! Bookmark not defined.
Select Ringer/Vibrate.....	Error! Bookmark not defined.
Set Group Ring	Error! Bookmark not defined.
Setting Mambo Tone	Error! Bookmark not defined.
Setting Effect Tone.....	Error! Bookmark not defined.
Manage My Ringer	Error! Bookmark not defined.
Set Volume	Error! Bookmark not defined.
Display.....	Error! Bookmark not defined.
Set Logo	Error! Bookmark not defined.
Set Picture	Error! Bookmark not defined.
Manage My Picture	Error! Bookmark not defined.
Set Backlight.....	Error! Bookmark not defined.
Info. Manager/Entertainment ..	Error! Bookmark not defined.
Calendar	Error! Bookmark not defined.
Scheduler	Error! Bookmark not defined.
Setting wakeup call (Morning call).....	Error! Bookmark not defined.
Alarm	Error! Bookmark not defined.
Answer Machine	Error! Bookmark not defined.
My memo.....	Error! Bookmark not defined.
Calculator	Error! Bookmark not defined.
Stopwatch.....	Error! Bookmark not defined.
World Time	Error! Bookmark not defined.
Game	Error! Bookmark not defined.
Game Manual	Error! Bookmark not defined.
Set Environment	Error! Bookmark not defined.
Auto Function	Error! Bookmark not defined.
Set Options	Error! Bookmark not defined.
Security.....	Error! Bookmark not defined.

Set Data Communication	Error! Bookmark not defined.
Select System	Error! Bookmark not defined.
Check S/W Version.....	Error! Bookmark not defined.
WWW Font Config	Error! Bookmark not defined.
Convenient Features.....	Error! Bookmark not defined.
Auto answering	Error! Bookmark not defined.
Voice Recorder	Error! Bookmark not defined.
Earphone Mic (accessory)	Error! Bookmark not defined.
Appendix	Error! Bookmark not defined.
Menu Construction	Error! Bookmark not defined.
Options	Error! Bookmark not defined.
Q&A for Phone	Error! Bookmark not defined.
Prevent Illegal Handling of ESN.....	Error! Bookmark not defined.
Specifications and Features.....	Error! Bookmark not defined.
Mobile Phone Data.....	Error! Bookmark not defined.

Precautions for using the mobile phone

Read these precautions carefully to use this unit with full performance.

	<p>Fully charge the battery before you use the unit for the first time or when the mobile phone has been left unused for a long time.</p>
	<p>The unit may not be repaired when flooded. Avoid hot and damp area.</p>
	<p>Note that the unit disassembled or remodeled by other than qualified service personnel cannot be covered by warranty.</p>
	<p>Avoid severe impact and keep the unit in a safe place.</p>
	<p>Since the unit in your hip-pocket may be out of order due to excessive forces, make sure not to cause damages to your unit.</p>
	<p>Do not grip or touch the antenna during the call to keep the clean voice quality.</p>
	<p>Clean the unit with soft clothes or towel and do not use chemical cleaners including thinner or solvent.</p>
	<p>Since this unit is sensitive to electric wave, any antenna or accessories not approved by SK Teletech may deteriorate the performance. Also keep the unit away from steel desk, computer or microwave oven, which may cause electromagnetic interference.</p>
	<p>If abnormal substances such as sands, tobacco ashes, etc. are entered into a gap between slides, they may occur a malfunction. At this time, please contact a near A/S center.</p>

- * Keep the ringer volume low not to disturb others.
- * If you use or keep the cellular phone in extremely cold or hot areas, the unit performance may be deteriorated and lifespan shortened.

Safety information

1. Using a cellular phone during driving may not only increase the risk of traffic accident but also affect the electronic devices in a car. Give full attention to driving. If you must use a phone, please use hands free for your safe driving.
2. Since hospitals or health care facilities may be using equipment that could be sensitive to external RF energy, turn your phone off in those facilities.
3. Since using a phone while in the air may affect the electronic flight devices, please turn it off in the airplane.
4. Turn your phone off in any places where posted notices so require.

 
Package Contents



Handset




Desktop/portable Charger

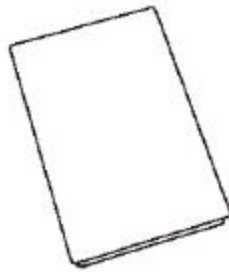

Soft Pack Battery



 
Hand Strap

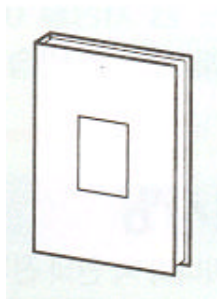



**User Manual
(Including Product Warranty)**

Part Names and Functions

 Part Name

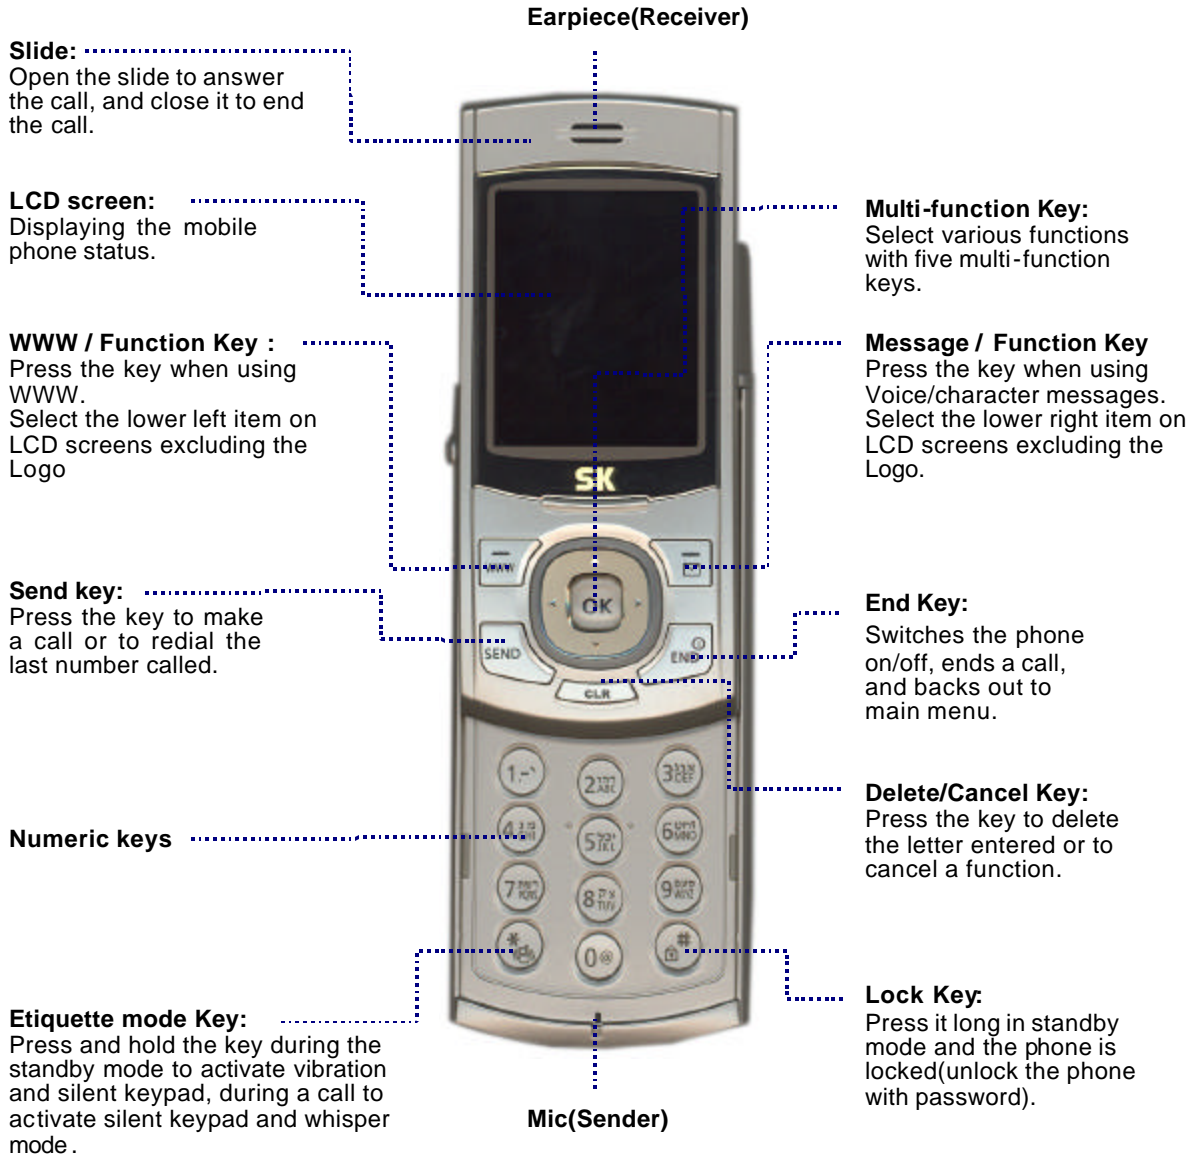


Part Function

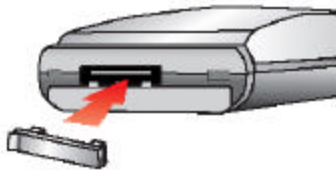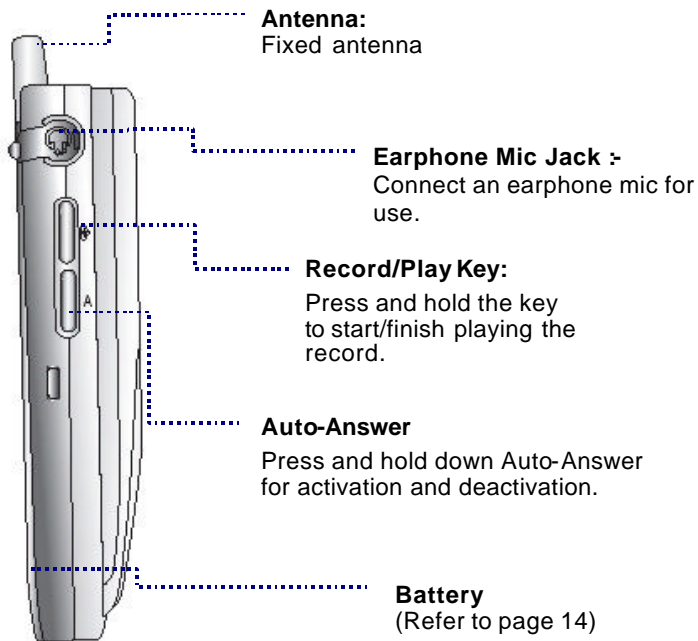  

In-car Connector:

Connecting hands free/car kit adapter and data manager cable. (Refer to page 14)

 
- * Always put rubber plug in this part to prevent contact from metal which causes power off.
- * When the power is off, remove the battery and insert it again and switch the power on.

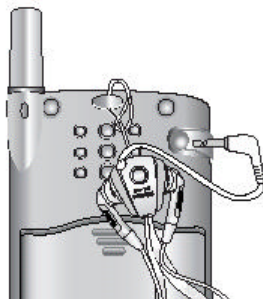

Insert cellular phone hand strap :

Pass the cellular phone hand strap through the hole near the antenna from the bottom and insert it to the ring at the other end.

 Display Indicators

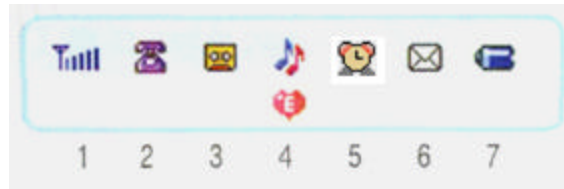

1. **Signal strength of the service area**

Indicators						
Signal strength level	Good		Poor		Out of service area	

Indicators in the service area of other provider

Indicators						
Signal strength level	Good		Poor		Out of service area	

2. **Appears in standby mode.**

Appears when you make a call or during a call.

Appears when there is no exchange of data during a data service.

3. **Appears when auto answering is set**

4. **Appears when ringer is set**

Indicators					
Meaning	Ringer	Vibration	Ringer after vibration	Simultaneous ringer and vibration	Etiquette mode

5. **Appears when alarm is set**

6. **Text or voice message received.**

Indicator	Description
	This icon will flick when new voice/text message arrives and disappear after checking the message.

7. **The remained battery power**

Indicators				
Available battery power	High	Medium	Low	Needs charging

Muti-function keys



Select menu



Select outgoing call history



Select incoming call history



Select phonebook

<On active screen>



Move to the left.



Move to the upward.



Move to the downward.



Move to the Right.



Select [OK] Item.

Basic key usage

Adding an entry

E.g.) Hi~!

1. Press (SMS)[SMS], and press (2)[Out -Box] and (1)[New Message].
2. Press (OK)[Input] to enter letters.
3. Press (4) twice to enter [H] then press (SMS) key to move to [eng].
 - You can change the entry mode in the order of Hebrew, English Upper, English Lower, symbol, and number whenever you press (SMS).
4. Press (4) three times to enter [i] then press (SMS) key to move to [Symbol].
5. Press (Down), (1)[~], (Up) and (3)[!].
 - Press (Up/Down) to select various symbols.

How to view items

1. Press (Right)[Book], and press (4)[New Entry].
 - indicates there exist other items. You can press (OK) to view listed items or press (Left/Right) key to check an item.

When you press (ok)

- When you press (ok) where the cursor is, related item appears.

When you press (Left/Right)

- When you press (Left/Right) key instead of (OK), contents move one by one.

How to select items

1. Press (Left)[Menu], and press (1)[Sound].
 - Use (Up/Down) to go to a desired item and then press (OK)[Select]. Or you can just press the number shown before the item.
2. Press (Left)[Menu], and press (5)[Setup] and (2)[Option]
 - When you press (OK)[Select] and go to (Up/Down), the cursor will follow. When you press (OK)[Confirm] on a desired item, it will be selected and the screen will automatically show the next item.
3. Press (Left)[Menu], and press (5)[Setup] and (1)[Auto Function].
 - When you use (Up/Down) to go to a desired item and press (OK), then the checkbox for the item will be checked.
4. Press (SMS), and (2)[Out-Box] and (4)[Phrase] and (WWW)[Menu] and (1)[Delete].
 - Use (Left/Right) and select "Yes" to delete an item or otherwise "No", and then press

(OK).

How to use related menu

1. You can open a related menu if **Menu** icon is displayed below the screen.
2. When you press (WWW)[Menu], available functions are displayed on the screen.
 - Activated menus will vary depending on a selected item.

 
Ex.: 1. When you select a related menu for call history:

- Press (Up)[Running], and press (WWW)[Menu].



2. When you select a related menu for edit Message:

- Press (SMS)[SMS], and press (2)[Out-Box] and (1)[New Message].

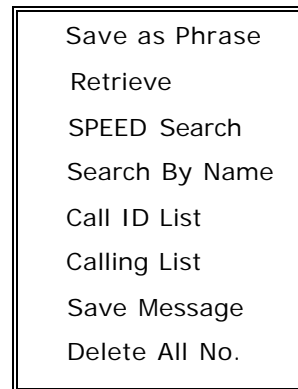

Using the battery

Cautions

Always use the authorized, dedicated charger and batteries.

- Unauthorized product may damage or explode the battery.

Keep the charger and battery clean.

- Dust or dirt on the metal part of the connector terminal may obstruct battery charging.

Do not disassemble the battery and charger, and keep them away from fire.

- Battery may explode.

Do not drop the battery or give a severe shock.

- This may cause battery fault or short battery life.

Keep the battery in room temperature (5 - 35 C).

- If you place the battery in too cold or too hot places, battery capacity and life may be reduced. Remove the battery from the phone when unused for a long time.

Replace the old battery with a new one when battery capacity has reduced by half.

- As a consuming item, repeated charging/discharging may reduce the battery capacity.

Dispose the used batteries separately.

- Recyclable metal is used for the battery.

Inserting the battery



Place the bottom of the battery on the latch in arrow direction



Place the battery cover on the latch in arrow direction.

Removing the battery



Push the battery cover to arrow direction.



Remove the battery in arrow direction.

* Switch off the phone before you remove the battery.

Battery life

By mode

Type of battery Mode	Slim Battery Pack
Call	About 140 minutes
Standby	About 102-118 hours*

* Maximum value measured in the SK Teletech's laboratory (in slot mode 2).

- When you are on the move by car or on foot, your mobile phone sends/receives signals with the base stations adjacent to maintain the optimum call status. In this case, more power consumes, and the battery life may be reduced.
- Using a motion picture (animation) of "Set picture" in Logo may consume more power than not using it. Therefore, battery life can be reduced by 20-30% than those described in this manual.

 
Low battery alarm

appears with alarm when battery requires charging. The phone would be switched off with a message "The phone is switched off due to low power" if you fail to charge the battery.

Charging the battery

Connect the power plug of battery charger to the outlet (110V or 220V)

* To use 110V, purchase an additional adapter.

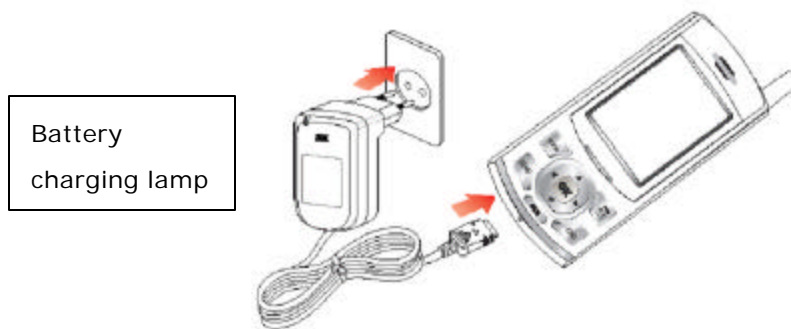

- To charge the battery with handset or to charge the battery only (The charging front lamp turns red when the charging starts)
- The lamp turns green color when charging is completed.
- Push the battery into the charger fitting in correctly to the guide hop.

- * When you fast-charge the standard battery fully discharged, its temperature may be increased a little. However, this does not affect the battery performance.
- * Lamp blinks when you insert the battery to the charger incorrectly. Pull out the battery and insert it to the charger again.
- * Dust or dirt on the connecting terminal of the battery charger may cause malfunction.
- * Keep the battery charger out of reach of the children or animals.

Minimum battery charging time

Type of battery	Slim Battery Pack
Minimum battery charging time	About 180 minutes

- * Fully charge the battery. Battery is not charged when you purchase the product.
- * Charging in too cold or too hot place may take longer charging time.
- * When you charge the battery with the handset on, the battery may not be fully charged even though the charging completion lamp (green color) is on.

PIM Phone Book

In addition to the default groups, Family, Work, Friend, Relative, School and Unclassified, you can add (41) groups including <Unclassified> using <new> in <Memory Group>.

If the name you entered already exists in the Phonebook, a message, "Save it here?" appears. Press (OK) to overwrite the existing name or press [No] to go back to the Edit window.

For input method, refer to how to activate/select the menu.

Add phonebook

You can enter and save new information.

Add a phone number to the new name

Add a phone number to a new name using (4)[New Entry] function of (Right)[Book].

1. Press (Right)[Book] and (4)[New Entry] menu.
 - For input method, refer to how to activate/select the menu.
2. Press (SMS)[Save]

* In addition to the default groups, Family, Friend, School, Work, Relative and Unclassified, you can add (41) groups including <Unclassified> using <new> in <Memory Group>.

* If the name you entered already exists in the Phonebook, a message, "Save it here?" appears. Press (OK)[YES] to overwrite the existing name or press [No] to go back to the Edit window.

<E-mail address add/edit>

1. Search the required name using the Search function of (Right)[Book] and then press (SMS)[Edit].
2. Press (WWW)[Menu] and (2)[Add e-mail] and then enter the E-mail address.
 - Press (OK)[Select], and press (CLR) key to amend the existing address and enter new e-mail address.
 - Enter numeric key (0) to enter [@].
3. Press (OK)[Select] and (SMS)[Save].

* Up to 32 English letters including '@' and '.' are available for text entry of user ID and mail server.

<Anniversary>

Anniversary is displayed only in English.

1. Select a name to amend using the Search function of (Right)[Book] and press (SMS)[Edit].
2. Press (WWW)[Menu].
 - The anniversary can be added even through 'Add data'.
3. Press (4)[Add Special].
 - Move to the content of anniversary using (Left/Right) keys.
4. Press (Down) and enter the date. (E.g.: 02. 14. 2004)
5. Press (SMS)[Save].

- Anniversary is classified into Birthday, Marriage, and Meeting as default. You may enter a specific anniversary pressing 'Anniv.Type'.
- To delete the anniversary, press (SMS)[Menu] and then press (6)[Delete Special] while placing the cursor on the date of anniversary.

<Phonebook memo>

You can enter memo by adding item in the same method of anniversary on the Edit Phonebook window of Search Phonebook.

* You can save up to 64 English letters in phonebook memo.

Adding an entry in Logo

You can save / edit the phone number at the entry window.

<Add a number to the new name>

Add a phone number entered in the Logo to the new name.

1. Enter a phone number.
 - Press (SMS)[Find] then you can search the phone number and Phonebook the same as by phone number.
2. Press (OK)[Save].
 - The phone number storing window is displayed.
3. Press (1)[New name].
 - For input method, refer to how to activate/select the menu.

* Up to 2400 (Maximum 1200 people) phone numbers can be added.

<Add a number to the existing name>

Add a phone number entered in the Logo to the existing name.

1. Enter phone number.
2. Press (OK)[Save].
 - The phone number storing window is displayed.
3. Press (2)[Existing name].
 - Move to the names in the group using (Up/Down) keys.
 - Press (WWW)[Menu] to delete the group name or check the phonebook information.
4. Press (OK)[Select].
 - Names in the group is displayed.
 - Move to the name to search using (UP/DOWN) keys.
5. Press (OK)[Select].
 - Press (UP) to find out Home using (Left/Right) on the screen that includes the phone number.
6. Press (SMS)[Save].

Edit Phonebook

You can enter or edit a phone number using search function.

1. Search the name required using search function in (Right)[Book].
2. Press (SMS)[Edit].
 - Phonebook edit window for the searched name is displayed on the screen.
 - Press (Up/Down) to move to the item to enter/edit. Refer to how to activate and select the menu (Refer to page 13).
 - Press (OK)[Select].
 - To delete the contents, press (CLR).
 - Press [Add data] to add more information.
3. Press (SMS)[Save].

* You can also add the information in Add Item by pressing (SMS)[Menu] key.

Delete names

Delete the name from the Phonebook using search function.

1. Press (Right)[Book] and (OK)[Select].
 - Press (Up/Down) to search the required name.
2. Press (WWW)[Menu].
 - You can choose (1)[Enter Message] or (2)[Set TURBO Dial].

3. Press (3)[Delete Name].
 - Press (OK)[Yes] to delete the name.

SPEED Search

You can search the names in the Phonebook in by group.

1. Press (Right)[Book] and then press (1)[SPEED Search].
 - Press (Up/Down)to search the name .
 - You can make a call by entering a figure (1,2,3,4,5) on the above screen.
2. Press (OK)[Select].
 - Press (Up/Down) to move to the number required.
 - To make a message, designate a speed dial and remove the phone number on the above screen, press [Menu].
3. Press (Send).
 - To modify the number, press (SMS)[Edit] at the above step 2.
 - Phonebook main window configuration.
 - Phonebook main window is configured with the following items.
 - You can enter or edit anniversary, memo and e-mail address as well as phone numbers with (SMS)[Edit] key.

Search by name

You can search the phone number by entering the name.

1. Press (Right)[Book] and select (2)[Search By Name].
 - Text edit mode window is displayed.
2. Enter the full or partial name to search. In case of doing search by part of the name , enter the name spelling in order.
3. Press (OK)[Done].
 - Press (OK)[Select] on the name required to move to the phone number field using (Up/Down) keys.
 - You can make a call by pressing figure(1, 2, 3, 4, 5) on the above screen.
 - Press (WWW)[Menu] to make a message, designate a speed dial and delete phone number.
4. Press (Send).
 - To search the name in the secret group, you should release the secret group. (Refer to

Search by number

Enter phone number (whole or part) to search the phone number and Phonebook.

1. Press (Right)[Book] and select (3)[Search By No.].
2. Enter a part or whole phone number to search using numeric keys. In case of doing search by part of the phone number, enter the number in order.
3. Press (OK)[Confirm].
 - The name that includes the number (i.e. 23) is displayed. Press (Up/Down) keys to move to the required name.
4. Press (OK)[Select].
 - Press (Up/Down) keys to move to the required phone number field.
 - Press (WWW)[Menu] to make a message, designate a speed dial and delete phone number.
5. Press (Send).

* To search the name in the secret group, you should release the secret group. (Refer to page 29~30)

Edit group

You can add, amend or delete groups, or designate melody of each group.

Add new group

You can add new group for phone number.

1. Press (Right)[Book] and select (6)[Memory Group].
2. Select (SMS)[New] and enter the new group name.
3. Press (OK)[Done].
 - Move to the required answer using (Left/Right) keys and press (OK)[Select].
 - To release secret group, amend the Secret into 'No' from [Memory Group] and save.

* If the number of existing groups reaches the number allowed (41), you cannot add new group any more.

* If the same group name already exists, there appears a message "The same group exists."

* You should enter a password to retrieve the phone number of the secret group. If you

make a call using Phonebook or numeric key, the number appears in Call history without name. You cannot retrieve the number with Search by name or Search by number.

- * When a caller subscribes the Calling Line Identification Presentation service and is saved as the secret group, the number appears in Call history without name.

Change group

You can change the existing group name to the other.

1. Press (Right)[Book], and select (6)[Memory Group].
 - Press (Up/Down) keys to move to the group to change .
2. Press (OK)[Select].
 - Amend the group information to change.
 - To make the group secret, change the Secret from 'No' to 'Yes' using (Left/Right) keys.
3. Press (SMS)[Save].

Delete group

You can delete the existing group or group name.

1. Press (Right)[Book], and select (6)[Memory Group].
 - Press (Up/Down) keys to move to the group to delete.
 2. Press (WWW)[Menu].
 3. Press (1)[Delete Group].
 - Select (Left/Right) keys to delete or cancel and press (OK)[Select].
- * 'Del. Group name' only deletes the name of the group. Phone numbers (names and phone numbers) of the group remain in <Unclassified> and in the <All Name List>.
 - * You should enter a password to delete the secret group name.
 - * To change the order of groups on the screen, press "Edit Order" or "Sort Group" from the (WWW)[Menu].

Edit Speed dial

You can edit frequently used phone numbers with speed dial.

Add new speed dial

You can add frequently used phone number as speed dial.

1. Press (Right)[Book] and select (5)[Edit TURBODial].

- Press (Up/Down) keys to move to the address to add new speed dial.
2. Press (OK)[Select].
 - Press (Up/Down) keys to move to the group that includes the name to designate.
 3. Press (OK)[Select].
 - Press (Up/Down) keys to move to the name to designate.
 4. Press (OK)[Select].
 - Press (Up/Down) keys to move to the phone number to designate, and press (OK)[Select].

* The function is not available without any phone number saved in phonebook.
You cannot make a call with speed dial without password when Phonebook is locked.

Change the existing speed dial

You can change the existing speed dial.

1. Press (Right)[Book] and select (5)[Edit TURBODial].
 - Press (Up/Down) keys to move to the address to designate.
2. Press (WWW)[Edit].
 - Press (Up/Down) keys to move to the group that includes the name to change.
3. Press (OK)[Select].
 - Press (Up/Down) keys to move to the name to change.
4. Press (OK)[Select].
 - Press (Up/Down) keys to move to the phone number to designate, and press (OK)[Select].

* If there are lots of phone numbers designated as speed dial and you want to find out the required number quickly, press numeric keys 1, 2, 3, 4, and 5 in turns. Then, the Speed dial screen moves to No.10, 20, 30, 40 and 50 in turns. Press the numeric key 0 to go back to No.1.

Delete the existing speed dial

You can delete the speed dial.

1. Press (Right)[Book] and select (5)[Edit TURBODial].
 - Press (Up/Down) keys to move to the address to delete.
2. Press (OK)[Select].
3. Press (SMS)[Delete].
 - Select (Left/Right) keys to delete or cancel and press (OK)[Select].

* Even when the memory location number is deleted, the phone number in the Phonebook is not deleted.

However, when the phone number is deleted from the Phonebook, the related speed dial is also deleted.

Electronic dialing using Pause

You can use this function when you have to enter digits by the voice announcement for Automatic Response System (ARS).

i.e.) Telebanking, pager, etc.

1. Press phone number and then press and hold (7) and phone number to be electronically dialed.

- 'P' appears on LCD screen when pressing and holding (7).
- To enter Pause again (several times), enter the number and then press and hold digit key (7) for over one second.

2. Press (Send).

- You can save the number in the phonebook by pressing (Save).
- When the call is connected, press (SMS)[Next] for the ARS announcement prompting you to enter number.

* Pause is available only when 3 or more digits are entered.

* The numbers "1 2 3" after Pause is dialed electronically.

* You can enter Pause several times. You can transmit the entered numbers in sequence by pressing (SMS)[Next] continuously by ARS announcement.

* If you press "T" (Digit key (8)) instead of "P", entered numbers are transmitted at the interval of 5 seconds.



* Up to 32 digits including "P" (or "T") are available to enter for Pause.

Message Function

Text Message

You can check the received text message and the call back number.

1. Press (SMS), and select (1)[In-Box] and (1)[Text Msg] in turn .
- Press (Up/Down) to move to the message you want.

* () indicates the message is already read and () indicates the message is a new one.

* Press (SMS)[Delete] to delete the selected message.

* Press (OK)[Reply] to check the message and immediately reply to it, or (SMS) [Forward] to deliver the received

Delete all text messages

1. Press (WWW)[Menu] on the above screen.
2. To delete all received messages, select (1)[Delete All].
3. Shift to the item to delete using (Right/Left) keys and press (OK)[Select].

Save text messages

1. Press (WWW)[Menu] on the above screen.
2. To save a selected message to "Received Phrase" , select (2)[Save].

* If you select (1)[Text Msg] when there is no incoming text message, a message "No Text Message" will be displayed and returns to Inbox screen.

* Up to 62 text messages can be received and for more than 62, the new one is saved by deleting the oldest one.

* SMS Alert depends on whether you set alarm for incoming message or not.

Voice Message

You can check the voice message of the caller via VMS.

1. Press (SMS), and select (1)[In-Box] and (2)[Voice Msg] in turn .
- Press (SMS)[Delete] to delete the selected messages.

Delete All Voice Messages

- Press (WWW)[Menu], and press (1)[Delete All]
- Use (Left/Right) and select "Yes" to delete an item or otherwise "No", and then press (OK).

* Press (Send) on the above screen to automatically connect to the call back number.

2. Press (OK)[Conn].

- You can check the voice mail at Voice mail center.
- Press (SMS)[Send] to call back to the caller, if the caller has left his/her phone number.

* If you select (2)[Voice Message] when there is no incoming voice message, a message "No Voice Message" will be displayed and returns to Inbox screen.

* You can save up to 20 text messages, and for more than 20, the new message is received by deleting the oldest one.

Create New Message

You can create a new message.

1. Press (SMS), (2)[Out-Box] and (1)[New Message] in turn.

- Press (OK)[Input] to enter message and press (OK)[Done].

2. Enter the phone number for return call, and the phone number to send message to.

3. Press (SMS)[Send].

* Broadcast

- You can send the message up to 20 users simultaneously.
- If you want to send the message to the users in one group simultaneously, press (WWW)[Menu], (3)[SPEED Search] in the screen of No. 2 and [Add] add the group. But, only mobile phone number is entered in the group. If mobile phone number is over 2, the first number will be saved in the phonebook.
- If the broadcast transmission trial fails, try one more. If it fails again, the result is automatically stored at 'Outgoing Message'.
- If the call history has a desired phone number, you can search it to input it.

* In (WWW)[Menu], (1)[Save as Phrase] and (7)[Save Message] will be activated in Message Contents Screen.

* To erase all phone numbers entered in Phonebook, press (8)[Delete All No.] of (WWW)[Menu].

Save as Phrase

You can save the frequently used sentences in the [Phrase].

You can save or open the message in the message input screen.

1. Press (SMS), and select (2)[Out-Box] and (1)[New Message] in turn.
 - In Message Input Screen
2. Press (WWW)[Menu].
3. Press (1)[Save as Phrase].

- If you select [Save as Phrase] for a phrase, it is stored to [Out-Box].

Search Phonebook

You can easily enter the phone number using Search if the phone number of the receive is saved in the phonebook

1. Press (SMS), and select (2)[Out-Box], (1)[New Message] and (WWW)[Menu] in turn.
 - Press (WWW)[Menu] with the cursor positioned on the phone number of the other party.
2. Press (3)[Speed Search] and (OK)[Select].
 - Press (Up/down) to select the phone number of the other party, and press (OK)[Select].
 - Refer to pages 28~29, for Search Phonebook.
3. (OK)[Select]
 - Select the number to insert, and press (OK)[Select].

Search by Incoming call history

1. Press (SMS), and select (2)[Out-Box], (1)[New Message], (WWW)[Menu] and (5)[Call ID List]/(6)[Running] in turn.
 - Press (WWW)[Menu] with the cursor positioned on the phone number of the other party.
 - Press (Up/Down) to select the related item and press (OK)[Select].
 - Search by outgoing call history is the same.

Save Message

You can save the composed message in [Outgoing Message] box.

1. Press (SMS), and select (2)[Out-Box], (1)[New Message], (WWW)[Menu] and (7)[Save Message] in turn.

- If you save the message without any text entered, it is saved as [No Contents] in [Outgoing Message] Box

Delete All Phone Numbers

You can delete all phone numbers in the message input screen.

1. Press (SMS), and select (2)[Out-Box], (1)[New Message], (WWW)[Menu] and (8) [Delete All No.] in turn.
 - All the phone numbers you entered in the number of the other party in the phonebook will be deleted.

* The Menu is activated depending on the position of cursor.

Outbox

You can save the messages you saved before sending or if you failed to send.

Message that cannot be sent during broadcasting will be separately saved.

Edit old message

1. Press (SMS) and (2)[Out-Box] and (2)[Outgoing Message]
 - Press (Up/Down) to move to the message you want to edit.
2. Press (OK)[Select] and edit the contents.
 - Press (OK)[Input].
 - Edit the contents using the numeric key and Enter key, and press (OK).

Delete Old Messages

1. Press (SMS) and (2)[Out-Box] and (2)[Outgoing Message]
 - Shift to the message to delete using [Up/Down] keys.
1. Press (SMS)[Delete].
 - Press (OK) to delete the message.

* Press (WWW)[Menu] and [Delete All] to delete all messages in Outgoing Message.

Sent Message

You can automatically save up to 62 messages you have successfully sent.

1. Press (SMS), and select (2)[Out-Box] and (3)[Sent Message] in turn.
 - Press (Up/Down) to move to the message you want.
2. Press (OK)[Select].

- If you want to edit and send the sent messages again, edit the message pressing (OK)[Write] and enter your phone number and the phone number of the other party. Then, press (SMS)[Send].

Phrase

You can save the frequently used sentence in the Sentences and open the message later.

1. Press (SMS), and select (2)[Out-Box], and (4)[Phrase] in turn.

- Shift to the desired item using (Up/Down) keys.
- Press (SMS)[New] to make/save new message.

2. Press (OK)[Select].

- Press (OK)[Write] to edit and send the message.
- Refer to page 34, for New Message.

* Press (WWW)[Menu] on No.1 screen to delete the saved sentences. Press (1)[Delete] to delete the selected sentence only, and (2)[Delete All] to delete all the sentences saved. Press (Left/Right) to select whether to delete the message, and press (OK) [Select].

Delete All Messages

You can delete all messages.

1. Press (SMS) and (3)[Delete All Msg].

- The password is set as 0000 by default

2. Enter password.

- Press (Up/Down) to move to the message to delete.

3. Press (OK)[Select].

(Ex. When deleting all saved sentences)

- Press (Left/Right) to select whether to delete and press (OK)[Select].

SMS Alert

You can select bell or lamp that indicates the message is received.

1. Press (SMS) and (4)[Set Msg Alert], and set the alert.

- Press (OK)[Select] to select the message you want using (Up/Down).

2. Press (OK)[Select] and (Up/Down).

- You can set the alert bell to No Alert, Alert once and Every 2 minutes.
- 3. Press (OK)[Select] twice and (Up/Down)
 - Type of Alert Tone: Total six types
- 4. Press (OK)[Select] and (Left/Right)
 - Size of Alerts
 - Adjust the size of alert pressing (Left/Right)
 - You can set it also in Volume of Sound Option (Refer to page 43).
- 5. Press (OK)[Select]
 - Alert In Call
 - Select whether to alert when you receive a message during call.
 - Press (OK)[Setup/Release] to set or release the alarm during call.
- 6. Press (SMS)[Save].

* SMS alert

No Alert: The LCD blinks when a message is received.

Alert once: The LCD blinks twice and bell goes off for several seconds when a message is received.

Every 2 minutes: The LCD blinks and bell goes off twice when message is received, and at every two minutes when there is a new message received.

- * When you set the alarm for messages received to Alert Once or Every 2 Minutes and set the incoming bell to Ring/Not Vibrated at the same time, the alarm will not ring.

WWW

Connect WWW

You can use this menu while searching information in WWW.

1. Press (WWW), and select (1)[Internet Portal] in turn.

* Press and hold (WWW) at any screen while searching website to move to the WWW initial screen.

* Initial screen and service are subject to change due to development of better service and technology by business operator.

* For releasing the connection to www, press (END).

Games World

You can download the various Game contents from the WWW to enjoy fully the service of [WWW] at anytime in anywhere.

1. Press (WWW), and select (2)[Game World] and (1)[Activate] in turn.

- Execute the downloaded SKVM.

2. Press (WWW), and select (2)[Game World] and (2)[Download] in turn.

- Download SK_VM contents in connecting to the relevant site.

Multimedia

You can save the multimedia contents you downloaded form WWW.

1. Press (WWW), and select (3)[Multimedia] and (1)[Activate] in turn.

- Execute the downloaded Wavelet.

2. Press (WWW), and select (3)[Multimedia] and (2)[Download] in turn.

- Download Wavelet contents in connecting to the relevant site.

Ringtones

You can execute the designated bell sound if you receive a call from the designated caller by download the Ringstones from WWW.

1. Press (WWW), and select (4)[Ringtones] and (1)[Activate] in turn.

- View the downloaded Ringtone (melody).

2. Press (WWW), and select (4)[Ringtones] and (2)[Download] in turn.

- Download Ringtone contents in connecting to the relevant site.

* The contents of WWW service are subject to change due to development of better service and technology by business operator.

Animations

You can execute the designated animation if you receive a call from the designated caller by download the Animation from WWW.

1. Press (WWW), and select (5)[Animations] and (1)[Activate] in turn .

- Execute the downloaded Animation

2. Press (WWW), and select (5)[Animations] and (2)[Download] in turn .

- Download Animations in connecting to the relevant site.

Voice Portal

You can connect to the voice guide service portal provided by PCL .

1. Press (WWW), and select (6)[Voice Portal] in turn.

* The contents of WWW service are subject to change due to development of better service and technology by business operator.

What's New

Provide the relevant services by connecting to site provided by PCL .

1. Press (WWW), and select (7)[What's New] in turn.

SMS Info

You can select the relevant Sub Menu to request the desired information.

1. Press (WWW), and select (8)[SMS Info.]

- 6 Main Menus. Select the relevant Sub Menu to request the desired information.

Sound

Select Ringer/Vibrate

You can set various types of ringer or vibration whatever you want.

1. Press (left)[Menu] and press (1)[Sound].
2. Press (1)[Ring/Vibrator], and set the type of bell.
 - Press (OK)[Select], and press (Up/Down) keys or (Left/Right) keys to select the ringer type.
 - Press (Left/Right) to adjust the volume and then, press (OK)[Select].
 - You can set various types of ringer or vibration even in the Volume.
 - Press (OK)[Select], and then press [Scroll] to select Ringer/Vib..
 - In Etiquette mode, the phone operates in vibration mode although you selected bell mode.
 - Press (OK)[Select], and then press [Scroll] to select Ring Duration.
 - If you set bell ringer duration, the bell goes off for the time period and then only the LCD lamp blinks.
 - The phone operates in vibration mode when you set Etiquette mode or vibration mode.
3. Press (SMS)[Save].

* Type of bell

: The type of bell is divided into Default, Theme Bell, Anniv. Song, Classic, Effect Sound, My Bell.

Set Group Ring

You can designate a specific melody for the call from a specific group.

1. Press (Left)[Menu], and select (1)[Sound] and (2)[Set Group Ring] in turn .
2. Press (OK)[Select]
3. Press (Up/Down) keys and (Left/Right) keys.
 - Select the group using (Up/Down) keys and press (OK)[Select]. Select it in the same way.
4. Press (SMS)[Save].

* If you select [Not Set], it will ring the existing melody selected in Set Ring Type.

Setting Mambo Tone

You can set the sound upon slide open/close.

1. Press (Left)[Menu], and select (1)[Sound] and (3)[Slide Effect] in turn.
2. Press (OK)[Select]
3. Press (Up/Down) keys.
 - Select the group using (Up/Down) keys and press (OK) [Select].
4. Press (SMS)[Save].

* What is Mambo tone?

: You can set up various tones when opening and closing slide-up.

Setting Effect Tone

You can set various effect tone and alarm tone.

1. Press (Left)[Menu], and select (1)[Sound] and (4)[Sound Effect] in turn .
2. Press (OK)[Select]
3. Press (Up/Down) keys.
 - Select the group using (Up/Down) keys and press (OK)[Select]. Select it in the same way.
4. Press (SMS)[Save].

* Key Tone: An effect tone that rings whenever a key is pressed.

* Menu Tone: An effect tone that rings whenever a menu is changed.

* Connection Tone: An effect tone that rings whenever a message box is displayed.

* Minute Alert: A tone that rings whenever a call is connected.

Manage My Ringer

You can designate the designated ring as your ring and manage the ring including change of designated ring, file information and delete

1. Press (Left)[Menu] and (1)[Sound Option] and (5)[My Bell]
 - (1)[Download Melody] and (2)[User Melody] are showed.

Set Volume

You can adjust various kinds of volume, or set/release alert.

1. Press (Left) [Menu], and select (1)[Sound] and (6)[Volume] in turn .
 - Press (Left/Right) to adjust the volume .
 - Press (Up/Down) to move to the next item.
2. Press (SMS)[Save].

* Type of volumes

Earpiece: Volume of the voice from the receiver during call.

Sliding: Volume of sound made when the slide is open/closed

Effect Sound: Volume of various alarm tones

Ringer: Volume of Ring when a call is received.

Alarm: Volume of alarm when you designate the alarm.

Message: Volume of alarm that goes off when a message is received.

Game: Volume of the game when game contents are executed.

Display

Set Logo

1. Press (Left)[Menu], and select (2)[Display] and (1)[Decoration] in turn.
 - Press (WWW)[Preview] to check the picture to be displayed in advance.
2. Set Picture
 - Press (OK)[Select], and then press (Up/Down) to select the item.
3. Select Clock/Calendar
 - Press (OK)[Select], and then select the clock/calendar.
 - If you select No Clock/Calendar, date and time are not displayed in the Logo.
4. Name of Phone
 - Refer to Text Entry.
 - Press (OK)[Select] to set/release the entry.
5. Help Line
 - Select the Help Line display status on the Logo.
6. Press (SMS)[Save].

* You can download various animation screens from data manager (refer to page 65) or WWW beside the logo screen by default, and save them in 'Picture Setting'.

* Select 'No Picture' not to set the picture.

* If you set the moving animation to be displayed when the slide is open, the battery standby time is shortened.

* Type of clock/calendar

* If you select (1)[None], a clock is not displayed on the Logo.

* If you display (4)[Clk Big], (5/6)[Clk Analog] of Set Clock and 'Calendar' on the Logo, you cannot set the picture.

* If the Logo is designated to (4)[Clk Big], (5/6)[Clk Analog] (7/8)[Cal.] and you download a picture from WWW in normal screen status, the Logo is automatically set to 'Small Clock'.

Set Picture

You can set/release the animation to be displayed when you receive a call, turn on and off power and start WWW.

1. Press (Left)[Menu], and select (2)[Display] and (2)[Set Picture] in turn.
2. Press (OK)[Select].
3. Press (Up/Down) keys and (Up/Down) keys.

- Press (OK)[Select] on the picture you want to move to the next item. After this, you can choose the items in the same way.
4. Press (SMS)[Save].

- * Picture Contents include 'Basic Picture', 'My Picture', and 'No Picture'.
- * There is no 'No Picture' content to be displayed when starting WWW.
- * If you select the standby screen as a moving picture, battery capacity gets reduced.

Manage My Picture

You can manage the designated picture including Rename File, user file information and delete picture.

1. Press (Left)[Menu], and select (2) [Display] and (3)[Picture Setting] in turn.
 - (1)[Download Image] and (2)[User Image] are showed.

Set Backlight

1. Press (Left)[Menu], and select (2)[Display] and (4)[Set Backlight] in turn.
2. Press (OK)[Select].
 - If set to (4)[Set Time], the calling time/queue time may be reduced.
 - (e.g. -(4). in case of [Set Time])
:Enter the time of auto backlight using (Up/Down) keys, (Left/Right) keys, 'AM/PM' and numeric key.
3. Press (SMS)[Save].

- * 10-second-long Auto-backlight: Set the backlight lighted for ten seconds in case the slide gets open, a call comes in, or a key is pressed.
- * 30-second-long Auto-backlight: Set the backlight lighted for 30 seconds in case the slide gets open, a call comes in, or a key is pressed.
- * 60-second-long Auto-backlight: Set the backlight lighted for 60 seconds in case the slide gets open, a call comes in, or a key is pressed.
- * Set Time: The lamp is on for 10 seconds when you press the keys during a specified period. It is off during an unspecified period.
- * Always Off: The backlight is not set.

Info. Manager/Entertainment

Calendar

This displays calendar from Jan, 1996 to Dec, 2015 in both solar and lunar system

1. Press (Left)[Menu], and select (3)[Info. Manager].
2. Press (1)[Scheduler].
 - The current month is displayed on the screen.

Retrieve calendar

1. Press (Left)[Menu], and select (3)[Info. Manager] and (1)[Scheduler].
2. Press (SMS)[Special].
3. Press (4)[Search Calendar].
 - Enter the year and month to retrieve.
4. Press (OK)[Done].

Scheduler

You can conveniently manage the schedule by storing anniversary, special appointment, and schedule.

Add new schedule

1. Press (left)[Menu], and select (3)[Info. Manager] and (1)[Scheduler].
2. (OK)[Confirm], and [New] in order.
3. Press (1)[Add Schedule].
 - Add Anniversary : Press (2)[Add Special].
4. Put contents and press (SMS)[Save] to save them.

* You can save up to ten schedules per day.

Check schedule

1. Press (Left)[Menu] and select (3)[Info. Manager], (1)[Scheduler]
2. Move to a date to be checked and press (OK)[Confirm].
 - (Move to the month containing the specific schedule by pressing (Left/Right) keys.
Move to the required date using (Up/Down) keys.)
 - The schedule for a related date is listed.

* When you enter contents to the Phonebook with the birthday, it will be automatically

stored to Anniversary.

- * The anniversaries added using Add Anniversary can be deleted showing you Deletion mark while a holiday and the birthday added during the input to the Phonebook do not indicate the Deletion mark.
- * To delete a birthday, delete one from the Phonebook, which also makes it deleted from the Anniversary.

Setting schedule alarm

<Setting schedule alarm>

1. Press (Left)[Menu], (3)[Info. Manager], and (1)[Scheduler] in order.
2. Press (WWW)[Sched.] and (3)[Alert Type].
3. Put contents and press (SMS)[Save] to save them.

<Setting Anniversary alarm>

1. Press (Left)[Menu], (3)[Info. Manager], and (3)[scheduler] in order.
2. Press (SMS)[Special] and (3)[Special Alarm].
3. Put contents and press (SMS)[Save] to save them.
 - When you press (OK)[Setup] at Set Alarm, you can set subitems.

- * You can set Set/Clear All Schedule Alarms at Add Schedule.
- * By default, it is set to 'No Alert'.

Setting wakeup call (Morning call)

If activated, this function rings alarms until it is cleared by a key input on a scheduled time basis (Snooze function).

1. Press (Left)[Menu], (3)[Info. Manager], and (2)[Morning Call].
2. Press (OK)[Setup] to set overall wakeup call and then set items.
 - For input method, refer to how to activate/select the menu (Refer to pages 13).
3. Press (SMS)[Save] to save it.

- * If the Snooze function is activated and the wakeup call alarm rings, a key input will stop current alarms only while [End] key input will clear the Snooze function.

Alarm

You can set alarm at any time.

Set new alarm

1. Press (Left)[Menu], and select (3)[Info. Manager] and (3)[To Do].
 2. Press (SMS)[New].
 - Press (Up/Down) to move to the required alarm period.
 3. Press (OK)[Select] and enter the time for alarm.
 - For input method, refer to how to activate/select the menu (Refer to pages 13).
 - Enter alarm memo and press (OK)[Done].
 4. Press (SMS)[Save].
 - You can save up to 16 English letters for alarm memo.
- * Alarm period is divided into Specific Time, Every Day, Every Week, Every Month.
- * Specific time alarm goes off once at the designated time lapse.
- * In case of an alarm only once ringing, it is automatically deleted after once ringing.
- * Press (WWW)[Menu] on the alarm list to release the alarm, or change the alarm using the edit function.
- * Up to ten designations are available for alarm.
- * If the phone is off at the designated time, alarm goes off at switching it on.
- * If the phone is busy at the designated time, alarm goes off after the call is disconnected.

Set alarm ringer

You can set the type and volume of alarm ringer.

1. Press (Left)[Menu], and select (3)[Info. Manager] and (3)[To Do]. Then, press (WWW) [Menu].
2. Press (2)[Set Alert].
 - Press (OK)[Select] and then select the type of alarm ringer or adjust the picture using (Up/Down) or (Left/Right) keys.
3. Press (SMS)[Save].

Answer Machine

You can record the message of the caller, by simply recording and selecting the announcement with one touch.

Setting auto answering function

1. Press (Left)[Menu] and (3)[Info. Manager] and then press (4)[Ans. Machine].
2. Press (1)[Set Alert] and 'Ring Duration'.

- Press (OK)[Select] to select the ringer duration time.: The phone rings/vibrates for the time designated when a call is coming and auto answering mode is activated.
3. Select 'Announce Voice'
 - Press (OK)[Select] to select the announcement.
 - You can record announcement by yourself or can select one of five recorded announcements.
 - Announcement is set as 'General' by default.
 4. Press (SMS)[Save].

Record/Play Announcement

You can record and check the auto answering announcement.

1. Press (Left)[Menu] and (3)[Info. Manager], (4)[Ans. Machine]. and (2)[Record/Play] in turn.
 - If it already recorded, press (SMS)[Play] to check the recorded user's voice.
 - For recording, press (OK)[Record] and save it by pressing (SMS)[Save].
 - Maximum recording time is 30 seconds.

* Press (SMS)[Play] to play the recorded contents.

My memo

You can make / save up to 10 memos anytime and anywhere using my memo.

New memo

1. Press (Left)[Menu], and select (3)[Info. Manager] and (5)[My Memo].
2. Press (SMS)[New] and enter required memo.
 - For input method, refer to 'Adding an entry' (Refer to page 13).
3. Press (OK)[Done].

Check/Edit memo

1. Press (Left)[Menu], and select (3)[Info. Manager] and (5)[My Memo].
 - Move to the memo to edit using (Up/Down) keys.
 - To delete memo, press (WWW)[Delete] on the above screen, and press (OK).
2. Press (OK)[Confirm].
3. Press (SMS)[Edit].
 - If the entry mode is activated, delete contents with (CLR) key, and enter memo.

* You can make/save up to 10 memos, and up to 64 English letters for each memo.

* If ten memos are full, the message "Cannot save any more" is displayed.

Calculator

This processes addition, subtraction, multiplication and division.

1. Press (Left)[Menu] and select (3)[Info. Manager] and (6)[Calculator].
 - Use the numeric and calculation code keys to calculate.
2. EX) in case of 9 x 7, enter figure (9), select (Up)[X], enter figure (7), and then press (OK) [=].
 - You may use calculation codes many times. The result should not exceed 12 digits. If it exceeds 12 digits, [Error] message appears and the screen returns to the initial calculator screen.

* Application keys for calculation are as follows.

[+] to add,

[X] to multiply,

[] to divide,

[-] to subtract,

[.] to enter decimal point, and

(AC) clears the screen.(ALL CLEAR).

[=] to get the answer and

(CLR) press it to delete a letter, and press and hold it to delete all.

* (SMS)[Ref] shows the calculation contents before initialization. For restart of calculation, press (SMS) [Ref].

* (WWW)[Menu] is as follows.

Save : Save the result of calculation.

Total : Add the current result to the memorized value.

Load : Call the last memorized value to the LCD.

Delete : Delete the memorized values. But the calculation contents are not deleted.

Initialize : Delete all calculations.

Stopwatch

You can use stopwatch with your phone.

1. Select (Left)[Menu], (3)[Info. Manager], and (7)[Stop Watch].

2. Press (OK)[Start].
 - The stopwatch begins to operate.
 - Screen in measuring
3. Press (SMS)[Stop].
 - Press (SMS)[Reset] to go back to the initial mode.

- * Press (OK)[Save] to record the interim result during operating the stopwatch, and check the records using (WWW)[View] in the still screen.
- * Press (SMS)[Stop] to suspend and press (OK)[Continue] to measure again.
- * Stopwatch is cancelled when a call is incoming.
- * You can save up to 20 stopwatch records.

World Time

You can know the present time of various countries in the world.

1. Press (Left)[Menu], and select (3)[Info. Manager] and (8)[World Time].
 - Press (Up/Down) keys to move to the required city in alphabetic order.
 - If (Left/Right) is pressed, the cursor moves to the near of city that is indicated by the world map.
- * A user sets DST (Daylight Saving Time) period for each different city. After it is set, the time displayed will reflect the summer time.
 - * 41 city names recorded on the World time are as follows.

World time of 41 major cities

1	Amsterdam	15	Hanover	29	Rio de Janeiro
2	Athens	16	Helsinki	30	Rome
3	Baghdad	17	Honolulu	31	Samoa
4	Bangkok	18	Lisbon	32	San Francisco
5	Beijing	19	London	33	Seattle
6	Beirut	20	Los Angeles	34	Seoul/Tokyo
7	Berlin	21	Madrid	35	Singapore
8	Boston	22	Manila/HGKONG	36	Sidney/MEL
9	Cairo	23	Mexico City	37	Taipei
10	Chicago	24	Montreal	38	Tehran
11	Dallas	25	Moscow	39	Vienna
12	Denver	26	New York	40	Washington D C
13	Detroit	27	Paris	41	Wellington
14	George Town	28	Phoenix		

Game

You can enjoy various games in your mobile phone screen.

Game Manual

1. Slime Hunter

 
1. Press (Left)[Menu] and select (4)[Game]
2. Press (1)[Slime Hunter].
 - Single Game : One-to-one game with phone
 - Option : Set up the sound/vibration and backlight.
 - How to Play : Show the usage of keys.
 - Ranking : Best score is displayed.

* Selection of character



- Select the character by pressing (left/right).
- Usable items show by character.

* How to play

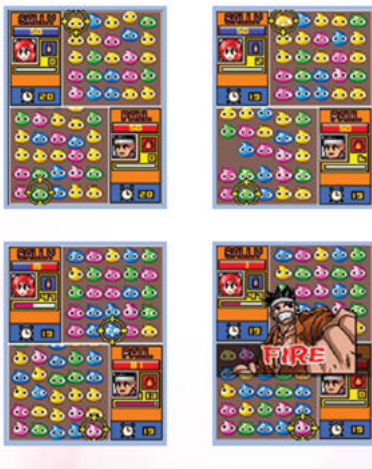

When game starts, the screen shows partner and user. The lower part is controlled by the user. The upper part shows the partner's game.

Move the cursor by using (up,down,left,right). Place the cursor to the slime to be removed and remove it by pressing (OK). Over three slimes of the same color in the same direction disappear with adjacent slimes of the same color. The energy of partner and user shows in blue and red respectively. The more the chain reaction increases, the more the user's energy increases. The gamer of two wins with first 100% energy. When the

user does not remove the slimes while timer counts down, the some part of its energy decreases. And the timer starts recount. The small gage in the bottom of character icon increases by the chain reaction. When the gage shows 100, item displayed on the gage is automatically adopted. Also you drop the bomb on the partner's slime. This bomb explodes after a certain time. Before explosion, remove the relevant slime to drop the bomb.

Set Environment

Auto Function

You can set/release various auto functions.

1. Press (Left)[Menu], (5)[Setup] and (1)[Auto Function] in turn.
 - Press (Up/Down) keys to move to the item you want.
 - Select (OK)[Set/Release].
 - If you select auto local code, it automatically enters auto local code.
2. Press (SMS)[Save].

- * Auto Redialing: When there is heavy traffic, you can activate/deactivate auto redial to the number you called.
- * HandsFree: With connection to HandsFree, you can set/release auto-received after the ringer sounds twice.
- * Earphone: You can set/release the function to automatically receive after bell rings for 10 seconds when you connect to the earphone.
- * Local area code: You can set the frequently used local area code so that you don't have to press it whenever you make a call.
- * Enter local area code: Enter the local area code you want using numeric keys when you select auto local area code.
- * Auto-receive by HandsFree, Auto-receive by Earphone and area code are preset as deactivated.

Set Options

1. Press (Left)[Menu], and select (5)[Setup], (2)[Option] and (OK)[Select] in turn.
 - Press [Scroll] and (OK)[Confirm].
2. Set the method of receiving call.
 - How To Answer: you can set how to receive a call to 'Slide Open', 'Open & Press' and 'Open & Send' when an incoming bell rings in closed status of slide.
 - Press [Scroll] and (OK)[Confirm].
3. Set Dial Font Size.
 - You can select font size out of Large/Default one when placing a call.
4. Press (SMS)[Save].

- * Receiving calls in closed status
- * Slide Open: you can open the slide to receive a call when the call is incoming.

- * Open & Press : you can open and press the key to receive a call when the call is incoming.
- * Open & Send : you can press the key to receive a call in closed status of slide when the call is incoming.

Security

You can activate the lock function of your phone, change the password, or initialize the Phonebook or the system.

<Lock>

You can set/release the lock function not to use the specific function of phone or not to make a call without entering password.

1. Press (Left)[Menu], and select (5)[Setup] and (3)[Security] in turn, and enter password.
 - The password is set as 0000 by default.
2. Press (1)[Lock]
3. Press (OK)[Set]
4. Press (SMS)[Save]

- * Auto lock: you can set/release the function not to use the phone without entering password when the phone is switched on.
- * Out key lock: you can set/release the function not to use the external keys without entering password.
- * Call List : You can set/release the function not to check or make a call to the recently sent or received number without entering password.
- * Message: You can set/release the function not to use the SMS function without entering the password.
- * Phone Book: In Phonebook lock mode, you should enter password to use the Phonebook. You cannot make a call with hot key if this lock is set.
- * Menu: You can activate/deactivate Menu lock in which you should enter password to use Menu.
- * Record/play: You can activate / deactivate Rec/ play lock in which you should enter password to record or to play.
When this lock is set, pressing [Record] will prompt you to ask the password.
- * Memo: You can activate / deactivate Memo lock in which you should enter password to use memo function.
- * My Information: You can activate/deactivate this lock in which you should enter password to check my information.

<Change Password>

You can change the old password to new one.

1. Press (Left)[Menu], and select (5)[Setup] and (3)[Security] in turn, and enter password.
 - The password is set as 0000 by default.
 - And press (2)[Set Password] .
2. Enter new password.
 - Enter new password to change.
3. Confirm new password .
 - Enter new password again to confirm.

<Initialize Book>

Initialize phonebook to the default status.

1. Press (Left)[Menu], and select (5)[Setup] and (3)[Security] in turn, and enter password.
 - The password is set as 0000 by default.
2. And press (4)[Init. Book]
 - Press (Left/Right) to select whether to initialize, and press (OK)[Select].
 - All phone numbers will be deleted during initialization.

<Initialize System>

Initialize all functions of system to the default functions.

1. Press (Left)[Menu], and select (5)[Setup] and (3)[Security] in turn, and enter password.
 - The password is set as 0000 by default.
2. And press (4)[Init. System] in turn.
 - Press (Left/Right) keys to select whether to initialize, and press (OK)[Select].

Set Data Communication

You can set environment for data service including Internet / PC communication / FAX.

1. Press (Left)[Menu], and Press (5)[Setup], (5)[Data Comm.] and (OK)[Select] in turn, and select receiving mode.
 - Press [Scroll] to confirm.
 - Incoming mode: Set the receiving mode of the phone when you connect the PC with the mobile phone through a data manager cable.
2. Press (Up/Down) to select the item, and press (OK)[Confirm].
 - PC Baud Rate: Set the interface rate between PC and mobile phone.

3. Press (SMS)[Save].

<Set Incoming mode>

For Modem and FAX, you should select Modem Mode or FAX Mode. However, you do not need to set receiving mode for Modem or FAX origination.

<PC Baud Rate>

The maximum speed in desktop/notebook is 115,200bps and you should insert I/D card or PCMCIA Card in the desktop/notebook that supports high speed communication in order to set the communication speed with PC as 230, 400 bps.

The recommended speed for using fax data service is 19,2000 bps.

Select System

This function is to select one number if the user uses mobile phone with more than 2 service operators.

1. Press (Left)[Menu], (5)[Setup], and (6)[Select System] in turn, and enter password.

- Password is 0000 by default.

* If the phone is set again to the selected system, it will be turned off and on again.

* Password is 0000 by default. Do not change it as much as possible. If you still need to change it, contact the service center first.

Check S/W Version

1. Press (Left)[Menu], (5)[Setup], and (7)[S/W Version] in turn.

- The version number of the software will be displayed when you purchase the phone.

WWW Font Config

1. Press (Left)[Menu], and select (5)[Setup], (8)[WWW Font Config] and (OK)[Select] in turn, and select either Default or Small Font.





- Press [Scroll] and (OK)[Select].

Convenient Features

Auto answering

You can record the message of the caller according to the announcement previously set when you cannot answer the call.


Set auto answering

1. With slide opened in standby status, press and hold down  <A> key on the left. For releasing it, press and hold down  <A> key.
2. When a call arrives, the selected bell/vibration functions and it returns to auto-answer mode.
 - When a call arrives, you convert immediately to auto-answer by pressing and hold down  <A> key.
 - When auto-answer is set, guide voice is converted from General In Class User Meeting in order by pressing  <A> key shortly.

Auto answering operation



1. On incoming call, the bell rings for the designated number of times, and auto answering voice announcement is transmitted.
 - You can select one of the two announcements, announcer's voice (General In Class User Meeting) and user's voice.
2. At the end of the announcement, the caller can record his/her message for 30 seconds.
3. When message recording is completed, Missed call status is displayed.
 - Open and close the slide to display the auto answering mode.

Check Message

1. Open the slide, and press  key on the left.
2. Press (OK)[Play] to check the recorded message.

* Refer to how to use Play Function of Recording for more details.




Release Auto answering

1. Press and hold  <A> key in the auto answering mode.
 - Auto answering is released and the phone returns to standby mode
 - * You can answer the call during the recording by pressing (SEND) key and can finish the call by pressing (END) key. The message recorded before you answer is automatically saved.
 - * You can switch the phone to auto answering mode by pressing and holding  <A> key when a call is incoming at normal standby mode.


Voice Recorder

You can record/play/delete contents of the call or other contents in standby mode or during the call.


Record

1. Open the slide, and press  key on the left.
2. Press (SMS)[Record] to start recording.
 - Pressing (OK)[Save] makes the recordings saved. Pressing and holding  key can also execute the recording.
 - When  key is pressed during the recording, recording stops and the recordings are saved.
 - * You can record the contents of the call during the call by pressing and holding (SMS)[Record] button. Play / Delete is disabled during the call.
 - * When the call is disconnected during recording the contents of the call, the recording automatically stops and the recorded contents are saved.
 - * When a call is received during the recording, the recording automatically stops and the recorded contents are saved. At this time, the alert type changes into vibration.
 - * When you press [Record] again after using the maximum recording time (4 minutes), the screen displays the message, "No space for recording!", and then gets back to the recording information screen.
 - * You can record up to 20 messages. (When 20 messages are recorded, you can record no more messages regardless of remained recording time.)

Play

1. Open the slide and press  key on the left.
 - Press (WWW)[Menu] to delete a message, delete all messages, or continuously play the recorded messages.
 2. Press (OK)[Play].
 - Press (Up/Down) to select the recorded message you want, and press (OK)[Play] to play it.
 - After the play is finished, the LCD returns to the recorded message screen.
- * Press [Scroll] on the Record/Play Screen to select and play the recordings.
- * When you receive a call during playing, the Play mode ends. Press any key to receive a call. At this time, alert type is changed into vibration mode.

Delete

1. Open the slide and press  key on the left.
 - Shift to the recording to delete using (Up/Down) key.
 2. (WWW)[Menu]
 3. (1)[Delete]
 - Press (Left/Right) to select Yes or No depending on whether to delete or not, and press (OK)[Select].
- * Press (2)[Delete All] to delete all the saved recording lists.
- * During playing the recordings, you can also move to the item to delete and press (WWW)[Delete].

Earphone Mic (accessory)

Earphone Mic is an optional item, which is not included to the basic supply. You should purchase it separately.

- * E/M-200 and E/M-300 alike are available for SK-6000. If you use E/M-100, the button on the mic will not operate.
1. Insert earphone Mic to the Earphone Mic jack from the top of the mobile phone.
 2. Put the earphone into your ear. Mic is then automatically placed to your mouth.
 3. You can hear and talk with earphone Mic instead of mobile phone speaker and Mic.
 4. Press and hold the Mic switch. The switch is operated [Call] function when a call is received, as (SEND) function to make a call at the standby mode, as (End) function

during the call.

- * While the earphone Mic is connected to the mobile phone, the call is not disconnected even when you close the slide during a call.
- * Press and hold the button on the mike at standby mode to make a call to the last called number.
- * Press and hold the button on the mike to end the call.

Appendix

Menu Construction

You will easily access various functions with Multi-key; Select menu by Multi-key, then simply press a corresponding number key.

Setup	Step1	Step2	Step3	Step 4	
1.Left Key menu	1. Sound Option	1. Ring/Vibrator	Ringer Type Ring Volume Ringer/Vib. Ring Duration		
		2. Set Group Ring			
		3. Slide Effect	Slide Open Slide Close		
		4. Sound Effect	Key Tone Menu Tone Connection Tone Minute Alert		
		5. My bell	1. Download Melody 2. User Melody		
		6. Volume	Earpiece Sliding Effect Sound Ringer Alarm Message Game		
	2. Display		1. Decoration	Picture Clock/Calendar Phone Name Help line	
			2. Set picture	Incoming Call Power On Power Off WWW Start	
			3. Picture Setting	1. Download Image 2. User Image	
			4. Set Backlight	1.10sec 2.30sec 3.60sec 4.Set Time 5.Always Off	

	3. Info. Manager	1. Scheduler 2. Morning Call 3. To do 4. Ans. Machine 5. My Memo 6. Calculator 7. Stop Watch 8. World Time		
	4. Game	1. Slime Hunter		
	5. Setup	1. Auto Function	Auto Redialing HandsFree Earphone Local Area Code	
		2. Option	Language How To Answer Dial Font Size	
		3. Security	1. Lock	Auto Lock Out Key Lock Call List Message Phone Book Menu Record/Paly Memo My Information
			2. Set Password	
		4. Call Timers	3. Init. Book 4. Init. System	SndVoice RcvVoice WWW Conn.Time SndData RcvData
			1. Last Call 2. Lifetime Call	
			3. Total Call	
		5. Data Comm.	Incoming Mode PC Baud Rate	Voice Modem Fax 19,200 bps 115,200 bps 230,400 bps
		6. Select System	NAM 1 NAM 2	
		7. S/W Version		
	8. WWW Font Config	Font Size	Default Small Font	
Right Key Menu	1. Speed search			
	2. Search By Name			
	3. Search By No.			
	4. New Entry			
	5. TURBO Dial			
	6. Memory Group			
	#. My Information			
WWW Key	1. Internet Portal			

	2. Games World			
	3. Multimedia			
	4. Ringtones			
	5. Animations			
	6. Voice Portal			
	7. What's New			
	8. SMS Info			
Upper/Lower key in standby mode	Call history(List)			
SMS key	1. In-Box	1. Text Msg 2. Voice Msg 3. Saved Msg		
	2. Out-Box	1. New Message 2. Outgoing Message 3. Sent Message 4. Phrase		
	3. Delete All Msg	1. Text Msg 2. Voice Msg 3. Saved Msg 4. Outgoing Msg 5. Sent Message 6. Phrase 7. All Messages		
	4. Set Msg Alert	Alert Type Alert Tone Volume Alert In Call		
WWW Key menu During a call (Hot menu)	1. Receive Msg			
	2. Mute			
	3. Call ID List			
	4. Calling List			
SMS key menu During a call (phonebook) Upper/lower key during a call	1. Speed Search			
	2. Search By Name			
	3. Search By No.			
	4. New Entry			
	#. My Information			
	Volume			
Record key	Record			
Auto answer	(Press and hold) toggle between auto answering/normal answering			

Options

Following items are required for supplementary service and not included in SK-6000 basic component .

Use the product provided by SK Teletech only.

Data manager kit (IMCBL-600)

This kit provides connection between PC and phone, enabling you to easily utilize the phone function.

Connect data manager

* Note that this data manager cable should be used with the battery attached to the phone.

Data manager function

* PIM Phonebook edit * Selecting ringer melody * Selecting animation
*SMS function *Setting environment

Earphone Mic (E/M-300)

For SK-6000, please use E/M-200,E/M-300

If you use E/M-100, the button on Mic does not operate.

Q&A for Phone

Q	A
Q. When making a call, only "tu-tu-tu" sound is heard and calling is not complete.	A. It is due to the facts that either all calling channels are engaged or transmission to the base station is not successful. Pressing (End) and (Send) consecutively will allow a user to redial the last called number automatically.
Q: I saved more than 2 phone numbers on the phonebook of SK-6000 and transmitted it to the other SK model(which does not support saving of over 2 numbers), but not all the phone numbers in one list are transmitted.	A. Different SK model(which does not support saving of over 2 numbers) has different structure of phonebook memory from that of SK-6000, so that it allows the user to save only 1 number.
Q. I am a user with no data manager cable. Also modem are not installed on my PC. Is there any way I can use the data manager?	A. Connecting through IP address using ADSL modem or LAN card installed on a computer allows a user to use the Air data manager function. * For more information, refer to Air data manager

Prevent Illegal Handling of ESN

It is illegal to remove or change the Electronic Serial Number (ESN) of the phone manufactured by SK Teletech, or to copy the other number. Anyone who commits the illegal action is the subject for imprisonment for less than 3 years or for the penalty of less than ten million won in accordance with the relative laws and regulations (Article 4 of the Radio Waves Act, Article 57 of the Electronic Communication Business Law and Article 347 of the Criminal Law. This illegal attempt may damage the software of the phone, resulting in broken phone. Users are required to be careful not to suffer damages caused by these illegal acts. When any illegal act is found, service by warranty, whether it is free of charge or charged, shall not be provided.

Precautions

- Do not lend your phone to others.
- Contact the nearest after-sales service center designated by SK Teletech.
- When the phone is lost or stolen, contact the report to the carrier immediately.

Specifications and Features

Range of frequency used		TX: 824.70 - 848.31 MHz RX: 869.70 - 893.31 MHz
Accuracy of the frequency		Within 300 Hz of assigned frequency
Size		With slim battery: 95.6 x 45 x 20.55 mm
Weight		With slim battery: 97.3g
TX output		0.327 W 50%
Operation temperature	Phone	-20 ~ +50
	Charger	0 ~ +40
Relative humidity		5% ~ 95%

Mobile Phone Data

Model name		SK-6000
Date of purchase		
Purchased from	Business name	
	Telephone No.	
Serial No.		


Phone No.	
Password	

FCC RF EXPOSURE INFORMATION

WARNING! *Read this information before using your phone*



 In August 1996 the Federal Communications Commission (FCC) of the United States with its action in Report and Order FCC 96-326 adopted an updated safety standard for human exposure to radio frequency electromagnetic energy emitted by FCC regulated transmitters. Those guidelines are consistent with the safety standard previously set by both U.S. and international standards bodies. The design of this phone complies with the FCC guidelines and these international standards.



Use only the supplied or an approved antenna. Unauthorized antennas, modifications, or attachments could impair call quality, damage the phone, or result in violation of FCC regulations.

Do not use the phone with a damaged antenna. If a damaged antenna comes into contact with the skin, a minor burn may result. Please contact your local dealer for replacement antenna.

Body-worn Operation

This device was tested for typical body-worn operations with the back of the phone kept 1.5 cm. from the body. To maintain compliance with FCC RF exposure requirements, use only belt-clips, holsters or similar accessories that maintain a 1.5 cm. separation distance between the user's body and the back of the phone, including the antenna, whether extended or retracted. The use of belt-clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.