

Environmental Conditions

Operating Temperature: 14 °F to 131 °F, (-10 °C to 55 °C) (indoor only)

Warranty Terms

Within the period of warranty, if the product fails with no fault of user operations, it will be repaired at petoneer's expense. Product failure in examples below will not be covered by the warranty:

- 1). Intentional damage to product by user or third party
- 2). Failure to operate and/or maintain the product in accordance with the Quick Installation Guide (QIG) instructions.
- 3). Failure by natural wear and tear including but not limited to scratching, corrosion, oxidation and rusting.
- 4). Failure by non-authorized repair of the product including but not limited to user's own or third-party repairing attempts or modifications.

Support



PETONEER

MODEL: FSW010

 
Quick Installation Guide

www.petoneer.com

What is Included:



Fountain



Filter




Power Supply:
AC-DC5V/1A



USB Cable:
4 feet (1.2m)

Getting to Know Fresco Pro

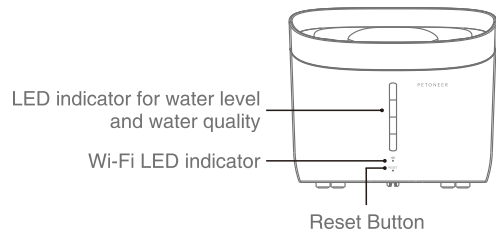

Long press: Factory Reset

Short press: Reset the filter's countdown to the next change after replacement.

Water Level Status



4 bars: Adequate



3 bars: Normal



2 bars: Low



1 bar: Empty (Fill Alert)

LED Indicator

LED indicator	Description
Blue	TDS : 0-50 (Clean)
Green	TDS : 51-100 (Drinkable)
Orange	TDS : >100 (Alert to change water)
Red	Reminder to change filter

Steps to Set Up:

1. Install Petoneer App.

Please scan the QR code on the right, or go to Google Play or App Store to download the Petoneer app. Register and login with your email or 3rd party social account!



2. Put the filter between the lid and the filter tray.

3. Plug in the power supply.

Open the Petoneer app and click the '+' icon. You will then get walked through joining the fountain to your home's Wi-Fi. If the LED indicator is blinking slowly, please use a pin to long press the RESET BUTTON until you see it blink fast.

*For more detail, please refer to tutorial videos on our website.

Specification

Model: FSW010

Power: 5V 1A

Capacity: 2L

Communication: Wi-Fi

Range: 30m

Warranty: 1 year

FCC NOTE:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: The Grantee is not responsible for any changes or modifications not expressly approved by the party responsible for compliance. Such modifications could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

—Reorient or relocate the receiving antenna.

—Increase the separation between the equipment and receiver.

—Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

—Consult the dealer or an experienced radio/TV technician for help.