

ATMPC USER GUIDE



Please read this manual carefully before
using the tablet



1 After-sales Support Service

Dear customer

Hello

Thank you very much for your trust and purchase of our products, we ATMPC brand will do our best to provide customers with the best quality products and services. Satisfying every customer's needs and satisfaction is our ultimate goal. Each of our ATMPC products comes with a one-year warranty, all you need to do is activate the warranty service by scanning the code and you will get a hassle-free after-sales service. Come on!

Menu

1. After-sales Support Service	01
2. Matters Needing Attention	03
3. Battery Charging and Usage Instructions	03
4. 7 "tablet Introduction	05
5. Quick Start	06
6. Basic Setting	08
7. About iWawa	10
8. Problem Solving	12

2 Matters Needing Attention

Maintenance and maintenance

1. Keep the device dry. Do not allow the device, battery, or charger to contact water and vapor, or handle the device or charger with wet hands. Otherwise, it may cause short circuit, failure due to corrosion, or electric shock.
2. Do not shock or shock the device, battery, or charger. Otherwise, the device, battery, or charger may fail.
3. Do not place the device, battery, or charger in an area where the temperature is too high or too low. Otherwise, the device, battery, or charger may fail.
4. Do not hit, throw or prick the plate, and avoid falling, squeezing or bending the plate.
5. Please do not disassemble the equipment and accessories without authorization, otherwise the equipment and accessories will not be covered by our warranty.

3 Battery Charging and Use

It is recommended to fully charge the battery of the device before using it for the first time.

The first time you use a tablet, it's likely to be a fake charge, so don't worry. You need to charge the tablet twice, the first time to 100%, discharge to 0%, and the second time to 100%, and then it's ready for normal use.

1. To ensure a longer battery life, it is recommended to drain it completely before recharging. If you do not use your tablet for long periods of time, charge it and use it once a month to avoid battery damage.
2. When the battery is completely exhausted, connect the device to the adapter and wait a few minutes before it has enough power to enter the main menu.
3. When charging, the device will enter standby mode until it has enough power. It is recommended not to use the device during charging, as it will take longer to charge if the device is left on during charging.

Battery Usage Information

Battery life varies according to the usage scenario and volume.

Condition	Test item	Duration of WiFi connection	Duration of use without wifi connection
Volume 47% Brightness79%	Video playback	2H 58min 9S	3H 18min 41S
	Audio playback (screen state)	10H 20 min	11H 18min 32S
	playtime	3H 34min 40S	3H 19min 13S
	Standby time	Power drop 31 %/day	Keep 135H
Volume 60% Brightness 100%	Video playback	2H 07min 57S	2H 14min 42S
	Audio playback (screen state)	10H 4min 49S	9H 53min 48S
	playtime	2H 30min 58S	2H 07min 04S
	Standby time	Power drop 34%/day	Keep 121H 49min

4 Tablet Introduction

Your packing contains the following items:



7inch kids tablet

 


Data cable * 1



User guide * 1

Overview of 7 "tablet functions:

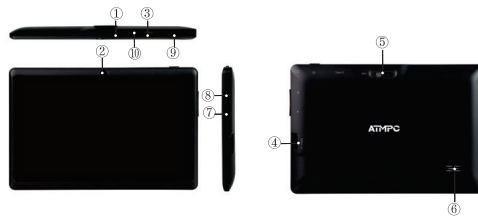

- ① Mic
- ② Front Camera
- ③ Type-C
- ④ Micro SD
- ⑤ Back Camera
- ⑥ Speaker01
- ⑦ VLO-
- ⑧ VLO+
- ⑨ Power
- ⑩ Reset Hole

5 Start

5.1 Key function description:

(power)	Short press the sleep/wake up function and long press the on-off function
VLO+(up)	Increase the volume
VLO-(up)	Reduce the volume

5.2 Power-on and power-off

Power-on

Long press the POWER button for 2 seconds to see the startup screen. After the system is started, the screen is locked. Please unlock it.

power-off

1. When you hold down the POWER key, the shutdown option will appear.
2. Click on Shutdown.

 
5.3 USB connection

Storage Settings for the tablet

Before transferring files, you must first set the storage mode for your tablet:

1. Connect the tablet to your computer using a USB cable. A notification is displayed in the notification bar.
2. Open the notification panel to view the status and notification of the tablet.

3. In the Notification panel, click USB Connected, and then click USB Storage Device Figure 3.4
4. The USB connection is successful.

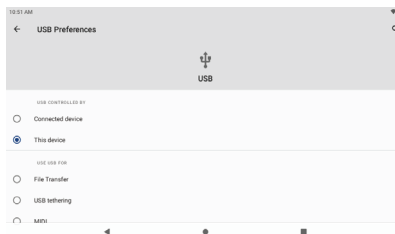

Copy the file to the memory card

1. Connect the tablet to the computer using a USB cable.
2. After following the storage Settings of the tablet, the computer is successfully connected.
3. Open your computer on My Computer and view the contents of Removable Disk (x).
4. Open your computer on My Computer and view the contents of Removable Disk (x).
5. After the copy is complete, click Close USB Storage Device to uninstall it.

5.4 Input text

Using a screen keyboard

 
The on-screen keyboard appears when you launch a program or select a text edit box that requires you to enter a text or number. The default keyboard is Android keyboard

6 Basic Setting

5.1 Wireless and network

Set up wifi connection

1. On the main menu, select the Settings application
2. Click WLAN and turn on wifi. The tablet will automatically scan for available Wi-Fi wireless networks. Figure 4.1
3. Select the Wi-Fi network you want to connect to. If the Wi-Fi network is encrypted, a window for entering a password will pop up.

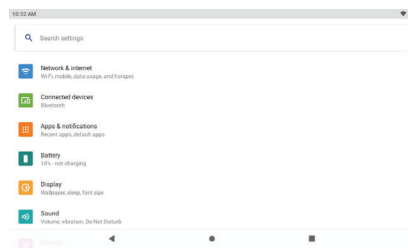


By default, the system automatically uses the date, time zone, and time provided by the network.

Manually adjust the date, time, and time zone.

1. Click on Setup Application.
2. Scroll down the screen and click on the date and time.
3. Turn off automatic date and time determination.
4. Disable automatic time zone determination.
5. Click to select a time zone, and then select a time zone from the list. Scroll down the list to see more time zones.

 6. Click the Set Date, then click the Up or Down button to adjust the date, month, and year, and when you're done click Settings.
7. Click Set Time. Then click the up or Down button to adjust the hour and minute, and click AM or PM to change the morning or afternoon (this option is not available when selecting a 24-hour format). Click Settings to complete.
8. Select the Use 24 Hour Format check box to switch between using 12 hour format or 24 hour format. The selected time format is also applied to the time format displayed on the alarm clock.
9. Click to select the date format, and then select the format in which you want to display the date on the tablet.

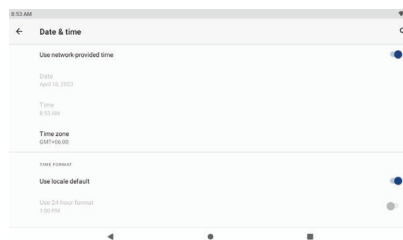


Note: If you automatically use the time provided by the network, you cannot set the date, time, and time zone yourself.


- Click the Settings app.
- Select Language and input method.
- Click on the language, and then select the language you want. Scroll down the list to see more languages.

7. About iWawa

1.How to use parental controls?

  
The iwawaapp page is displayed.

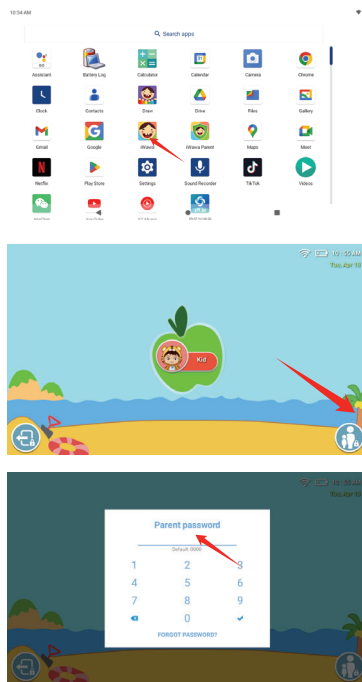

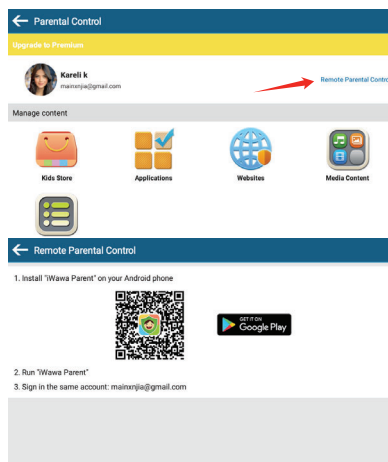

2.How do I exit the Parental Control app?

 
Click the lower left corner to return to the initial interface. Click the exit button in the lower left corner. The default exit password is 0000

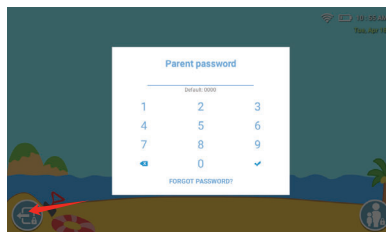

3.How to controls lock apps for iWawa ?

Step 1: Click on Parental Controls

 Step 2: Click Applications

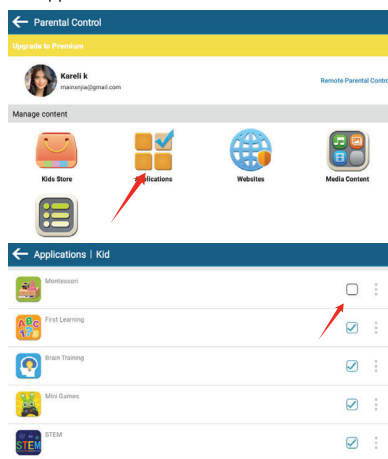

8. Troubleshooting

1.The tablet starts slowly for the first time?

After upgrading the tablet system, you need to install the pre-installed application software when you start up the tablet system for the first time, which takes about 2-3 minutes, and then it will be faster.

2.The tablet doesn't connect to WIFI?

Ensure that the network is 2.4G. This product does not support 5G network for the time being

Ensure that the wireless routing that provides network services works properly.

Make sure that the distance between the tablet and the wireless route is maintained and that there are no walls or other obstacles separating them. Make sure you enter the correct user name and password.

3.The tablet feels hot?

Heat may occur when using more than one app at a time, or when the screen is on full brightness and charging. This is normal.

4.The system fails to run properly

When you install some third-party applications, the system may fail to run properly. You can reset the system by pressing the reset key (next to the power port).

5.Unable to open web page?

Please keep the distance between the route and the tablet within the effective distance

Please restart WIFI and try again

6.Tablets sometimes run slowly?

This is a normal phenomenon. In advanced task management, terminate some unnecessary applications and uninstall some third-party applications to release more system resources

7.Can't turn it on, can't charge it?

Tip 1: There is a small hole next to the power button, press it for one second with a small needle, and then long press the power button for ten seconds

Tip 2: Charge the tablet for more than 30 minutes, then press the boot

FCC Statement

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.