




MEMORY CORRECT

Electronic Typewriter

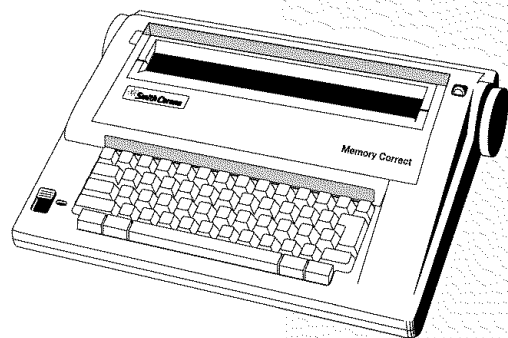

This User's Manual should be used with the following model: Memory Correct.
© Copyright Smith Corona Corporation, 1997.
799558 Rev. A

NAES

Printed in USA

My Most Popular Features

Correcting Cassette

Easy to change and snap into place.

Automatic Memory Correction

Instant correction.

WordEraser

Erases an entire word.

Auto Center

Quickly and accurately centers text.

Bold

Highlights text.

Decimal Tab

Automatically aligns numbers by decimal points.

Self Demonstration...


Activate this Self Demonstration Program and discover my most popular features.

This built-in Demo is easy to use. Follow the instructions below.

1. Insert Paper.
2. Press and hold **Code** while pressing **Z**.
3. Release both.

Hardware Basics

Typewriter Diagram

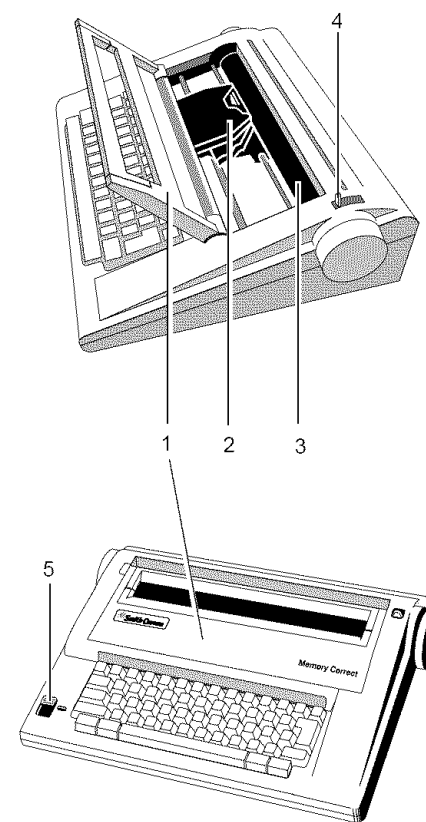


Important: Save all packing materials. If you ship or move the typewriter, it should be repacked in the original carton. See "Shipping Instructions."

This diagram depicts only basic features. For information on coded features, see specific chapters or the Quick Reference Guide at the end of these instructions. Product appearance and/or specifications are subject to change without notice.


Setting Up

Before you can use your typewriter, you must remove the packing materials from the print mechanism. This is essential to the proper functioning of your typewriter. **Do not turn the unit on until you have prepared the typewriter for use.** Follow the steps listed below using the typewriter diagram for reference. The numbers on the diagram correspond to those in the instructions.


1. Tilt the protective cover (1) toward you.

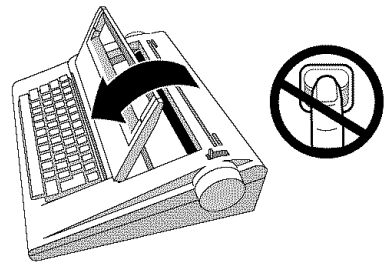

2. Release the rubber band (left side first) from the tabs.

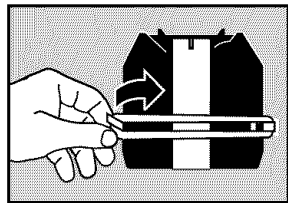

3. Remove the print hammer restraint card.
4. Remove the ribbon cassette. If the typewriter ribbon is slack, advance it by turning the gear wheel on the bottom of the cassette in the direction indicated (see illustration).

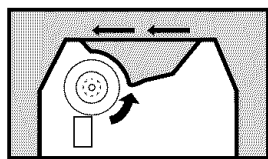


5. Place the cassette back on the carrier, and return the protective cover to its original position. You will hear it snap into place.

Turning the Typewriter On

The electrical cord is stored on the back of the unit. Remove the plug from the protection slot and unwind the cord for use.

 1. Plug the typewriter into a proper electrical outlet. (Use the correct electrical current.)




2. The symbol indicates the unit is in Standby mode. This means your keyboard is inactive until you select ON (I). Move the power switch (5) to ON (I). The carrier (2) moves to the preset left margin.

Inserting Paper


Note: Your typewriter handles 12" wide paper and a 9" typing line. Standard bond paper stock is recommended for best quality. Copier paper, erasable bonds and very heavily textured bond papers do not print well with Correctable Film ribbon. For these paper types, we recommend High Density Correctable Film or Multi-Strike ribbons. If typing stencils, use those specifically designed for daisywheel printers.

1. Insert paper securely in the slot behind the platen (3) against the paper alignment mark. (For 12" wide paper, center on the platen area.)
2. Advance paper by using the platen knob (6), Index Up/Down feature, or Return key.
3. Push the paper release lever (4) back, and straighten the paper if necessary. Return lever to original position.
4. Make sure the protective cover is in its original position.

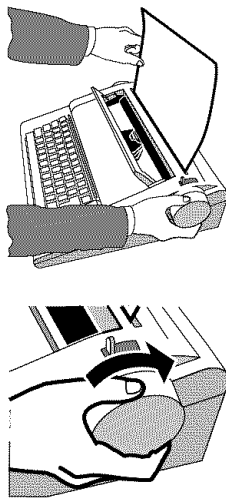

Platen Knob/Variable Line Spacer

Rotate the platen knob to position the paper up or down at variable line positions.

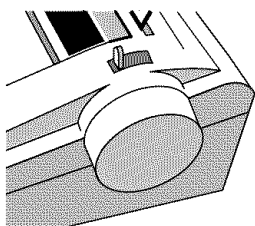

Removing Paper

 
To remove paper, push the paper release lever back and gently pull the paper out of the machine.

Turning the Typewriter Off

When typing is completed, move the power switch to Standby. We suggest you unplug the typewriter if it will not be used for an extended period of time.

Keyboard

Code Key



The **Code** key is used in combination with other keys to activate features. **Code** key combinations are activated by pressing and holding the **Code** key while pressing the second key.

Shift Key



Press **Shift** while typing an alpha key to type upper case letters or to type the characters located on the top of certain keys, such as \$, %.

Lock Key and Indicator Light



Press **Lock** to type continuously in upper case characters and access the characters located on top of certain keys. The shift lock light will light when **Lock** is pressed. To deactivate shift lock, press **Lock** or a **Shift** key. The light goes out.

Important: When the shift lock light flashes, the typewriter has received an incorrect command. Press **Code** to stop the flashing light.

Repeat Action

All keys will automatically repeat when held down except the following Keyboard II characters: ^ ' ~ . RRRRRR



Format

Each time you turn on your typewriter, a preset format is activated. It is set for general typing purposes. These settings remain active until you change them.

Margins

Margins are preset depending on your pitch setting. They are:

	10 Pitch (Pica)	12 Pitch (Elite)	15 Pitch (Micro)
Left Margin	12	14	18
Right Margin	72	86	108

Changing Margins

When you need to change the margins, follow the instructions below:

1. Press **Back Space** or **Spacebar** to desired left margin.
2. Press **Margin**. Unit beeps.
3. Press **Spacebar** to desired right margin.
4. Press **Code + Margin**. Unit beeps.

Note: To signal that you are near the right margin, your typewriter will beep once 5 spaces before the right margin.

Tabs

You can set up to six tabs, either regular or decimal. Tabs may be set outside of margins.

Regular Tab	Decimal Tab
This is	123.56
a Regular	12.47
Tab	2.09

Regular Tabs

Regular tabs justify text at the tab stop. To set a regular tab:

1. Position print hammer at desired location.
2. Press **Tab S**. Unit beeps.

Decimal Tabs

Decimal tabs are used to align numbers with the decimal point. To set a decimal tab:

1. Position the print hammer at desired location.
2. Press **Code + D. Tab (O)**. Unit beeps.
3. Repeat steps 1 and 2 to set more decimal tabs if desired.
4. Press **Return** when all tabs are set.

Using Tabs

Once tabs are set, they can be used as you are typing your text.

1. Press **Tab** to move to tab location.
2. Type text. If using a decimal tab, type the numbers preceding the decimal point. The carrier moves to the left for each number you type. If you make a mistake, press **Tab** to start again.
3. Type the decimal point. The numbers print to this point.
4. Type the numbers following the decimal point.

Clearing a Tab

Both types of tabs are cleared the same way.

1. Position print hammer to tab setting.
2. Press **Code + Tab (Tab C)**. Release immediately. Unit beeps.

Clearing All Tabs Quickly

Press and hold **Code + Tab (Tab C)** until 2 beeps are heard. If you are positioned at a tab stop, you will hear 3 beeps.

Pitch

Your typewriter has been designed with triple pitch capabilities. To set the Pitch:

- Press **Code + Tab S** for 10 Pitch.
- Press **Code + 1** for 12 Pitch.
- Press **Code + 2** for 15 Pitch.

Unit beeps when selecting pitch.

Note: Your typewriter is set at 10 pitch. Change the printwheel if you select another pitch. Changing pitch in the middle of a line erases Correction Memory. However, after the new pitch is selected, Correction Memory begins again.

Line Spacing

Each time you turn the typewriter on, it is set for single line spacing. You can change line spacing to 1½ line spacing or double line spacing. To change line spacing:

- Press **Code + 3** for single line spacing.
- Press **Code + 4** for 1½ line spacing.
- Press **Code + 5** for double line spacing.

Unit beeps when selecting line spacing.

Impression Control

Impression control is the force used by the print mechanism to strike the paper. When you turn the typewriter on, it is set at medium. You can change to light or heavy impression. It is recommended that you select heavy impression when typing on carbons. For normal typing, use medium impression. To set impression control:

Press **Code + L** for light impression.

Press **Code + M** for medium impression.

Press **Code + H** for heavy impression.

The unit beeps when Impression control is changed.

Note: Standard bond paper stock is recommended for best quality. Copier paper, erasable bonds and very heavily textured bond papers do not print well with Correctable Film ribbon. For these paper types, we recommend High Density Correctable Film or Multi-Strike ribbons. If typing stencils, use those specifically designed for daisywheel printers.

Correcting Text

There are two ways to correct typing errors: off-line and on-line. The half-space feature can be used for both.

On-Line Correction

The typewriter can automatically correct all characters in a one-line memory buffer called the Correction Memory. You can easily correct characters no longer in Correction Memory using Off-Line correction. After correcting an error you can quickly return to your previous typing position.

Important: Bold and *auto underscore* must be activated before correcting characters having these enhancements.

Correct Key

Use **Correct** for erasing character(s) in Correction Memory.

1. Position the print hammer on the incorrect character and then press **Correct**. Hold down **Correct** to continue correcting, or press **Back Space** and then **Correct** again until all characters are removed.
2. Type correct text.
3. Press **Code + Reloc (Return)** if necessary to relocate. The unit beeps.

Note: You erase Correction Memory when you turn off the typewriter, press **Return**, change pitch, or use the Half Space feature.

WordEraser® Key

Use **WordEraser** for erasing word(s) in Correction Memory.

1. Position the print hammer on any character in the right most word to be corrected, and then press **WordEraser** once for each word to be erased. If you press **WordEraser** while between words, the word to the left of the space will be deleted.
2. Type correct text.
3. Press **Code + Reloc (Return)** if necessary to relocate. The unit beeps.

Off-Line Correction

To correct an error not in the current line Correction Memory:

1. Press **Code + Up (6)**, **Down (7)**, or **Return** to position the print hammer on the line containing the incorrect character.
2. Press **Back Space** or **Spacebar** to move to incorrect character.
3. Press **Code + Correct**. The unit beeps.
4. With correction cassette installed, retype the incorrect character to remove it.
5. Type the correct character.

Important: Bold and *auto underscore* must be activated before correcting characters having these enhancements.

Half Space

The Half Space feature is used when making corrections when you omit a character or type one too many. When the Half Space feature is activated, the typing position moves a half space to the right. Regular spacing returns when the Half Space feature is deactivated.

Note: When you activate the Half Space feature, the Correction Memory is erased. The typewriter remembers the half spaced characters until the Half Space feature is deactivated. Then, the typewriter begins to remember normal spaced characters again.

Adding a Character

1. Press **Correct** or **WordEraser** to erase error.
2. Press **Back Space** to position the carrier one space before the first character of the erased word.
3. Press **Code + Half Space (Spacebar)**. Print hammer advances a half space.
4. Type correct word.
5. Press **Code + Half Space (Spacebar)**.

Removing a Character

1. Press **Correct** or **WordEraser** to erase error.
2. Press **Code + Half Space (Spacebar)**. Print hammer advances a half space.
3. Type the correct word.
4. Press **Code + Half Space (Spacebar)**.

Note: Before activating the Half Space feature on another line, you have to remove the error using off-line correction procedures. (See "Off-Line Correction.")

Enhanced Text

You can enhance your text by using Bold, Auto Center, Underscore, Superscript and Subscript.

Bold Print

This feature is used for highlighting text. To use Bold:

1. Press **Code + Bold (B)**. Unit beeps.
2. Type text.
3. Press **Code + Bold (B)** to deactivate bold.

Important: Bold and *auto underscore* must be activated before correcting characters having these enhancements.

Auto Underscore

You can automatically underscore just the words or the words and spaces using the Auto Underscore feature.

Activating Word Underscore

1. Press **Code + Word (L/-)**. Unit beeps.
2. Type text.
3. Press **Code + Word (L/-)** to deactivate Underscore.

Activating Underscore All

1. Press **Code + All (+/=)**. Unit beeps.
2. Type text.
3. Press **Code + All (+/=)** to deactivate Underscore.

Manual Underscore

You can manually go back and underscore text.

1. Position print hammer under the first character of the text to be underscored.
2. Press **Shift + —**.

Auto Center

This feature automatically centers text between current margins. To use Auto Center:

1. Press **Code + Center (0)**. Unit beeps. The carrier moves to the center of the margins.

2. Type the text. The carrier will backspace in half space increments for each character typed.
3. Press **Return**. Text prints and centers automatically.

Note: If you make a mistake, press **Code + Center** to restart centering. If you decide not to center text, press **Return** prior to entering text.

Superscript/Subscript

Your typewriter can easily create superscript and subscript characters.

Typing Superscripts

1. Press **Code + Super (9)**. Typing position moves up ½ line.
2. Type the superscript. Carrier returns to the original line.

Typing Subscripts

1. Press **Code + Sub (8)**. Typing position moves down ½ line.
2. Type the subscript. The carrier returns to the original line.

Note: If you superscript or subscript more than one character, you must repeat steps 1 and 2 above. If you decide not to type a superscript or subscript after activating the feature, press **Correct** to return to the original line.

Correcting Superscript and Subscript Errors

To correct errors made while using Superscript or Subscript:

1. Press **Back Space** to error.
2. Activate superscript or subscript.
3. Press **Code + Correct**.
4. Type the incorrect character. It is erased and carrier returns to original line.

Keyboard II: International Characters and Special Symbols

The Keyboard II feature allows you to access the international characters and special symbols (for example: ç ø ÿ) that appear on the bottom right of certain keys.

Accessing Keyboard II Characters

Press Code then the desired Keyboard II character key or symbol.

For those characters (^ ~ `) printed above the letters, type the KB II character first. The print hammer remains in place so you can type a letter below the symbol.

Other Features

Your typewriter also has Index Up/Down and Auto Return.

Index Up/Index Down

This feature moves the paper up or down in increments equal to the current line space setting.

To use Index Up/Down:

- Press **Code + Up (6)** to move the typing position up (paper down).
- Press **Code + Down (7)** to move the typing position down (paper up).

Note: *These are repeating keys. If they are held down, the paper will continue to move up or down.*

Auto Return

You can program your typewriter to automatically return at the end of each line. When a space or hyphen is typed in the "warning zone," which begins five spaces before the right margin, the carrier automatically returns to the next line. For lengthy words falling at the end of the line, simply type a hyphen as you normally would and the carrier returns automatically. To activate Auto Return:

- Press **Code + Return (Back Space)**. Unit beeps.
- Type text. Do not press **Return** at the end of a line.

Deactivating Auto Return

Press **Code + Return (Back Space)**.

Care and Maintenance

Ribbon Cassettes and Correcting Cassette

Warning: *Use Smith Corona brand "H" Series supplies. Use of non-Smith Corona (brand or manufactured) supplies or accessories will not (except as noted below) void this warranty.*

THE WARRANTY WILL BE VOID IF the typewriter is damaged or rendered wholly or partially inoperable as a result of using a non-Smith Corona supply or accessory item(s).

Your Smith Corona typewriter uses Ribbon and Correcting Cassettes with the Right Ribbon System® feature. Smith Corona's patented Right Ribbon System feature assures that the right combination of ribbon and correcting cassette is inserted in the typewriter.

- Assures use of Correctable film with Lift-Off correction.
- Assures use of Multi-Strike film with Cover-Up correction.

For example: Correctable film ribbon with Cover-Up correcting cassette. If a mismatched set is inserted, the ribbon cassette cannot be fully or properly inserted into your typewriter.

The exclusive Right Ribbon System feature using the patented Smith Corona Ribbon and Correcting Cassettes is designed to make changing ribbons and correcting tapes quick, easy, and error-free.

Because of Smith Corona's patented correcting tape feed mechanism, the lift-off correcting cassette has approximately two times the yield of spooled tapes found in other machines.

Replace the ribbon cassette when a different colored portion begins to unwind from the Cassette. Be sure to use the Right Ribbon System combination.

Correctable Film with Lift-Off Correction

When using Correctable film ribbon cassettes, use Smith Corona Lift-Off correcting cassettes. Lift-Off tape *removes* your errors quickly and cleanly. It will not remove the print of a Multi-Strike ribbon. Lift-Off correcting cassettes have a *yellow* cut-out on the lower right.

Multi-Strike Film with Cover-Up Correction

When using Multi-Strike film ribbon cassettes, use Smith Corona Cover-Up correcting cassettes. Cover-Up tape *covers* your errors neatly and quickly. Cover-Up correcting cassettes have a *pink* cut-out on the lower right.


Removing the Ribbon Cassette

Replace the ribbon cassette when a different colored portion begins to unwind from it.

- Tilt protective cover forward.
- Grasp cassette on both sides.
- Lift cassette STRAIGHT up and out.

Inserting the Ribbon Cassette

- Turn the gear wheel on the bottom of the cassette in the direction indicated to tightly wind the cassette.
- Turn the cassette over with the name face up and the ribbon toward the print hammer.
- Set the cassette in the carrier while guiding the ribbon between the printwheel and the typing guide. Press down. Ribbon snaps into place.

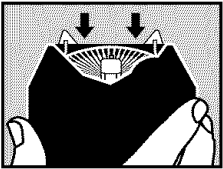

- Return protective cover to its original position. Be sure it snaps into place.


Note: *Stencils designed specifically for daisywheel typewriters perform best when the print ribbon is inserted. To determine which brand best fits your individual requirements, check with your office supplies retailer.*

Correcting Cassettes

Replace the correcting cassette when a different colored portion unwinds from the right spool.


Removing the Correcting Cassette

- Tilt protective cover forward, and remove the print ribbon cassette.
- Grasp correcting cassette on sides as shown. Lift correcting cassette up and out.

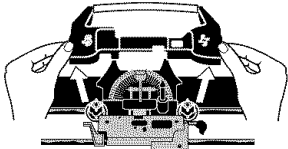


Inserting a New Correcting Cassette

- Turn appropriate gear wheel on bottom of the correcting cassette in direction indicated by arrows to wind tightly.

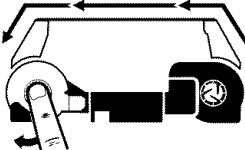


- Hold correcting cassette (using both hands as shown) with the Smith Corona name facing up.
- Guide correcting tape between the printwheel and typing guide and position left gear wheel on left mount and right gear wheel on right mount.

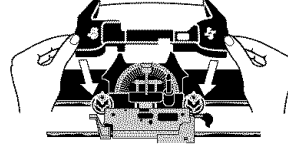


- Snap correcting cassette securely in place. **Important:** *After the cassette is mounted, tighten slack in tape by moving red plastic lever toward platen. The lever is located under left side of cassette towards the platen. Repeat as many times as necessary.*
- Replace ribbon cassette. Be sure printwheel and print hammer are secure.
- Return protective cover to its original position. Be sure it is closed securely.

Printwheels

 Removing the Printwheel

- Move switch to Standby .
- Tilt the protective cover forward.
- Remove the print ribbon cassette and correcting cassette.
- Locate the print hammer release/engage lever (left of print hammer). Press the lever toward you until the print hammer mechanism springs away from the printwheel.
- Lift the printwheel up and out.

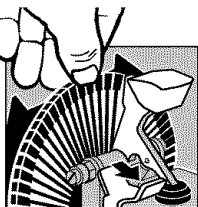

Inserting a Printwheel

- Drop printwheel between print hammer and typing guide with type style name facing you.
- Push the print hammer release lever back to secure the printwheel.
- Replace the correcting cassette and ribbon cassette.
- Return the protective cover to its original position.
- Return the switch to the operating position.

Important: *If incorrect characters are printed, after changing the printwheel, turn the typewriter off, then on.*

Cleaning

Do not attempt to disassemble the typewriter to clean it.

Important: *Always unplug the machine before using cleaning solutions on its surfaces.*

Printwheel

To remove residue, dip the characters into a small container of ethyl or isopropyl alcohol (rubbing alcohol) and wipe with a clean dry cloth. Do not soak the printwheel.

Platen

Wipe surface with a clean cloth dampened with ethyl or isopropyl alcohol (rubbing alcohol).

Keyboard

To clean the keyboard, dampen a sponge with a mild ammonia or soap solution. DO NOT use household cleaners containing chlorinated compounds. DO NOT spray anything directly on the product.

Warning: *Keep all solvents and petroleum distillates (gasoline, kerosene, lighter fluids, etc.) away from plastic parts. Keep all cleaning solutions away from electrical components and moving parts.*

Check Points

If your typewriter does not function properly, check the following:

- ✓ Is the typewriter plugged into a live socket?
- ✓ Is the typewriter switched on?
- ✓ Is the protective cover completely closed?
- ✓ Are the printwheel, ribbon cassette and the correcting cassette properly installed?
- ✓ Have the ribbon or correcting cassette been used up?
- ✓ Is the carrier lock completely disengaged?
- ✓ Are compatible ribbon and correcting cassettes installed?
- ✓ Is the print hammer in a locked position?
- ✓ Has a foreign object fallen into the typewriter?

If the typewriter still does not work properly after checking the above, contact your nearest Smith Corona Service Center.

Obtaining Service

If you are experiencing difficulty, before returning the unit for service, call Consumer Affairs, toll-free at 1-800-448-1018, for assistance. Customer Service Representatives are available to assist you Monday through Friday, from 8:00 AM to 6:00 PM, EST.



Note: *If you need to send your unit for service, to qualify for Warranty, proof of purchase must accompany the unit. Your sales receipt is your proof of purchase.*

Shipping Instructions


Important: *When the machine is to be shipped for any reason, the printwheel carrier inside the typewriter must be stabilized to prevent movement. The typewriter as a whole must be properly protected from shipping and handling hazards. Use original packing material to pack the unit.*

Stabilizing the Printwheel Carrier

- Tilt the protective cover forward.
- Select a rubber band to use to secure the carrier mechanism.
- Place the rubber band around the foot retainer on the right side of the machine. Position the carrier mechanism near the rubber band.

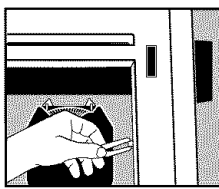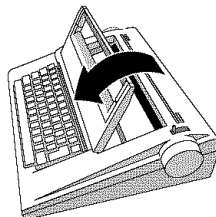

 - Stretch the rubber band over the top of the mechanism and around the tab on the left side.
- Return the protective cover to its original position and tape shut.
- Wrap the cord around the cord wrap panel as many times as possible. Some excess cord will remain loose. Secure the plug in the protection slot. Tuck the excess cord up under the lip. Your typewriter is ready for transport.




Note: *If the original packing materials are not available or the carrier cannot be put into the correct position, ball up single sheets of newspaper and insert them on each side of the carrier until all open spaces are filled to capacity.*

Packing the Typewriter

Pack the typewriter in the original materials. If you do not have the original packing materials:

- Use box slightly larger than the typewriter.
- Place the typewriter in a large plastic bag.

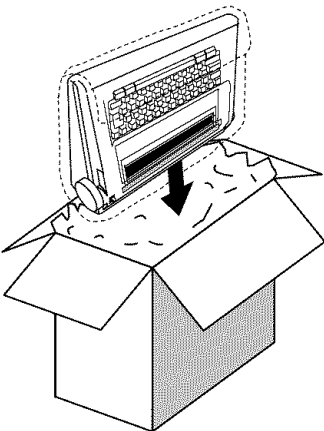

- Place at least 2" of packing material in the bottom of the box for cushioning.
- Place the typewriter inside the box and fill the sides and top with more packing material (2" of material on all sides).
- Seal carton using either filament tape or wide plastic tape.
- Address the package for shipment to the nearest service location. Remember to include your return address and retain your shipping receipt.

Important Information

Safe Operating Recommendations

To avoid unnecessary operator injury or damage to the machine, please review the following recommendations.

- USE THE CORRECT VOLTAGE to avoid electrical short circuiting, overheating or shocks.
- If in doubt, check the electrical rating label affixed to the unit. Smith Corona does not recommend attaching your unit to any power source other than that which is indicated on the original electric rating label of the machine. Smith Corona does not recommend the use of a voltage converter.
- THE UNIT SHOULD BE PLUGGED into an outlet which is nearby and easily accessible.
- ALWAYS HAVE THE UNIT SERVICED by a qualified service technician. There are no user-serviceable parts inside.
- TO AVOID ELECTRICAL SHOCK, never insert metal objects such as screwdrivers, paper clips, nail files, etc. inside the unit. For safety's sake, never place any object inside the unit.
- BEFORE REACHING INTO THE CARRIER PATH AREA, always switch to standby or off, depending on the model.
- KEEP FINGERS, HAIR, JEWELRY, etc. away from the carrier area when in operation.
- IF THE UNIT IS DROPPED, the insulation system may be disturbed. Have the unit checked by a qualified service technician before using it again.
- DO NOT remove the housing from the unit.
- AVOID PLACING THE UNIT near an excessively warm or humid location.
- IF LIQUIDS ARE SPILLED OR SPLASHED on the unit, immediately unplug it. Have the unit checked by a qualified service technician.

- BEFORE CLEANING any part of your unit, make sure it is unplugged.
- WHEN FINISHED TYPING, switch to Standby or Off. Unplug unit if it is not to be used for an extended period. Unplug unit for a complete cut from the main electrical circuit.

Warning: *To reduce the risk of fire or electric shock, do NOT expose unit to rain or moisture.*

Product Consumer Warranty

Limited Warranty

90 Day Warranty

Smith Corona warrants this typewriter against defects in material or workmanship for a period of 90 days from the date of original purchase for use, and agrees to repair or, at our option, replace any defective unit without charge for either parts or labor. Proof of Purchase will be required.

Limited Warranty

Following the first 90 days from the date of purchase and thereafter until 1 year from the date of purchase Smith Corona will replace any defective part at no charge. There will be a standard charge for labor and the cost of transportation.

Important: *This warranty does not cover damage resulting from accident, misuse or abuse, any modification or alteration including attaching the unit to other than the recommended receptacle or voltage, nor does it cover ribbon replacement or cleaning of the unit.*

THIS WARRANTY IS VOID WHEN SERVICE OR REPAIRS ARE PERFORMED BY A NON-AUTHORIZED SERVICE LOCATION. This warranty does not cover shipping expenses to and from a service location.

NO RESPONSIBILITY IS ASSUMED FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES. You may obtain warranty service through one of our service locations. To obtain the location of the nearest Service Center, call toll-free:

1-800-448-1018

The toll-free number operates Monday through Friday, from 8:00 a.m. to 6:00 p.m. Eastern Time. Simply take or ship the unit prepaid to the nearest service location. Damage occurring during transit is not covered by this warranty.

Note: *No other warranty, written or verbal, is authorized by Smith Corona. This warranty applies to units sold in the United States and Puerto Rico only.*

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. Some states do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied warranty lasts, so the above exclusion and limitations may not apply to you.

Smith Corona Corporation
839 Route 13 South
P.O. Box 2090
Cortland, New York 13045-0980

Warning: *Use Smith Corona "H" Series supplies. Use of non-Smith Corona (brand or manufactured) supplies or accessories will not (except as noted below) void this warranty.*

THE WARRANTY WILL BE VOID if the typewriter is damaged or rendered wholly or partially inoperable as a result of using a non-Smith Corona supply or accessory item(s).

FCC

The following information is provided to you in accordance with the rules and regulations of the United States Federal Communications Commission. Questions concerning this information can be directed to Smith Corona Corporation by writing:

Smith Corona Corporation
839 Route 13 South
Box 2090
Cortland, NY 13045

Note: *This typewriter generates and uses radio-frequency energy and if not installed and used properly, that is, in strict accordance with the manufacturer's instructions, may cause interference to radio and television reception. It has been type tested and found to comply with the limits for a Class B typewriter in accordance with the specifications in Sub-part J of Part 15 of FCC rules, which are designed to provide reasonable protection against such interference in a residential installation. However, there is no guarantee that interference will not occur in a particular installation. If this typewriter does cause interference to radio or television reception, which can be determined by turning the typewriter off and on, the user is encouraged to try to correct the interference with one or more of the following measures:*

- Reorient the receiving antenna.
- Relocate the typewriter with respect to the receiver.
- Move the typewriter away from the receiver.
- Plug the typewriter into a different outlet so that typewriter and receiver are on different branch circuits.

If necessary, the user should consult the dealer or an experienced radio/television technician for additional suggestions. The user may find the following booklet prepared by the Federal Communications Commission helpful: "How to Identify and Resolve Radio-TV Interference Problems."

This booklet is available from the U.S. Government Printing Office, Washington, DC 20402, Stock No. 004-00-00345-4

Notice: *Any modification or alteration of a typewriter which allows electronic communication with a computer or attaching it to a receptacle or module interface which is not recommended will void Smith Corona's warranty on this product to the extent that any such modification may be related to a failure. Some typewriters are not designed as computer printers and when modified to perform this function may be in violation of the safety and emission rules and regulations.*

Note: *This digital apparatus does not exceed the class B limits for radio emissions from digital apparatus as set out in the radio interference regulations of the Canadian Department of Communications.*

For your convenience and protection make a record of the model number and serial number. The serial number is located on the inside of the typewriter on the bottom right side. Use these numbers when ordering supplies and accessories and for identification in case of theft.

Model Name _____

Serial Number _____

Date of Purchase _____

Quick Reference Guide	
Function	Command
Activates Caps Lock	Lock
Auto Center	Code + Center (0)
Auto Return	Code + Back Space
Auto Underscore All	Code +/-
Auto Underscore Word	Code + _/-
Bold Print	Code + B
Clears Tabs	Code + Tab (Tab C)
Correct Characters (On-line)	Correct
Correct One Character (Off-line)	Code + Correct
Correct Words (On-line)	WordEraser
Decimal Tab	Code + O
Half Space	Code + Spacebar
Heavy Impression Control	Code + H
Index Up	Code + 6
Index Down	Code + 7
Keyboard II	Code + Desired Keyboard II character
Left Margin	Margin
Light Impression Control	Code + L
Manual Underscore	Code + —
Medium Impression Control	Code + M
Move to Tab Setting	Tab (Tab C)
Regular Tabs	Tab S
Return to Previous Typing Position	Code + Return (Reloc)
Right Margin	Code + Margin
Self-Demonstration	Code + Z
Set Double Line Spacing	Code + 5
Set 11/2 Line Spacing	Code + 4
Set 10 Pitch (Pica)	Code + Tab S
Set 12 Pitch (Elite)	Code + 1
Set 15 Pitch (Micro)	Code + 2
Set Single Line Spacing	Code + 3
Subscript	Code + 8
Superscript	Code + 9

