

RemotePoint®  
**Ruby Pro**  
Presenter



**User Guide**

VP4592

Rev. A





## System Requirements

### Hardware

- 1 available USB port

### Operating System

- Windows® (XP® and up)
- Apple® OS X® (10.6 and up)

 
## Package Contents

- RemotePoint® Ruby Pro Presenter
- USB Receiver Dongle (stored inside Ruby Pro Presenter)
- 2 AAA batteries
- User Guide
- 1 Year Manufacturer's Limited Warranty


## Step 1

### Install the Batteries

1. Open the battery compartment by pressing down the cover latch and sliding the door off the Presenter.
2. Insert the two supplied AAA batteries into the battery slots.
3. Make sure the positive (+) and negative (-) ends of the batteries match the polarity markings inside the battery compartment.
4. Slide the battery cover back and click into position.

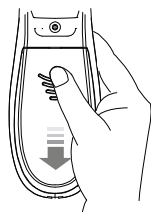

*Slide the battery cover off*

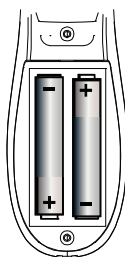 

*Insert the batteries*

## Thank You

Congratulations on your purchase of the RemotePoint Ruby Pro Presenter. We thank you for choosing SMK-Link Electronics to meet your wireless needs and look forward to serving you in the future. To learn about new SMK-Link products as they become available, and to ensure the best possible customer support, please register your product online at [www.smklink.com/register](http://www.smklink.com/register).

## Support

 
SMK-Link Electronics Corporation  
3601-B Calle Tecate  
Camarillo, CA 93012

TEL: (888) 696-3500 | (805) 987-6662  
FAX: (805) 987-6665  
Email: [pcsupport@smkusa.com](mailto:pcsupport@smkusa.com)  
[www.smklink.com](http://www.smklink.com)

©2016 SMK-Link Electronics Inc. SMK-Link, the SMK-Link logo, and RemotePoint are registered trademarks of SMK-Link Electronics, Inc. Windows, and PowerPoint are registered trademarks of Microsoft Corporation in the United States and other countries. Apple, OS X and Keynote are registered trademarks of Apple Inc. All other registrations and trademarks are properties of their respective owners.

## Step 2

### Power On/Off Switch

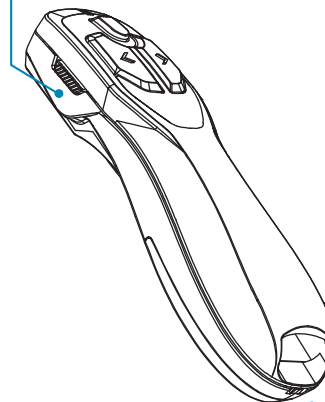


### USB Receiver Storage Bay

## Install the Receiver

1. Remove the USB receiver dongle from the built-in storage bay on the Presenter.
2. Connect the USB receiver dongle to an available USB port on your computer. Wait for the computer to go through its default process of recognizing the new hardware and installing the built-in native driver.
3. Power on the Presenter by sliding the On/Off switch to the On position.
4. The Presenter and the receiver dongle come pre-paired at the factory. The Presenter should now be functioning normally.

## Step 3
 
### Use the Presenter

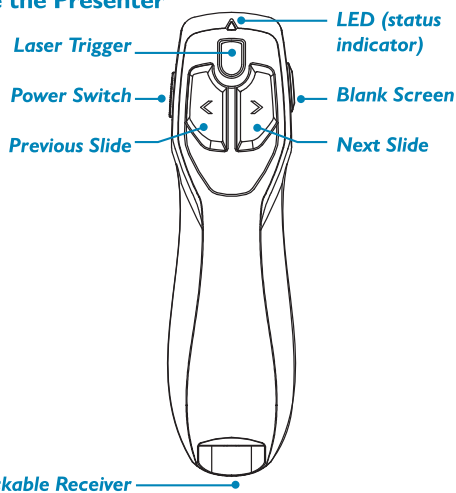

Page 5

**FCC Caution:** Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

### CE Declaration of Conformity

This equipment has been tested and found to comply with the limits of the European Council Directive 2014/53/EU.

#### Laser Safety Statement

**CAUTION:** Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure. The laser is activated by pressing the laser button identified in the user guide.

**Do not stare into the laser beam, or shine the laser at others.**

Do not allow minors to use the laser unsupervised.

Avoid pointing the laser pointer at any reflective surface.

Do not disassemble the device, it has no serviceable parts.

Do not immerse in any liquid or expose to heat or moisture.

Use only within the designed operating temperature range of 0-40 degrees C.

#### Laser Specifications:

The laser used in the VP4592 complies as Class 2 laser product with: IEC/EN 60825-1: 2007, and CFR Title 21 1040.10 and 1040.11, except for deviations pursuant to Laser Notice No. 50, dated June 24, 2007. A complete Declaration of Conformity can be found at [www.SMK-Link.com](http://www.SMK-Link.com).

Page 10

all prior agreements, oral or written, and all other communications between the parties relating to the matter of this warranty.

The above warranty does not apply to Products sold in Australia. Products sold in Australia by an authorized reseller will contain an Australia specific warranty statement.

### FCC Statement

This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

In order to maintain compliance with FCC regulations, shielded cables must be used with this equipment. Operation with non-approved equipment or unshielded cables is likely to result in interference to radio and TV reception. The user is cautioned that changes and modifications made to the equipment without the approval of manufacturer could void the user's authority to operate this equipment.

### LED Indicators

 
LED Indicator	Description
Green LED (3 Seconds)	Power is on
Blinking Red LED	Battery low
Solid Red LED	Laser beam active
Blinking Green LED	Pairing in progress
Blinking Green / Red LED	Pairing is unsuccessful

Laser Trigger LED	Description
Red LED	Laser pointer active

### Re-Pairing the USB Receiver (if needed)

The Ruby Pro Presenter is paired with its USB Receiver Dongle prior to shipping. Should re-pairing becomes necessary, follow these simple steps:

1. With the USB Receiver dongle plugged into your computer, bring the remote control within 3 feet of the dongle.
2. Press the 'Connect' button on the underside of the remote.
3. The LED on the top of the remote will flash Green (indicating that pairing is in progress), and go dark when pairing is established.
4. If pairing is unsuccessful, the LED will flash from Green to Red for approximately one minute, and then go dark.

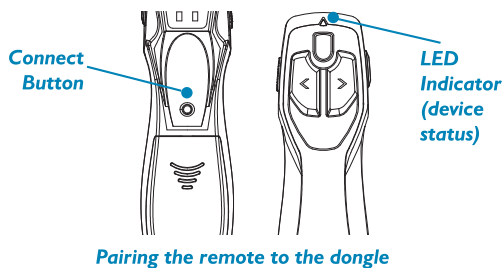

Pairing the remote to the dongle

### Warranty

SMK-Link Electronics Corporation (SMK-Link) warrants to the original end-user purchaser of the Product ("you") that the Product, excluding batteries, will be free from defects in materials and workmanship under normal use and service for one-year from date of purchase. If the Product becomes defective in materials or workmanship during the warranty period, SMK-Link will, at its option, either repair or replace it. The replacement unit may be a more current or upgraded model if the originally purchased model is not available. Any Product repaired or replaced under the terms of the warranty is covered for the remainder of the original warranty period or ninety (90) days from the date of return shipment, whichever is longer. This warranty does not cover Products which have been subjected to misuse, accident, physical damage, improper installation, abnormal operation or handling, neglect, inundation or fire or when Product regulatory label has been removed, altered or rendered illegible; nor does it cover accessory or consumable items.

SMK-Link shall not be liable for any indirect special, incidental, or consequential damages. SMK-Link's total liability for damages for any cause related to, or arising out of, the use or inability to use the Product shall not exceed the original price paid for the Product even if SMK-Link has been informed of such possibility.

If your Product requires service under warranty, you must first contact SMK-Link product support to receive an RMA number. Shipping of defective units back to SMK-Link is at your expense. The contact information can be found on the SMK-Link website: [www.smklink.com](http://www.smklink.com).

The warranty does not affect your statutory rights and you may have other rights which vary from state to state and country to country. This warranty is understood to be the complete and exclusive agreement between the parties, superseding