 
 


## RADIO TOUCH OPERATION (PIC 6)

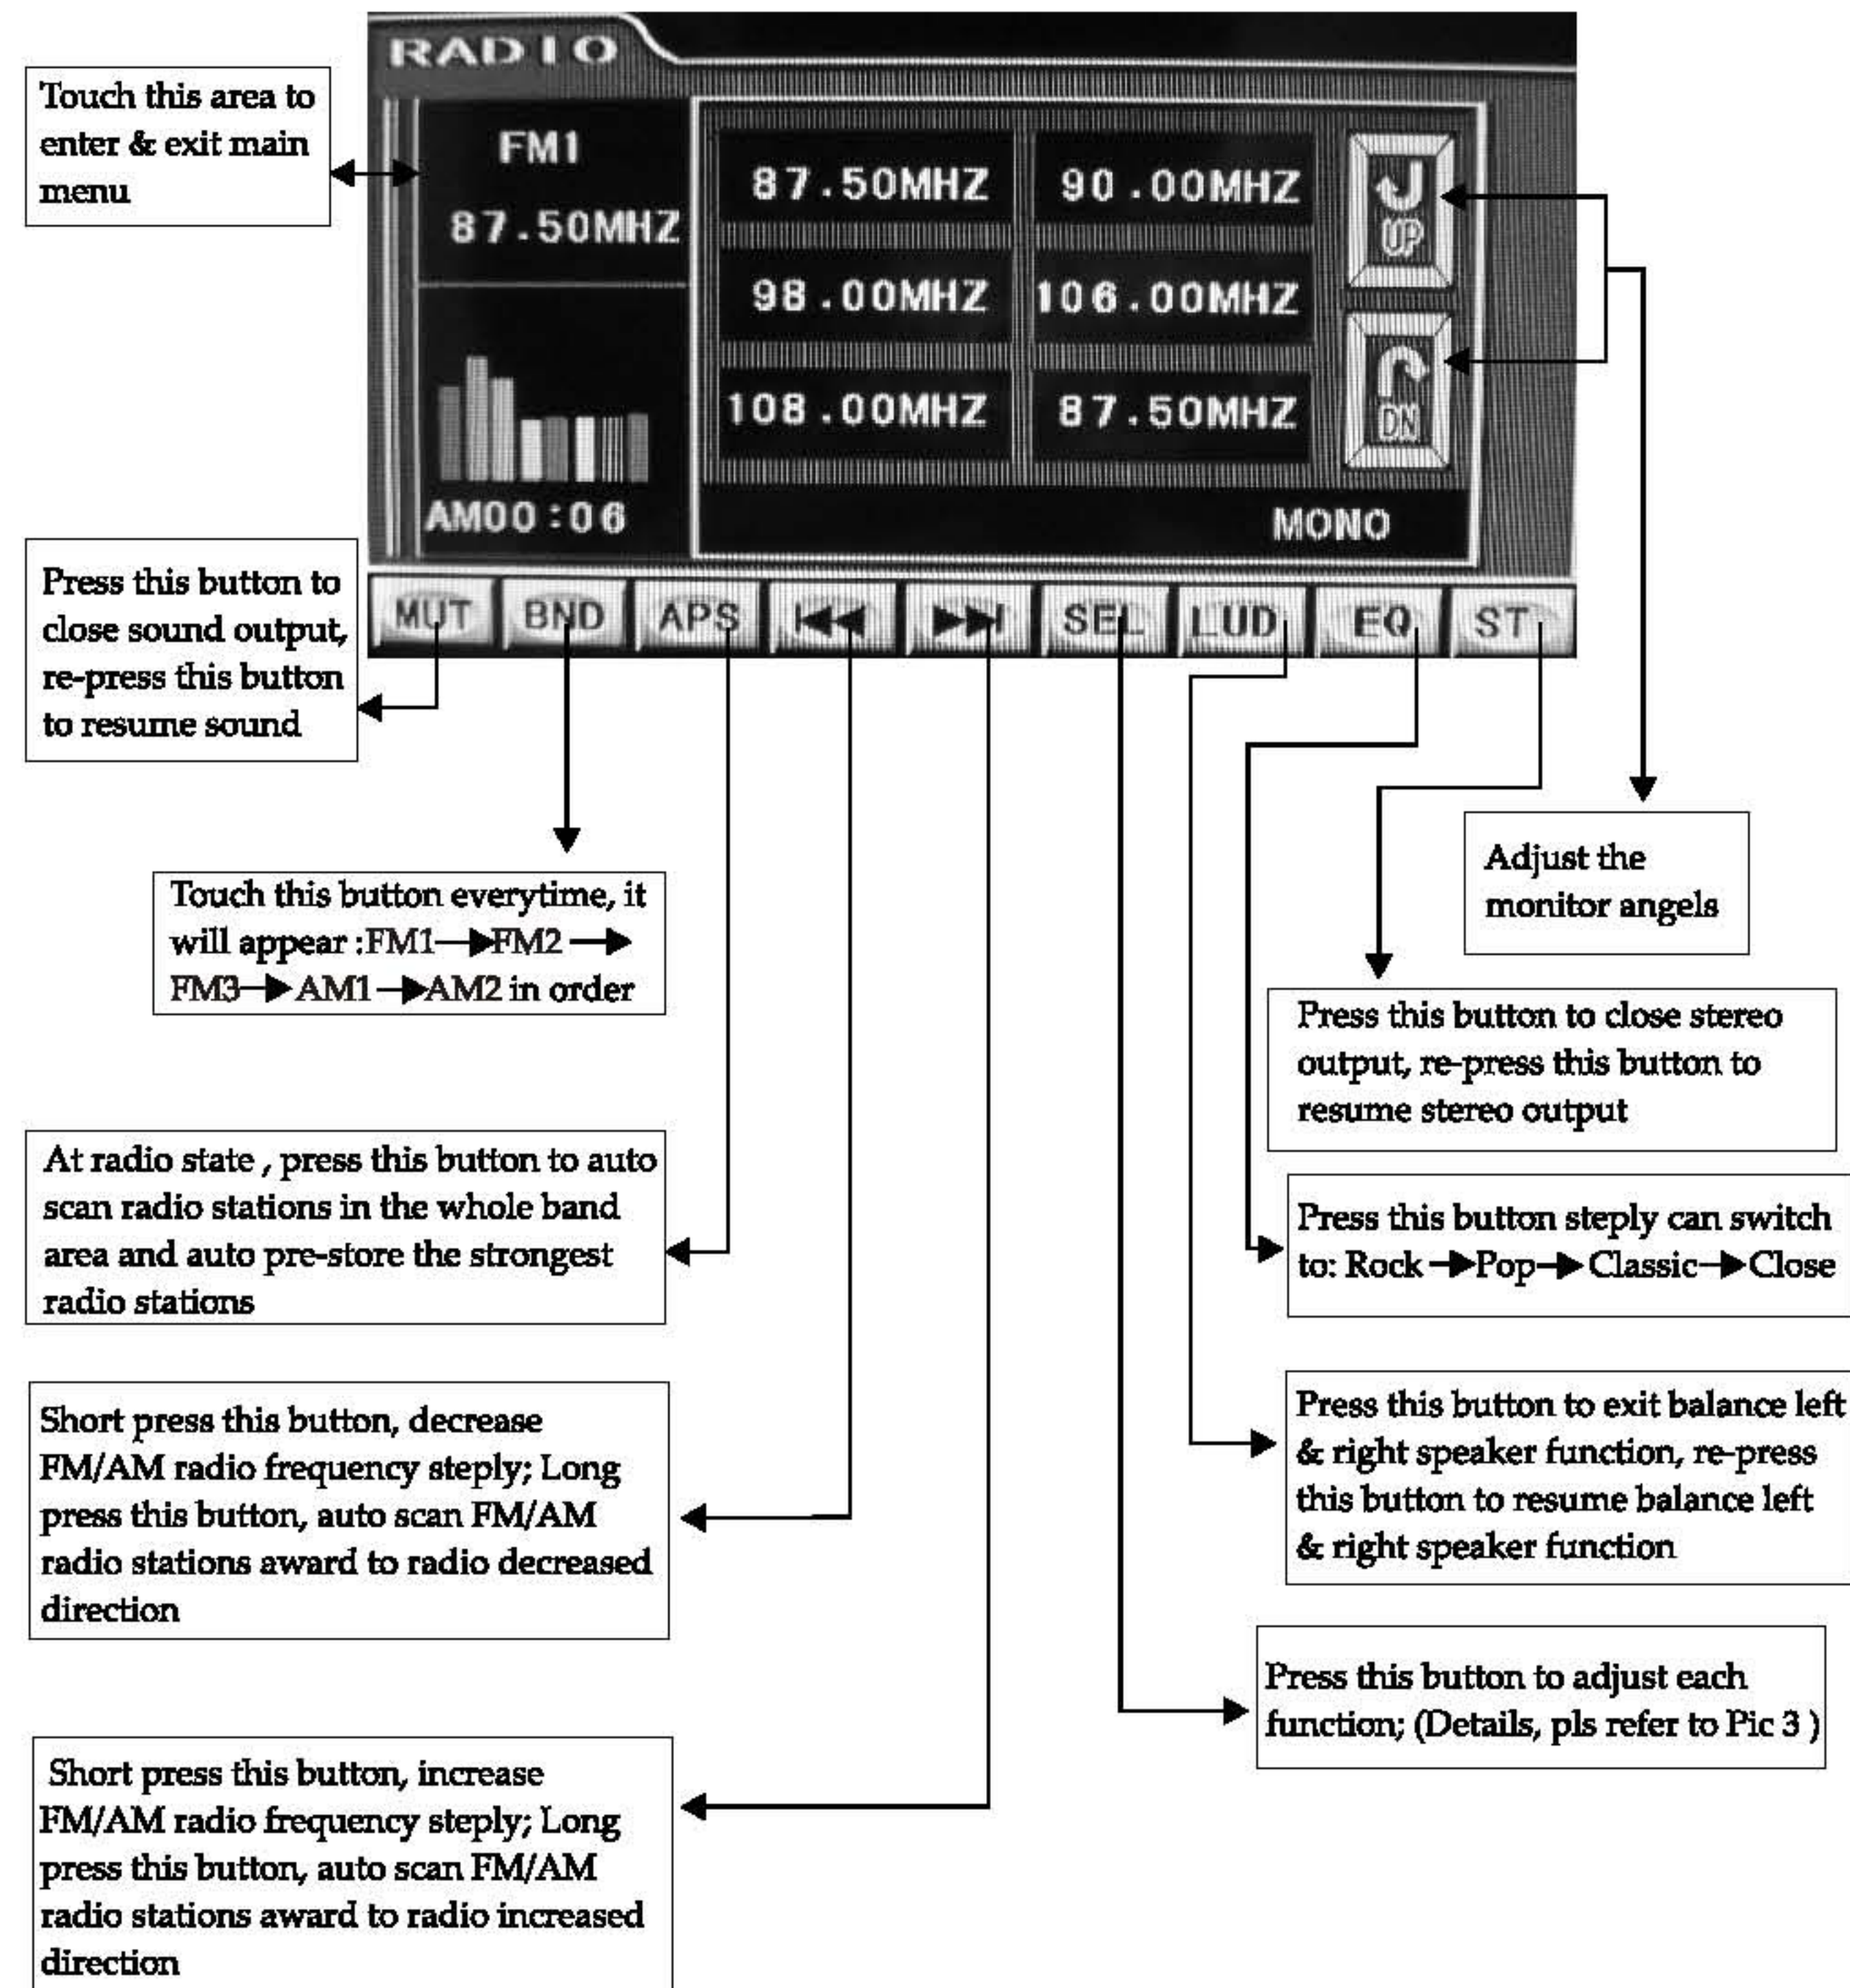

## 7. Zoom in/Zoom out

Press ZOOM button on remote control to zoom in /zoom out the picture. The levels are as follows:

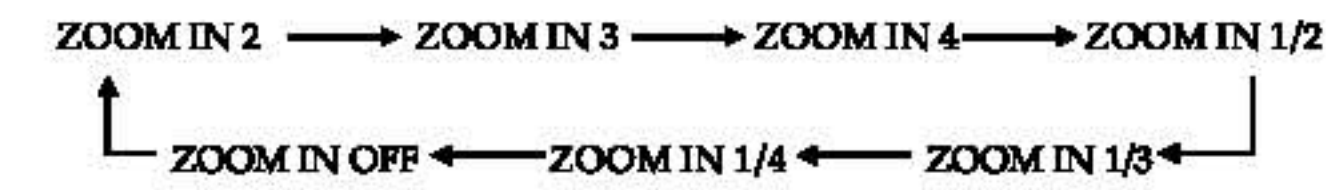

### Note:

1. This function can only be worked by the remote control.
2. Image which is zoomed in can be moved by up/down/left/right cursor to move.
3. Image which is zoomed out cannot be moved.

## 8.OSD

In playing mode, press OSD touch button on display to display the position and time of present song.

## 9.Number button

In VCD mode, press 0-9 number button to input song. For example, you want to choose 13th song , press 10+ button ,and then press 3 button once to play 13th song.

**Note:**this function can only be worked by the remote control.

## 10.Repeatedly play

In playing mode, press AMS/RPT button on remote control , to startup following repeat function. Single song Repeat→repeat play off.

### Note:

- 1)When playing VCD disk, if PBC is on, then, no repeat function.
- 2)After unit is power off or mode is switched to other playing mode except VCD mode, if you switch back to VCD mode, repeat playing will be cancelled.
- 3) This function can only be worked by remote control.

 
## 11.Randomly play

In VCD mode, press LOC/RDM button on remote control, to instantly play each song. Press again to back to the normal play.

**Note:** When playing VCD disk, if PBC is on, RDM will not work.

## 12. Switch Track

In VCD mode, press AUDIO button on remote control, to switch track as following sequence:

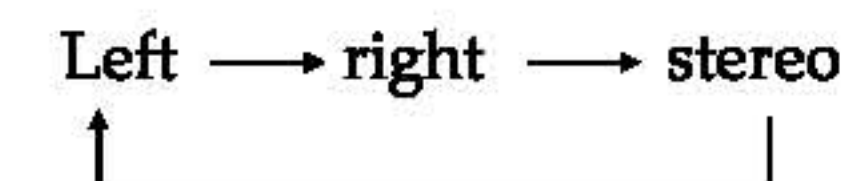

## 13.OPEN

Press OPEN button on panel to eject disk.



## VCD BASIC OPERATION (Pls link with touch operation at pic4)

Slot in VCD disk, unit will play it automatically. If disk is in slot, press MODE button on panel to switch to DVD LOADING mode to play.

### 1. Pause play

In playing mode, press **⏸** button on remote control, or **⏸** touchbutton on display to pause. Press again to back to normal play.

### 2. Stop play

In playing mode, 1) press **⏸** button on remote control to enter the pause mode, the position will be stored in unit. At that time, press **⏸** button on remote control or touch button on display to resume playing at the stored position.

2) press **⏸** button on remote control twice to enter into stop mode, here, press **⏸** button on remote control or touch button on display, unit will play from the first song.

### 3. Speed forward/backward play

In playing mode, press SEEK+ button on remote control, or **⏩** touch button on display to speed play.

When you need quick back, press SEEK- button on remotecontrol, or **⏪** touch button on display to quick back play.

**Note:** Hold above button a bit longer to operate.

### 4. Previous/next song play

In playing mode, press SEEK+/SEEK- on remote control, or **⏮** / **⏭** touch button on display to choose previous/next song.

### 5. Switch system

 
In playing mode, shortly press the band/p/n button on remote control, to select PAL, AUTO, NTSC TV system.

**Note:** this function can only be worked by the remote control.

### 6. Slow play

Press SLOW button on remote control to slow play. The level of slow playing is as follows.

Sequence is :

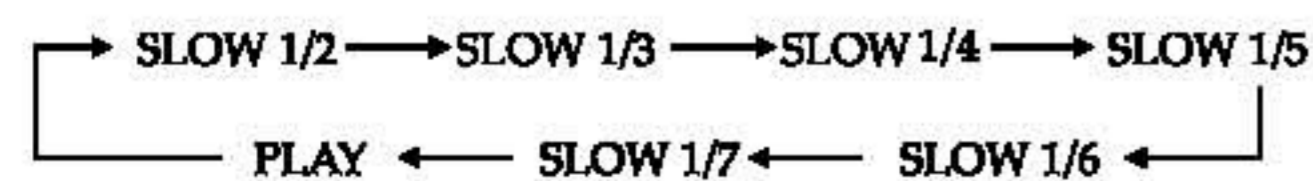


**Note:** this function can only be worked by the remote control.

## RADIO OPERATION (Pls link with touch operation at pic6)
 
### 1. Band Selection

In radio mode, press Band button , BAND/P/N button on remote control, or touch position of switch bank position every time to choose band, the sequence is as follows:

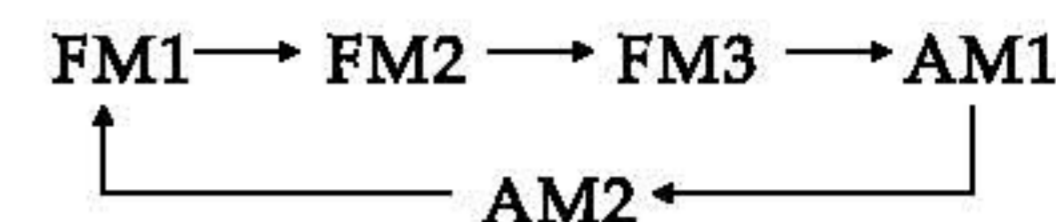

### 2. Adjust frequency

#### Manually adjust frequency:

Press SEEK+ button on remote control, or **⏩** touch button on display shortly every time, frequency will increase one step by one step till you get desired frequency.

Press SEEK- button on remote control, or **⏪** touch button on display shortly every time, frequency will decrease one step by one step till you get desired frequency.

#### Search station:

Press SEEK+/SEEK- button on remote control, or **⏩**/**⏪** touch button on display shortly every time to search station in up/down direction. When get one station, it will auto stop searching.

### 3. Browse/Auto search and store station

1) In radio mode, press AMS/RPT button on remote control, or AMS button on display shortly to browse preset station on 1-6

2) In radio mode, press AMS/PRT button on remote control, or AMS position on display longer to auto search in whole band from present frequency and store 6 most strong frequency on 1-6.

3) This unit has FM1, FM2, FM3, AM1, AM2 band. Each bank can preset 6 stations, total 30 preset stations.

**Note:** After preset station, unit will cancel the former preset stations.

### 4. Mono/Stereo Selection

In radio mode, press ST/PROG button on remote control or ST touch position on display to choose mono/stereo programme.

**Note:** In radio mode, start up the stereo function Automatic, touch the ST button again on the display, the TFT display will show the ST OFF & MONO mark, that is to turn off the stereo. When the Right under foot appear the MONO mark, it show the MONO on.

### 5. Manual preset and store station

In radio mode, press 1-6 button on remote control, or 1-6 position on display longer to store preset frequency into preset channel. For example, the present frequency is 89.8MHz, Press 2 button longer, then 89.8MHz frequency is stored in 2 channel.



# INSTRUCTIONS

## DVD BASIC OPERATION (Pls link with touch operation at pic4)

Slot in DVD disk, unit will play it automatically. If disk is in slot, press MODE button on panel to switch to DVD LOADING mode to play.

### 1. Pause play

In playing mode, press button on remote control, or touchbutton on display to pause. Press again to back to normal play.

### 2. Stop play

In playing mode, 1) press button on remote control to enter the pause mode, the position will be stored in unit. At that time, press button on remote control or touch button on display to resume playing at the stored position.

2) press button on remote control twice to enter into stop mode, here, press button on remote control or touch button on display, unit will play from the first song.

### 3. Speed forward/backward play

In playing mode, press SEEK+ button on remote control, or touch button on display to speed play.

When you need quick back, press SEEK- button on remote control, or touch button on display to quick back play.

**Note:** Hold above button a bit longer to operate.

### 4. Previous/next song play

In playing mode, press SEEK+/SEEK- on remote control, or / touch button on display to choose previous/next song.

### 5. Switch system

 
In playing mode, shortly press the band/p/n button on remote control, to select PAL, AUTO, NTSC TV system.

**Note:** this function can only be worked by the remote control.

### 6. Slow play

Press SLOW button on remote control to slow play. The level of slow playing is as follows.


Sequence is :

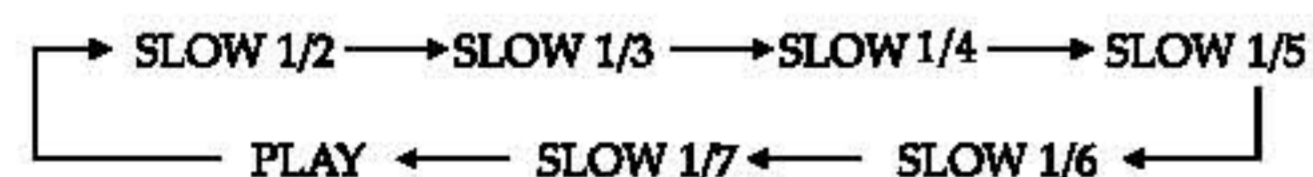

**Note:** this function can only be worked by the remote control.

### 7. Zoom in/Zoom out






 
Press ZOOM button on remote control to zoom in /zoom out the picture. The levels are as follows:

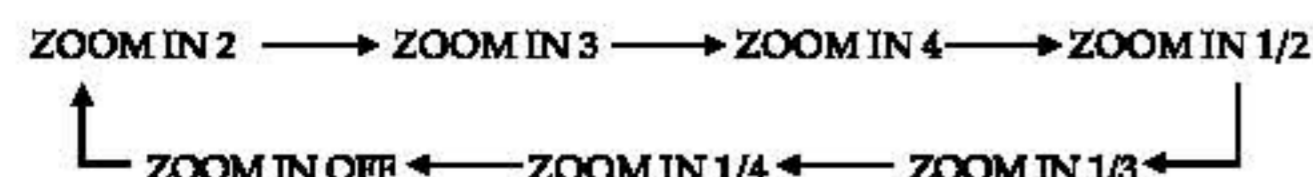

**Note:**







1. This function can only be worked by the remote control.
      
# INSTRUCTIONS

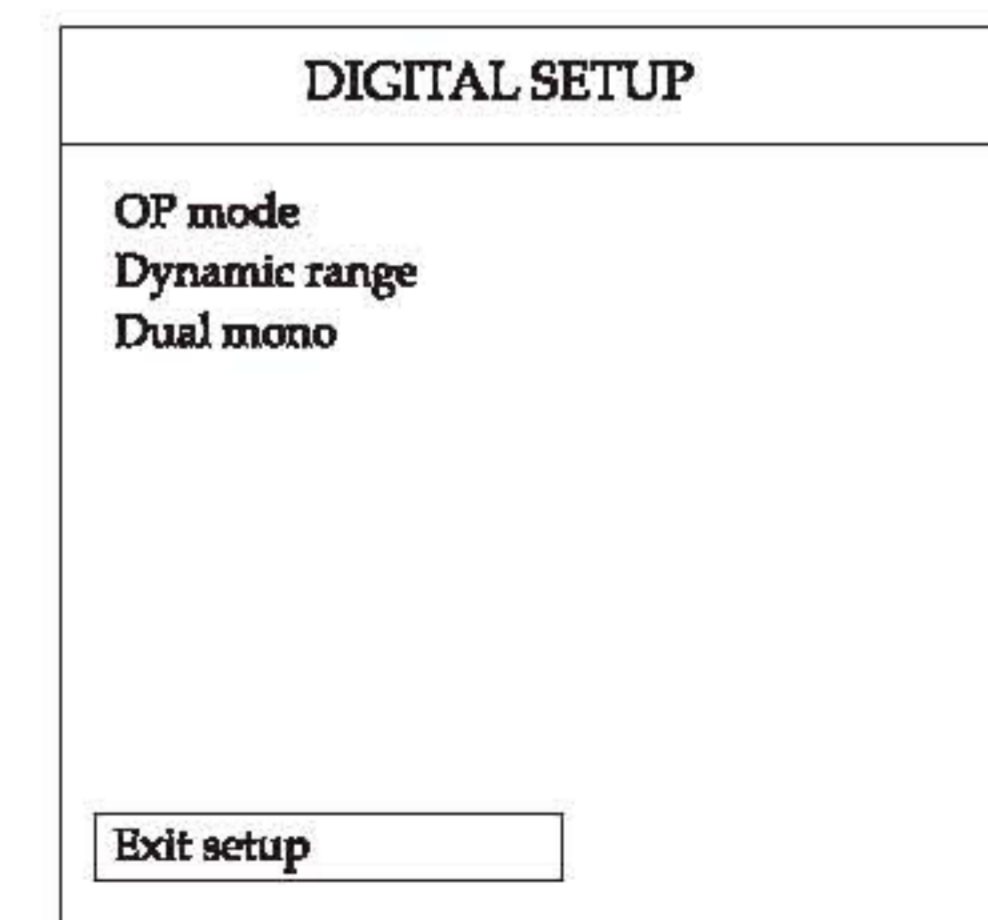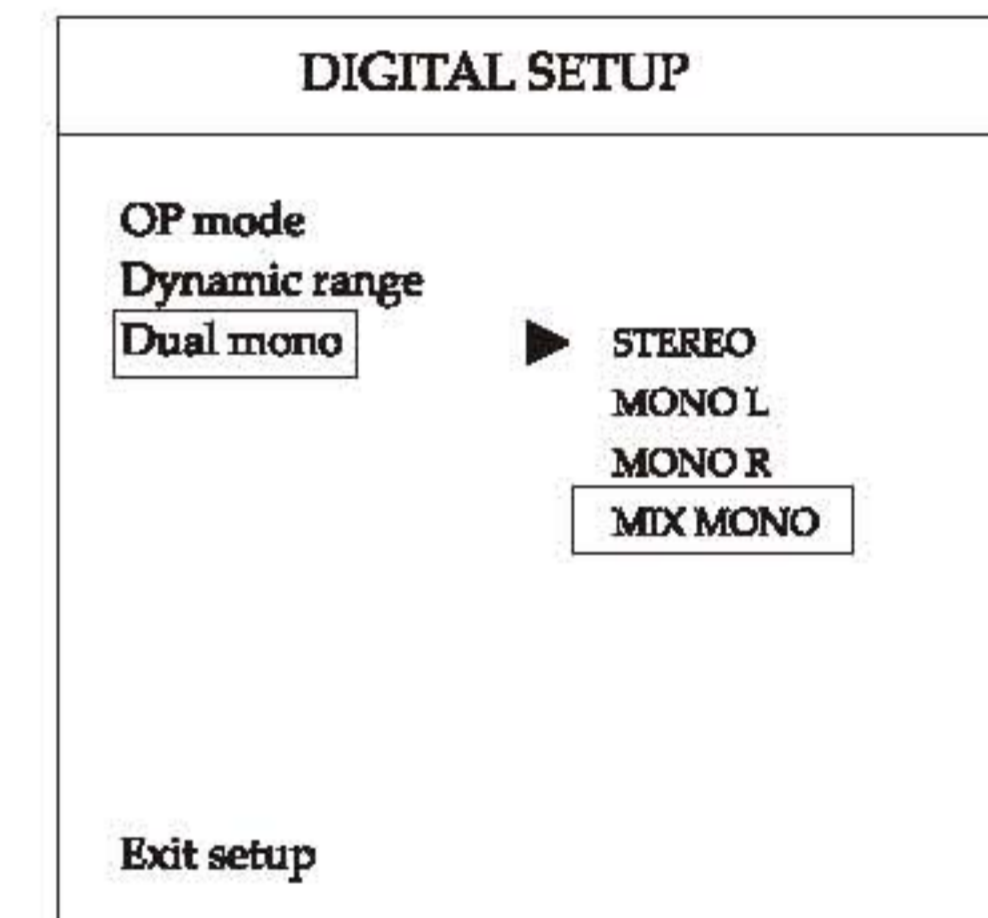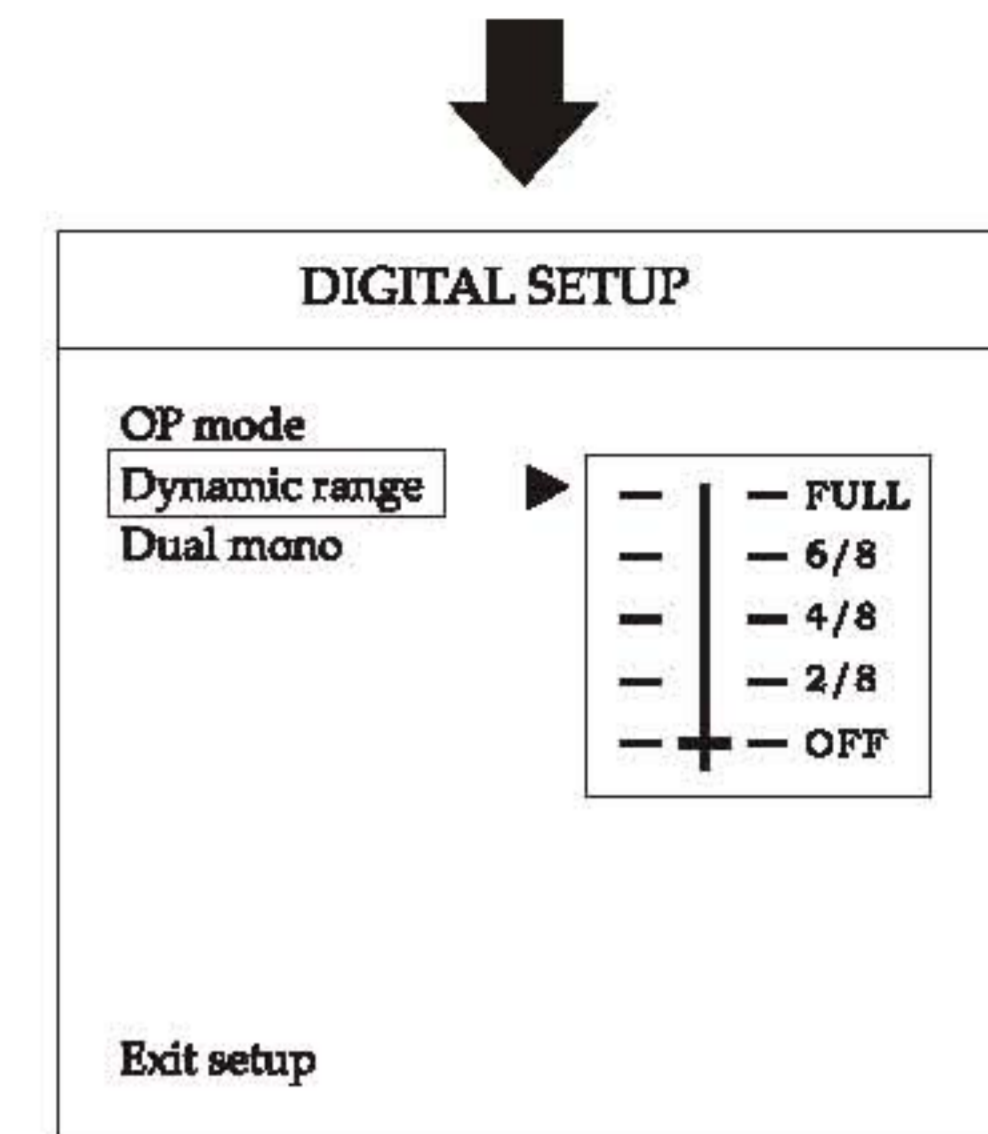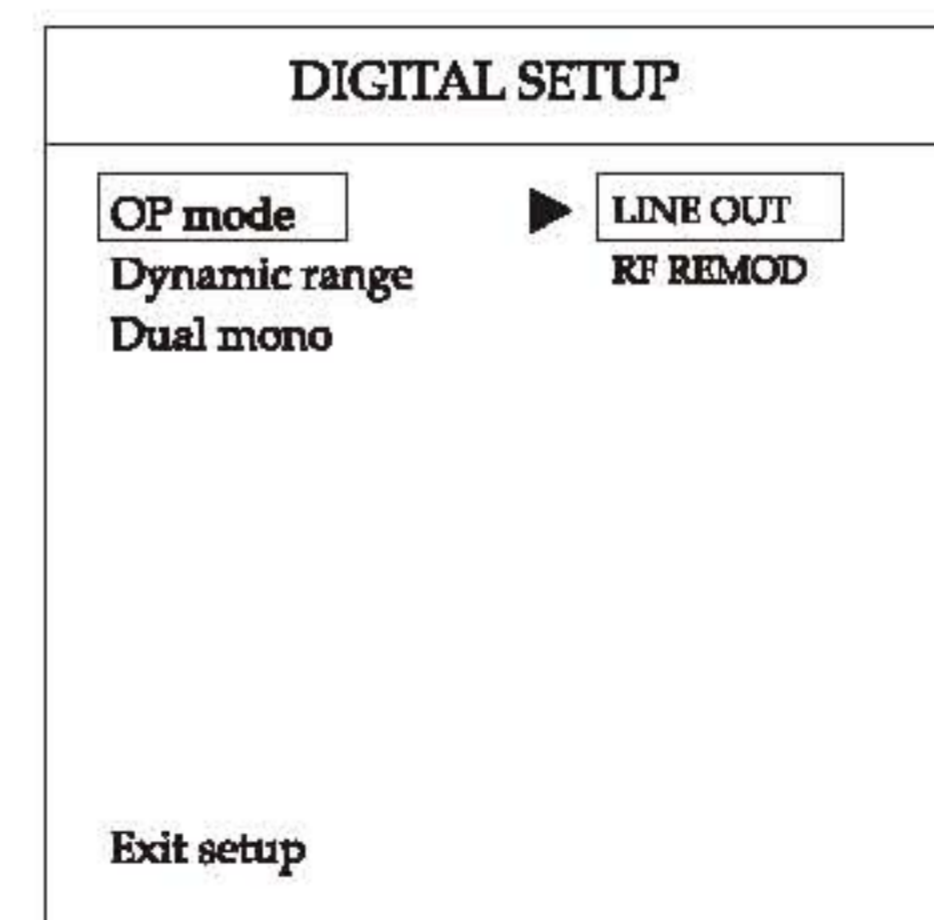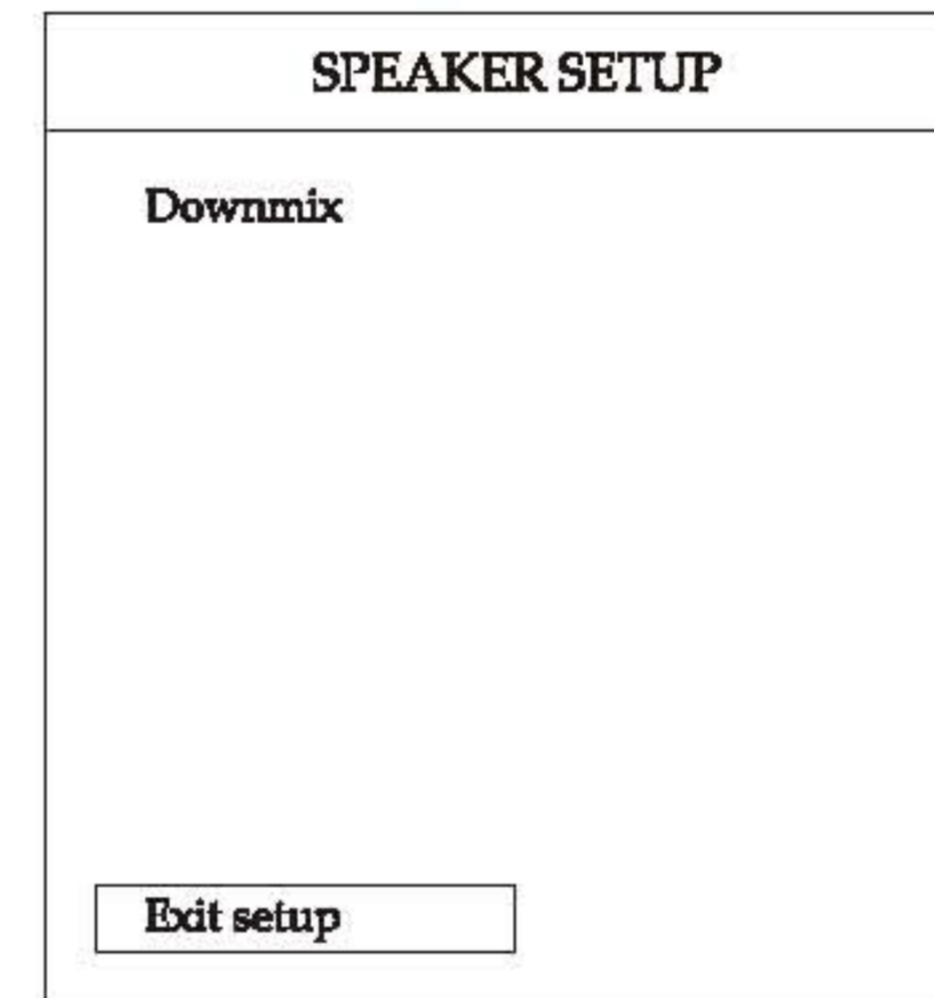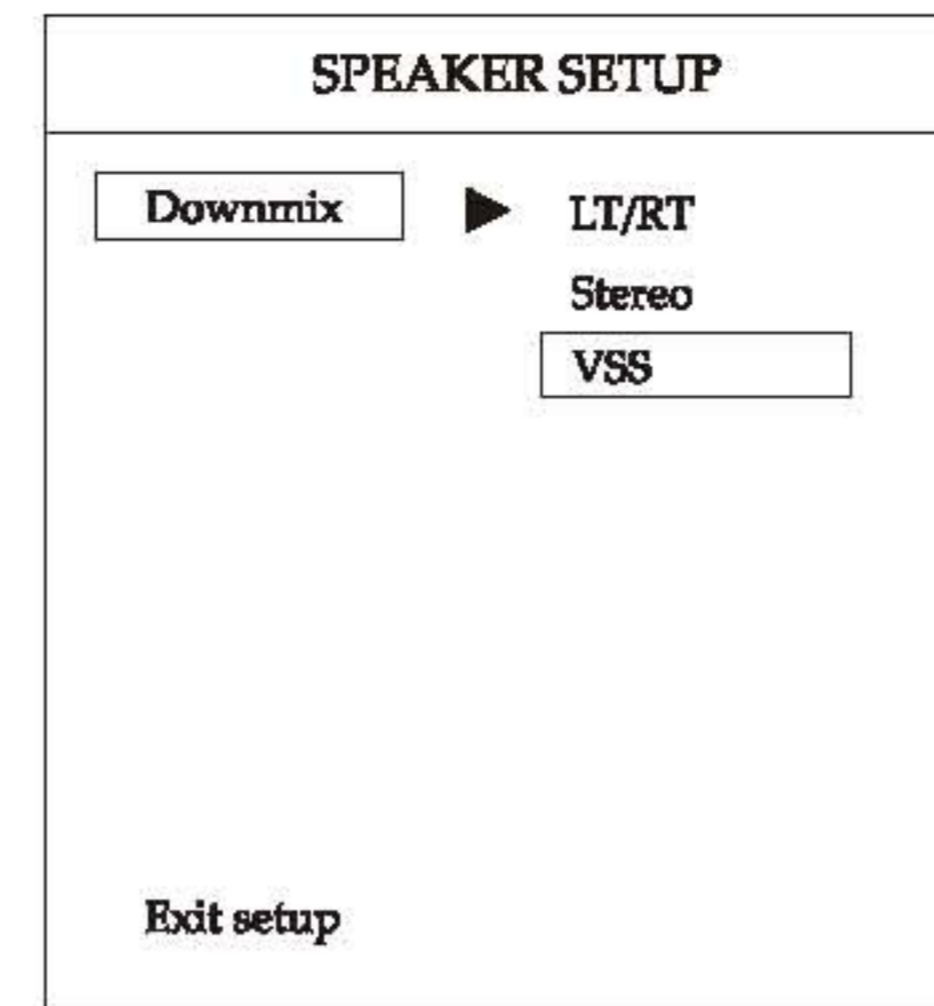

**Note:** same as above



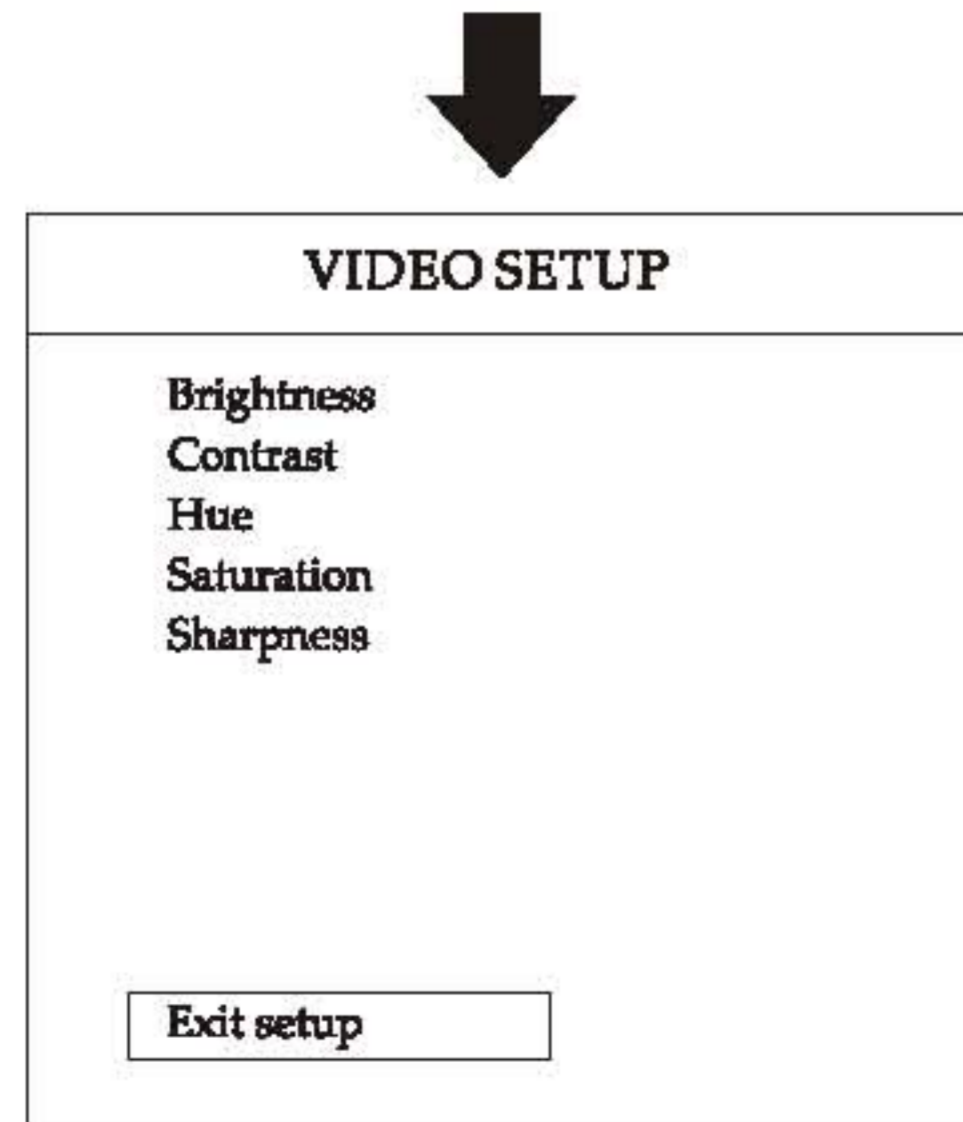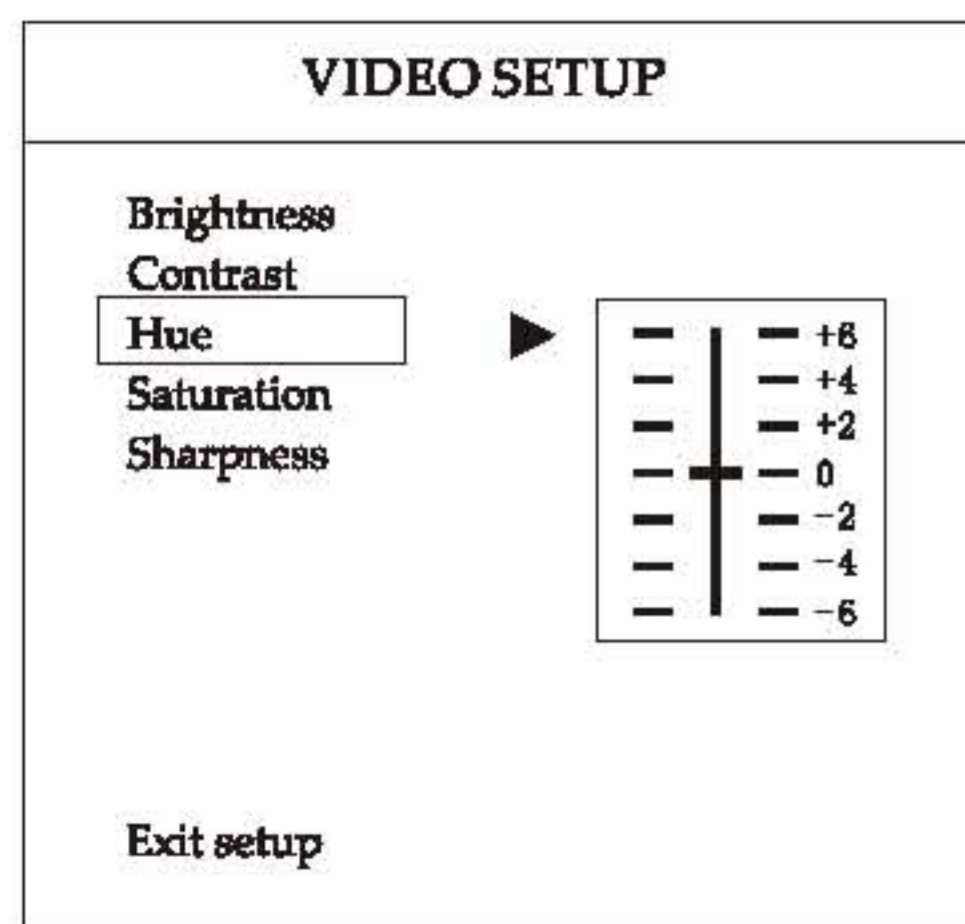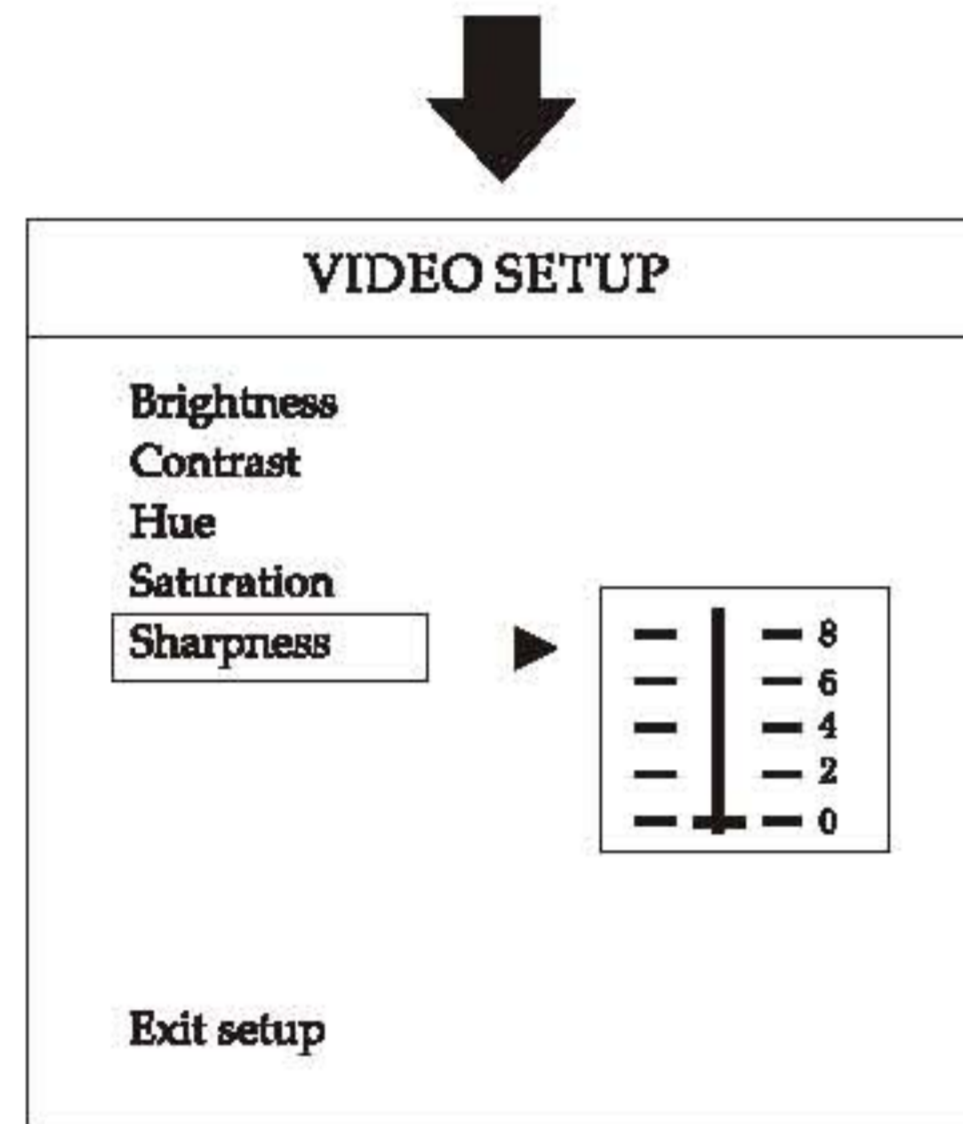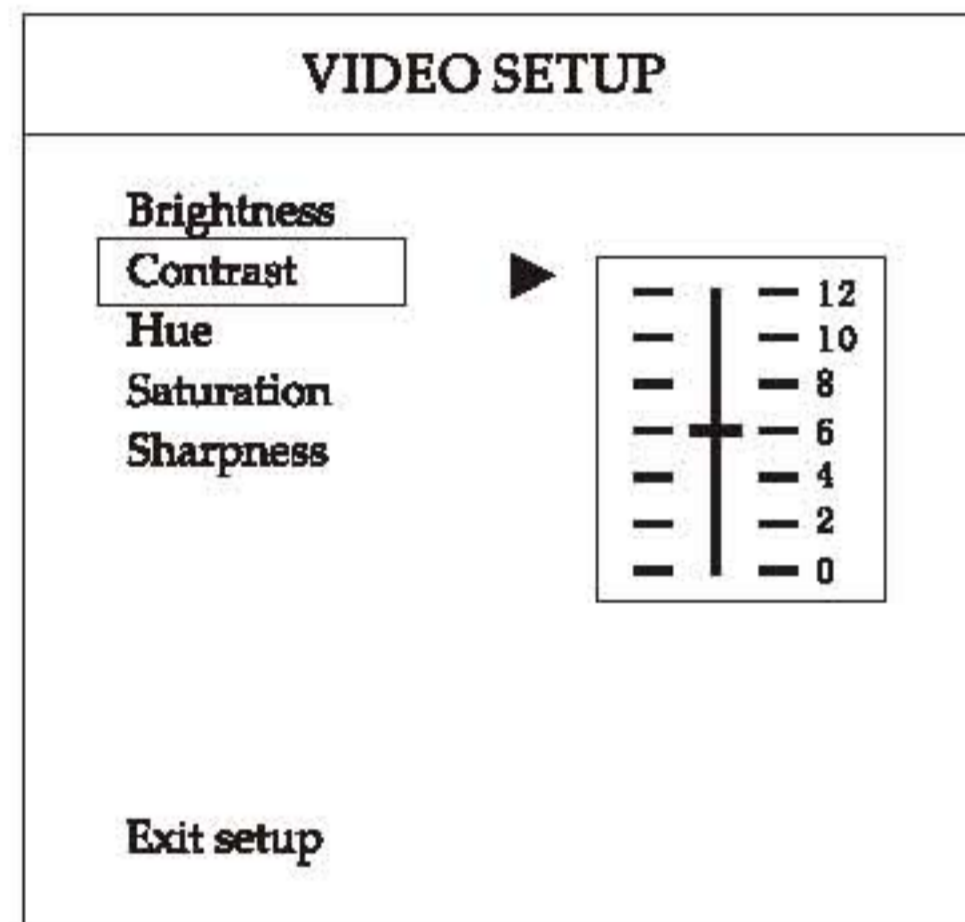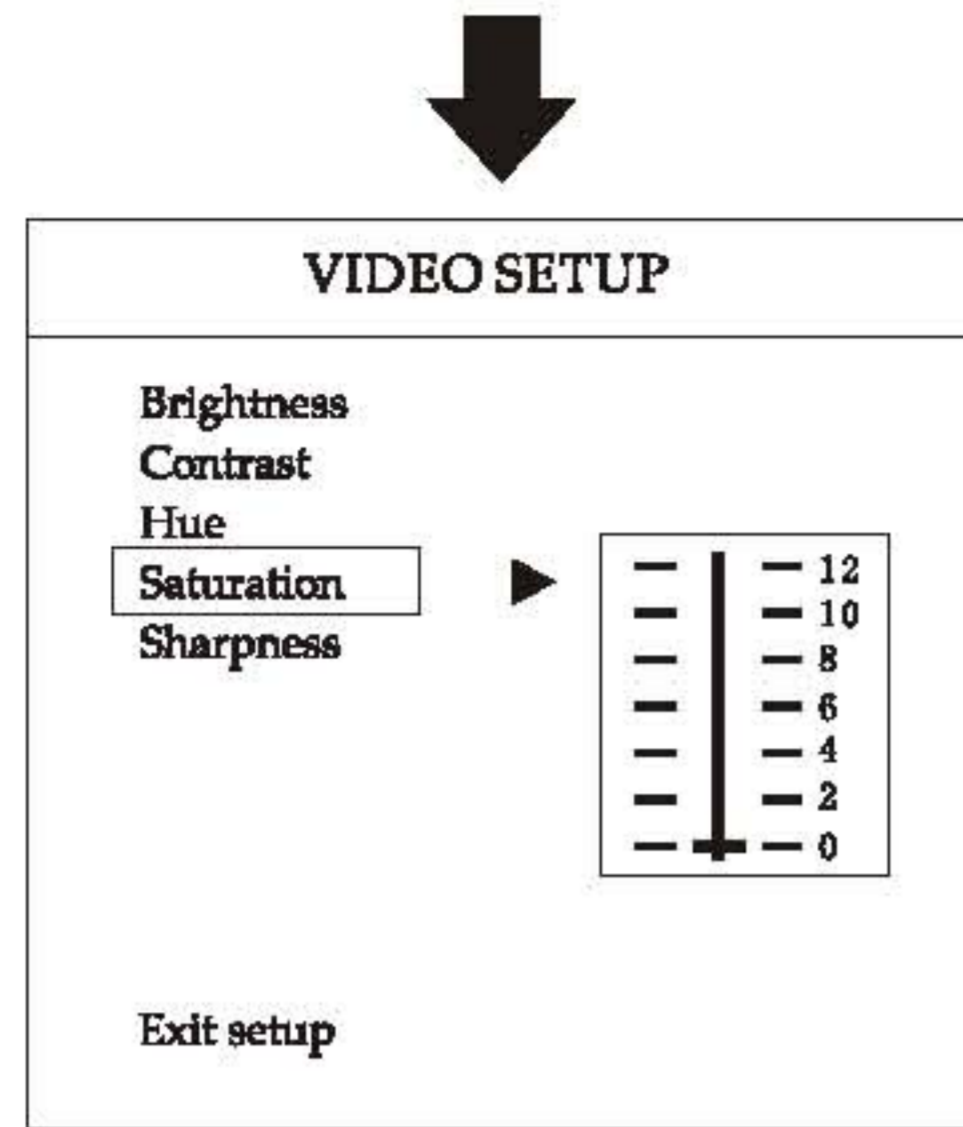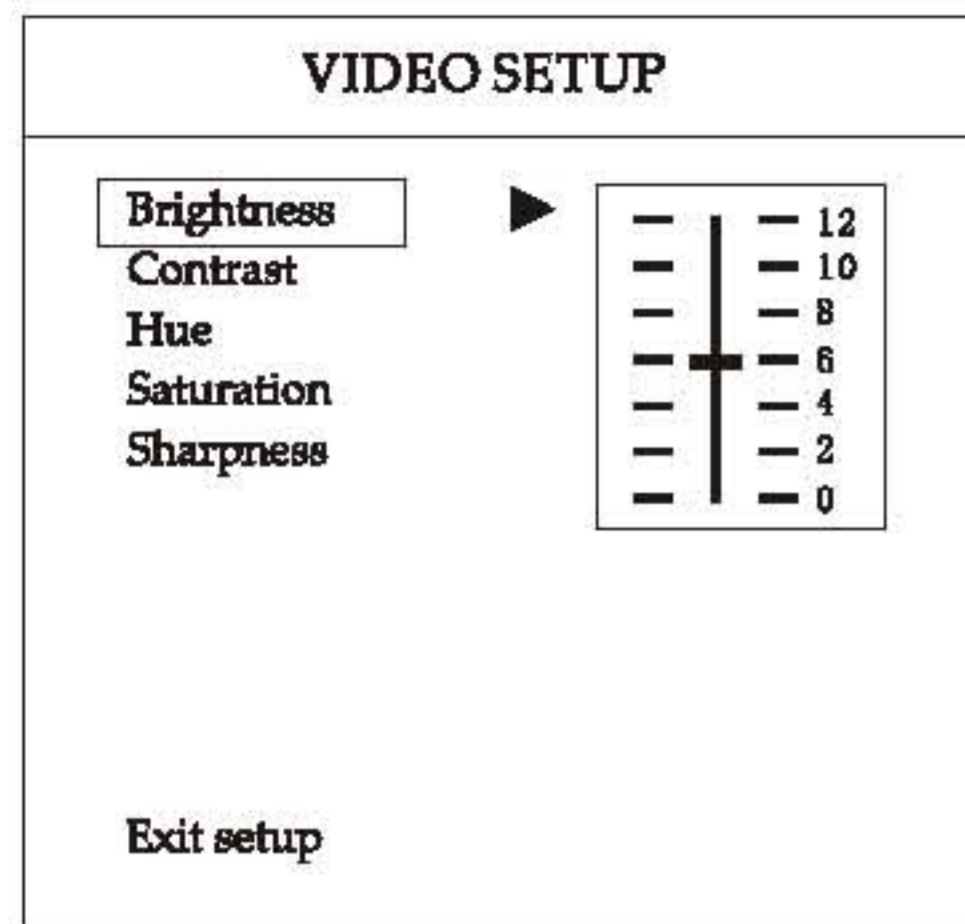      

Note:same as above

2. Image which is zoomed in can be moved by up/down/left/right cursor to move.
3. Image which is zoomed out cannot be moved.

## 8.OSD

In playing mode, short press OSD on remote control to show all information of present disk.

## 9.Repeatedly play

In playing mode, press AMS/RPT button on remote control to start up follow repeat function.



## 10. Angle switch

If the DVD disc is recorded with multi- angles, you can press the ANGLE button to switch the angle during playing.

The sequence is as follow:



Note:

- 1.It just can be worked by the remote control.
- 2.It is only for the DVD disc which has multi-angle.
- 3.If there is a sign on the cover of the DVD disc.The number in the sign means how many angles the disc has.
- 4.You can not switch the angle when slow playing.

## 11.Multi-audio

There are different languages of dialogue and audio systems in DVD disc.

If the DVD disc is recorded with multi-audio,you can switch the language of dialogue and the audio systems when playing.

Press the AUDIO button repeatedly to change the language of dialogue.

Note:

- 1.It just can be worked by the remote control.
- 2.It is only for the DVD disc which is recorded with multi-language.
- 3.If there is a sign on the cover of the DVD disc, means that it was recorded by multi-language/audio system.
- 4.In VCD mode,press the AUDIO button to select the L/R or STEREO track.

## 12.Multi-subtitle

If the DVD disc is recorded with multi-subtitle, you can switch the languages of subtitle.

Press the sub-t button repeatedly to change the language.

Note:

- 1.It just can be worked by the remote control.
- 2.It only for the DVD disc which is recorded with multi-subtitle.
- 3.If there is a sign on the cover of the DVD disc, means that it has several subtitle.

## 13.Title select

In DVD mode, press TITLE button to back to the title menu. Display shows all the titles of the disc. You can select the chapter you want by the cursor, press play button to play the chapter.

Note: It just can be worked by the remote control.



## 14.MENU select

In playing mode, press PBC button on remote control to back to the menu, display will show chapter and section in disk. Work with ▲ / ▼ button on remote control or touch button on display to choose your desired song. Press ▲ button / ENTER button to play.

**Note:** this function can only be worked by the remote control.

**OPEN:** press OPEN button on panel to eject disk.

## 15.Program play

In DVD mode, you can set the sequence of playing by the program function, the operation is as follow:

PROG			
T	C	T	C
1	0 1 : 0 3	5	___ : ___
2	0 1 : 0 6	6	___ : ___
3	___ : ___	7	___ : ___
4	___ : ___	8	___ : ___
		9	___ : ___
		10	___ : ___
		11	___ : ___
		12	___ : ___
		13	___ : ___
		14	___ : ___
		15	___ : ___
		16	___ : ___
		PLAY	DELETE

When DVD is playing, press ST/PROG button, then the display shows:

For example, program the first song, input 01, press ► button move the cursor to the second lattice, input desired song, for example, the third song. Program the second song, press ▼ button, move the cursor to 2 \_\_\_ \_\_. input 01, press ► button move the cursor to the second lattice, input desired song, for example, the 6th song( press 6). Press ► button to program play. Back to the normal mode, press the ST/PROG button, then press ► button.

**Note:** this function can only be worked by the remote control.

## 16.Digital album

Play the disc contains JPEG pictures, read the picture menu first.

- 1.press ► button on remote control, the pictures will be browsed automatically.( It also can be worked to press number 6 button on the unit.)
- 2.press ENTER button on the remote control, it can be manual browsed by seek+ and seek- .
- 3.ZOOM in picture function: During auto browsing, press pause button stop the screen, press Zoom button to zoom in or zoom out the picture. During manual browsing, you can press Zoom button to zoom in or zoom out picture directly.
- 4.Under zoom in picture, you can move the picture by ◀▶.

**Note:** You can not move picture in normal mode and zoom out mode.

 
 
 
## 17.Set up

Press SETUP button, display will show the system set up menu and the submenu, select the item you want by ◀▶, after selecting the proper item, press ▲ / ▼ / ◀ / ▶ to press ENTER to confirm.

**Note:**

- 1.It just can be worked by the remote control.
- 2.Some function setting maybe different because of the different model or disc.
- 3.If the selected language is not recorded in the disc, then unit will show the appointed language.
- 4.About the "SETUP" ,please read the follow.

Press "SETUP" on the remote control, it will appear the following touch menu:

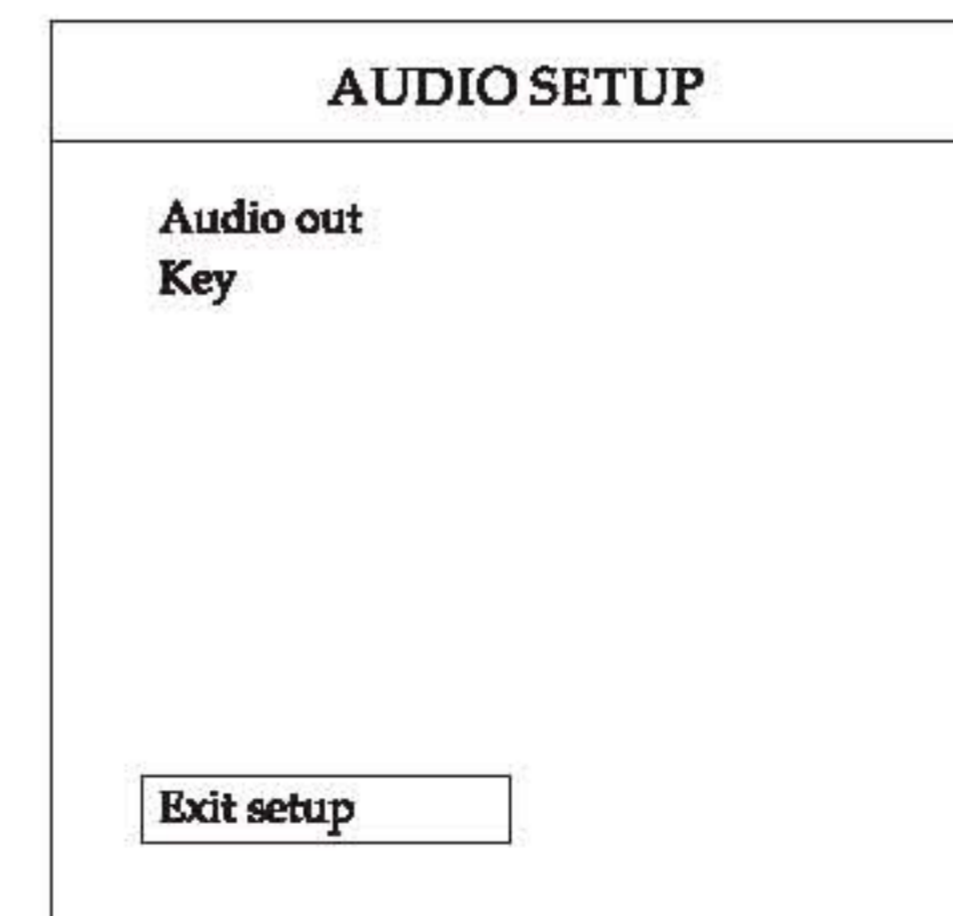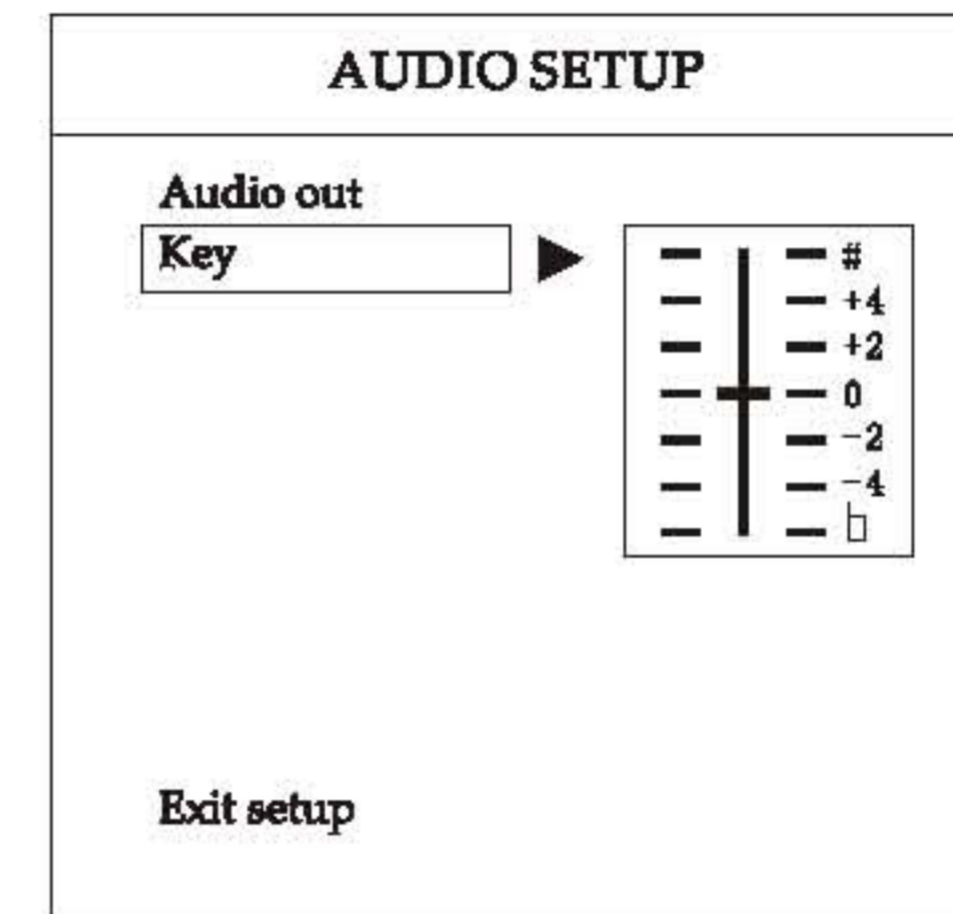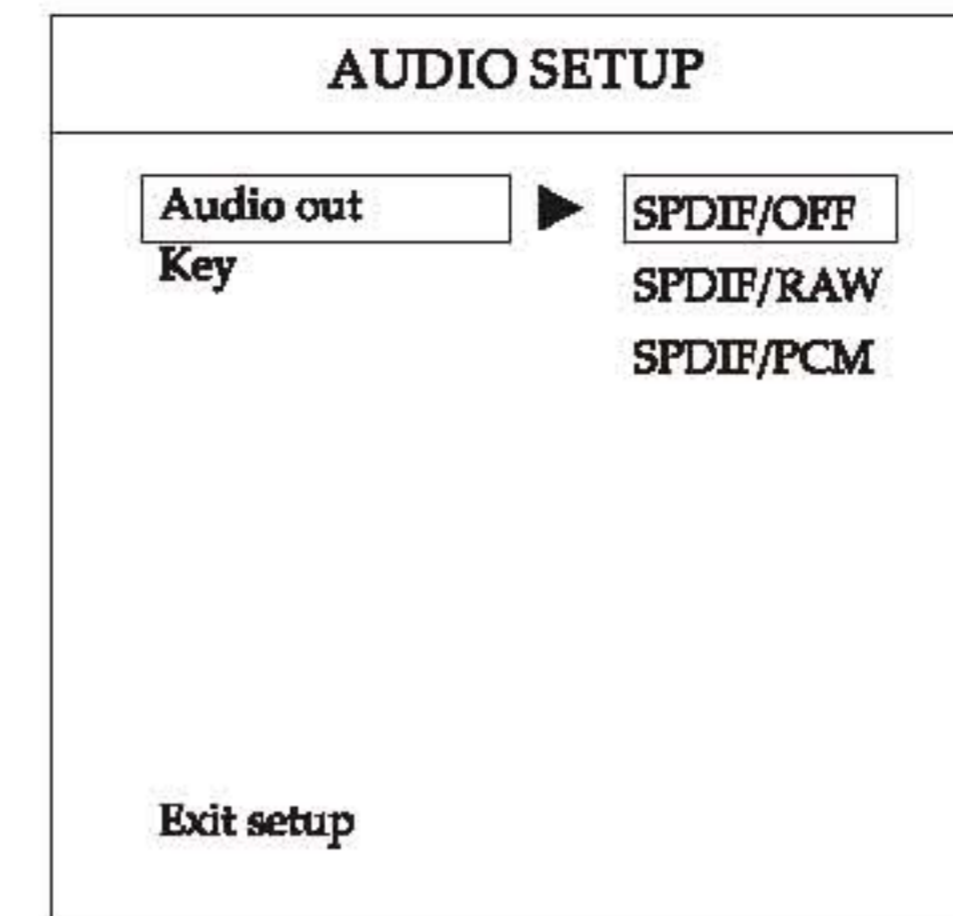

**Note:** When above table appear, press ► button and ▲ button to choose your desired item, press ENTER button to store settings. Press SETUP button again to exit.



# INSTRUCTIONS

**LANGUAGE SETUP**

OSD language	▶ English
Audio lang	Chinese
Subtitle lang	German
Menu lang	Spanish
	French
	Portuguese
	Latin

Exit setup



**LANGUAGE SETUP**

OSD language	English
Audio lang	▶ Chinese
Subtitle lang	German
Menu lang	Spanish
	French
	Portuguese
	Latin
	Japan

Exit setup



**LANGUAGE SETUP**

OSD language	English
Audio lang	Chinese
Subtitle lang	▶ Chinese
Menu lang	German
	Spanish
	French
	Portuguese
	Latin
	Japan

Exit setup



**LANGUAGE SETUP**

OSD language	English
Audio lang	Chinese
Subtitle lang	German
Menu lang	▶ Spanish
	French
	Portuguese
	Latin

Exit setup



**LANGUAGE SETUP**

OSD language	English
Audio lang	Chinese
Subtitle lang	German
Menu lang	Spanish

Exit setup

Note: When above table appear, press ▶ button and ▲ button to choose your desired item, press ENTER button to store settings. Press SETUP button again to exit.

# INSTRUCTIONS

**SYSTEM SETUP**

TV system	Video
TV Type	Password
Rating	Default

Exit setup



**LANGUAGE SETUP**

OSD language	English
Audio lang	Chinese
subtitle lang	German
menu lang	Spanish

Exit setup



**AUDIO SETUP**

Audio out	Key
-----------	-----

Exit setup



**VIDEO SETUP**

Brightness
Contrast
Hue
Saturation
Sharpness

Exit setup



**SPEAKER SETUP**

Downmix
---------

Exit setup



**DIGITAL SETUP**

OP mode
Dynamic range
Dual mono

Exit setup



# INSTRUCTIONS

SYSTEM SETUP

TV system  
Video  
TV Type  
Password  
Rating  
Default

Exit setup



SYSTEM SETUP

TV system ▶ NTSC  
Video PAL  
TV Type AUTO  
Password  
Rating  
Default

Exit setup

Note: When above table appear, press ▼ button and ▲ button to choose your desired item, press ENTER button to store settings. Press SETUP button again to exit.



SYSTEM SETUP

TV system  
Video ▶ S-VIDEO  
TV Type  
Password  
Rating  
Default

Exit setup

Note: Operation is same as above setting.

# INSTRUCTIONS

SYSTEM SETUP

TV system  
Video  
TV Type  
Password ▶ 0000

Rating  
Default

Exit setup

Note:  
1. After input code, press ENTER button to turn on child lock.  
2. Move cursor to level item, choose desired level.  
3. You only can choose level at unlock state.



SYSTEM SETUP

TV system  
Video 1 KID.SAFE  
TV Type 2 G  
Password 3 PG  
Rating ▶ 4 PG13  
Default 5 PG-R  
6 R  
7 NC-17  
8 ADULT

Exit setup



SYSTEM SETUP

TV system  
Video  
TV Type  
Password  
Rating  
Default ▶ Restore

Exit setup



SYSTEM SETUP

TV system  
Video  
TV Type  
Password  
Rating  
Default

Exit setup