INTRODUCTION

Safety Warnings and Considerations (for Amplifier / DSP / Active Woofer)

- Clean only with a dry cloth or other similar materials.
- Install your product in a dry, well-ventilated location that does not interfere with your vehicle's safety equipment.
- Do not block any ventilation openings when installing this product.
- Do not mount the product in the engine compartment of your vehicle or in any areas of extreme heat such as mufflers, silencers, exhaust pipes or other heat producing apparatus.
- Securely mount the product so that it does not come loose in the event of a collision or as a result of repeated vibrations that might occur during normal operation.
- Installation of the apparatus must be done with great care to prevent damage to your vehicle's fuel lines, power, and other electrical wiring, hydraulic brake lines, and other systems. If possible always visit your nearest Nakamichi dealer to perform the installation.
- Do not run any wiring outside or underneath the vehicle. Keep all wires inside the vehicle.
- Take the necessary precautions when making connections to the vehicle's battery to avoid any potential shock.
- Protect all system wires from sharp edges by carefully routing them, always use rubber grommets to protect wiring and cables whenever you are installing them through metal openings.
- Secure all wiring using cable ties or wire clamps to protect them from moving parts and sharp edges.
- This apparatus shall not be exposed to dripping or splashing, and no object filled with liquids, shall be placed on the apparatus.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as the power input terminals are damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- Fuses shall be replaced only with the correct type and fuse value, and only when the apparatus is powered off.
- Exposure to high sound pressure levels may lead to permanent hearing loss. Take every precaution to protect your hearing.
- This product is designed specifically for use with 12 volt, negative- ground electrical systems only. Using this product in systems with positive ground and/or voltages other than 12V may result in damage to the product and your system.

SOUNDSTREAM



AV Media Receiver User Manual

VRCPAA-70M

TOUCH BUTTON FUNCTION INTRODUCTION



- 1. **Volume+:** long press to increase volume continuously; short press to increase volume by step.
- **2. Volume-:** long press to decrease volume continuously; short press to decrease volume by step.
- **3. Power:** when the screen open, short press into mute mode, short press once agian to unmute; long press to close the screen; when the screen close and ACC&B+ON, short press to open the screen.
- **4. Home:** Press to enter main menu.
- **5. Voice Recognition:**Press to active Siri/AA voice function.

CONTENTS

Touch Button Function Introduction
Remote Control Introduction02
Functions & Applications04
Safety Note
Basic Operation
Main Menu
Radio
Phone
External Play Device
Music
Settings Operation
Aux In
Android Auto/Carplay
Common Trouble-shooting11
Functions Application12

12. Short Press:

USB/SD - Next track.

CP/AA/BTphone - Next track.

Long Press:Radio - Automatic seek (forward).

USB/SD - Fast forward.

13. Short Press: Radio - Switch to the previous preset.

USB/SD - Previous track.

CP/AA/BTphone - Previous track.

Long Press: Radio - Automatic seek (reverse).

USB/SD - Fast reverse.

14. Short Press:CP/AA - Move the cursor.

RADIO - (left / right)Frequency step function.

15. Short Press: CP/AA - Select the function.

Radio/USB/SD - Confirm the number entered.

- **16. Short Press:**Enter the setting interface and click again to enter the current mode.
- **17. Short Press:** Enter the EQ interface and click again to enter the current mode.
- **18. Short Press:**Play_pause.
- 19. Short Press: Radio When the input keyboard is not displayed; press the 1-6 keys, the short press function is to switch to the corresponding (1-6) radio station, and the long press function is to save the corresponding (1-6) radio station frequency.

In the case of input keyboard display, the function of 0-9 keys is to input the corresponding number (0-9)
BtPhone - Input the content (long press "0" indicates the input "+")



01. Long Press:

Short Press: Mute / Unmute.

- **02. Short Press:**CP/AA/BtPhone Answer a call.
- 03. Short Press:CP/AA/BtPhone Hang up the phone.
- **04. Short Press:**Enter the CP/AA interface.
- **05. Short Press:**Enter the AV-IN interface.
- **06. Short Press:** Fnter the Radio interface.
- 07. Short Press:Enter the SD interface.
- **08. Short Press:**Enter the BTphone interface.
- **09. Short Press:**Enter the USB interface.
- 10. Short Press: Increase volume.
- 11. Short Press: Reduce volume.

FUNCTIONS APPLICATION

Radio

Touch "Radio" in the main menu to enter the radio interface.



- To return to the main menu.
- [M] Switch between FM1/FM2/FM3 Long press to search for stations /AM1/AM2.
- Enter the EQ settings interface.
- Turns the LOC function on/off.

(IIII) Shows the Radio tuning input interface, input the frequency directly or selected preset stations to start playing.

(Q) Scans for available stations, long press to automatically search and save stations with the strongest signals into the presets.

[Scans for stations in reverse. Long press to search for stations automatically.

Scans for stations. automatically.

RDS Function

RDS will allow you to display information such as traffic status. radio station name and more. The unit can automatically switch to the strongest station based on the similar program.

AF: Turn on/off AF mode.

TA: Turn on/off TA mode.

PTY: Shows program types, and allows you to search for stations according to different programs.

Basic Operations

Main Menu

Please refer to the actual menu display for reference.

During initial power on, the unit will show the languages setting interface, select the required country and language, then press " $\sqrt{}$ " to enter the main menu.

Radio: Shows the Radio interface. **Phone:** Shows the Bluetooth connection interface.

Android Auto/CarPlay:

Shows the relevant interface based on your connected device.

USB: Shows the USB playback interface for compatible files.

Music: Shows the music playback interface.

Card: Shows the TF Card interface. enabling playback for compatible files.





F-camera:Turn on the front camera. **Setup**: Shows the Settings interface. AV-In: Shows the AUX interface. Screen off: Turns off the screen, to reactivate the screen simply press any part of the screen.

5 4

FUNCTIONS APPLICATION

Touch to delete numbers one by one, long press to delete all inputted numbers.

Touch **##** to show the numbers keyboard, touch again to exit.

Touch to hang up the call.

Touch to switch call audio
to earphone/AV receiver.

Touch to mute.

Note: You can also manage calls through your phone.

Calling Record

Check for dialed/answered/missed calls history. Touch icon to enter calling record interface:



: Delete dialed calls.

Phone Book



When your phone and unit are paired, the unit can automatically reach contacts from your phone and store them within the unit.

(selected phones only)

:Delete Contacts.

External Play Device

When you connect a compatible data device to your unit, the following interface will appear.



FUNCTIONS APPLICATION

Phone

This unit allows for hands free calling, using your phone's Bluetooth connection to the unit, you'll be able to dial, answer, access phone book and playback music.

Enter the Bluetooth interface using the Bluetooth button.



##: Dial

Calls record

E: Phone book

: Setup

Pair/Connect

Connect your phone to the unit using the below steps.

- 1. Access the Bluetooth connection interface in your phone.
- 2. Search for Bluetooth devices from either the unit or phone.
- 3. Once connected successfully, the will be a prompt for the password. Input "0000" to confirm the connection.

Dial

6

Once the phone and unit are connected successfully, you'll be able to make calls from the unit.

Touch 🔼 to make a call.

FUNCTIONS APPLICATION

EQ: Touch EQ icon to enter below







: Enter sound focus control function.

▼ Fine adjustment

East set sound focus's control point.

: Up/down slide to switch

EQ modes: rock/classical/jazz/etc.

: Set sound delay.

©: Reset to default settings.

General Setting



on/off . More items can be accessed ouch To set relevant functions oy sliding the menu.

Brightness: Left and right slide

icon to adjust screen's

orightness.

Video Control:

Click icon to turn ON/OFF the

Drive-forbidden-Watch Video.

PAC: Touch the icon to set PAC on/off. the steering wheel control menu. SWC: Touch "SWC" icon to enter

Radio Area: Choose the required. wheel control menu.

radio region.

Serial/Version: Touch [Serial

Please refer to the actual unit display) &Version] icon to enter serial number to check the needed information. and verison number interface,

to enter language setting interface, Language: Touch [Language] icon

FUNCTIONS APPLICATION

- 2. Play previous song/media 1. USB List Menu
- 3. Play/pause current song/media 4. Please next song/media

 - 5. Repeat mode
- Repeat all Repeat off Repeat
 - single
 - 6. Random playback on/off
- 8. EQ settings

7. Next page

9. Numbers selection playback

Music

Touch 🗬 to enter music interface. EQ is the same as sound settings EQ menu.



 ossless files playback supported. FLAC/WAV/APE file formats.

Settings Operation

Fouch "Setting" icon from main menu to enter the settings interface.



Time Setting

fouch "time" to enter time setting month/date/hour/minute/time Up/down sliding can set year/ system.

lime zones, select the correct one Up/Down sliding to scan different Time zone: Touch the Time icon to enter the time zone settings. required.

Sound Setting

Touch "Sound Setting" to enter sound setting interface:



In sound setting menu, you can turn monitor function/GPS mix sound/ on/off keyboard sound/GPS reverse sound/EQ.

COMMON TROUBLE-SHOOTING

Problem	Cause	Correct action
	Check fuse	Replace fuse
Cannot power on	Other factors causing MPU to malfunciton	Press RES button on the panel using a sharp point then power on
After ignition switch off, setting information are lost	Change battery or fuse	Reset information and save
Poor performance of radio station	Weak signal	Move the car to another place, then try again
No image	Other factors causeing MPU to malfunction	Press RES button on the panel by penpoint, then, power on
Cannot watch image during driving	Image viewing is not allowed during driving.	Park the car in a safe place, put the car in "P" position, pull up the hand brake, parking brake wire must be grounded.

FUNCTIONS APPLICATION

select the required language.

Reset Factory Data

Once selected, the unit will prompt to confirm reset to factory settings. Once confirmed the system will automatically reboot. All data will be Isoot and any third party programs will be lost. Please backup your data before performing this function.

MIC Switch: Touch F/R icon to change front or rear mic.

Wallpapers Setting

Choose the required wallpaper, touch "wallpaper setting" icon to enter the setting interface.



AUX In

Insert video input connector to input video's input jack, audio input conencto to input audio's input jack, touch "AUX-IN" icon from main menu to enter the AUX interface.

Android Auto/CarPlay

Connect Phone t the Android Auto interface.



The unit can be used to call, play music, view maps, check traffic information, watch videos, return to the unit's main interface, listen to Podcasts, read Audiobooks and so on.

Connect iPhone to the unit to enter the CarPlay interface.



The unit can be used to make calls, play music, view maps, check traffic information, watch videos, return to the unit's main interface, listen to Podcasts, read Audiobooks and so on.

Ξ

 
9

 
PRECAUTIONS ON POWER SUPPLY AND SPEAKER CONNECTIONS:

Do not connect the speaker leads of the power cord to the car battery; otherwise, the unit will be seriously damaged.

BEFORE connecting the speaker leads of the power cord to the speakers, check the speaker wiring in your car.









WIRING CONNECTION

  FUNCTIONS APPLICATION





Warranty void if this unit is damaged due to misuse or unauthorized service

Before making any electrical

connection, disconnect the vechicle battery's negative terminal. Refer to manual for installation.

Connect each pair of speaker leads only to a single pair of speakers (or speaker system) that has an impedance of at least 4 ohms, as well as 50-watt power-handling capability.

Never allow the uninsulated part of any

A	RR+	FR+	FL+	RL+	RR-	FR-	F.	RL-	В	POWER	ACC	BATT	III	GND
WIRE	PURPLE	GREY	WHITE	GREEN	PURPLE/BLACK	GREY/BLACK	WHITE/BLACK	GREEN/BLACK	WIRE	-	RED	YELLOW	ORANGE	BLACK
NO.	1	2	3	4	5	9	7	8	NO.	1	2	3	4	5

Š.	WIKE	J
1	RED	AUDIO-IN R
2	WHITE	AUDIO-IN L
3	YELLOW	VIDEO IN
4	YELLOW	CAM-V-IN
5	RED	FR
9	WHITE	Н
7	BLUE	SUB-OUT2
8	YELLOW	VIDEO-OUT1
6	RED	RR
10	WHITE	RL
11	BLUE	SUB-OUT2
12	YELLOW	VIDEO-OUT2

speaker leads to touch the metal part of the vehicle.
Connect speaker leads to input of external amplifier ONLY if indicated in amplifier manual, otherwise this units internal amplifier will be damaged.

NO.	WIRE	D
-	GREEN	PARK
2	PURPLE	REVERSE
3	1	DIRECTION CTRL

MIC AA/ACP 5

Fuse: Max. 15 Ampere Voltage: 12V DC; Negative Ground

13

12

Warning:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

measures:

- Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

- Consult the dealer or an experienced radio/TV technician for help.

NOTE: This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter

RF Exposure Statement

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum distance of 500 mthe radiator your body. This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter