



User's Guide

SOLTMAN
SOLTBELL / ST-B3

Contents

Important Safety Instructions	3
Supplies Per Models	4
Installation guide	5
Name of each section (Main)	6~7
Name of each section (Bell)	8
List of setting modes for Main transceiver	9
F0 New call number registration mode	10~11
F1 Sound setting mode	12~13
F2 Time display setting mode	14~15
F3 Sound repeat setting mode	16~17
F4 Selected sound setting mode	18~19
F5 Repetition call setting mode	20~21
F6 Call number changing mode	22~23
F7 Deleting selected call number mode	24~25
F8 Every call number deleting mode	26~27
F9 See all numbers or deleting each call number mode	28~29
E1 New call number sequence registration mode	30~31
Checkup prior to a notification	32

Specification







Model	SOLTBELL	SOLTMRAIN
Frequency(MHz)		433.0500 ~ 434.7900
Freq Stability		±10 ppm
Data Rate		1800 bps
Channel space		12.5 KHz
Modulation		FSK (±3KHz)
Output Power		10mW (Max)
Sensitivity	N/A	-118dBm (at 12dB)
Power Supply	DC 3V CR2032 Coin Cell	DC 12V/1A Adapter
Dimension(mm)	67W × 42L X 11H	288W × 133L × 40H
Battery Life cycle	More than 1year (@30 Calls / day)	External Power
Antenna	PCB (Internal)	Tilt base snap-in_dipole (External)

Important Safety Instructions

In order to prevent harm or injury to those using the equipment or to any other persons and/or property, please be sure to read the following safety instructions.

! Warning This sign warns of possible death or serious injury to persons and/or property.

! Attention This sign warns of possible damage or injury to persons and/or property.

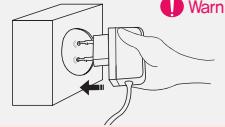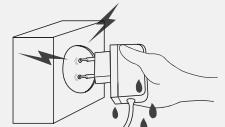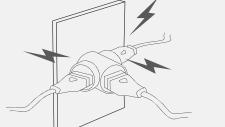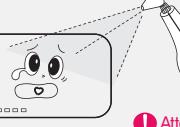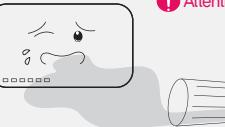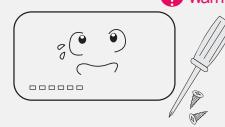Power related	 ! Warning Make sure the power plug is correctly inserted in to the wall outlet. [If the plug is inserted improperly, it may cause electric shock or generate heat resulting in fire.]	 ! Attention Never do anything that might cause damage to the cord or power plug. [This may generate heat resulting in fire.]	 ! Attention Do not connect or disconnect the power plug with wet hands. [This may result in electric shock.]
	 ! Warning Do not use multiple power plugs on one connector. [This may generate heat resulting in fire.]	 ! Attention Unplug the power plug if the main unit is damaged. [It may cause electric shock or generate heat resulting in fire. Please contact service center.]	 ! Attention Unplug the power plug, in case of lightning or when unused for long periods of time. [It may cause electric shock or generate heat resulting in fire.]
Handling	 ! Attention Do not harm or damage the unit with sharp object such as nail, pencil, or pen. [It will damage the surface of the unit and cause malfunction.]	 ! Attention Do not clean the unit with water, benzene, or paint thinner. It may damage insulation of electrical parts resulting in electrical shock or fire.	 ! Attention If foreign object enters the unit, please contact service center. It may damage internal parts of the unit resulting in fire, electrical shock or fire.
	 ! Warning Do not disassemble or modify the unit. If repair of the unit is required, please contact the service center. It may cause electric shock or generate heat resulting in fire.	 ! Attention Use only the batteries specified in this manual. [The batteries could leak corrosive liquids, explode or catch on fire.]	 ! Attention Dispose used batteries properly and keep away from reach of children. Contact physician immediately when the battery is swallowed by children.

Supplies Per Models

Main



Bell



Installation guide

To assure the finest performance, please read this manual carefully.

① Location

Avoid metal plates, electrical wires, and LED lighting that will shorten reception range.




Do not install near any heat sources such as radiators, stoves, or other appliances that produce heat. There is danger of fire or an electric shock.



The location should be safeguarded from excess moisture, dust, and rain. There is danger of fire or an electric shock.




② Bracket Installation

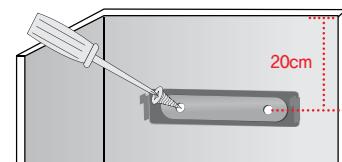


Wall mount bracket should be placed at least 20cm below the ceiling. Reception range can be shorten if placed less than 20cm.

③ Power Cord (Use the adapter provided in the package.)

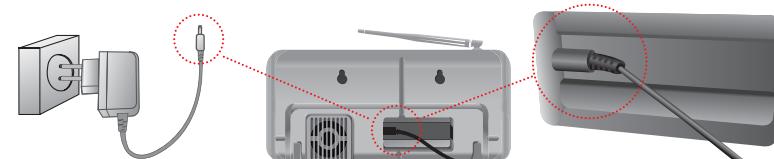

④ Wall Mounting (Pull down the unit until clicking sound is heard.)

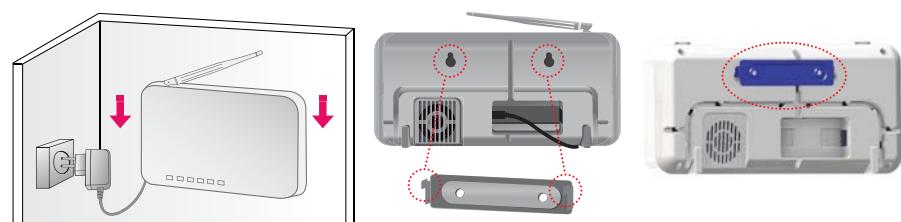

Name of each section (Main)



① Retractable antenna : 180 degrees pivot.

② Bell number indicator : activated led number varies by different models.

③ Setting buttons

MENU / ESC	<ul style="list-style-type: none"> • Menu button in setting mode • Alphabetic and numeric changing button
▲ ▼	<ul style="list-style-type: none"> • Up/ Down buttons • Changing volume (0~9 levels): default level is 5 <p>※ To change volume, press up/down to desired level and press SET button</p>
◀ ▶	<ul style="list-style-type: none"> • Left / Right buttons
SET / PWR	<ul style="list-style-type: none"> • Storing button for set value • Power button

④ Status indicator : Location of indicator differs by different models.

PWR	Red led indicates power is on
-----	-------------------------------

⑤ Holes for wall mount : Refer to item 4 of Installation Guide in page 5.

⑥ Speaker : 1.5W / 50Φ x 1.25mm

⑦ Adapter input: DC12V 1A (Use the supplied adapter)

Limited accessory warranty: malfunctioning of supplied adapter during its use is not covered by manufacturers' warranty.

Purchasing an adapter with AC110~220V input, DC12V 1A output is recommended.



Input : AC110~220V
Output : DC12V 1A


Name of each section (Bell)

※ Color of the Bell may vary with different models.



Battery replacement instruction

It is strongly advised to use specified battery type compliant with international standards. (CR2032 3V coin type lithium battery)

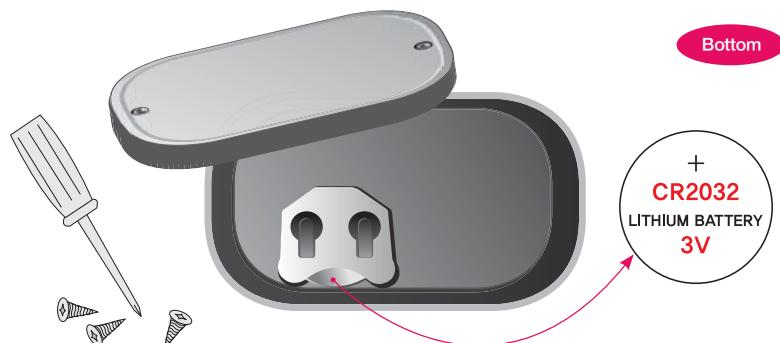

- ① Unscrew the screws at the back of the Bell to remove the lid.
- ② Place the battery into a holding bracket with + sign at the top.
- ③ Close the lid and screw the screws.

List of setting modes for Main transceiver

Each setting mode below is activated with using Setting buttons.

F0	New call number registration mode Adds new call number to the list of registered call numbers.
F1	Sound setting mode Sets bell sound for all Bells. (22 bell sounds / default value is 1)
F2	Display time setting mode Sets display duration. (default value is 30 seconds)
F3	Ring repetition setting mode Sets ring repetition number. (default value is 1)
F4	Unique Bell sound setting mode Sets bell sound for individual Bells
F5	Call redundancy interval setting mode Sets interval for redundant calls (default value is 3 seconds)
F6	Call number changing mode Assigns different call number for the Bell.
F7	Call number deleting mode using the Bell Deletes call number from the list using the Bell
F8	All Call number deleting mode Deletes all call number on the registered call number list
F9	Call number deleting mode using the Main unit Deletes call number from the list using the main Unit.
E1	New call number sequence registration mode Sequential registration call number.




New call number registration mode

- Adds new call number to the list of registered call numbers.


(1) Press and hold (MENU/ESC) button for 3 seconds.

This is call number registration mode.

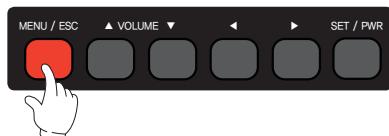

- Entering setting mode as [F0] is displayed.

(2) Press (SET) button.

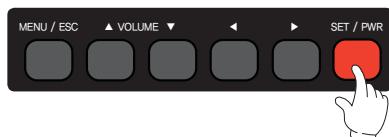

- blinking [0] is displayed.


(3) Press (▲▼◀▶) buttons. Sets a new number.

- Press (◀▶) buttons to move to different digits.

The cipher is changing.


- Press (MENU) button to toggle form Number mode to English mode.

This is english mode.
 This is number setting mode.

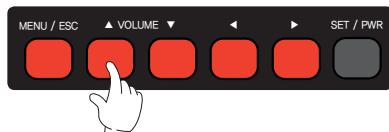

Number mode	0123456789 ₈ (Blank)
English mode	AbCdEF9h IJHLRnoP9r 5EULuHY2- ₈ (Blank)

(4) Press (SET) button. Press the call number.

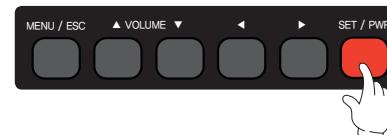

- Selected number is blinking.


(5) Press the bell button to register. The number has been registered.



- Registration for selected call number is completed. To register another Bell, repeat the processes from (3) to (5).

※ " The number already has been registered. " is announced in the case of pressing currently registered Bell button.


(6) Press and hold (MENU/ESC) button for 3 seconds when registration is finished.

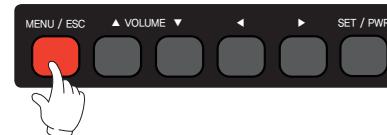

- [F0] is displayed and return to previous step.

※ Press (▲▼) buttons to select different setting mode.

(7) Press (MENU/ESC) button.

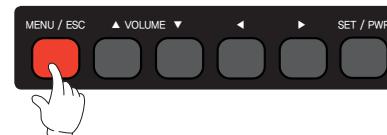

- [--] is displayed and ready for reception.




Sound setting mode

- Sets bell sound for all Bells.


(1) Press and hold (MENU/ESC) button for 3 seconds.

This is call number registration mode.

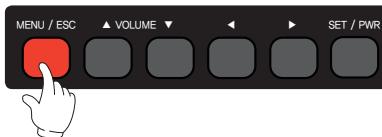


- Entering setting mode as [F0] is displayed.

(2) Press (▲) button once. This is sound setting mode.

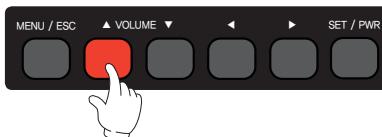


- [F1] is displayed

(3) Press (SET) button.

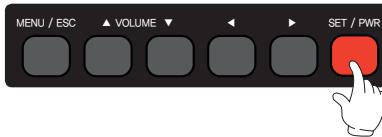

- selected sound is played as [1] is displayed.


(4) Press (▲▼) buttons. Select the desired bell sound.

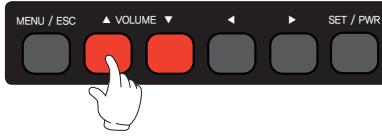

- Selected sound number is displayed.

※ Selected bell sound is played as navigating by pressing (▲▼) buttons.


(5) Press (SET) button. The setting has been completed.

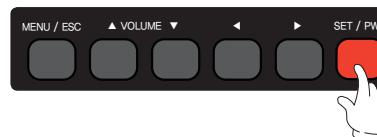

- [F1] is displayed and returns to previous step.

※ Press (▲▼) buttons to select different setting mode.

(6) Press (MENU/ESC) button.

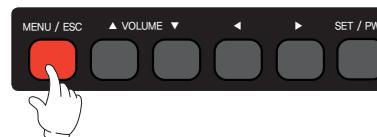

- [--] is displayed and ready for reception.

BELL (Preset mode : ding-dong 1)

1	ding-dong 1 (Preset mode)	12	ding-dong 8
2	ding-dong 2	13	ding-dong 9
3	ding-dong-dang 1	14	ding-dong 10
4	ding-dong-dang 2	15	chime bell 1
5	ding-dong 3	16	chime bell 2
6	ding-dong 4	17	cow
7	ding-dong 5	18	pig
8	water drop	19	rooster
9	ding-dong-dang 3	20	siren
10	ding-dong 6	21	birdcall 1
11	ding-dong 7	22	birdcall 2




Time display setting mode

- Sets display duration.

(1) Press and hold (MENU/ESC) button for 3 seconds.


This is call number registration mode.

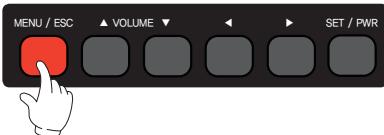

- Entering setting mode as [F0] is displayed.


(2) Press (▲) button twice.

This is time display setting mode.

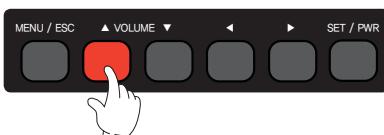

- [F2] is displayed.


(3) Press (SET) button.

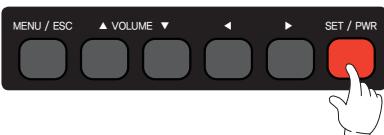

- Blinking [30] is displayed.

※ 30 is set for default. (Unit : second)


(4) Press (▲▼) buttons. Select the desired duration.

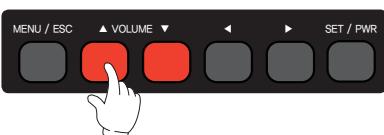

- Selected duration is displayed.

(5) Press (SET) button.


The setting has been completed.

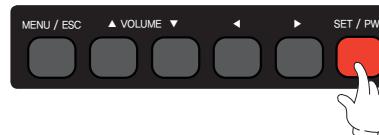

- [F2] is displayed and returns to previous step.

※ Press (▲▼) buttons to select different setting mode.

(6) Press (MENU/ESC) button.

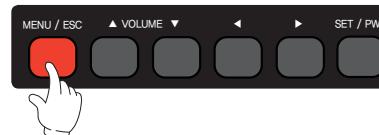

- [--] is displayed and ready for reception.

Note!

What is time display setting mode ?

Duration of displaying call number received on Main unit.

[Call number is displayed for 30 seconds as default is set for 30]

※ Call number display is stayed on if 0 is set.




Sound repeat setting mode

- Set sound repeat number.

(1) Press and hold (MENU/ESC) button for 3 seconds.


 This is call number registration mode.

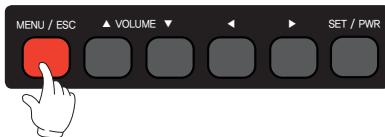

- Entering setting mode as [F0] is displayed.


(2) Press (▲) button 3 times.

 This is sound repeat setting mode.

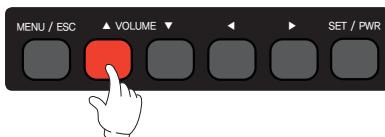

- [F3] is displayed.

(3) Press (SET) button.

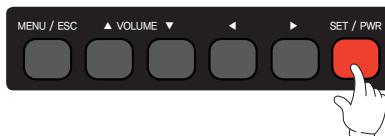


- [1] is displayed.

※ 1 is set for default. (Unit : number)

e.g.) 1 : repeat once
2 : repeat twice
3 : repeat 3 times


(4) Press (▲▼) buttons. Sets desired number .

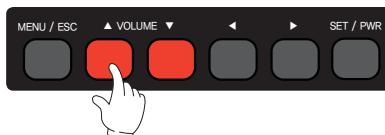

- The selected number is displayed.

(5) Press (SET) button.


 The setting has been completed.

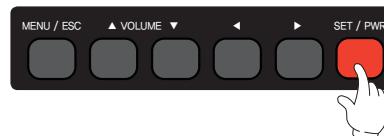

- [F3] is displayed and returns to previous step.

※ Press (▲▼) buttons to select different setting mode.

(6) Press (MENU/ESC) button.

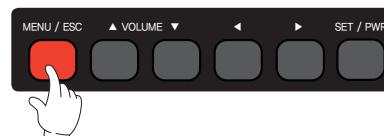

- [--] is displayed and ready for reception.




Selected sound setting mode

- Sets bell sound for individual Bells.

(1) Press and hold (MENU/ESC) button for 3 seconds.


This is call number registration mode.

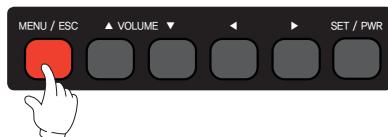

- Entering setting mode as [F0] is displayed.



(2) Press (▲) button 4 times.

This is selected sound setting mode.

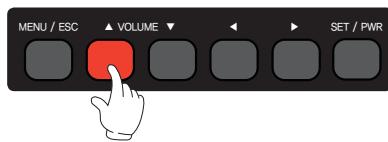


- [F4] is displayed.

(3) Press (SET) button.

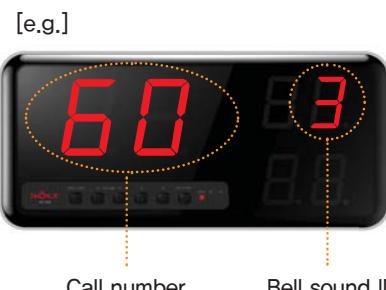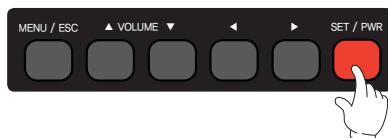


- Registered call number and bell sound ID is displayed and blinking.

(4) Press (▲▼) buttons. Select a call number you want to change.

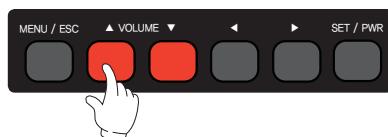

- Selected call number is displayed and blinking.


(5) Press (SET) button.

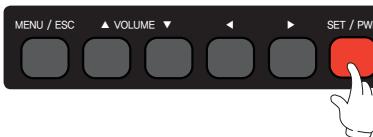

- Bell sound of selected call number is played and stop blinking.

(6) Press (▲▼) buttons. Select Desired sound ID.

Bell sound is played in sequence.

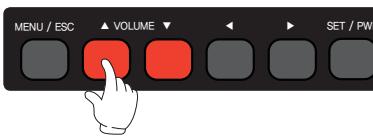


- Selected bell sound ID is displayed.

(7) Press (SET) button.

Do you want to change ?


(8) Press (SET) button.

It has been changed.

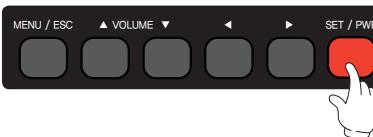

- To change another call number and its bell sound id, repeat the processes from (4) to (8).


(9) Press (MENU/ESC) button.

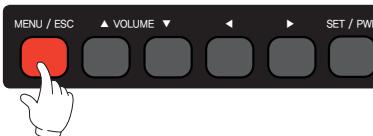

- [F4] is displayed and returns to previous step.

※ Press (▲▼) buttons to select different setting mode.

(10) Press (MENU/ESC) button.

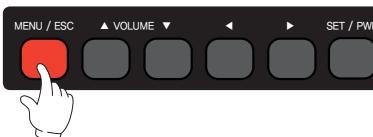

- [—] is displayed and ready for reception.




Repetition call setting mode

- Sets interval for redundant calls.

(1) Press and hold (MENU/ESC) button for 3 seconds.


⌚ This is call number registration mode.

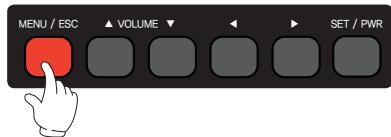

- Entering setting mode as [F0] is displayed.


(2) Press (▲) button 5 times.

⌚ This is repetition call setting mode.

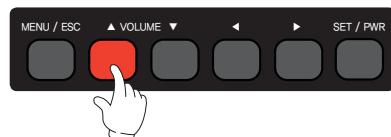

- [F5] is displayed.


(3) Press (SET) button.

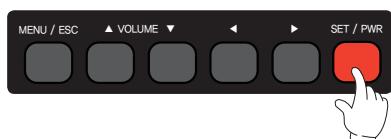

- [3] is displayed.

※ 3 is set for default. (Unit : second)


(4) Press (▲▼) buttons. Sets the desired number.

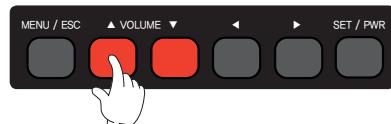

- Selected number is displayed.

(5) Press (SET) button.


⌚ The setting has been completed.

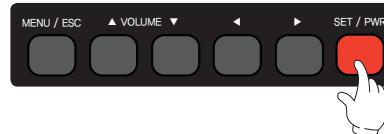

- [F5] is displayed and returns to previous step.

※ Press (▲▼) buttons to select different setting mode.

(6) Press (MENU/ESC) button.

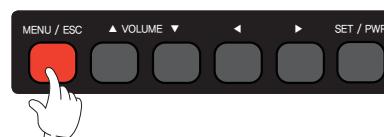

- [--] is displayed and ready for reception.

Note!

What is repetition call setting mode?

Redundant call is ignored for certain period of time.

[Redundant call is ignored for 3 seconds as 3 is set for default]




Call number changing mode

- Assigns different call number for the Bell.

(1) Press and hold (MENU/ESC) button for 3 seconds.


This is call number registration mode.

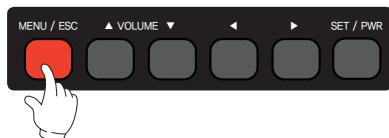

- Entering setting mode as [F0] is displayed.


(2) Press (▲) button 6 times.

This is call number changing Mode.

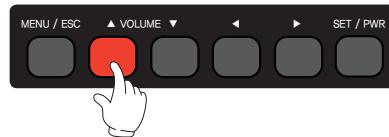


- [F6] is displayed.

(3) Press (SET) button.

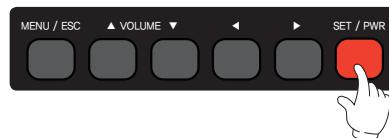


- Registered call number is displayed.

(4) Press (▲▼) buttons. Select the call number you want to change.

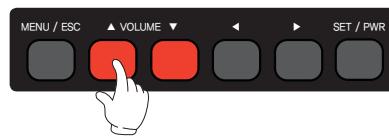

- Selected call number is displayed.


(5) Press (SET) button.

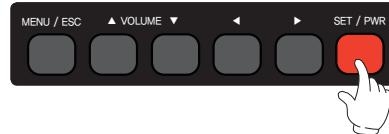

- The Last digit is blinking.

(6) Press (▲▼◀▶) buttons. sets desired to call number.

- Press (◀▶) buttons to move to different digits.

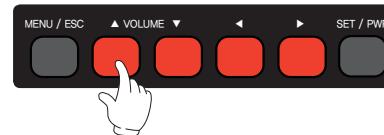


- Set call number is displayed.

(7) Press (SET) button. Do you want to change ?

- Set call number is blinking.


(8) Press (SET) button. It has been changed.

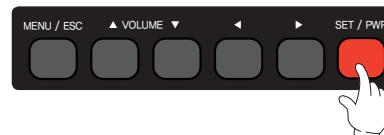

- Registered another number is displayed.

- "It has been changed." is played.
- To change another call number, repeat the processes from (4) to (8).


(9) Press (MENU/ESC) button.

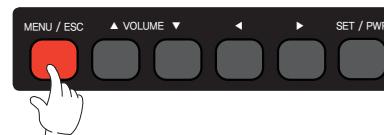

- [F6] is displayed and returns to previous step.

※ Press (▲▼) buttons to select different setting mode.

(10) Press (MENU/ESC) button.

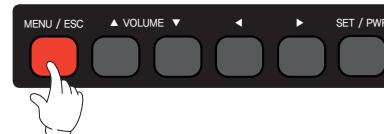

- [--] is displayed and ready for reception.




Deleting selected call number mode

- Deletes call number from the list using the Bell.


(1) Press and hold (MENU/ESC) button for 3 seconds.

This is Call Number Registration Mode.

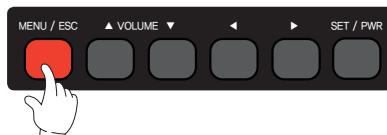


- Entering setting mode as [F0] is displayed.

(2) Press (▲) button 7 times. This is deleting selected call number mode.

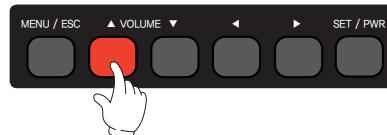


- [F7] is displayed.

(3) Press (SET) button.

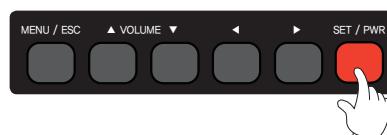

(4) Press (SET) button. Press the call number.

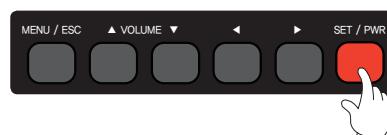

- Blinking [--] is displayed.




(5) Press the delete button. Do you want to delete it ?



- Selected call number is displayed and blinking.

(6) Press (SET) button. It has been deleted.

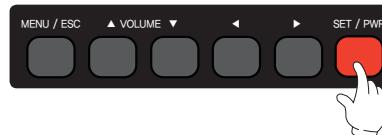


[e.g.]



- Blinking [--] is displayed.
- "It has been deleted." is played.
- To delete another call number, repeat the processes from (4) to (6).


(7) Press (MENU/ESC) button.

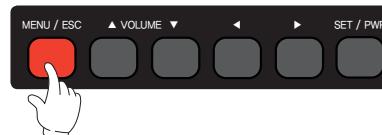

- [F7] is displayed and returns to previous step.

* Press (▲▼) buttons to select different setting mode.

(8) Press (MENU/ESC) button.

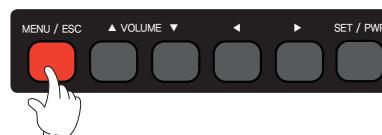

- [--] is displayed and ready for reception.




Every call number deleting mode

- Deletes all call number on the registered call number list.

(1) Press and hold (MENU/ESC) button for 3 seconds.


This is call number registration mode.

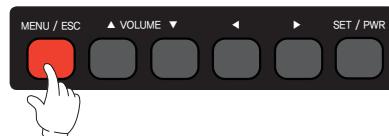

- Entering setting mode as [F0] is displayed.


(2) Press (▲) button 8 times.

This is Every call number deleting mode.

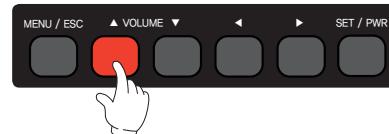

- [F8] is displayed.

(3) Press (SET) button.

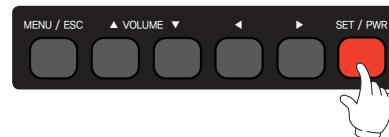


[e.g.]



- Blinking [AL] is displayed.

(4) Press (SET) button.

Do you want to delete all the numbers ?

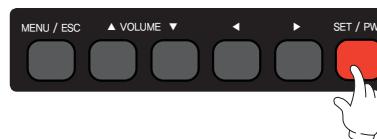

- Blinking [DE] is displayed.


[e.g.]



Total registered

(5) Press (SET) button.


It has been deleted.

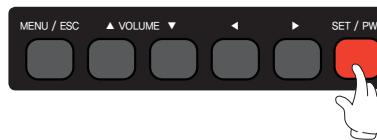

- [F8] is displayed and returns to previous step.

※ Press (▲▼) buttons to select different setting mode.

(6) Press (MENU/ESC) button.

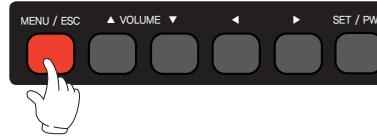

- [--] is displayed and ready for reception.




See all numbers or deleting each call number mode

- All register list / Deletes call number from the list using the main Unit.

All register list

(1) Press and hold (MENU/ESC) button for 3 seconds.


This is call number registration mode.

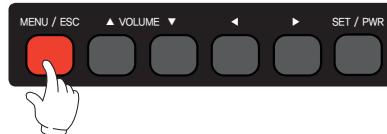

- Entering setting mode as [F0] is displayed.


(2) Press (▲) button 9 times.

This is see all numbers or deleting each call number mode.

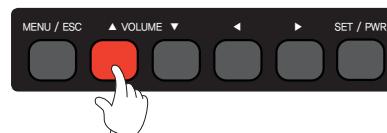

- [F9] is displayed.


(3) Press (SET) button.

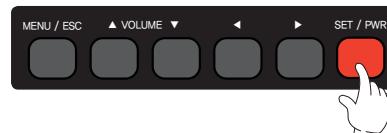

- Registered call number is displayed.




(4) Press (▲▼) buttons. You can check the entire call number is registered.

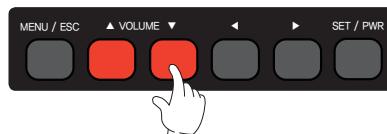

- Registered with the call number will be displayed sequentially.

Deleting call number

(5) Press (▲▼) button. Select the call number you want to delete.

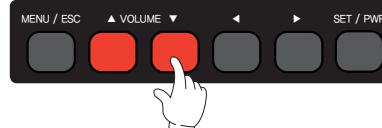


- Selected call number is displayed and blinking.

(6) Press (SET) button.

Do you want to delete it?

(7) Press (SET) button.

It has been deleted.

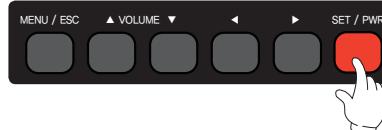


- Selected Call number is deleted and total registered number is changed accordingly.

- To delete another call number, repeat the processes from (5) to (7).



Call number


(8) Press (MENU/ESC) button.

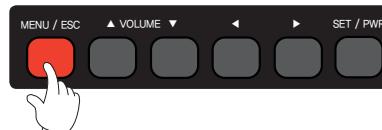

- [F9] is displayed and returns to previous step.

※ Press (▲▼) buttons to select different setting mode.

(9) Press (MENU/ESC) button.

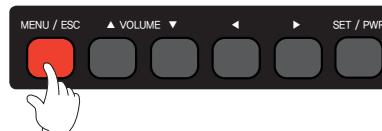


- [--] is displayed and ready for reception.



New call number sequence registration mode


- Sequential registration call number.

(1) Press and hold (MENU + SET) button for 3 seconds.

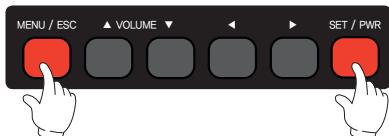

- Entering setting mode as [E1 Sb] is displayed.

(2) Press (SET) button.

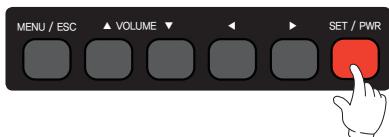

- blinking [1] is displayed.

(3) Press the bell button to register. Sequence is registered.

- Sequential register : 1, 2, 3, 4, 5, 10, 11,




※ If you are not sequential registration.

- Press (◀▶) buttons to move to different digits.
- Press (MENU) button to toggle form Number mode to English mode.


Number mode	0 1 2 3 4 5 6 7 8 9 <small>8</small> <small>(Blank)</small>
English mode	RbCdEF9h IJHLlnoP9r 5EULuH42-_-8

(4) Press and hold (MENU) button for 3 seconds when registration is finished.

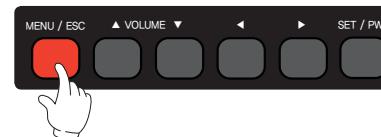

- [E1 Sb] is displayed and return to previous step.

(5) Press (MENU/ESC) button.

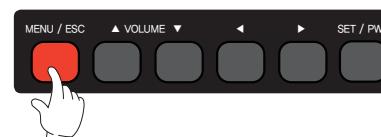

- [--] is displayed and ready for reception.

Checkup prior to a notification

- If you find the symptom as following from your product, please recheck.
It may not be an obstacle.

Main / Bell	
Trouble	Check
No power-on on main transmitter.	<p>Check the power connection of a main transmitter and if the adaptor is fitted to an outlet correctly.</p> <p>※ As an adaptor is a consumptive goods, we recommend to change it through our agency or AC110~220V INPUT , DC12V 1A for your direct purchasing.</p>
Main display does not receive the number or displays a different number.	<p>Check if the bell is registered to main monitor and if dip switches are changed.</p> <p>(Refer to " All register list " on page 28)</p>
When push a bell, it does not make a call, not lighting a LED.	<p>If the battery of a bell is consumed or reached to a low voltage, please change to new one.</p> <p>※ The Bell includes batteries usable for 2~3 years.</p> <p>※ CR2032 Coin Cell Battery 1EA</p>

※ As this product is a wireless communication equipment, it may not receive a number or a different number due to a surrounding environment or an interference of electronic machine.