
SoluM ESL Gateway

User Manual

(SLG-CR101)



Document Summary

Author : ESL Development Group(H/W) , ESL Division, Solum Co., Ltd.

Distributor : Solum Co., Ltd.

Tel.: +82-31-8006-7650

www.solu-m.com

Editor Information

- Tel.: +82-31-8006-7650

- Address: B3-4F, 150, Maeyeong-ro(Maetan-dong), Yeongtong-Gu, Suwon-si, Gyunggi-Do, 16674, South Korea

Copyright Notification

Solum Co., Ltd.

Copyright ©2017 Solum Co., Ltd.

All trademarks used are properties of their respective owners.

The content of this document is subject to change without prior notice.

The content of this document is intellectual property of Solum Co., Ltd..

This document may not be reproduced or published without prior consent from Solum Co., Ltd.

No part may be reproduced except as authorized by written permission.

The copyright and the foregoing restriction extend to reproduction in all media.

© 2017, Solum Co., Ltd.

All rights reserved.

Revision History

Rev.	Date	Remark
1.0	1.11.2017	First Edition.

Contents

1. Precautions 5

2. Overview 6

3. Product Specifications 7

3.1 General Specifications7

3.1.1 Gateway

3.2 RF Specifications.....8

3.2.1 Gateway

4. Product Description 9

4.1 Exteior.....9

4.1.1 Gateway

5. Product Installation..... 10

5.1 Gateway10

1. Precautions

“This RF device operates on the 2.4GHz frequency band and can produce radio interference. The device, therefore, may not be used for applications where safety of human lives is concerned.”

1) Usage Environment

Take extra caution when using this RF device in the vicinity of other electronic devices and appliances. Most electronic devices and appliances use electromagnetic waves. Electromagnetic waves emitted by this RF device can affect other electronic devices and appliances.

If using the device in an explosion hazard area, follow all safety regulations, instructions, and signals.

2) Storage and Use

Moisture and liquids can damage internal parts and circuit boards if allowed to enter into the device itself.

Do not place or store the product on a sloped surface. The product may slide and fall off the surface and damage.

Use the product in temperatures ranging from -25°C to $+60^{\circ}\text{C}$. Parts and circuits may damage if used or stored under temperature extremes.

Avoid areas with strong magnetism or subject to magnetism.

Contact between the device and a magnetic object can lead to malfunctions.

Do not place the product near heat-producing kitchen appliances like a stove or a microwave or in the vicinity of highly pressurized containers.


External impact to the product, such as from being dropped, can damage the screen.

Twisting and bending the product can damage the exterior casing and the internal components.

2. Overview

Gateway make up a system the electronically displays price and other product information that are traditionally shown printed or written on paper in places like the supermarket.

Here, ESL Gateway receives product price updates from the server and uploads the new data to the applicable electronic tags (ESL Tag), changing the displayed price information.

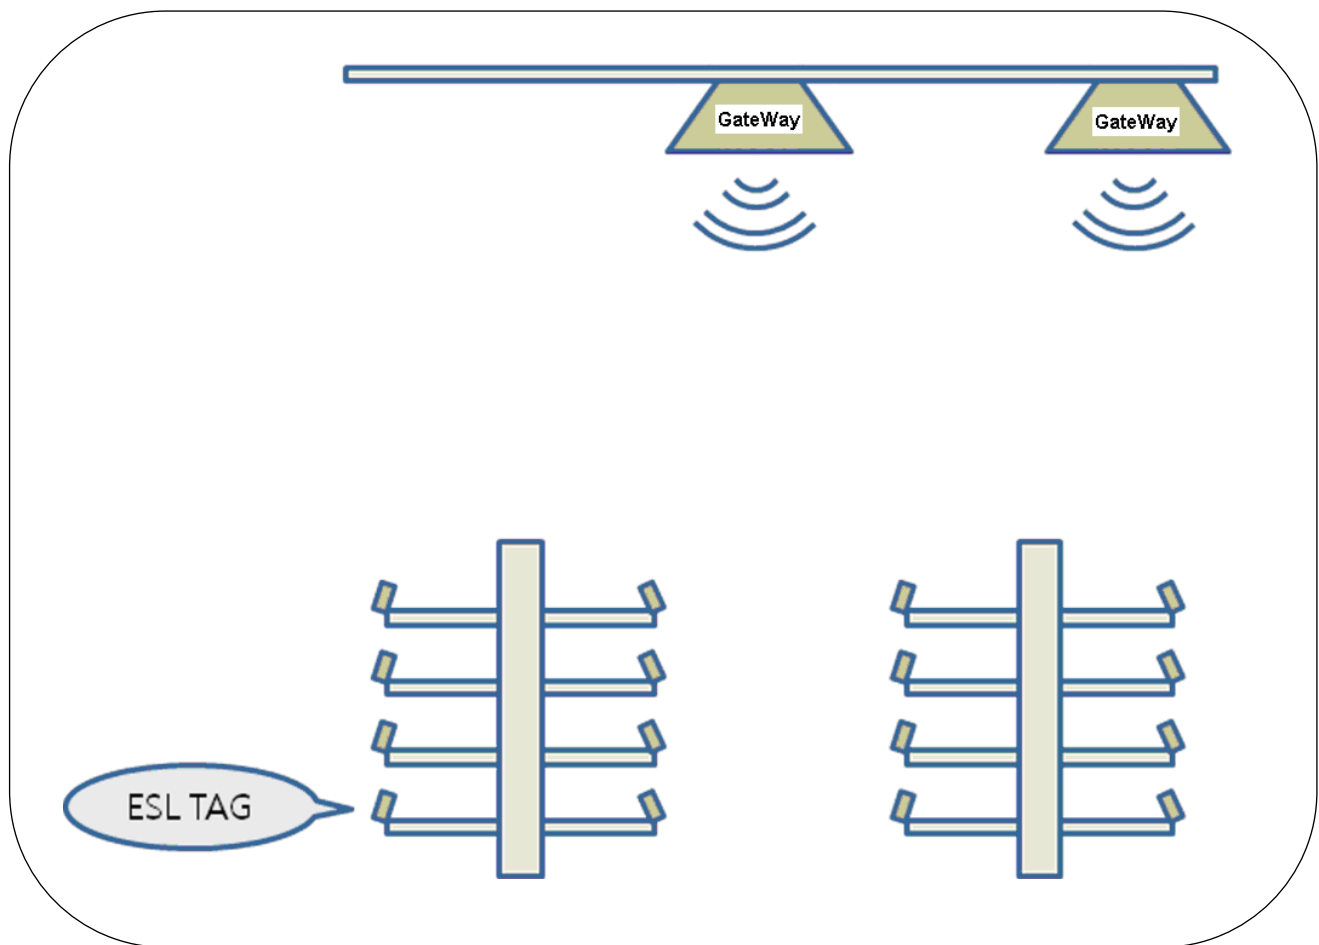

<Diagram 1> ESL System

3. Product Specifications

3.1 General Specifications

3.1.1. Gateway

General	
Communication	Ethernet (10/100/1000Mbps) Zigbee RF(based on IEEE 802.15.4)
Dimension (W*H*D)	215 * 215 * 44 (mm)
Weight (g)	1,385g
Enclosure	Plastic (ABS)
Power	DC Adaptor(5V,2A) or PoE (Power over Ethernet(IEEE802.3af))

Caution : DC Power Supply or PoE(Power over Ethernet) using one

3. 2 RF Specifications


3.2.1 Gateway

Category	Specification	Note
Antenna Type	Internal Antenna	2ea
Transmit Frequency	2405MHz ~ 2480MHz	
Receive Frequency	2405MHz ~ 2480MHz	
Antenna Peak gain	3.9 dBi	
Modulation	O-QPSK	
Channels	16ch	
Operating Temperature	0°C to +40°C.	
Power	■ DC Adapter (5V, 2A)	
	■ PoE (Power over Ethernet (IEEE802.3af)) 1) Input Voltage Range :36~57VDC 2) Nominal Input Voltage : 48VDC 2) Output Voltage : 5VDC	

4. Product Description

4-1 Exterior

4.1.1 Gateway

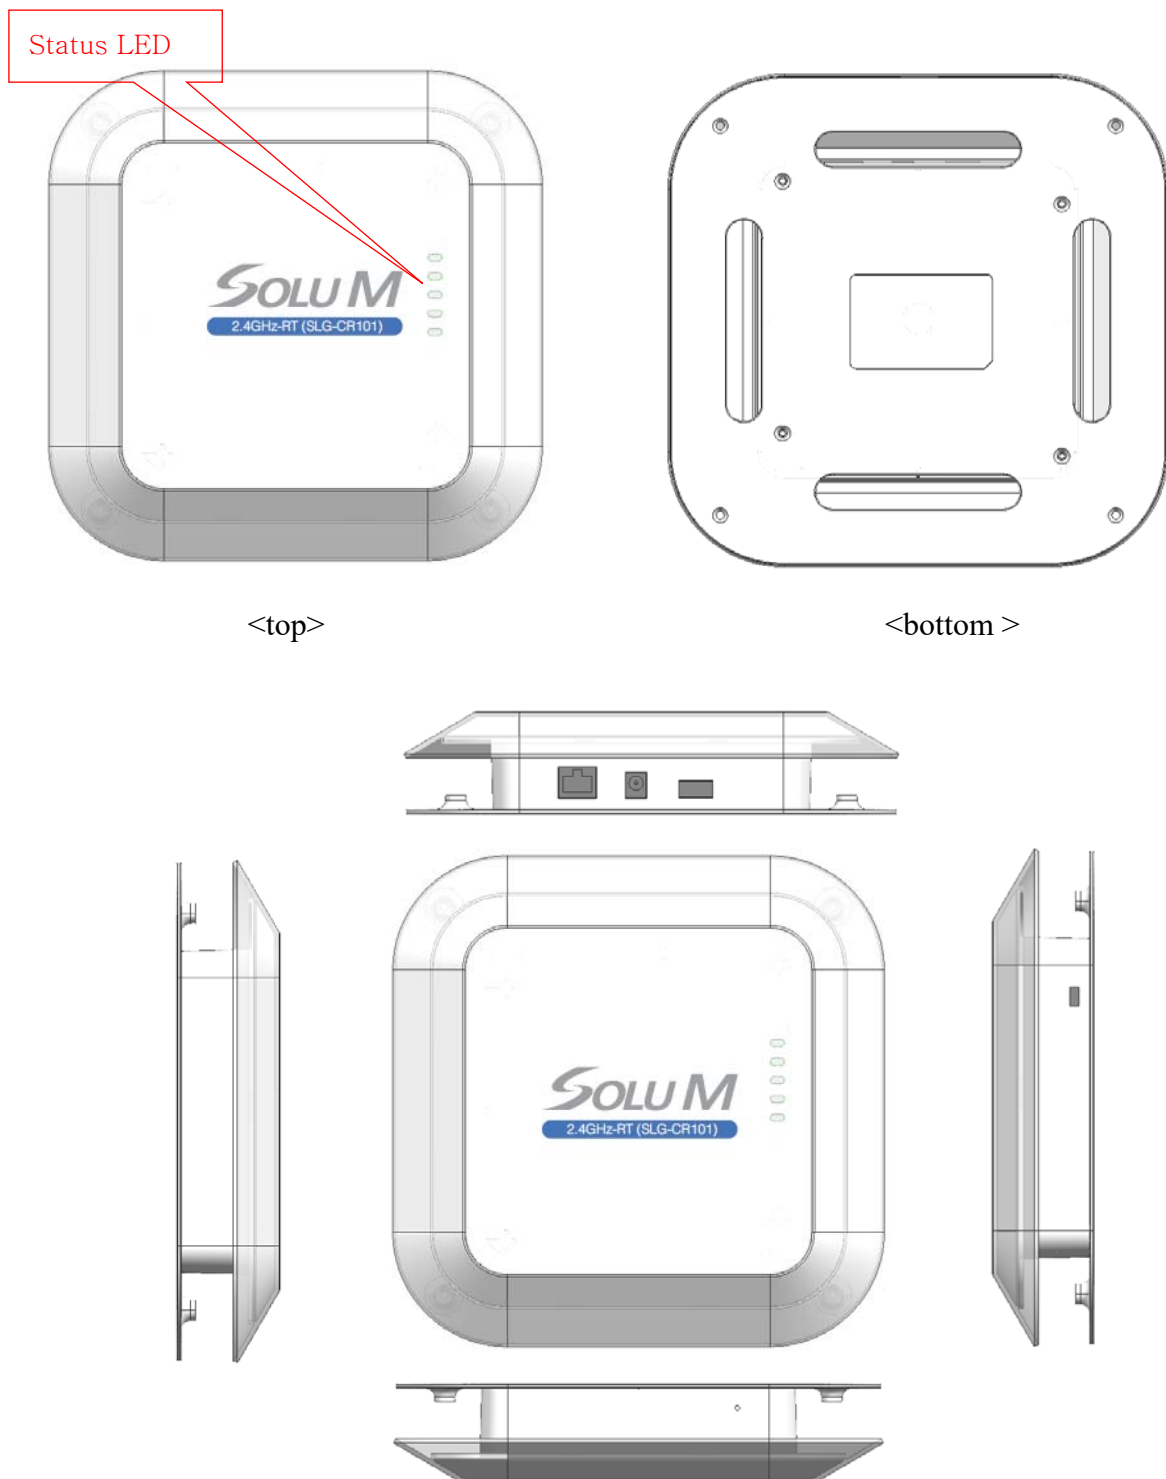


5. Product Installation

5-1 Gateway

- Components (includes installation accessories – adapter, bracket, screws)

Installation

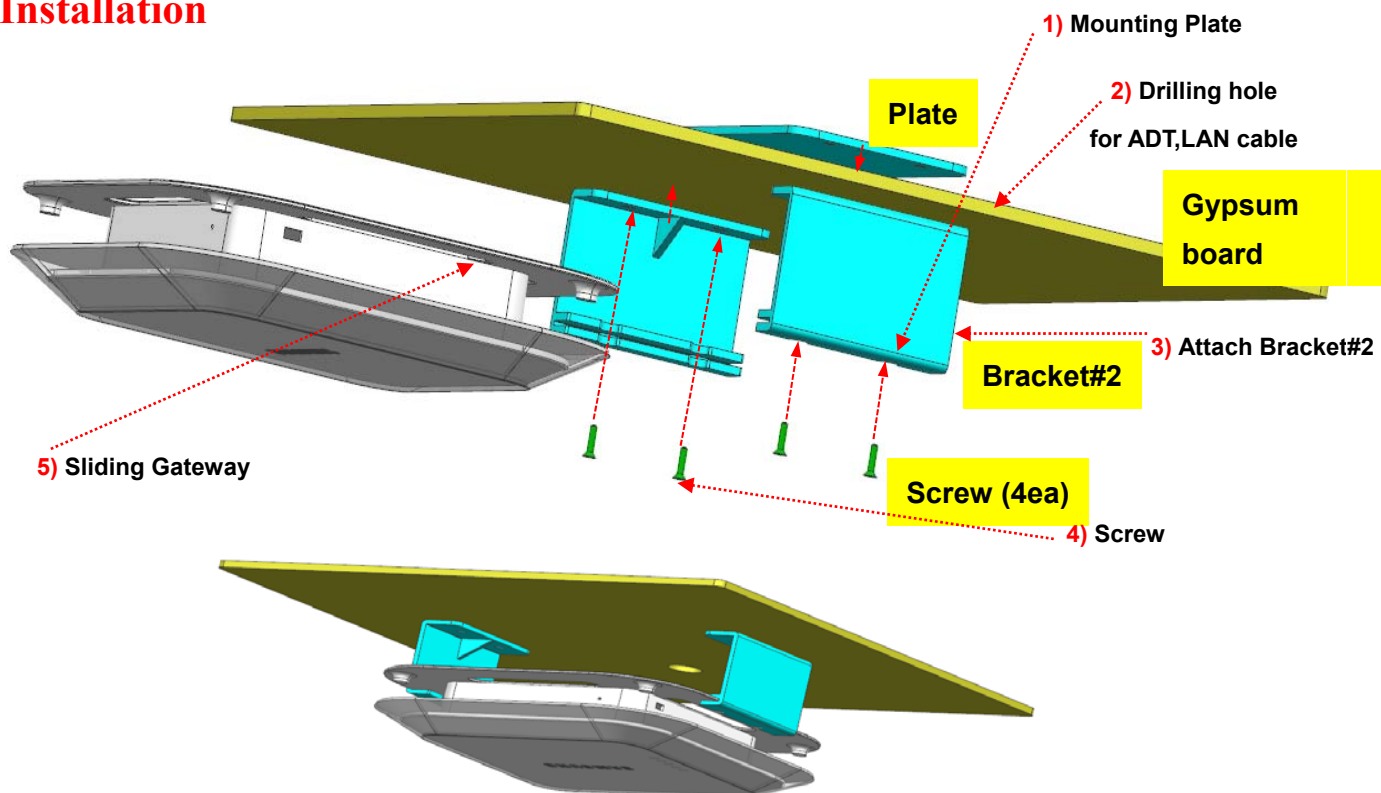

a) Drill 4 holes on the wall or ceiling to align with mounting Plates (1). Refer to the attached diagram.

b) Drill two $\Phi 10$ holes on the wall or ceiling for SMPS Adapter and Ethernet Cable.(2) Refer to the attached diagram.


c) Align the mounting bracket#2 holes to the holes drilled through the wall or ceiling from step a) and temporarily secure the bracket in place. (3)

d) Use Screws to completely secure the mounting bracket and Wall or Ceiling. (4)

e) Sliding gateway to mounting bracket#2 (5)

f) SMPS Adapter and Ethernet Cable through the two $\Phi 10$ holes made from step b).

Operation Check

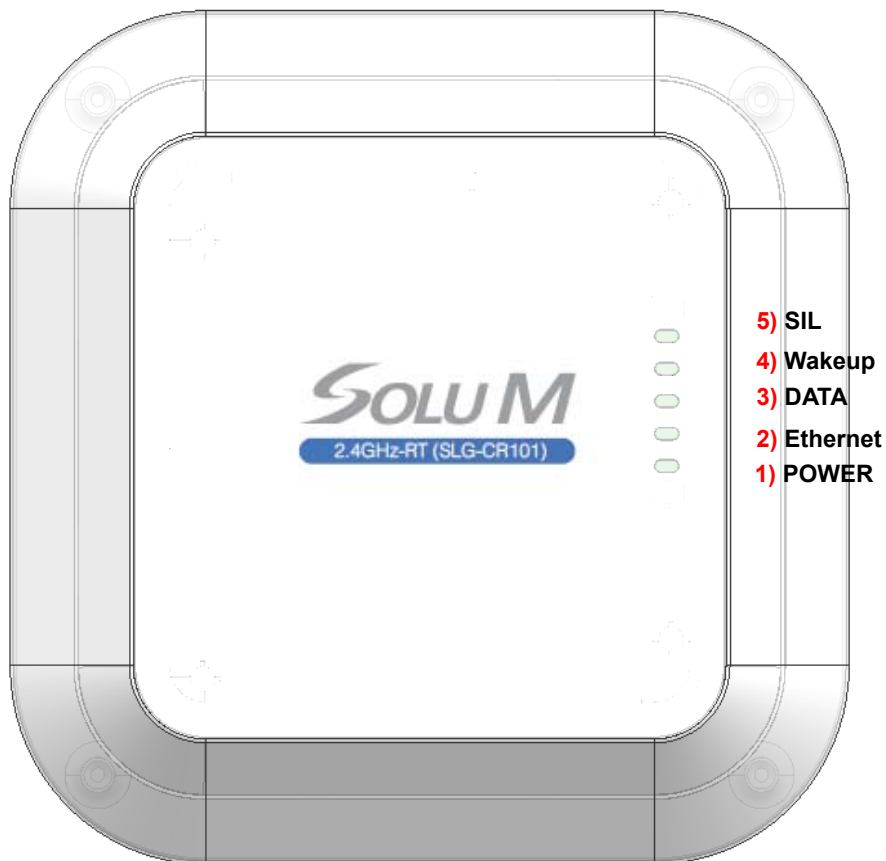

< Connect Ethernet Cable with PoE or Connect SMPS adapter and Ethernet cable first . >

- 1) Power : Always ON after connecting to Ethernet Cable with PoE or SMPS adapter
- 2) Ethernet : ON if Ethernet link is connected
- Check every 1sec whether Ethernet link is connected.
- 3) Data : ON when data duration
- 4) Wakeup : ON when Wakeup duration

-
- 5) SIL : Blink (duration 1sec) if Server interface layer is operated.
- Check operation of Server interface layer

Installation

a) Map product information and tag IDs.

Each tag has a unique 1) MAC Address that serves as the tag's ID.

Map 1) MAC Addresses of the tags and 2) barcodes of the products.

Using a PDA featuring Win CE 5.0 or higher as the operating system and a barcode scanner, scan the tag's 1) MAC Address and then the product's barcode to map.

(1) MAC Address



(2) Product Barcode



+




(3) Industrial PDA

b) Register product and tag mapping information.

Using the PDA's WLAN feature, register mapping data with the 4) Server.

(4) Server

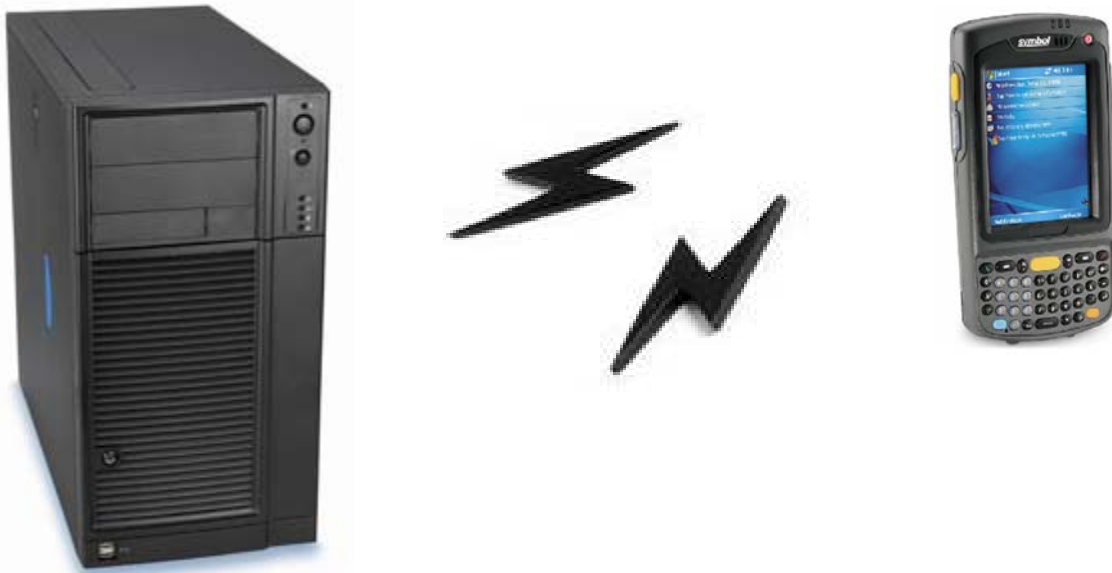


c) Attach a back rail to the shelf (secure using double-sided tape or screws).

d) Attach end and middle caps to the middle rail.

e) Take a tag that has been mapped from step a) and insert to the middle rail from step d). Here, make sure to align the tag and the rail grooves properly.

f) Slide in the middle rail to the fixed back rail.

g) Products information on Tags such as price will be updated from the server regularly via gateway

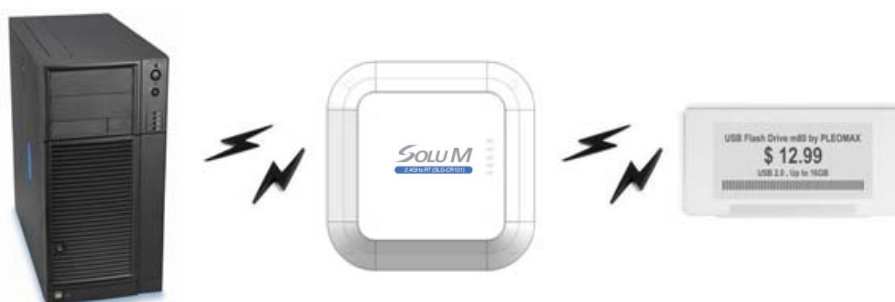

WARNING : This equipment may generate or use radio frequency energy. Changes or modifications to this equipment may cause harmful interference unless the modifications are expressly approved in the instruction manual. The user could lose the authority to operate this equipment if an unauthorized change or modification is made.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

NOTE : This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution

This device should be installed and operated with minimum 20 cm between the radiator and your body.
Cet appareil doit être installé et utilisé avec un minimum de 20 cm entre le radiateur et votre corps.

This device complies with Industry Canada license-exempt RSS standard(s).

Operation is subject to the following two conditions:

- (1) this device may not cause interference, and
- (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

- (1) l'appareil ne doit pas produire de brouillage, et.
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radio électrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.