


1.3.5 安裝SAM / MMC / SD 卡程序 Installation Procedure of SAM / MMC / SD Card

配有四 SAM 卡插槽之型號
For 4 SAM Card slots version

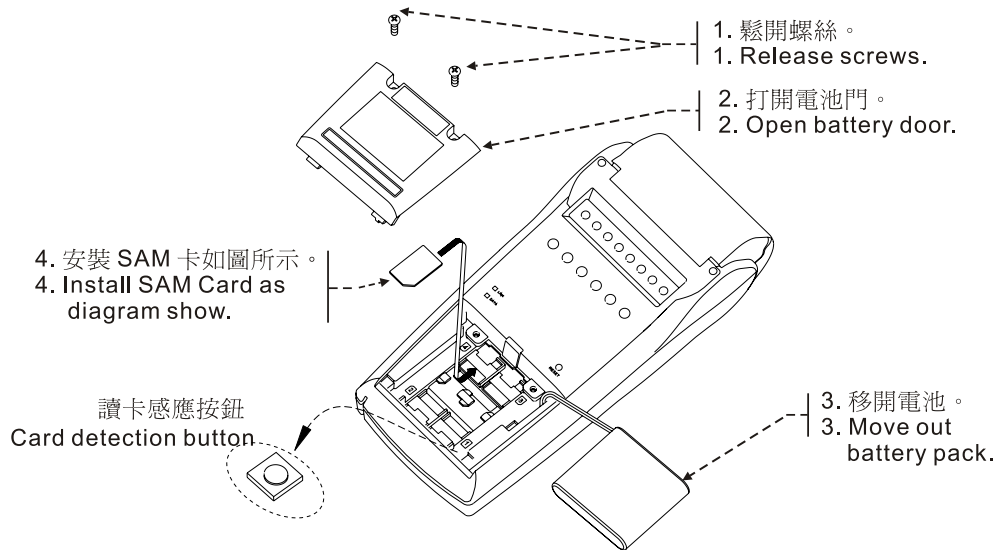


備註: 必須把電池門裝上(使讀卡感應按鈕自動壓下)才能讀取 SAM 卡。

Remark: The battery door must be installed(Card detection button is pressed) to access the SAM cards.

配有二SAM卡插槽及MMC/SD卡插槽之型號
For 2 SAM and MMC/SD Card slots version

SAM卡`1'及`2'的安裝方法與四SAM卡型號相同。
Installation method for SAM Card `1' and `2' is same as 4 SAM Card slots version.

安裝MMC / SD 卡如圖所示。
Install MMC / SD Card as diagram show.

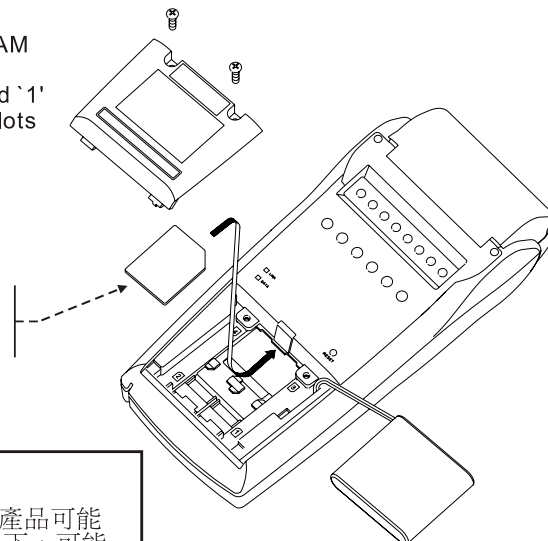


警告使用者:

此為A級產品，在生活環境中該產品可能會造成無線電干擾，在這種情況下，可能需要用戶對其採取切實可行的措施。

1.4. CREON-E

1.4.1 CREON-E 主要包括: CREON-E includes:


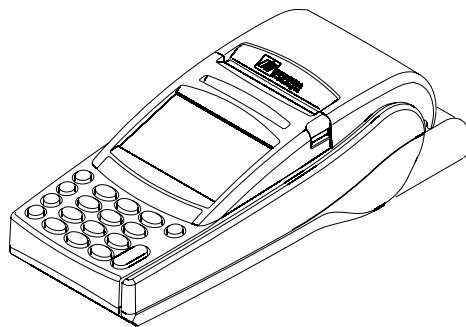


終端機 - 處理交易流程、密碼輸入、打印、處理通訊及其他用戶介面，如電子收銀機連線等。

Terminal -
It is responsible for transaction processing, PIN entry, printing, communication and other peripheral interfaces such as ECR integration.


電源供應器 -
為終端機操作提供12V直流電

Power Adaptor -
It provides 12V DC to the terminal for operation

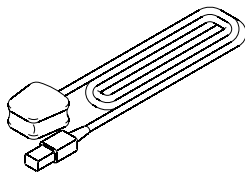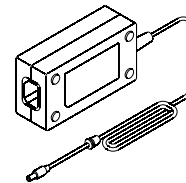

電源線
Power Cord



PSTN 連接線 (可選配)
PSTN Cord (Optional)

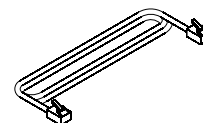

1.4.2 終端機的組件特徵 Features at a glance - Terminal


終端機的組件特徵

Features at a glance - Terminal

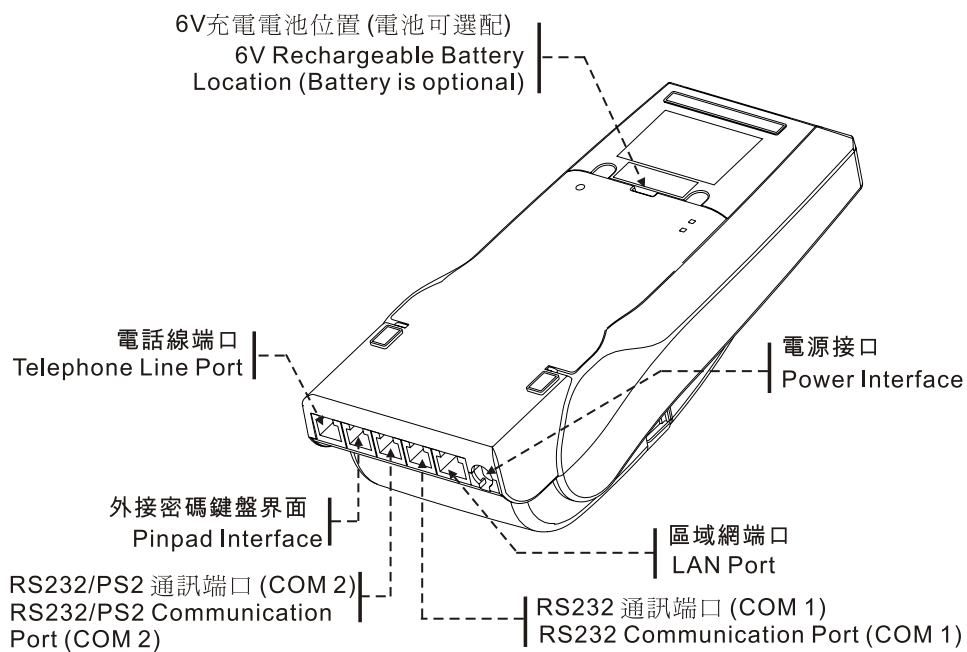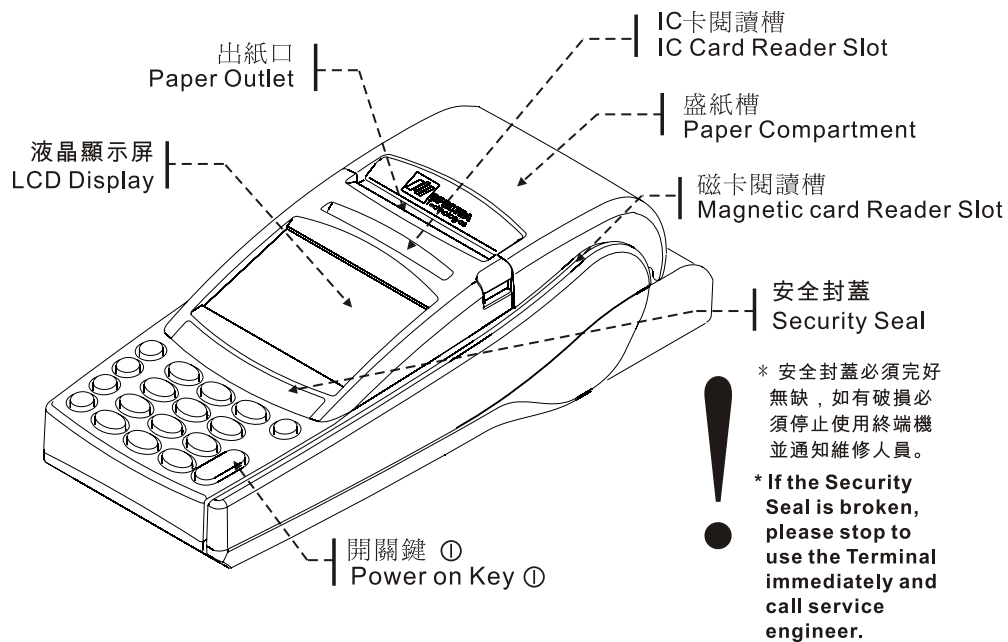



1.4.3 送紙程序

Paper feed procedure

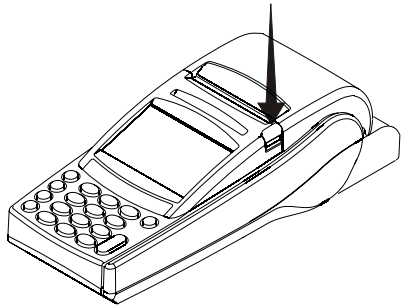

1. 按紅色鍵打開紙斗蓋。
1. Press Red Button to open printer cover.


2. 將紙卷如圖般放入紙盤。
2. Place paper roll to paper tray as diagram.

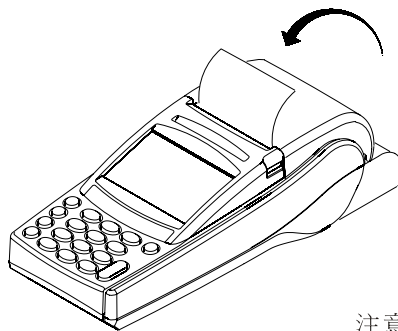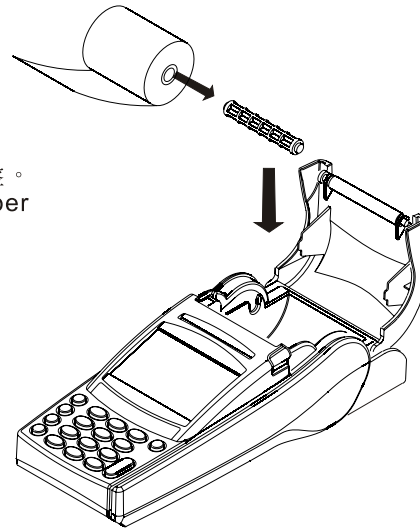

3. Close the printer cover.
3. 關上紙斗蓋。


注意：
Note:

紙卷: \varnothing 50MM Max
Paper Roll:

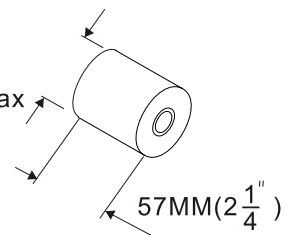

1.4.4 安裝SAM / MMC / SD 卡程序 Installation Procedure of SAM / MMC / SD Card

配有四SAM卡插槽之型號
For 4 SAM Card slots version

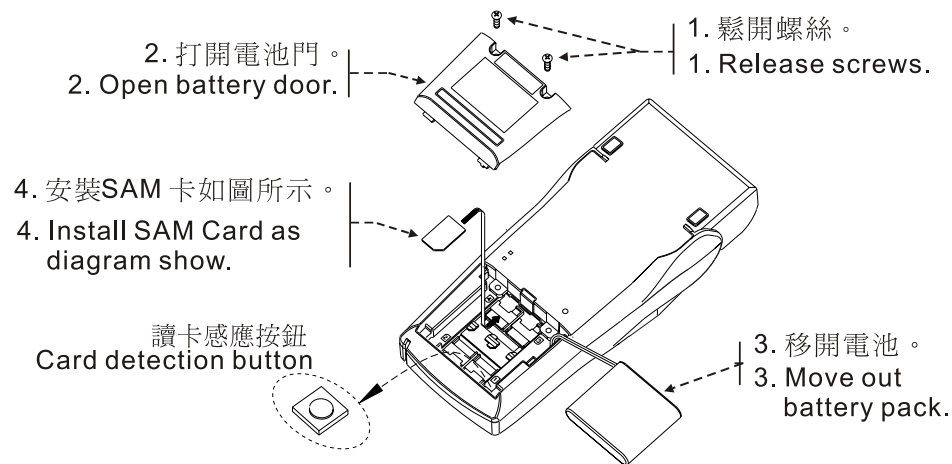

備註: 必須把電池門裝上(使讀卡感應按鈕自動壓下)才能讀取SAM卡。


Remark: The battery door must be installed(Card detection button is pressed) to access the SAM cards.

配有二SAM卡插槽及MMC/SD卡插槽之型號
For 2 SAM and MMC/SD Card slots version

SAM卡`1'及`2'的安裝方法與四SAM卡型號相同。

Installation method for SAM card `1' and `2' is same as 4 SAM Card Slots version.

安裝MMC/SD卡如圖所示。
Install MMC/SD Card as diagram show.

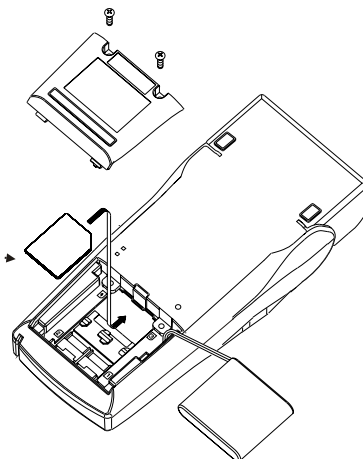

警告使用者:
此為A級產品, 在生活環境中該產品可能會造成無線電干擾, 在這種情況下, 可能需要用戶對其採取切實可行的措施。

2 如何啓動 How to activate the terminal

開關程序

開機

只要將電源接通，終端機會自行啓動。啓動後，屏幕顯示『請刷卡』字樣，此時間下可進行各類型交易操作。

關機

將電源供應器從終端機拔去時，按 'ⓧ' 鍵數秒便會自行關機。

注意：

1. 終端機如超過 90 秒而沒有操作便會自行關機。同樣, CREON-D 手機若果沒有放在座機上並超過90秒沒有操作便會自行關機。
2. 用戶於收到新終端機時，請先充電四小時，CREON-E則請充電十四小時以防止終端機內之電池於儲存期間因自然放電而導致不能開啓。
3. 當電池長期沒有使用，建議每三個月將電池充滿電。
4. 若機器長期閒置，請將充電電池拆離機器，並將充電電池放置陰涼地方。
5. 充電電池之理想操作溫度是 0°C ~ 45°C。
6. 若充電電池出現嚴重破損或鼓起，請即停止使用。
7. 切勿撞擊、拆毀、焚燒、加熱超過 60°C 或短路電池組正負極。
8. 必須使用瑞柏專用充電器。
9. 切勿將電池與金屬物品一起放置。
10. 電池棄於火內將可能引致爆炸。

On / Off Procedure

To Turn On

Power is on whenever plugged. When the Terminal displays "PLEASE SWIPE CARD", it is ready for operation.

To Turn Off

When the Power Adaptor is disconnected from the Terminal, keep on pressing the 'ⓧ' key for several seconds.

Note :

1. If the Terminal is idle for more than 90 seconds, it will power off automatically. If CREON-D handset is idle for more than 90 seconds, it will power off automatically.
2. Please charge the new received Terminal for 4 hours before use, while CREON-E model battery have to charge 14 hours to avoid start up problem due to battery discharge during a long storage.
3. When the battery is not in use for a long time, it is recommended to fully charge the battery for every three months.
4. If the machine is idle for a long time, please disengage the battery from the machine and keep it in cool environment.
5. The best operating temperature of the battery is 0°C ~ 45°C.
6. If the battery is damaged or bulged, please stop to use.
7. Do not crush, disassemble, heat above 60°C short circuit or incinerate the battery.
8. Use only with the specified Spectra Charger.
9. Keep battery contacts away from metal parts.
10. May explode if the battery is disposed in fire.

3 安全及維修 Safety and Maintenance

3.1. 基本安全規範

使用CREON系列及相關設備時，必須始終遵循如下基本安全規範以防範火災、電擊以及個人傷害：

- ~ 詳細閱讀並理解所有的提示
- ~ 清潔前必須斷開電源和外殼，要使用乾絨布或者軟刷子進行清洗
- ~ 請勿在靠近水的地方使用設備
- ~ 禁止將任何液體濺落到設備上
- ~ 請將設備放在穩定的平臺上，設備跌落可能會導致嚴重損壞
- ~ 不要將設備放到溫度過高或者空氣不流通的地方，確保地方有助於透氣和散熱
- ~ 確保使用電源安全及穩定
- ~ 不要在電源線上放置物品，將設備的電源線安裝在人員無法踩到的地方
- ~ 電源插座不要過載，以避免火災和觸電
- ~ 將設備安放在電源插座附近，確保能方便快捷地使用電源插座
- ~ 爲了減少觸電危險，禁止拆卸設備內部，必要時請交給服務商處理，私自開封和拆卸會引起電擊和其他危險，重新組裝不當會有觸電危險
- ~ 在附近有煤氣泄漏時禁止使用CREON及相關連線設備
- ~ 在雷雨閃電時期，禁止安裝電話線
- ~ 雷雨來臨時，盡可能斷開電話線，閃電可能帶來電擊危險
- ~ 禁止在潮濕環境下安裝電話插座

3.1. Basic Safety Practice

While using CREON and its accessories, please follow the safety instruction to avoid fire, electric shock and personal injury:

- ~ Read this instruction in detail
- ~ Disconnect the power and accessories before cleaning, and use dry flannelette and soft brush for cleaning.
- ~ Do not put the CREON next to water
- ~ Do not spray any liquid on CREON
- ~ Put the CREON on the stable platform to avoid drop down that make it damage
- ~ Do not put the CREON in high temperature and poor ventilation area
- ~ Ensure electricity supply is safe and stable
- ~ Do not put anything on the power cable, and avoid people step
- ~ Do not over load the power socket
- ~ Put the CREON next to the power supply socket to make ease of the usage
- ~ To avoid electric shock, do not disassembly the CREON internal parts by yourself. Send to agency for repairing if necessary
- ~ Do not use CREON and its accessory during explosive gas leakage
- ~ Do not install the telephone line during lightning
- ~ If possible, disconnect the telephone line during storming to avoid electric shock.
- ~ To avoid install the telephone plug in the wet area