


1 設計及功能介紹
Layout & Function Descriptions



Wireless CREON 主要包括:

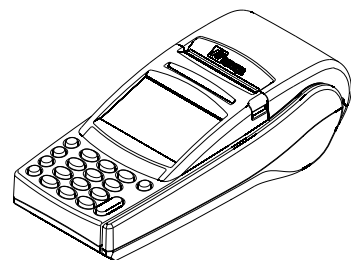

終端機 -
處理交易流程、密碼輸入、打印、處理通訊
及其他用戶介面，如電子收銀機連線等。


Terminal -
It is responsible for transaction processing,
PIN entry, printing, communication and
other peripheral interfaces such as ECR
intergration.

電源供應器 (可選配) -
為終端機操作提供12V直流電
Power Adaptor (Optional) -
It provides 12V DC to the terminal for operation

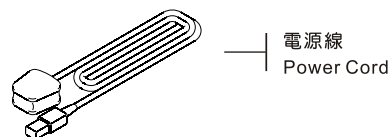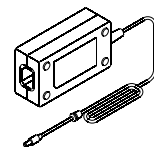

電源線
Power Cord

 7.4V充電電池 (可選配)
7.4V Rechargeable Battery (Optional)




NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.


終端機的組件特徵

Features at a glance - Terminal

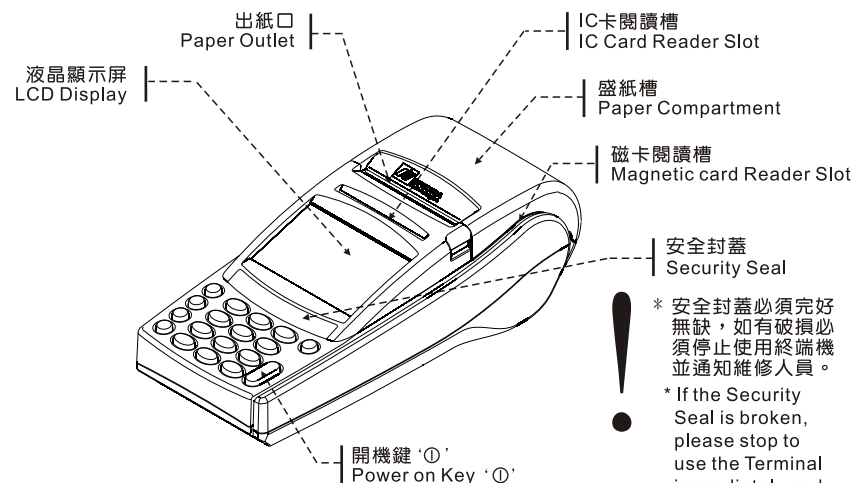

* 安全封蓋必須完好無缺，如有破損必須停止使用終端機並通知維修人員。

* If the Security Seal is broken, please stop to use the Terminal immediately and call service engineer.

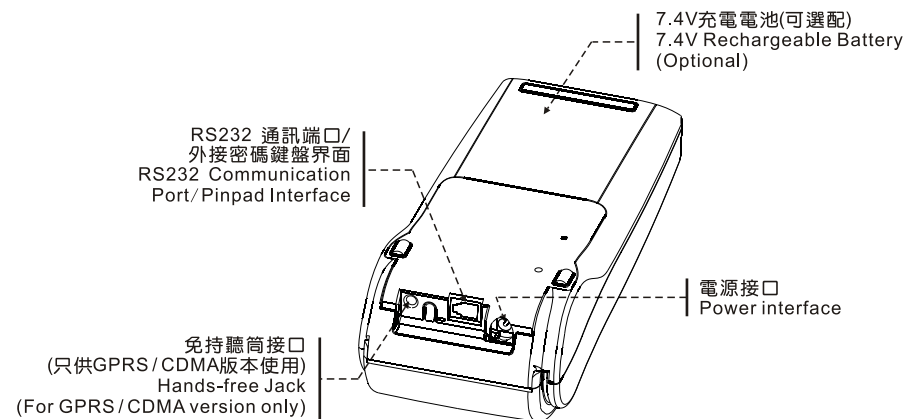2 如何啟動
How to activate the terminal

開關程序

On / Off Procedure

開機

只要將電源接通，終端機會自行啟動。
啟動後，屏幕顯示『請刷卡』字樣，
此時間下可進行各類型交易操作。

關機

將電源供應器從終端機拔去時，按 'ⓧ'
鍵 數秒便會自行關機。

注意：

1. 終端機如超過 90 秒而沒有操作便會自行關機。
2. 用戶於收到新終端機時，請先充電四小時，以防止終端機內之電池於儲存期間因自然放電而導致不能開啟。
3. 當電池長期沒有使用，建議每三個月將電池充滿電。
4. 若機器長期閒置，請將充電電池拆離機器，並將充電電池放置陰涼地方。
5. 充電電池之理想操作溫度是 0°C ~ 45 °C。
6. 若充電電池出現嚴重破損或鼓起，請即停止使用。
7. 切勿撞擊、拆毀、焚燒、加熱超過 60°C 或短路電池組正負極。
8. 必須使用瑞柏專用充電器。
9. 切勿將電池與金屬物品一起放置。
10. 電池棄於火內將可能引致爆炸。

To Turn On

Power is on whenever plugged.
When the Terminal displays
"PLEASE SWIPE CARD", it is ready for
operation.

To Turn Off

When the Power Adaptor is
disconnected from the Terminal,
keep on pressing the 'ⓧ' key for
several seconds.

Note :


1. If the Terminal is idle for more than 90 seconds, it will power off automatically.
2. Please charge the new received Terminal for 4 hours before use to avoid start up problem due to battery discharge during a long storage.
3. When the battery is not in use for a long time, it is recommended to fully charge the battery for every three months.
4. If the machine is idle for a long time, please disengage the battery from the machine and keep it in cool environment.
5. The best operating temperature of the battery is 0°C ~ 45°C.
6. If the battery is damaged or bulged, please stop to use.
7. Do not crush, disassemble, heat above 60°C short circuit or incinerate the battery.
8. Use only with the specified Spectra Charger.
9. Keep contacts away from metal parts.
10. May explode if the battery is disposed in fire.

3 如何送紙 Paper Feed Procedure


送紙程序

Paper Feed Procedure


1. 按"紅"色鍵打開紙斗蓋。
1. Press "Red" Button to open printer cover.

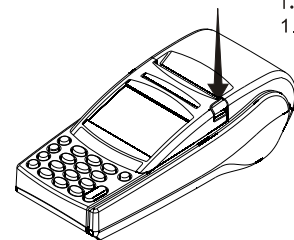


2. 將紙卷如圖般放入紙盤。
2. Place paper roll to paper tray as diagram.

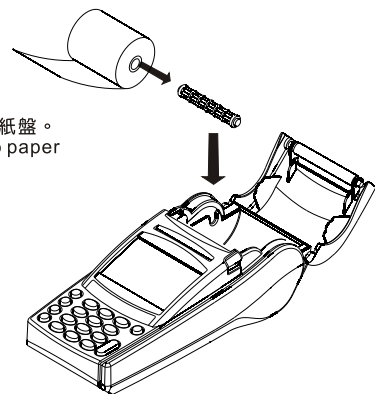

3. 關上紙斗蓋。
3. Close the printer cover.

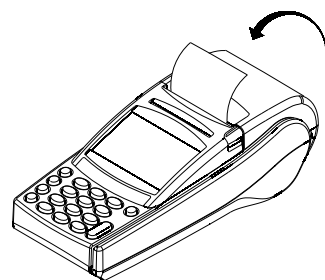

注意：
Note:

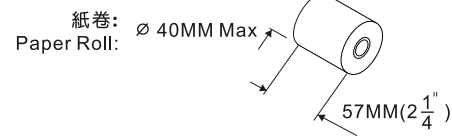


4 安裝及拆除電池 Install and unload battery

安裝電池程序

Installation Procedure of Battery


安裝電池殼如圖所示。
Install battery case as diagram show.

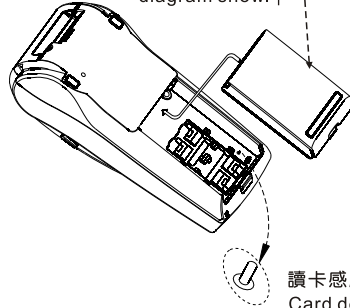

拆除電池程序

Unloading Procedure of Battery

按此鈕直至電池殼拆鬆開。
Press this button until the battery case is released.

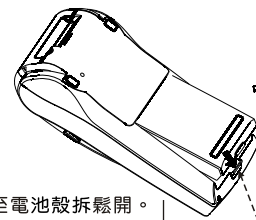


讀卡感應按鈕
Card detection button

備註: 必須把電池裝上(使讀卡感應按鈕自動壓下)才能讀取SAM / SIM / R-UIM卡。
Remark: The battery must be installed(Card detection button is pressed) to access the SAM / SIM / R-UIM cards.

5 為GPRS / CDMA 版本安裝及拆除SIM / R-UIM卡 Install and unload SIM / R-UIM Card for GPRS / CDMA Version

安裝SIM / R-UIM 卡程序


Installation Procedure of SIM / R-UIM Card

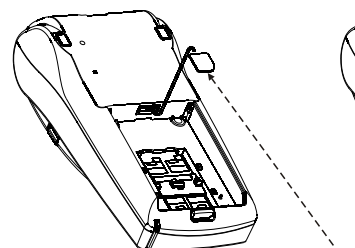

安裝SIM / R-UIM 卡如圖所示。
Install SIM / R-UIM Card as diagram show.

拆除SIM / R-UIM 卡程序

Unloading Procedure of SIM / R-UIM Card

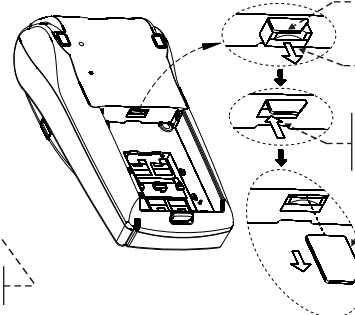

SIM / R-UIM 卡
SIM / R-UIM Card

拉出托架。
Pull the holder.

推托架回原位。
Push the holder to original position.

取出SIM / R-UIM卡。
Take SIM / R-UIM card away.

6 安裝SAM / MMC / SD 卡 Installation of SAM / MMC / SD Card


安裝SAM / MMC / SD 卡程序

Installation Procedure of SAM / MMC / SD Card

配有四SAM 卡插槽之型號

For 4 SAM Card slots version

安裝SAM 卡如圖所示。
Install SAM Card as diagram show.

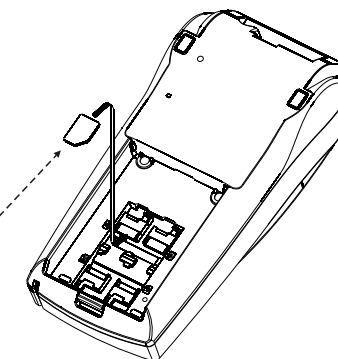


配有二SAM 卡插槽及MMC / SD 卡插槽之型號

For 2 SAM and MMC / SD Card slots version

SAM卡`1`及`2`的安裝方法與四SAM卡型號相同。
Installation method for SAM Card `1` and `2` is same as 4 SAM Card slots version.

安裝MMC / SD 卡如圖所示。
Install MMC / SD Card as diagram show.

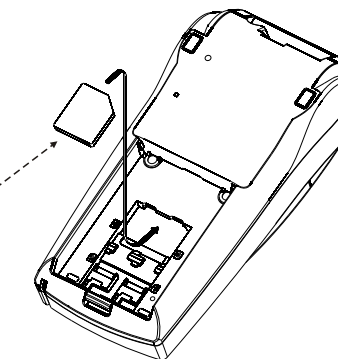

警告使用者:
此為A級產品, 在生活環境中該產品可能會造成無線電干擾, 在這種情況下, 可能需要用戶對其採取切實可行的措施。

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.