# **GEESES**

# 无线轻音鼠标 wireless silent mouse




M2用户手册 / User's Manual

感谢你对我们的支持, 为了使你更进一步了解产品的使用,请你在使用前认真阅读此说明书

#### 产品安装:

广 m 安泰· 取出鼠标底部USB接收 器,插入电脑USB端口,打开鼠标底部电 池盖,将一节AI(5号)电池装入电池仓中(注意电池的正负极性必 须正确),通电后自动对码即可使用。

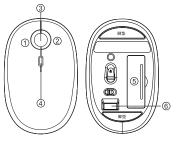

(1)左键 (2)右键 (3)滚轮键 (4) DPI键 ⑤ 电池仓 ⑥ 接收器卡槽

\*\*\*注明: 脚垫上面带有保护膜, 使用前请撕掉

无线鼠标频率; 2408MHz-2474MMHz; 34 无线鼠标频道: 16个(自动跳频) 无线工作距离: <10 米(视工作时周边的无线环境而异, 当周边有较多无线干扰源时,可能会导致无线操作距离缩短)

无线额定电压: 1.5V 无线额定电流: ≤ 15毫安 鼠标传感系统: 光学

鼠标分辨率: 800/1200/1600三档可调(默认1200DPI)

た感 事 切 対効将此光学鼠标置于镜面、玻璃面或凹凸不平的工作面上使 用,此将会严重影响到鼠标的工作效果,使用此类无线设备, 清尽量远离强干扰家,如:家用微波炉等,如发现鼠标器脏污, 可采用无水酒精少量擦扰,切不可整体置于液体中清洁。

#### 恢复出厂设置 (对码方式)

当你使用鼠标时,光标出现不可动或鼠标无法工作时,请按以下步骤操作,让鼠标恢复出厂设置


- 1. 如果产品使用一段时间,可能是电池电量不足导致的,可尝试
- 2. 将接收器拔出, 再插入USB口。

### 标准配置(如发现包装与内容不符,请联系经销商进行更换)

- 无线鼠标x1● 接收器x1
- 电池 (5号) x1 用户手册x1

## Product installation:

Product installation:
take out the USB receiver at the bottom of the mouse, insert it
into the USB port of the computer, open the battery cover at
the bottom of the mouse, and put an AA(No.5) battery into the
battery bin (note that the positive and negative polarity of the
battery must be correct). After powering on, the code can

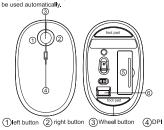

5 battery warehouse 6 receive

\*\*\*Note: There is a protective film on the footpad,

\*\*\*Note: There is a protective film on the footpad, please tear it off before use Wireless mouse frequency: 2408MHz-2474MMHz.
Wireless mouse channels: 34 (automatic frequency hopping) Wireless express 43 (automatic frequency hopping) Wireless working distance: 51 0 meters (depending on the surrounding wireless environment at work.
If there are many wireless interference sources around, the wireless operation distance may be shortened.) Wireless rated voltage: 1.5V wireless rated current: 515 mA Mouse sensing system: optical Mouse resolution: 800/1200/1600 three levels adjustable (default 1200DP1)

Matters needing attention

Don't put the optical mouse in mirror, glass surface or uneven surface is used, this will seriously affect the working effect of the mouse, the use of such wireless devices, please stay away from strong interference sources, such as: household microwave owe, etc. such as mouse found dirt, can use a small amount of anhydrous alcohol is wiped, must not put in liquid cleaning as a whole.

Restoring factory Settings (code matching) When you use the mouse, the cursor does not move or the mouse does not work, please follow the following steps to restore the mouse to factory Settings

1. If the product has been used for a period of time, the battery may be low. Replace the battery.

2. Pull out the receiver, insert it into the USB port.

Standard configuration (if the package is inconsistent with the content, please contact the dealer for replacement).

Wireless mouse X1.

Battery (No.5) X1.

User manual X1.

. User manual X1
This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: 1) this device may not cause harmful interference, and 2) this device must accept any interference received, including interference that may cause undesired operation.
This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and if not installed and used in accordance with the However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference tradio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try correct the interference by one or more of the following measures:

-Recoinent the receiving antenna.
-Increase the separation between the equipment and receiver.
-Connect the equipment into and outlet on a circuit different from that to which the receiver is connected.

-Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void your authority to operate the equipment.

# 质保卡 保修期限:

购买日期:	
购买地点:	
产品序列号:	
盖章	
	产品维修记录
日 期	维修情况

备注:请清楚填写各条目,请勿擅自涂改,并妥善保管好本保修卡, 以维护您的合法权益。如需服务或有任何疑问。请与我们联系。

# 深圳摩天手科技有限公司



# 封底

封页