折叠后成品尺寸:85X120mm 材质:100g书纸10P 5折页 单黑双面印刷



这一段升级版24/5/15



Wireless keyboard & mouse set

Instruction Manual 使用说明书

Baby Bear

Instruction Manual

Thank you for your support, in order to help you further understand the use of this wireless keyboard and mouse set, Please read this manual carefully before use

1.Package Contents

Wireless Keyboard	1PCS
Wireless Mouse	
Nano Receiver	1PCS
Instruction Manual	1PCS

2.Product installing instructions

- 1. Remove the USB receiver from the bottom of the mouse and plug it into the USB port of your computer.
- 2. Open the battery cover at the bottom of the mouse, and put an AA (No.5) battery into the battery bin (note that the positive and negative polarity of the battery must be correct). The LED light at the bottom of the mouse will light up once and then turn off, and cover the battery cover.
- 3. Open the battery cover at the bottom of the keyboard, put two AAA(No.7) battery into the battery bin (note that the positive and negative polarity of the battery must be correct), and close the battery cover.
- 4. The USB receiver can also be loaded into the receiver slot at the bottom of the mouse when carried out or not in use.

3, product description

wireless keyboard



The top row of keys on the keyboard defaults to ESC/1/2...... when pressed Switch between number keys

Fn (Backspace) two keys press at the same time, for the multimedia key and"~" lock key such as (press (**) key, the default pop-up is the number 7, at the same time press Fn + (**) and then press (pop-up F 7 shortcut function)

FCC Warning Statement
Changes or modifications not expressly approved by the party respons
compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a communications. Provever, mere is no guarantee that interference with not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by furning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: - Reorient or refocate the receiving antenna.

ceiver is connected.

- Consult the dealer or an experienced radio/TV technician for help.

无线键盘



1) left button 2) right button 3) Wheel button (4) battery warehouse (5) receive

***Note: There is a protective film on the footpad, please tear it off before use

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation



格

深圳摩天手科技有限公司

深圳市宝安区沙井街道新沙路正城丰科技园 ZhengChengFeng Technology Zone, Xinsha Road, ShaJing Town, BaoAn Area, Shenzhen,China. 电话/Tel: 86-755-82507904 400-6788-010 邮箱/E-ail: mofii@mofii.com 网址/website: http://www.mofii.com

使用说明书

感谢您的支持,为了使您更进一步的了解此无线键鼠 套装的使用,请您在使用前认真阅读此说明书!

1.包装内容物

无线键盘	1PCS
无线鼠标	1PCS
接收器	1PCS
使用说明书(含质保卡)	1PCS

2.产品安装说明

- 1. 从鼠标底部取出USB接收器,插到电脑的USB端口。
- 2. 打开鼠标底部电池盖,将一节AA(5号)电池装入电池仓 中(注意电池的正负极性必须正确)鼠标底部LED灯将会点亮 一次后熄灭,盖上电池盖。
- 3. 打开键盘底部电池盖,将2节AAA(7号)电池装入电池仓中 (注意电池的正负极性必须正确),盖上电池盖。
- 4. 外出携带及不使用时, 也可以将USB接收器装入鼠标底部的 接收器槽内。

3.产品描述



键盘最上面一排键,按下时默认为ESC/1/2........*数字键之间的切换

Fn+ exkspic 两键同时按,为多媒体键及""锁定键

比如(按(字)键,默认弹出的是数字7,此时同时按Fn+(sockspace)

再按 (**) 则弹出F7的快捷功能)

2 1 0

无线鼠标

无线接收器

①左键 ②右键 ③滚轮键 ④电池仓 (5) 接收器卡槽

***注明:脚垫上面带有保护膜,使用前请撕掉

飅 ⟨MI 有害物 # 떕

封底