

## **Dialog - Booster Installation Instructions**

Field Operations		Factory Default Parameters	
Magnet	Position the magnet on the	Booster Status	FH Tx On
initialization	Booster cone for 3	Buzzer	On
	seconds	Magnet activation	On
Learning the Pit 3G Meters Booster is Ready to Transmit	Install the Booster into the pit within 30 seconds This process is done automatically. After 5-6 minutes The Booster is ready to transmit	Magnet Positioning	

FCC ID: NTAWB1

The User and the Installer should be aware that changes and modifications to the equipment not expressly approved by Master Meter could void warranty and the user's authority to operate the equipment.

Professionally trained personnel should install the equipment.

## **ATTENTION:**

The digital portion of the transceiver has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- 1.) Reorient or relocate the receiving antenna.
- 2.) Increase the separation between the equipment and receiver.
- 3.) Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- 4.) Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

**Note:** Dialog Booster is designed only for Master Meter meters with Dialog registers.



## **Installation**

3G Meter in a Pit-set to be learned by Booster



Insert and Install the Booster into the Pit-Set Lid



Locate the Booster Unit near the Pit-Set Face the Magnet on the Booster Cone Wait for 3 seconds until its Beep



Position the assembled Pit-Set Lid with the Booster unit back on the Pit (After the Beep)

