

# 386MI Central locking system user's manual

## Functions

### 1. Arm

Press  $\text{Ⓜ}$  button on the transmitter, the doors will lock automatically and the engine will be immobilised. The LED light will turn on and flash twice every 2 seconds .

### 2. Disarm

Press  $\text{Ⓛ}$  button on the transmitter, the doors will unlock automatically and the immobiliser will be disarmed. The LED light will turn off.

### 3. Emergency override

When the transmitter is lost or has failed, to override the system while the car is armed,

- a. Open the door with the key
- b. Press the override button 3 times
- c. Hold down the button for 2 seconds on the 3rd press.

The system will then be overridden and the LED light will turn on/off slowly.

### 4. Transmitter programming

Press the override button for 2 seconds, the LED light will turn on, press  $\text{Ⓜ}$  button once, the LED light will flash twice to indicate the successful programming of this transmitter; press  $\text{Ⓜ}$  button of another transmitter once, the LED light will flash twice to indicate the successful programming of this transmitter. Only two transmitters are functional for this system.

## Technical parameter

Working voltage: 9 V~15 V

Static current: <10 mA (in arming mode)

Working current: <30A

Frequency: 433.92 MHz

## FCC WARNING

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: The manufacturer is not responsible for and radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.