

# BT5076A OPERATING INSTRUCTION

## 2-WAY - PAGER / REMOTE TRANSCEIVER:



## THE REMOTE CONTROLS

### 1-WAY - SIDEKICK REMOTE:

The 1-Way sidekick remote adds flexibility to your system. You can have the convenience of operating your system without needing to carry the larger pager remote. The Sidekick remote has less range and offers all of the same operation features except for page-back confirmation. The 1-Way Sidekick Remote uses two CR-2016 Lithium 3 Volt Batteries.















### 2-WAY - PAGER / REMOTE TRANSCEIVER:

The 2-Way hand-held remote transceiver is used to send and receive information from the vehicle. The Control Module transmits High Frequency FM signals from the vehicle to your pager over long distances. Your range will vary depending on location, terrain, and local RF noise/interference. This system is not guaranteed to page you if you are behind concrete walls, underground, in a large structure, or in an area with high levels of electronic interference. Handle the pager/remote with care. The LCD display and/or the electronics may be damaged if subjected to abuse. The AAA Cell 1.5V alkaline battery can easily be replaced by sliding open the battery access door on the back of the remote. Battery life will vary depending on usage. The LCD screen will display a low battery icon when the battery is low.

## SETTING THE CLOCK (2-WAY- LCD REMOTE)

1. Press VEH Button on the side of the remote control 5 times.
2. The remote will beep and the **AM or PM** display will begin flashing.
3. Press the Trunk Button to go to the next item – **AM - PM - Hour- Minutes**.
4. Press the Lock Button to **increase** time.
5. Press the Unlock Button to **decrease** time.
6. Press the Start Button to **Disable or Enable Beep**.
7. Press the VEH Button to **Exit Setup** or wait 7 seconds, the LCD light will turn off.

## QUICK CHART BUTTON FUNCTIONS

Button	Button Functions	Button Options	Button	Button Functions	Button Options
	Lock Doors & Arm System	Press and Hold 2 Seconds for Panic Mode	 Plus 	Valet Service / Park Sensor ON / Off	Valet Mode when Disarmed. Sensor On/Off when Armed
	Unlock Doors & Disarm System	Press twice for second door unlock	 Plus 	Activates CarJack with Ignition On	Press and Hold 2 Seconds for CarJack Mode
	Trunk Pop <b>Aux # 1</b>	Press and Release for Trunk Pop Aux #1	 Plus 	Activates <b>Aux #2</b>	Steady Momentary Output
	Start or Stop engine	Press for Remote Start. Three options available	 Plus 	Activates <b>Aux #3</b>	Momentary, Timed or Latched Output
<b>VEH</b>	Selects between Vehicle #1 and Vehicle #2	Press and Hold for 2 seconds	 Plus 	Silent Arm / Disarm	No Arm / Disarm Chrip from Siren or Horn

**CLOCK SETUP:** Lock = Increase, Unlock = Decrease, Trunk = Next, Start = Beep with button press, VEH = Exit

## **FCC WARNING**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: Any changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

NOTE 2: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.